

TABLE OF CONTENTS

2 POWER BUTTON USAGE	1
3 TOUCH-SCREEN NAVIGATION	3
4 U-Disk	3
5 USING MICRO-SD CARD	4
6 GETTING STARTED	5
7 DESKTOP	7
8 SCREEN LOCK	9
9 PRE-LOADED APPLICATIONS.....	10
10 STATUS AND NOTIFICATION AREA	13

11 APPLICATION MANAGEMENT	15
<i>Install Android Applications</i>	<i>15</i>
<i>Download Android Applications directly from a Website</i>	<i>16</i>
<i>Uninstalling Android Applications</i>	<i>17</i>
12 WEATHER.....	18
13 CLOCK	19
<i>Alarm</i>	<i>19</i>
14 APP MARKET	22
<i>Download Applications</i>	<i>22</i>
<i>App Market Function Menu</i>	<i>23</i>
15 BROWSER.....	24

16 CALENDAR	25
<i>Add Event</i>	<i>26</i>
17 CAMERA	26
<i>Take Pictures</i>	<i>27</i>
<i>Take Videos.....</i>	<i>27</i>
<i>Single-motion Panorama.....</i>	<i>28</i>
18 CALCULATOR.....	29
19 MYRECORDER	29
20 EMAIL.....	30
<i>Add Email accounts</i>	<i>30</i>
<i>Email Inbox.....</i>	<i>31</i>
<i>Edit Email Accounts</i>	<i>33</i>

Delete Email Accounts 34

21 FILE BROWSER 36

Copy Media between Computer and Tablet 37

Connected to the local area network shared folders
 38

Delete files 39

22 MY MUSIC 39

Play Music 39

Create Music Widget 41

The Operation with Music and Playlist 41

Sort by title or date added 42

23 MY VIDEO 43

Play Video 43

<i>Create Video Widget</i>	44
<i>The Operation with Video</i>	44
<i>The Operation with Playlist</i>	45
24 MY PHOTO	46
<i>The operation with picture list</i>	47
<i>Slide show and settings</i>	47
<i>Doodle</i>	48
<i>Create Photo Widget</i>	49
25 Gallery	49
<i>The operation with photo and video list</i>	49
26 SCREEN CAPTURE	51
27 TASK MANAGERMENT	52

Stopping Applications 52

Uninstall Applications..... 53

Install Applications 53

28 WI-FI 54

FREQUENTLY ASKED QUESTIONS..... 55

BATTERY MANAGEMENT 57

Charge battery 58

IMPORTANT SAFETY PRECAUTIONS..... 59

System: Android 4.0

Processor: VIA8850

Edition: V01

DA42

1 OUTLOOK DESCRIPTION



2 POWER BUTTON USAGE

Turn On: Press the power button and hold for 2 seconds.

Turn Off: Press the power button and hold for 2 seconds → tap **Power off** → tap **OK**.

Reboot: Press the power button and hold for 2 seconds → Tap **reboot**.

Quickly Hibernate/wake-up: Press the power button and hold for 2 seconds → tap **Hibernate** to enable the

device to hibernate, or press the power button briefly to make the device to hibernate/ wake-up.

Airplane mode: Press the power button and hold for 2 seconds → Tap **Airplane mode**.

Silent mode: Press the power button and hold for 2

seconds → Tap 

Vibrate mode: Press the power button and hold for 2

seconds → Tap 

Normal mode: Press the power button and hold for 2

seconds → Tap 

Force Off: If device does not respond, press and hold the power button for 5 seconds.

(Warning: Force off could lead to unpredictable system errors!)

Reset: Press the reset button could be reset the device.

It's will clear the all data, Please be careful to use the

function. (**Note:** The current reset function can't restart, can only be turned off, so you need to press the power button restart the device after reset).

3 TOUCH-SCREEN NAVIGATION

The touch-screen allows for quick, easy and convenient navigation for all applications.

Refer to the following method to operate the touch screen by the finger pulp:

Tap: Quick tap & release on an item on the screen.

Touch & hold: Touch and hold one place about 2 seconds, and then release to display an options window.

Finger slide: Touch & slide your finger across the screen and then release.

☆ *To avoid scratching or crushing, do not place objects on the touch screen surface.*

4 U-Disk

Insert U-Disk

Insert your U-disk into the device via USB host

transfer cable. When ready for use, enter into the file browser and switch to the USB folder to view it.

Remove U-Disk

Close all applications or documents which have been opened on the U-disk. Tap  → **Settings** →

Storage → **USB storage** → **Unmount this storage device**. When it displayed **Mount this device** and then you can unplug the U-disk.

☆ *Don't insert and remove the U-disk repeatedly in a short time, as this may cause damage to the U-disk.*

5 USING MICRO-SD CARD

☆ *The device supports maximum 32GB microSD card.*
Insert your card into the microSD slot until it clicks into place. It's OK.

Remove microSD Card

Close all applications or documents which have been opened on the card. Tap  → **Settings** → **Storage** → **SD card** → **Unmount this storage device**.

When it displayed **Mount this device** and then press the card lightly; it is partially ejected allowing you to pull the card out.

☆ *Don't insert and remove the U-disk repeatedly in a short time, as this may cause damage to the card.*

☆ *We recommend using major brands of memory cards to avoid incompatibility.*

6 GETTING STARTED

Charge the device

☆ *It is not recommended to use the device while charging.*

Plug the power adapter into an electrical wall outlet, and then connect to the device to fully charge the battery before use (A full charge takes about 6 hours in

the status of "off").

Turn the device on

Press the power button briefly.

Wi-Fi Network Setup

Since many features require a Wi-Fi connection, we recommend you to set up your Wi-Fi network now.

1. Tap  → **Settings**.

2. Slide **Wi-Fi** switch to turn on.

The device automatically scans and lists all local Wi-Fi Network found. A lock indicates secure **Wi-Fi** networks that require input of password to connect.

1. Tap the desired network which you want to connect → enter the **Network Password** if applicable → tap **Connect**.

2. Tap  to return to the Desktop screen.

☆ If your Wi-Fi network is set as hidden, it won't be found by the auto scan. Tap **Add Wi-Fi network** and

follow the prompts to add your network.

7 DESKTOP



1. Back.
2. Home.
3. Recent Apps.
4. Menu.
5. USB debugging connected
6. USB connected
7. Current time.

8. Screen capture.

9. Volume.

10. Wireless network

11. Battery Status.

12. Google search.

13. Voice search

**14. Add Widgets/Apps shortcuts or setting
wallpapers and more.**

15. Tap to view the applications screen

Can make many personalized operation through
"add" icon , such as, add widgets, application
shortcuts, set wallpaper, add bookmarks, email accounts
and set up the shortcut.

★ *Tap on any application icon to launch
it.*

★ *Touch, hold and then slide icons to
reposition them on the screen.*

★ *Touch, hold and slide icons onto* 

to remove them from the **Desktop** screen.

8 SCREEN LOCK

Can be set to automatically lock screen or quickly press the power button to manually lock screen. The system provides four lock screen style for users. You can enter **Settings** → **Security** → **Lock Screen** to switch.

Lock screen displays the following:



Tap the unlock icon and drop it to the right until out of the circle to unlock.

9 PRE-LOADED APPLICATIONS

	Weather	Set up the degree of temperature, weather auto-refresh rate, add city and view the city's weather.
	Clock	It can display the time and set the alarm.
	App Market	Downloaded applications quickly & easily.
	Browser	Access internet.
	Calendar	Calendar.
	Camera	Take normal photos, panoramic photos and

		take video.
	Calculator	Do calculation.
	Email	Send/Receive email using your existing email addresses.
	File Browser	File manager application for viewing and managing files and apps. Install Android apps and backup files to your SD card.
	My Music	Play and manage audio files.
	My Video	Play and manage video files.

	My Photo	View and manage photo files.
	Gallery	Play, view, and manage video and photo files.
	Picture Capture	Capture image of the screen.
	Task Manager	Application manager for managing processes.
	Voice search	Voice search.
	Flash player settings	Flash player settings.
	Downloads	View the downloads and the downloading progress.

	Search	Local search and online search.
	Settings	Multiple settings for personalizing and enhancing your Device.

☆ To move an icon to the **Desktop** screen, touch & hold the icon, and then release it when it appears on the **Desktop** screen.

☆ Touch, hold and then slide icons to reposition them on the screen.

☆ Touch, hold and slide icons onto  to remove

them from the **Desktop** screen.

10 STATUS AND NOTIFICATION AREA

On the **Desktop** screen, click the icons which are in the state bar to view more state information and

events.



Airplane mode	Switch airplane mode.
Wi-Fi	Access to Wi-Fi settings interface.
Auto-rotate screen	Auto-rotate switch. The screen will automatically rotate with gravity induction after opening.
Brightness	Set screen brightness.
Notifications	Open or close the notification.

Settings	Access to settings.
-----------------	---------------------

11 APPLICATION MANAGEMENT

Install Android Applications

☆ *There are many interesting and free Android applications that can be found on the web. Such as launch your web browser and do a search for “Android applications”.*

Purchased or free Android applications that you have downloaded to your computer can be installed quickly & easily on your Tablet using the  **File**

Browser or task manager application.

1. Copy the **.apk** files which you want to install onto an SD card or USB device → insert or connect to your Device.

2. Tap the  **File Browser** application icon.

1. Tap  or  and locate the folder in

which the .apk application files were saved.

2. Tap on a .apk file → **Install**.

The application is installed and the application icon is added to the **Applications** screen.

3. Tap **Open** to launch the application now, or tap **Done** to return to the **File Browser** screen.

Download Android Applications directly from a

Website

You can download Android applications directly from websites, and then install them on your device quickly and easily.

1. Tap the  **browser** application icon to

launch the internet.

2. Enter the desired website URL, and tap the **download** link for the application you want to install on your device.

3. After the downloading is completed, tap 

→ **Downloads**. Open the applications from app list.

Uninstalling Android Applications

You can also uninstall the Android applications quickly and easily that you have installed.

1. Tap  → **Settings** → **Apps** → **All**.

2. Tap the application you want to uninstall →

Uninstall.

3. Tap **OK** to confirm the Uninstall.



12 WEATHER

Tap the



Weather application icon.

General setting

You can set Temperature Unit(°C), Update frequency .

About

View software version number and relevant legal information.

Add city

You can add city to **Weather** and view the city's weather information.

Select city

In the list of cities, click the city to view the weather information. Select the city and tap  to

delete the city, tap  refresh the weather

information.

You can make the weather displayed on the **Desktop** through adding widget. The way is: tap



→ **Widgets** → **Weather Widget**.



13 CLOCK

Tap the  **Clock** application icon. You can

see the time and date.

Alarm

You can use your device as an alarm clock by setting multiple alarms.

Add Alarm

1. Tap the  **Clock** application icon.

2. Tap  **Set alarm** → **Add alarm**.

3. Set up your alarm as desired.

4. Tap **OK**.

5. Selected the alarm clock.

Shut Off Alarm Alert

When a scheduled alarm is activated, a pop-up window with the alarm title appears.

Tap **Snooze** if you want to be reminded again in 10 minutes.

Tap **Dismiss** to cancel the alert.

Turn Alarm on

1. In the Alarm list, find the desired alarm.

2. Click the  on the left.

3. After the  change to , tap **Done**.

Edit Alarm

1. Tap the  **Clock** application icon →

Click .

2. Tap on the alarm you want to edit → make desired edits.

3. After editing, tap **OK**.

Delete Alarm

1. Tap the  **Clock** application icon →

Click .

2. Tap on the alarm you want to delete.

3. Tap **Delete** → **OK**.

Tap  to return to the **Desktop** screen.



14 APP MARKET

The App Market has many applications that you can quickly and easily download to your Tablet.

Download Applications

1. Tap the  **App Market** application icon.

☆ *The first time, it will prompt “**Register**” and “**Login**” options. If you have not yet registered an account, tap **Register**. Otherwise, tap **Login** and enter your login information and then tap **Login** again.*

2. You can select applications from the default **Featured** group, by **Categories**, **Top** (latest, hottest, random), or search by name.

3. Tap on an application → **Download**.

4. After the app is downloaded, tap **Install**.

5. Tap **Open** to launch now, or **Done** to return to the **App Market** screen.

History

After downloading apps, tap on **History** to manage the installed applications. You can add and/or view comments from other users, launch apps, and uninstall them.

App Market Function Menu

Tap  to display the App Market Function

Menu.

Profile

Tap to access your profile information. You can Change Password, Change Email and Save Password. Tap **Logout** on the top right corner of **Profile** to exit your account.

About

Displays App store version and support information.



15 BROWSER

Users can connect to the Internet through browser.
Click the browser icon on the Desktop



and then you can open the Web browser.



16 CALENDAR

Tap the  **Calendar** application icon.

For the first time using the **Calendar**, you need to add an Exchange account. Enter account email address and password. Enter the system **Settings** → **Account**

& sync → **Add account**. Complete the setting according to the prompts . After then you can use the calendar. Don't need to add Exchange account if only view the calendar .

Add Event

1. On the **Calendar** screen, tap on the date when you want to add an event.

2. Tap on the event time → tap  .

3. In each field, enter the details of the related activities.

4. Tap **Done**.

Click the date time in the upper left to choose the calendar you want, such as DAY, WEEK, MONTH and AGENDA display mode.

☆ *Dates with gray bars indicate scheduled events.*



17 CAMERA

Tap the



Camera application icon.

Take Pictures

1. Click



switch to camera, and you can

take picture.

2. Click



conversion lens

2. Click



take picture.

3. The picture will be saved.

4. Click the picture thumbnail to enter **My Photo**

to scan the picture.

5. Click



to exit the **Camera** and back to

the **Desktop**.

Take Videos

1. Click  switch to video, and you can

take videos.

2. Click  to begin and tap  to stop.

3. The video will be saved.

4. Click the video thumbnail to play the video.

5. Click  to exit the **Camera** and back to

the **Desktop**.

Single-motion Panorama

For capturing larger scenes, tap  icon and

switch to single-motion panorama mode. In this mode, the user starts an exposure and then slowly turns the Camera to encompass as wide as a perspective needed. The Camera assembles the full range of continuous imagery into a single panoramic photo.

Note: You can tap  on the top left of the

interface to choose the files are stored in the ROM, SD card or USB storage.



18 CALCULATOR

1. Tap the  Calculator application icon.

2. Tap the numbers and sign of operation to do the calculation.

3. Tap **CLEAR** to clear the result one by one, tap and hold **CLEAR** to clear all.



19 MYRECORDER

1. Tap the  recorder icon.

2. Tap the  record icon to start recording.

3. Tap the  record icon to stop record.

4. Tap the  play button to play the voice of

recording.



20 EMAIL

☆ *POP3 and SMTP accounts are supported.*

Add Email accounts

You can enter one or more personal email addresses that you would like to access through your tablet.

1. Tap the  **Email** application icon.

2. On the **Account setup** screen, enter your email

address in the **Email address** entry field.

3. Enter your email password in the **Password** entry field

4. Tap **Next**.

5. Manual Setup (*optional*): The server settings are automatically populated based on your email account provider (*i.e., gmail.com, etc*). However, if you need to change the server settings, tap **Manual Setup** to make necessary changes.

6. According to the selected mailbox server, enter or select the parameter and server type, and then Tap **Next**.

7. Optional: Enter a name for the account.

8. Enter name for outgoing message → tap Done.

★ *After setup, if you are unable to connect to a free email account, check with your email provider to make sure their servers support free accounts on Post Office Protocol (POP) or Simple Mail Transfer Protocol (SMTP).*

Email Inbox

1. Tap the  **Email** application icon.

2. If you set up only one email account, it opens immediately. If you set up multiple accounts, they are listed in the **Accounts** screen.

3. Tap on the desired email account → tap **Inbox**.

Open Email Message

1. On the **Inbox** screen, tap on an email to open it.

2. For attachments, tap **Open** to launch appropriate application, or tap **Save** to save attachment to a SD card.

3. To replay, tap  **Reply** or  **Reply**

all.

a. Tap in the Compose Mail entry field to enter your reply message.

b. Tap **Send** to send immediately, **Save as draft** to save without send or **Discard** to discard without saving or sending.

1. To delete the email immediately, tap **Delete**.

Compose New Email Message

1. On the Inbox screen, tap 

2. Enter the e-mail address in the recipient field. If

you want to add Cc or Bcc recipients, tap  →

Add Cc/Bcc, and then enter the recipient's email address.

1. Tap in the **Subject** entry field to enter your desired subject title.

2. Tap in the **Compose Mail** area to enter your personal message.

3. If desired, tap  →  to attach a file.

4. When ready to send the email, tap 

Edit Email Accounts

1. Tap the  **Email** application icon.

2. On the Inbox screen, tap  → **settings**.

3. Set your desired preferences to customize your email account.

4. Tap  to return to the Inbox screen.

Delete Email Accounts

☆ *If you have multiple accounts, delete the account designated as the default account, the next email listed will be automatically set as the default.*

1. Tap the  **Email** application icon.

2. On the **Inbox** screen, tap  → **Settings**.

3. Click the account you want to delete.

4. In the pop-up **Account options** window, tap

Delete

5. Tap **OK** to confirm the deletion.

Set Default Email Account

You must always have one account designated as the default account, so if you have multiple email accounts, you can select any one as the default.

1. Tap the  **Email** application icon.

2. On the Inbox screen, tap  → **Settings**.

3. Tap the desired account.

4. In the right settings list, tap **Default Account** to select it.

If you delete the account that was designated as the default account, the next email listed is automatically designated as the default.



21 FILE BROWSER

Tap the  **File Browser** application icon to

view the files on all storage devices (*Internal memory, SD card, USB device*), and to install Android application on your tablet quickly & easily .

Use the icons across the top of the screen as follows:

 Internal Flash (ROM)

 SD Card

 USB Storage

 Paste

 Back to the previous folder

 Switch folder display mode.

 Menu

Copy Media between Computer and Tablet

You can use the File Browser to copy files between an external storage devices and your computer. You can first copy the desired files onto a SD card or USB device.

★ *The internal device storage is titled "ROM", memory card "SD" and USB storage device are titled "USB".*

★ *The instructions below are for copying from an SD card or USB storage device into the device. You can use the same method to copy from the device to an SD card or USB storage device, and then connect the storage device to your computer to transfer the files into the desired folder on your computer.*

1. Tap **GoTo**, select  or  to display the contents of your storage device.

2. Tap and hold a folder/file and enter into the multi-select mode, select the folder/file as desire → tap **Copy**.

3. Tap **GoTo**, select  Internal Memory → tap on the folder into which you want to copy the file → tap .

Connected to the local area network shared folders

You can view all of the LAN shared folders.

1. Connect to LAN.

2. Tap  **Net share** → **Add new sharing point** → **Choose the mode used of sharing** → **Editor of**

network folder sharing.

3. After connect successfully, enter **network sharing settings** and open the list of shared folder directly.

Delete files

Tap and hold a folder/file and enter into the multi-selection mode, select the folder/file as desired → tap **Delete** → **OK** to confirm the deletion.



22 MY MUSIC

★ *Audio file formats supported: MP2, MP3, WAV, AAC, WMA.*

Play Music

1. Tap the  **My Music** application icon.

2. Select an audio file from

All/Albums/Artists/Directories/My Favorites/User

Defined Playlists to play it.


3.To stop the music, tap the **Pause**  icon.

4. When you are playing the music, you can tap

 or  to return to the previous screen.

Click  switch to the currently playing

interface, It is shown as follows:

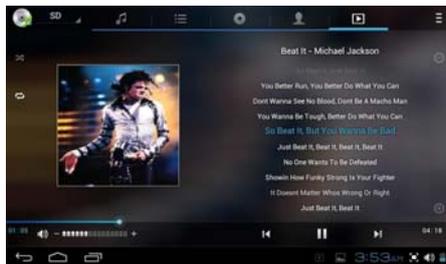

At this interface, you can do: view /download the

lyrics, display album photo or spectrum, play / pause, switch to the previous / next, loop and random operation etc.

Create Music Widget

Can play the music quickly through the Music Widget .

Tap  icon on the desktop, In the pop-up list

select **Widgets** → Select **Music Widget**.

The Operation with Music and Playlist

Add playlist

1.Choose  to enter the playlist interface →

click .

2.Input the playlist name.

3.Tap **Save**.

Rename or Delete playlist

Switch to **display mode**, Tap the playlist → tap



→ Enter a new name in the dialog box, and

click **Save**. If you want to delete the playlist, click



→click **save**.

Add music

1. In the **all song, album, and artist** list, tap the music and hold for switching to multi-select mode.

2. Select the music which you want to add to the list (if you don't want to add, tap it again to cancel).

3. Tap **Add to playlist**, and then select a playlist.

Delete music

Tap and hold on the music you want to delete → tap **Delete**.

Sort by title or date added

In the all song interface, click the  on the upper right, select **sort by title** in the pop-up list, then click the "alphabetical" of the right hand, the songs interface

will be sorted quickly according to the first letter (including the first letter of the pinyin) in the alphabetical list. If you select **Sort by date added**, all songs will be sorted by add date.



23 MY VIDEO

★ *Video file formats supported: MPEG1/2/4, H263, H264 VC1, RealVideo, MotionJPEG. The largest video format is supported 1080P(1920×1080) resolution.*

Play Video

1. Tap the  **My Video** application icon.
2. Select the video from ROM, SD card or USB.
3. Tap screen and click the related icon to adjust the video, (including volume, pause/play, brightness, track, subtitle, and display scale).

4. Tap **Back button** or  to return to the **My**

Video screen.

Create Video Widget

Can quickly play the video through the Video

Widget .

On the desktop tap  icon, select **Widgets** in

the pop-up list → Select **Video Widget**.

The Operation with Video

Zoom video screen

In the video player interface, drag two fingers on the screen with reverse / opposite direction can zoom in / zoom out the video screen.

Setting video display mode

Tap  icon, the video screen can be set as

"full screen, actual size, best fit" three modes.

Audio track and subtitle switching

In the video player interface, click  icon



on the top right to switch **audio track** and **subtitle**.

The Operation with Playlist

Classification of video list

In the root directory, click the **album (times)** on the top left to classify the video.

Switch display mode in the classification folder

In the classification folder, click  and



icon to set list display mode or album display

mode.

★ *In the classification folder, users can click  to classify the video by*



time or name.

Send or delete the video in the list

Tap and hold the video, →click the **option** or **delete** button on the top right of the screen to send or delete the video.



24 MY PHOTO

☆ *Photo file formats supported: JPG, JPEG, BMP, and PNG.*

1. Tap the  **My Photo** application icon.

2. Tap on the desired photo, to view individual photo.

3. Click  on the top right screen to operate the corresponding photos.(including zoom in/zoom out, share, rotate, trim, photos set to, adjust the current display scale, showing details)

The operation with picture list

Classification of photo list

In the root directory, click the **album (times, Locations, people, or tags)** on the top left to classify the photo.

Delete the photo in the list

Tap and hold the video → click the **delete** button on the top right of the screen to delete the photo.

Slide show and settings

Enter the slide's setting

1. Tap the  **My Photo** application icon.

2. In the root directory, click the  on the top right → **setting**.

3. In the settings interface, set the **Filter photo by file size, slideshow speed, and slideshow mode**.

Slide show

1. Tap the  **My Photo** application icon.



Click the photo folder.

2. click  → **slide show**.

☆ *In the classification folder, users can click  and classify the photo by time, color or name.*

Doodle

☆ You can do doodle in **My Photo** interface.

1. Open the picture.

2. Click the  icon → Select **My Photo**.

3. In the doodle interface, user can choose the different doodle function, such as brush, shadow, FX, board, or crop. (**Note:** It will miss brush function if you choose the **Gallery**)

4. After finish the doodle, click the **save** icon.

5. Click the  icon to return to picture



browsing interface.

Create Photo Widget

Through the Photo Plug-ins can quickly open the photos.

Tap  on the desktop, select **Widgets** in the

pop-up list → Select **Photo Widget**.



25 Gallery

The operation with photo and video list

Classification of photos and videos list

In the root directory, click the **album (times, Locations, people, or tags)** on the top left to classify the photos and videos.

View, play the photos and videos

Photo: In the classification folder,

click on the photo thumbnails to open the photo, and on the top right of the folder interface tap  icon

to play slide.

Video: In the classification folder, click on the video preview, enter the video preview interface, and click the play button in the video preview to play the video.

Delete the photos and videos in the list

On the top right of the screen, Tap  icon →

Tap **select album** or **Select item**, then select the photo or video which you want to delete, tap  →

Delete.

★ *Gallery* only supports the display and manages photos and videos in the **default reading/writing storage**. To toggle the

display of the storage area, go to
Settings → **storage** → **default**
reading/writing storage to make changes.
The device default storage area is SD
card.



26 SCREEN CAPTURE

You can capture a screen image by tapping 

at any time.

Tap the  **Screen Capture** application

icon to set options for a screen capture.

- Select a delay timer to capture the screen (seconds) .
- Select the default storage device.

- Show screen capture icon in status bar.

After the images are saved, they can be viewed through  **My Photo** application.



27 TASK MANAGERMENT

Use PK Manager to manage applications and widgets.

Stopping Applications

Android does not automatically stop applications after they are loaded, so you can manually stop the applications as desired.

1. Tap the  **Task Manager** Application

icon.

2. Tap **Running** to display all running applications.

3. Tap on an application you want to stop → tap

Force stop → **OK**.

Uninstall Applications

1. Tap the  **Task Manager** Application

icon.

2. Tap **All** to display all applications.

3. Tap on an application you want to uninstall →

tap **Uninstall**.

1. Tap **OK** to confirm uninstall.

Install Applications

2. Tap the  **Task Manager** Application

icon.

3. Tap **Install** to display all applications and folders.

4. Find and tap on an application you want to install →

tap **Install**.

28 WI-FI

Tap **Settings** → **Wi-Fi**, enter into Wi-Fi settings.

1. Slide the Wi-Fi switch to turn on Wi-Fi.
2. All the AP in the vicinity will be listed, click to select the name you want to connect to AP;
3. If the AP is connected successful before, the AP information will be saved in the pop-up window, select "Connect" starts to connect, choose "forget" to remove AP information;
4. If the AP is not encrypted, in the pop-up window, select "Connect" Start Connection;
5. If the AP is encrypted, enter the password in the pop-up window, and click "Connect" Start Connection;
6. When internet connections are successful, the wireless connection icon will appear in the bottom status bar .

FREQUENTLY ASKED QUESTIONS

Android

Q: What Android OS version is on my Device?

A: 4.0.3

Basic Device Functionary

Q: Do I have to charge the battery before use?

A: You should charge the battery for at least 6 hours, but you can use the device while it's charging. Use the included power adapter to charge; this device does not support charging via the USB cable.

Email

Q: Can I use any of my personal email addresses to send/receive email?

A: The device supports POP3 and SMTP accounts.

Some free email accounts are not supported on mobile

devices. Check with your email provider to see if your account is supported.

Media Cards

Q: Which media cards are compatible with my Device?

A: micro SD cards.

Music

Q: What type of music files can I play on my device?

A: MP2, MP3, WAV, ,FLAC,APE,AAC, WMA

Q: How do I add music files to my device?

A: Copy the music files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

Photos

Q: What type of photo files can I view on my device?

A: JPG, JPEG, BMP and PNG.

Q: How do I add photo files to my device?

A: Copy the photo files from your computer onto a SD card or USB storage device, and then use the File

Browser application to copy the files into the device.

Video

Q: What type of video files can I play on my device?

A: Video file formats supported: MPEG1/2/4、H263、H264、VC1、RealVideo、MotionJPEG. The largest video format is supported 1080P(1920×1080) resolution.

Q: How do I add video files to my device?

A: Copy the video files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

Wi-Fi

Q: Do I need a Wi-Fi adapter to connect to the Internet?

A: No. The Wi-Fi adapter is built-in to the device.

Note:Inconsistent with the physical specifications, please prevail in kind.

BATTERY MANAGEMENT

The battery is not fully charged when you use the device first time, so it is recommended that you charge

the battery for at least 6 hours before you use the device. The rechargeable battery is designed and manufactured to be used and recharged frequently. As with all batteries, the capacity of the battery reduces each time it is charged/depleted. However, you can still try to prolong the battery's lifetime by the suggestions as below:

- Use your tablet at least once a week.
- Charge the battery regularly and fully.
- Never leave the battery fully discharged for a long period of time.
- Always keep the device and the battery away from heat.

Charge battery

Plug the power adapter into an electrical wall outlet, and then connect to the device to fully charge the battery before use (A full charge takes about 6 hours in the status of "off").

★ *You cannot charge the battery using the USB cable.*

When fully charged, the battery icon displays as .

A fully discharged battery takes approximately 6 hours to fully charge in the status of "off", but you can use the device while plugged in when desired.

IMPORTANT SAFETY PRECAUTIONS

Always follow these basic safety precautions when using your tablet. This will reduce the risk of fire, electric shock, and injury.

- Do not expose this product to rain or moisture.
- Keep the device out of direct sunlight and heat sources.
- Protect the power cord. Avoid being stepped or don't put object on the power cord when make charging. Pay more attention to the point where the cord attaches to the device.
- Please use the AC adapter included in the device packaging. Using any other power adapter voids your

warranty.

● Do not unassemble the device by yourself. Any damaged by your own is out of warranty.

Cleaning your device

Treat the screen gently. Pls use soft, non-abrasive cloth such as a camera lens cloth to clean fingerprints or dust on the screen.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without RF striction.