NETGEAR

NETGEAR Roku Player (NTV250) Installation Guide



©2010 NETGEAR, Inc. All rights reserved.

Technical Support

Thank you for selecting NETGEAR products.

Intalk you in securing Mr. Inches product and use it to register your product at http://www.NETGEAK.com/register. Registration is required before you can use the telephone support service. Registration is returned NETGEAR website is strongly recommended. Go to http://www.netch.org/architecture.

Go to http://support.netgear.com for product updates and Web support. For complete DoC please visit the NETGEAR EU Declarations of Conformity website at: http://kb.netgear.com/app/answers/detail/a_id/ 11621/

Trademarks

NETGEAR, the NETGEAR logo, ProSafe, Smart Wizard, and Auto Uplink are trademarks or registered trademarks of NETGEAR, inc. Microsoft, Windows, Windows NT, and Vista are registered trademarks of Microsoft Corporation. Other brand and product names are registered trademarks of trademarks of their respective holders.

Statement of Conditions

In the interest of improving internal design, operational function, and/or reliability, NETGEAR reserves the right to make changes to the product described in this document without notice. NETGEAR does not assume any liability that may occur due to the use or application of the product(s) or circuit layou(s) described herein.

Package Contents



Your Player at a Glance



1: Connect to the TV

Choose the setup that matches the ports on your TV. For best picture quality, use an HDMI connection (if available). Make sure your TV is on and set to display the correct video input.

HDMI (preferred)

Connect an HDMI cable (sold separately) to the **HDMI** port on your player and to the **HDMI IN** port on your TV.



۸۱/

Connect the yellow connectors on the A/V cable (included) to the VIDEO port on your player and the VIDEO IN port on your TV. Connect the red and white connectors to the R-AUDIO-L ports on your player and the L/R AUDIO IN ports on your TV.



•

2: Power Up

Insert the batteries in the remote

Slide the bottom half of the remote downward to open the remote. Insert two AAA batteries (included) in your remote...



Connect the power adapter to your player.



3: Get Your Home Network Ready

To use your player, you must connect it to your home network to use you player, you must connect it by your internet new with either a wireless or a wired connection. We recommend using a router or wireless access point for your network, in addition to your broadband modem. After you get your network ready, Guided Setup helps you connect your player to your



4: Complete Guided Setup

On your TV:

- Use the remote to follow the onscreen instructions. Your player may download software updates or restart during setup.
- setup.

 When Guided Setup prompts you to enter your Roku linking code, use your computer to go to roku.com/link. Enter the code that appears on your TV screen and then create a Roku account, if you do not already have one.
- Once you complete setup, select a channel icon (such as Netflix or Amazon Video On Demand) to view, or visit the Roku Channel Store to add more channels (such as the Pandora Internet radio channel).
- Some Roku partners may require you to activate your Roku player to access their content. Just follow the onscreen instructions when you launch a channel for the first time.



5: Basic Remote Functions

To do this	Press this
Hove left or right	B∝D
Move up or down	0~0
Scroll left one page at a time.	0
Scroit right one page at a time	0
Select an option from a menu	0
Return to previous screen	or (A (from top of screen)
Paturn to Roku home screen	0
Start or pause playback	
Exit playback	0 ~ 0
Fast forward	0
Rawind	0
View thors options	0
Replay last 7 seconds of video	0

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outsit on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

IEEE 802.11b or 802.11g operation of this product in the U.S.A. is firmware-limited to channels 1 through

11.

MPGRIANT NOTE: MPGRIANT SERVICE STATEMENT OF THE STATEMENT SERVICE STATEMENT SE

Industry Canada Stalement
Interest Control Stalement
Interest Control Stalement
Interest Control Stale
Interest Control
Inter

NETGEAR, Inc. 350 East Plumeria Drive San Jose, CA 95134 USA

July 2010