


# Chromecast safety, regulatory and warranty information

## CHROMECAST

MODEL NC2-6A5

WHAT YOU'LL FIND IN YOUR CHROMECAST BOX:

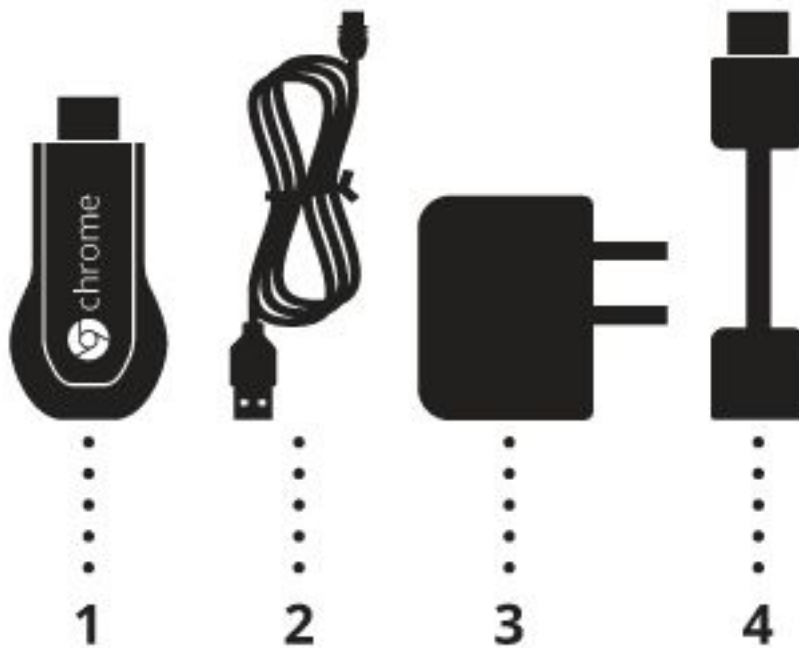

1. Chromecast: Your Chromecast plugs into any HDMI port on your TV, and uses your existing Wi-Fi network to stream video from the internet to your TV. A Chromecast is controlled from devices on the same Wi-Fi network, such as smart phones, tablets, or computers, and is powered using the USB cable (#2).
2. USB cable: The USB cable provides power to your Chromecast. One end plugs into your Chromecast, and the other end plugs into either a USB port on your TV, or the power supply (#3). DO NOT PLUG THE USB CABLE INTO A PORT LABELED "SERVICE"; IT MUST BE



LABELED "USB" OR DISPLAY THIS SYMBOL:

3. Power supply: The power supply is optional, and can be used with the USB cable to power your Chromecast if your TV does not have a USB port.
4. HDMI extender: The HDMI extender is optional, and can be used if your Chromecast does not fit directly into your TV. The Chromecast app may also recommend using it to improve your Wi-Fi reception. Attach between your Chromecast and TV.

MORE HELP WITH SETTING UP CHROMECAST CAN BE FOUND [HERE](#).

## WARNINGS TO USERS

Chromecast may get hot to the touch; this is normal. Unplug Chromecast's power source and let it cool before removing it from your television.

Use only the cables and plugs provided with your device to plug Chromecast into a power source. Using other cables or plugs may damage Chromecast and/or your television.

Do not expose Chromecast or the power supply to water or extreme conditions (moisture, heat, cold, dust), as Chromecast or the power supply may malfunction or cease to work when exposed to such elements.

Do not attempt to disassemble or repair Chromecast yourself. Doing so voids the limited warranty and could harm you, your television, and/or Chromecast.

Chromecast is an entertainment device; it is not designed, manufactured or intended for use in hazardous environments requiring fail-safe performance in which the failure of Chromecast could lead directly to death, personal injury, or severe physical or environmental damage.

Take care when handling the power supply to avoid electric shock.

Caution: Risk of electric shock. Dry location use only.

## Pacemaker Notice

The device contains radios that emit electromagnetic fields. These electromagnetic fields may interfere with pacemakers or other medical devices. If you wear a pacemaker, maintain at least 20 cm (8 inches) of separation between your pacemaker and your device. If you suspect your device is interfering with your pacemaker or any other medical device, stop using it and consult your physician for information specific to your medical device.

Do not carry the device in the front pocket of your shirt or coat.

For information about other active medical implants, please contact the producer or a doctor to ensure that your product's magnetic field will not interfere with the implant.

## Device with Magnet

Avoid placing any media that contains magnets or is sensitive to magnetism, such as credit cards, bank cards, audio/video, tapes, or magnetic memory devices, near this product.

Media containing information sensitive to magnets should be kept at least 5 cm away from the product. For example, if you carry your wallet or billfold containing magnetic cards next to this product, information stored on those cards could be destroyed.

Similarly, magnet sensitive devices, such as a mechanical watch or measuring device, can be damaged if they come too close to this product.

WARRANTY INFORMATION IS AVAILABLE [HERE](#).

LICENSING INFORMATION IS AVAILABLE [HERE](#).

## REGULATORY INFORMATION

### NOTE ON INTERFERENCE IN A RESIDENTIAL INSTALLATION

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. Chromecast generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If Chromecast does cause harmful interference to radio or television reception, which can be determined by plugging in, then unplugging, Chromecast, the user is encouraged to try to correct the interference by reorienting or relocating the receiving antenna and/or consulting the dealer or an experienced radio/TV technician for help.

Chromecast complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) the device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate Chromecast or warranty.

Model: NC2-6A5

FCC ID: A4RNC2-6A5 -- your Chromecast's FCC ID is printed on its back

To satisfy FCC exposure requirements, a separation distance of at least 20 cm should be maintained between the antenna of this device and persons during device operation. Operations at closer than this distance are not recommended.

The antenna used for this transmitter must not be co-located in conjunction with any other antenna or transmitter.

Chromecast was designed by Google Inc. of 1600 Amphitheatre Parkway, Mountain View, California 94043 and assembled in China.

**HDMI**<sup>®</sup>  
HIGH-DEFINITION MULTIMEDIA INTERFACE