

WPG-370 Wireless Presentation Gatway User Guide

IMPORTANT: Please read this User Guide to obtain important information on installing and using your product in a safe manner, as well as registering your product for future service. Warranty information contained in this User Guide will describe your limited coverage from ViewSonic Corporation, which is also found on our web site at http:// www.viewsonic.com in English, or in specific languages using the Regional selection box in the upper right corner of our website. "Antes de operar su equipo lea cu idadosamente las instrucciones en este manual"

Model No. VS15180

Compliance Information

For U.S.A.

This device complies with part 15 of FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

For Canada

- This Class B digital apparatus complies with Canadian ICES-003.
- Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

CE Conformity for European Countries

The device complies with the EMC Directive 2004/108/EC and Low Voltage Directive 2006/95/EC.

Following information is only for EU-member states:

The mark shown to the right is in compliance with the Waste Electrical and Electronic Equipment Directive 2002/96/EC (WEEE).

The mark indicates the requirement NOT to dispose the equipment as unsorted municipal waste, but use the return and collection systems according to local law.

If the batteries, accumulators and button cells included with this equipment, display the chemical symbol Hg, Cd, or Pb, then it means that the battery has a heavy metal content of more than 0.0005% Mercury, or more than 0.002% Cadmium, or more than 0.004% Lead.





FCC Radiation Exposure Statement

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This wireless module device complies with part 15 of FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Industry Canada Notice

This wireless module device complies with Canadian RSS-210.To prevent radio interference to the licensed service, this device is intended to be operated indoors and away from windows to provide maximum shielding. Equipment (or its transmitting antenna) that is installed outdoors is subject to licensing. The installer of this radio equipment must ensure that the antenna is located or pointed such that it does not emit RF field in excess of Health Canada limits for the general population; consult Safety Code 6, obtainable from Health Canada's web site www.hc-sc.gc.ca/rpb.

R&TTE Compliance Statement **(€ ()**

This device complies with the Essential Requirements of the R&TTE Directive of the European Union (1999/5/EC). This equipment meets the following conformance standards:

ETSI EN 300 328 EN 301 489-01 EN 301 489-17 EN 62311

Notified Countries: Germany, UK, Netherlands, Belgium, Sweden, Denmark, Finland, France, Italy, Spain, Austria, Ireland, Portugal, Greece, Luxembourg, Estonia, Latvia, Lithuania, Czech Republic, Slovakia, Slovenia, Hungary, Poland and Malta.

--- 經型式認證合格之低功率射頻電機,非經許可,公司、商號或使用者均不得擅自變更頻率,加大功率或變 更原設計之特性及功能。 --- 低功率射頻電機之使用不得影響飛航安全及干擾合法通信:經發現有干擾現象時,應立即停用,並改善至 無干擾時方得繼續使用。 前項合法通信,指依電信法規定作業之無線電通信低功率射頻電機需忍受合法通信或工業、科學及醫療用電

波輻射性電機設備之干擾。

Declaration of RoHS Compliance

This product has been designed and manufactured in compliance with Directive 2002/95/ EC of the European Parliament and the Council on restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS Directive) and is deemed to comply with the maximum concentration values issued by the European Technical Adaptation Committee (TAC) as shown below:

Substance	Proposed Maximum Concentration	Actual Concentration	
Lead (Pb)	0,1%	< 0,1%	
Mercury (Hg)	0,1%	< 0,1%	
Cadmium (Cd)	0,01%	< 0,01%	
Hexavalent Chromium (Cr6+)	0,1%	< 0,1%	
Polybrominated biphenyls (PBB)	0,1%	< 0,1%	
Polybrominated diphenyl ethers (PBDE)	0,1%	< 0,1%	

Certain components of products as stated above are exempted under the Annex of the RoHS Directives as noted below:

Examples of exempted components are:

- 1. Mercury in compact fluorescent lamps not exceeding 5 mg per lamp and in other lamps not specifically mentioned in the Annex of RoHS Directive.
- 2. Lead in glass of cathode ray tubes, electronic components, fluorescent tubes, and electronic ceramic parts (e.g. piezoelectronic devices).
- 3. Lead in high temperature type solders (i.e. lead-based alloys containing 85% by weight or more lead).
- 4. Lead as an allotting element in steel containing up to 0.35% lead by weight, aluminium containing up to 0.4% lead by weight and as a cooper alloy containing up to 4% lead by weight.

Copyright Information

Copyright © ViewSonic® Corporation, 2013. All rights reserved.

ViewSonic[®], the three birds logo, OnView[®], ViewMatch[™], and ViewMeter[®] are registered trademarks of ViewSonic[®] Corporation.

Disclaimer: ViewSonic[®] Corporation shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from furnishing this material, or the performance or use of this product.

In the interest of continuing product improvement, ViewSonic[®] Corporation reserves the right to change product specifications without notice. Information in this document may change without notice.

No part of this document may be copied, reproduced, or transmitted by any means, for any purpose without prior written permission from ViewSonic[®] Corporation.

Product Registration

To meet your future needs, and to receive any additional product information as it becomes available, please register your product on the Internet at: www.viewsonic.com.

For Your Records		
Product Name:	WPG-370 Wireless Presentation Gateway	
Model Number:	VS15180	
Document Number: Serial Number: Purchase Date:	WPG-370_UG_ENG Rev. 1A 01-13-13	

Product disposal at end of product life

ViewSonic respects the environment and is committed to working and living green. Thank you for being part of Smarter, Greener Computing. Please visit ViewSonic website to learn more. USA & Canada: http://www.viewsonic.com/company/green/recycle-program/ Europe: http://www.viewsoniceurope.com/uk/support/recycling-information/ Taiwan: http://recycle.epa.gov.tw/recycle/index2.aspx

Table of Contents

Chapter 1: Produ	Ict Introduction	2		
1-1 Package Contents				
1-2 Hardwa	re Recommendation			
(1)	Presentation Mode :			
(2)	Intel WiDi Mode:	3		
(3)	Media Streaming Mode	4		
1-3 Highligh	nts	5		
1-4 Hardwa	re Setup/Installation	6		
(1)	Connect your device	6		
(2)	Connect power and push power button to turn on WPG-370	6		
Chapter 2: Using	WPG-370 on Presentation Mode			
2-1 Switch	NPG-370 to Presentation Mode			
2-2 Check t	ne IP address of WPG			
2-3 Connec	t to WPG by wireless network	10		
2-4 Using a	oplication software	11		
2-4-2 l	Jsing application software	16		
2-4-3 N	Лenu List	17		
2-4-4 (Connect to Web Configuration Menu	18		
2-4-5 \$	itatus & Info	19		
2-4-6	Network Setting	20		
2-4-7 \	Vireless Settings	22		
(3)	Band Setting			
2-4-8 <i>F</i>	AP Bridge Setting	25		
2-4-9 F	Projection Setting	27		
2-4-10	Password Setting			
2-4-12	Firmware Upgrade	30		
2-4-13	Logout	31		
Chapter 3: Usir	ng WPG-370 on Intel WiDi Mode	32		
3.1 Switch \	NPG-370 to Intel WiDi Mode	32		
3.2 Connec [®]	to WPG-370 by Intel WiDi			
Chapter 4: Using	WPG-370 on Media Streaming Mode	35		
4.1 Switch \	NPG-370 to Media Streaming Mode	35		
Appendix A: Sup	port resolution	37		
Appendex B: WF	G-370 Support Media Format	37		
Video Form	at	37		
Audio Form	at	38		
Photo Form	at	38		

Chapter 1: Product Introduction

Congratulations on your purchase of ViewSonic Wireless Presentation Gateway WPG-370. This section introduces you to the WPG-370 (referred to as the WPG in this user guide).

1-1 Package Contents

- (1) WPG-370
- (2) AC adapter with UK/EU/US plug
- (3) CD-ROM
- (4) Quick Installation Guide



1-2 Hardware Recommendation

WPG-370 supports real time presentation, Intel Wireless Display[®] & Multimedia Media streaming play back functions.

(1) Presentation Mode :

WPG-370 is designed to able to stream video/music/photo contents from PC (Windows 7 /Window 8 only) to your TV through this device.

PC or Notebook

- Ÿ CPU: Core 2 Duo 1.3GHz or better
- Ÿ Memory: 2.0 GB or better
- Ÿ Network: 802.11g/n Wi-Fi and/or 100/1000 Mbps Ethernet

(2) Intel WiDi Mode:

Users must have Intel WiDi[®] compatible platforms to support Intel Wireless Display. The requirement of Intel WiDi[®] compatible platforms is as below

System Component	Requirement
Processor	ONE of the following: Intel® Core™ i7 Processor: 640M; 660LM; 640LM; 620LM; 620M; 610E; 690UM; 680UM; 660UM; 640UM; 620UM; 660UE; 2710QE; 2820QM; 2720QM; 2635QM; 2630QM; 2657M; 2649M; 2629M; 2620M; 2617M; 2540M; 2520M; 2510E; 2640LM; 2620LM; 2630UM; 2610UM; 2530UM; 2920XM Intel® Core™ i5 Processor: 580M; 560M; 540M; 520M; 480M; 460M; 450M; 430M; 580UM; 560UM; 540UM; 520UM; 470UM; 430UM; 2540M; 2520M; 2410M; 2537M; 2430M; 2435M, 2450M; 2467M Intel® Core™ i3 Processor: 390M; 380M; 370M; 350M; 330M; 330E; 2310M
Graphics	Intel [®] HD Graphics
Wireless	ONE of the following: Intel® Centrino® Wireless-N 1000, 1030, 2200, or 2230 Intel® Centrino® Wireless-N 2200 for Desktop Intel® Centrino® Advanced-N 6200. 6205. 6230. or 6235

	Intel® Centrino® Advanced-N 6205 for Desktop Intel® Centrino® Wireless-N + WiMAX 6150 Intel® Centrino® Advanced-N + WiMAX 6250 Intel® Centrino® Ultimate-N 6300
Software	Intel [®] My WiFi Technology (Intel [®] MWT) ² and Intel [®] Wireless Display ¹ must be pre-installed and enabled.
OS	Windows 7 64-bit*, Home Premium, Ultimate or Professional Windows 7 32-bit*, Home Premium, Ultimate, Professional or Basic Windows* 8 32-bit and 64-bit editions

(3) Media Streaming Mode

WPG-370 is designed to able to stream video/music/photo contents from PC (Windows 7 based), smart phone, and Tablet-PC to your TV through this device.

PC or Notebook

- Ÿ CPU: 1.6 GHz or better
- Ÿ Memory: 1.0 GB or better
- Ÿ Network: 802.11g/n Wi-Fi and/or 100/1000 Mbps Ethernet

Smart phone

- Ÿ CPU: 800 MHz or better
- Ÿ Memory: 256 MB or better
- Ÿ Network: 802.11g/n Wi-Fi or better

Tablet-PC

- Ÿ CPU: 600 MHz or better
- Ÿ Memory: 256 MB or better
- Ÿ Network: 802.11g/n Wi-Fi or better

Recommend software

- Ÿ PC: Windows Media Player, AirFun
- Ÿ Android OS: AirFun
- Ÿ iOS: iMediashare

1-3 Highlights

Thanks again for choosing the product. This product allows multiple users to connect to the same projector by wired or wireless network and avoiding the hassle of using VGA or HDMI cable.

Features

- I 802.11 a/b/g/n Wireless compatibility
- 802.11n 2.4GHz & 5GHz dual band standards
- I Supports both Wireless and Ethernet connectivity
- I VGA or HDMI connections
- I Wireless multimedia streaming up to Full HD 1080p
- I Designed to work with Intel® WiDi and other wireless display standards
- I PC content, movies, photo's apps and more all on your big screen
- Compatible with Windows, Apple and Android devices
- I Network security
- I USB display on Media Streaming mode

1-4 Hardware Setup/Installation

(1) Connect your device



(2) Connect power and push power button to turn on WPG-370.



After few seconds, when you see the below screen: the device is assigned an IP address, the system is in Presentation mode and ready to do PC mirror from your PC/Mac. Please connect to WPG370 via Wi-Fi.

Wi-Fi Connect



Connect WPG-370 Remote



	To Project using Wireless Presentation Gateway G Select WPG-370 from laptop/PC's wireless access point menu.
	Open WPG-370 Software and Enter login code as indicated to start projection.
1	To Install Wireless Presentation Gateway Software
	G Select WPG-370 from laptop/PC's wireless access point menu.
	Open a web browser and enter wireless IP address shown below.
	Install WPG-370 software from the webpage menu.
	Enter Login code as indicated to start presentation. Note: Disable firewall if encounter connection difficulty.

(3) You can switch between Presentation mode, Intel WiDi® Adapter mode and Media Streaming mode by pushing the button twice at the side of box (next to USB connector).

Chapter 2: Using WPG-370 on Presentation Mode

2-1 Switch WPG-370 to Presentation Mode

Push mode selection button on the WPG-370 till you see the screen below, the box is ready for **Presentation Mode** connection.

To Project using Wireless Presentation Gateway • Select WPG-370 from laptop/PC's wireless access point menu. • Open WPG-370 Software and Enter login code as indicated to start projection. • Select WPG-370 from laptop/PC's wireless access point menu. • Select WPG-370 from laptop/PC's wireless access point menu. • Select WPG-370 from laptop/PC's wireless access point menu. • Open a web browser and enter wireless IP address shown below. • Install WPG-370 software from the webpage menu. • Enter Login code as indicated to start presentation. • Note: Disable firewall if encounter connection difficulty.		ViewSonic	LOGIN CODE:
 Open WPG-370 Software and Enter login code as indicated to start projection. To Install Wireless Presentation Gateway Software Select WPG-370 from laptop/PC's wireless access point menu. Open a web browser and enter wireless IP address shown below. Install WPG-370 software from the webpage menu. Enter Login code as indicated to start presentation. Note: Disable firewall if encounter connection difficulty. 			
 Select WPG-370 from laptop/PC's wireless access point menu. Open a web browser and enter wireless IP address shown below. Install WPG-370 software from the webpage menu. Enter Login code as indicated to start presentation. Note: Disable firewall if encounter connection difficulty. 	L		
 Install WPG-370 software from the webpage menu. Enter Login code as indicated to start presentation. Note: Disable firewall if encounter connection difficulty. 			
 Enter Login code as indicated to start presentation. Note: Disable firewall if encounter connection difficulty. Device Name: Wired IP:		Open a web browser and enter wireless IP	address shown below.
Note: Disable firewall if encounter connection difficulty. Device Name: Wired IP:		Install WPG-370 software from the wabpage	ge menu.
Device Name: Wired IP:		Enter Login code as indicated to start pres	entation.
Wired IP:			
		 Note: Disable firewall if encounter connect 	tion difficulty.
	Wired I	Name: P:	tion difficulty.
The IP Address (Wireless / Wired Ethernet)	Wired I Wireles	Name: IP: ss IP:	

2-2 Check the IP address of WPG

When WPG is powered on, check the connected display, you can find the IP address and login code Instruction Page:

ſ	
	To Project using Wireless Presentation Gateway ③ Select WPG-370 from laptop/PC's wireless access point menu.
	Open WPG-370 Software and Enter login code as indicated to start projection.
	To Install Wireless Presentation Gateway Software G Select WPG-370 from laptop/PC's wireless access point menu.
	 Open a web browser and enter wireless IP address shown below.
	Install WPG-370 software from the webpage menu.
	④ Enter Login code as indicated to start presentation.
L	Note: Disable firewall if encounter connection difficulty.
Wired	e Name: IIP: ess IP:

You can connect to WPG by the IP address of the connection type you're using (wired /wireless).

2-3 Connect to WPG by wireless network

Use your computer's Wireless Network Connection window to access an available wireless network. Select the device from the list. Click Connect. The default device name is WPG-370.



Note: If using a wireless client other than Windows, the screen above may look differently. For more details, see your PC user guide.

2-4 Using application software

You can install WPG370 application in the CD ROM or download the application from internet. (1) Install application in CD-ROM







(2) Download application from Internet.

Before you can download the application on the internet, you must connect to Internet. If you have a AP router that connect to internet, you can follow the setting below to bridge WPG370 to the AP router and then connect to internet. For more information, please refer to 2.4.8 AP Bridge setting.

Please follow instructions to download and install WPG-370 application software according to your system:

Image: Setting Research Research Setting Research Setting Research Setting Research Setting Research	Please key IP address and suffix(/remote/admin.html) in browser, Ex:, 192.168.59.254/remote/admin.htm WPG's IP address is shown at the Instruction page. Click 'Windows x32' or "Windows x64" or ' MAC' button to download application software.
File Download - Security Warning Do you want to run or save this file? Image: WPG-370.exe Type: Application, 1.82MB From: 192.168.94.113 Run Save Cancel Image: While files from the Internet can be useful, this file type can potentially harm your computer. If you do not trust the source, do not run or save this software. What's the risk?	A window is prompted, to execute, please check "run", or "save" to save application software for future usage. During the MAC application software installation, you will also be asked to install "soundflower" program to make your MAC PC to output audio correctly, please install it before going to next step.
 Windows Security Alert To help protect your computer, Windows Firewall has blocked some features of this program. Do you want to keep blocking this program? Name: WPG-370 Publisher: Unknown Keep Blocking Unknown Keep Blocking Ask Me Later Windows Firewall has blocked this program from accepting connections from the Internet or a network. If you recognize the program or trust the publisher, you can unblock it. When should unblock a program? 	If you see this message (or anything similar from your antivirus program) when running WPG, please click ' Unblock' to allow WPG client software to access network, or WPG client program will not be able to work properly.



2-4-2 Using application software



No	Name	Function Description
1	Menu	Access menu list.
2	Play	Start / pause presentation.
		When pausing a progressing
		presentation, the displaying
		image will freeze; press play
		button again to resume
3	Minimize	Minimizes Application Software
		window
4	Close	Closes Application Software
		window
5	Stop	Stop a progressing presentation

2-4-3 Menu List

Besides the buttons, you can also click 'Menu' button to access menu list.

Item	Description
Information	Check the information of connected WPG.
Projection Control	Controls the projection:
	Play: Start presentation.
	Pause: Pauses presentation.
	Stop: Stop presentation.
	Output Resolution: Changes display resolution
	and you can check
Web Configuration menu	Use the web browser to connect to the IP
	address of WPG (Wireless / Wired
	IP address). WPG's IP address can be found at
	the lower-left corner of
	Instruction page
Exit	Close menu list

2-4-4 Connect to Web Configuration Menu

Please key IP address and suffix(/remote/admin.html) in browser, Ex:, 192.168.59.254/remote/admin.html.

ViewSonic Wireless Presentation Gateway		
	Login	
Status & Info	Please input your password	
Network Settings	Password	
Wireless Settings		Sign In Sign Out
Projection Setting		
Password Settings	Application Download	
Configuration Tools	Windows 32-bit Windows 64-bit	Download
Restart	Мас	Download
Logout		
	Switch Mode	
	Mode Switch	AirFun Apply
14		Description
Item		Description
Application downl	oad	Download application from Internet
Mode switch		Switch between Presentation, Intel WiDi®,
		and Media streaming mode

2-4-5 Status & Info

Displays system information, like system software version and IP address. Many useful information can be obtained here when you need help about system configuration and firmware upgrade.

Vi	iewSonic [®] Wireless Presentation Gateway
	Status and Information
Status & Info	This page displays the general information and the status of the system
Network Settings	Version Information
Wireless Settings	Firmware Version Hardware Version
Projection Setting	Network Status
Password Settings	MAC Address
Configuration Tools	IP Address
	Subnet Mask
Restart	Gateway
Logout	Wireless Status
	Wireless Function
	Wireless IP (WLAN IP)
	Mode
	Device Name (SSID)
	Channel
	Security
	Wireless MAC Address

2-4-6 Network Setting

ViewSonic Wireless Presentation Gateway			
	Network Settings		
Status & Info Network Settings Wireless Settings Projection Setting Password Settings Configuration Tools Restart	Set the IP Address of the system manually for getting IP Address from DHCP Server IP Address Settings Obtain an IP address automatically Use the following IP address IP A		
Logout	DNS Address		

Displays and configures the network settings.

Address

 Obtain an IP address automatically Use the following IP address 		
IP Address		
Subnet Mask		
Gateway Address		
- DNS Server		
DNS Address		
	Apply	Cancel
Item	Description]
Obtain an IP address	WPG will obtain an IP address from	
Automatically	DHCP server automatically.	
Use the following IP	Set WPG IP address manually. Fill	

address.

the fields below to setup IP

DNS Server	Please input the IP address of the
	DNS (Domain Name Service)
	server.

Click 'Apply' button to save the settings.

NOTE: When the configuration settings are changed, you must restart the network connection. You can restart the network connection by clicking "Restart" on the web configuration menu.

2-4-7 Wireless Settings

Configures wireless network settings.

(1)'Basic' Settings

ViewSonic Wireless Presentation Gateway			
Status & Info	Basic Security AP Bridge Wireless Settings AP Bridge This page allows you to define Device Name (SSID), and Channel for the wireless connection.		
Network Settings Wireless Settings Projection Setting	These parameters are used for the wireless stations to connect to the Access Point. Wireless Function : Enable		
Password Settings Configuration Tools Restart	Mode :AP •Device Name (SSID) :•Channel Number :11		
Logout	Apply Cancel		

Displays and configures the wireless settings.

Item	Description
Wireless Function	Select 'Enable' to enable wireless network function; 'Disable' to
	disable it.
Mode	Select wireless mode. Only AP (Access Point) mode is supported.
Device Name	Input the Device Name of presentation gateway here. Default is
(SSID)	' WPG-370".
Channel Number	Show the wireless channel number: 1 to 13. (1 to 11 in certain
	version of product)

\Click 'Apply' button to save the settings.

NOTE: When the configuration settings are changed, you must restart the network connection. You can restart the network connection by clicking "Restart" on the main menu.

ViewSonic Wireless Presentation Gateway			
	Basic Security Band AP Bridge		
Status & Info	Security Settings		
Network Settings	This page allows you setup the wireless security. Turn on WEP or WPA by using Encryption Keys could prevent any unauthorized access to your wireless network		
Wireless Settings			
Projection Setting	Encryption : WPA+WPA2 -		
Password Settings	Password:		
Configuration Tools			
Restart	Apply Cancel		
Logout			

Encryption: Disabled

Disables wireless encryption.

Encryption :	Disable	-		
			Apply	Cancel

Encryption: WEP

Enable WEP encryption. Wireless clients must support WEP encryption and know the encryption key you set here.

NOTE: When the configuration settings are changed, you must restart the network connection. You can restart the network connection by clicking "Restart" on the main menu. **Encryption: WPA +WPA2**

Enable WPA + WPA2 encryption. Wireless clients must support WPA encryption and know the encryption passphrase you set here.

(3) Band Setting

ViewSonic Wireless Presentation Gateway				
	Basic Security Band AP Bridge			
Status & Info	Band Settings			
Network Settings	This page allows you setup the wireless band.			
Wireless Settings				
Projection Setting	Band : 2.4GHz(8+G+N) 🔽			
Password Settings				
Configuration Tools				
Restart	Apply Cancel			
Logout				

Item	Description
Band	Select the wireless band. Available options are:
	2.4GHz (B+G+N) - 802.11b, 802.11g, and 802.11n clients. 5GHz (B+G+N) - 802.11b, 802.11g, and 802.11n clients.

2-4-8 AP Bridge Setting

ViewSonic Wireless Presentation Gateway			
	Basic Security Band AP Bridge		
Status & Info	Virtual AP Bridge		
Network Settings	This page allows you setup the Virtual AP Bridge.		
Wireless Settings			
Projection Setting	Virtual AP Bridge: Bridge to Wireless 💌		
Password Settings			
Configuration Tools			
Restart	Apply Cancel		
Logout			

Item	Description
Virtual AP only	Ad-hoc mode
Bridge to Wireless	Connect to Internet via Wireless AP
	router
Bridge to Ethernet	Connect to Internet via Wired AP
	router

Bridge to Ethernet/Wired Connection

Step1: Connect LAN to the AP router

Step2: Go to Web Conguration page => Wireless Setting => Virtual AP setting => Bridge to Ethernet. Then you can bridge WPG370 to Internet.



Note: WPG 370 must connect to AP router and can't connect to WAN directly.

Bridge to Wireless/Wireless connection

Step1: Go to Web Conguration page => Wireless Setting => Virtual AP setting => Bridge to Wireless. Step2: Click Wireless connection button. Then there will show the Wireless AP list on the screen. Please choose the AP you want to connect.



2-4-9 Projection Setting

ViewSonic Wireless Presentation Gateway

Projection Settings

Status & Info	You can adjust the screen resolution
Network Settings	Instruction Page Language
Wireless Settings	HDMI Outout Resolution
Projection Setting	VGA Outout Resolution
Password Settings	
Configuration Tools	Apply Cancel
Restart	
Logout	

Displays and configures the projection setting.

Instruction Page Language Selection	
HDMI Outout Resolution	
VGA Outout Resolution	

Item	Description
Instruction Page Language	Select the displaying language.
Selection	
HDMI Output Resolution	Select HDMI output resolution for
	projection.
VGA Output Resolution	Select VGA output resolution for
	projection.

NOTE: When the configuration settings are changed, you must restart the network connection. You can restart the network connection by clicking "Restart" on the main menu.

2-4-10 Password Setting

Displays and configures the password setting.

ViewSonic Wireless Presentation Gateway		
	Password Settings	
Status & Info Network Settings Wireless Settings Projection Setting Password Settings	You can change the password of the system required to log into the web management. The password can contain up to 20 alphanumeric characters and case sensitive. Current Password New Password Confirmed Password Apply Cancel	
Configuration Tools		
Restart		
Logout		

Item	Description
Current Password	Input current password here.
New Password /	New Password: Enter new password.
Confirmed	Confirmed Password: Confirmed the
Password	new entered password.

Click 'Apply' button to save the settings.

NOTE: When the configuration settings are changed, you must restart the network connection. You can restart the network connection by clicking "Restart" on the main menu.

2-4-11 Restart

Restart WPG when the device is not working properly or to apply changes made on web

ViewSonic Wireless Presentation Gateway		
	Firmware Upgrade	
Status & Info	This tool allows you to check the system's firmware update.	
Network Settings	© Auto	
Wireless Settings	Check Script	
Projection Setting	Do you want to restart your device now ?	
Password Settings		
Configuration Tools	福定 取消	
Restart		
Logout		

Click 'OK' to restart the WPG-370, or click 'Cancel' to abort.

2-4-12 Firmware Upgrade

ViewSonic Wireless Presentation Gateway		
	Firmware Upgrade	
Status & Info	This tool allows you to check the system's firmware update.	
Network Settings	⊙ Auto	
Wireless Settings	Check	
Projection Setting		
Password Settings		
Configuration Tools		
Restart		
Logout		

Upgrade the firmware of this WPG.

Select 'Auto', WPG will check if there is any firmware upgrade once WPG-370 connects to Internet.

Note:

It's recommended to use wired Ethernet connection to perform firmware upgrade.

2-4-13 Logout

ViewSonic Wireless Presentation Gateway		
	Login	
Status & Info Network Settings Wireless Settings Projection Setting Password Settings Configuration Tools Restart Logout	Please input your password Password Sign In Sign Out Application Download Windows 32-bit Download Windows 64-bit Download Mac Download	
	Switch Mode Mode Switch AirFun Apply	

If you wish to logout from web configuration menu, click 'Logout'.

Chapter 3: Using WPG-370 on Intel WiDi Mode

3.1 Switch WPG-370 to Intel WiDi Mode

Push mode selection button on the WPG-370 till you see the screen below, the box is ready for Intel Wireless Display connection.



3.2 Connect to WPG-370 by Intel WiDi

For Intel WiDi platform device Please follow the next steps to do Intel WiDi connection 1. **Double** click the Intel WiDi icon from your PC desktop.



Click "Scan for available adapters" and then connect to the adapter with same ID on the screen.



2. For the first connection, users need to type the password show on the projector or TV screen.



3. After the connection successful, PC screen will be projected to the screen of TV or projector.



Chapter 4: Using WPG-370 on Media Streaming Mode

4.1 Switch WPG-370 to Media Streaming Mode

Push mode selection button on the WPG-370 till you see the screen below, the box is ready for **Media Streaming Mode** connection.



In Media Streaming mode, you can streaming photo/music/video from your PC, Smartphone or tablet. Or play video/Music/photo form USB

Please follow the instruction to do media streaming.

1. Connect to WPG-370 in Wi-Fi AP list.

Wi-Fi Connect



- 2. Play media by WiFi streaming, we recommend software/AP as following : For more information Please check user manual of each software.
 - I PC: AirFun (in CD wizard)
 - I Android: iMediaShare, Airfun
 - I iOS: iMediaShare, Wi-Fi Media
- 3. Play media by USB
 - I Plug in USB drive in to WPG-370
 - Use virtual remote to control. (key in IP address with suffix "/remote") EX: 192.168.59.254/remote, will show below



I You can play Video, Photo or music that you select.

Appendix A: Support resolution

Interface	Output resolution
VGA	800x600@60Hz 1024x768@60Hz 1280x800@60Hz 1280x1024@60Hz 1366x768@60Hz
HDMI	NTSC,PAL,480p,576p,720p50Hz,720p60Hz,1080i50Hz,1080i60hz,1080p50Hz,1080p60Hz

Appendex B: WPG-370 Support Media Format

Video Format

Format	File extension
AVI	avi
MPEG-1	mpg, mpeg
MPEG-2	mpg, mpeg
MPEG-TS	m2t, tts
MPEG-4	mp4, mp4v, mpeg4, m4v

3GP	Здр, Здрр
3GP2	3g2, 3gpp2
MOV	mov
WMV	wmv
DVR-MS	dvr, dvr-ms

Audio Format

Format	File extension
MP3	mp3
LPCM	pcm, wav, 116
WMA	wma
WAV	wav
MP4	mp4
AAC	aac
OGG	ogg, oga, ogv

Photo Format

Format	File extension
GIF	gif
JPG	jpg, jpeg
BMP	bmp
PNG	png