

User Guide

WRT3200ACM Dual-Band Gigabit Wi-Fi Router

Contents

Front view Back view Avoid Overheating Wall-Mounting Placement
Setting Up: Basics
Where to find more help
How to Use Linksys Smart Wi-Fi
How to connect to Linksys Smart Wi-Fi13
Network Map14
Guest Access
Parental Controls1
Media Prioritization1
Speed Test10
External Storage
Connectivity
I roubleshooting
Security18
Troubleshooting
Your router was not successfully set up19
Your Internet cable is not plugged in message19
Cannot access your router message20
After setup22
Specifications
Linksys WRT3200ACM24
Environmental24

Product Overview

Front view



Front panel



(1) Power indicator—(White) The icon LED is solid white while the router is powered on. It will blink when the router goes through its self-diagnostic mode during every boot-up.

(2) Internet Indicator—(White/Amber) The Internet LED is solid white when connected to the Internet. It blinks white while the router works to establish a connection. A solid amber LED indicates the connection is down due to configuration issues. Amber blinking indicates that the connection is down due to hardware issues.

(3) 2.4 GHz Indicator—(White) The Wireless LED is solid white when one or more clients are connected to the 2.4 GHz network. If the LED is blinking white, the router is sending or receiving data over the 2.4 GHz network.

(4) 5 GHz Indicator—(White) The Wireless LED is solid white when one or more clients are connected to the 5GHz network. If the LED is blinking white, the router is sending or receiving data over the 5 GHz network.

(5) eSATA Indicator—(White) When off, the USB/eSATA port is off or a USB device is connected. The LED is solid white when an eSATA device is connected. A blinking white LED indicates activity through the eSATA port.

(6) USB1 Indicator—(White) When off, the USB /eSATA port is off or an eSATA device is connected. The LED is solid white when a USB device is connected. A blinking white LED indicates activity on the port.

(7) USB2 Primary Indicator—(White) When off, the USB 3.0 port is off. The LED is solid white when a USB device is connected. A blinking white indicates activity on the port.

(8) USB2 Secondary Indicator—(White) When off, a USB 1.0 or USB 2.0 device is connected. A solid white LED indicates a USB 3.0 device is connected.

(9) ETHERNET 1 through 4 (Primary)—(White) These numbered LEDs correspond with the numbered ports on the router's back panel. If the white LED is solid, the router is connected to a device through that port. A flashing white LED indicates network activity over that port.

(10) ETHERNET 1 through 4 (Secondary)—(White) If the white LED is off, the router is successfully connected to a device through that port at 10/100 Mbps. A solid white LED indicates that the router is successfully connected to a device at 1000 Mbps.

(11) WPS Indicator—(White/Amber) The LED blinks slowly for up to two minutes during Wi-Fi Protected Setup. It will be solid white for five seconds to indicate a successful connection. The LED blinks amber if the Wi-Fi Protected Setup process fails. Make sure the client device supports Wi-Fi Protected Setup. Wait until the LED is off, and then try again. The router supports one session at a time.

Back view



(1) Adjustable antennas—This router ships with four adjustable external antennas that should be connected to the router before powering it on. To connect the antennas, twist the antenna connector clockwise onto the antenna port on the router.

Note—For best performance, position the side antennas vertically as shown in the picture on the left.

(2) Wi-Fi Protected Setup[™] button—Press to configure wireless security on Wi-Fi Protected Setup-enabled network devices.

(3) Ethernet ports—Connect Ethernet cables to these blue gigabit (10/100/1000) ports, and to wired devices on your network.

Note—For best performance, use CAT5e or higher rated cables on the Ethernet ports.

(4) Internet port—Connect an Ethernet cable to this yellow gigabit (10/100/1000) port, and to a broadband Internet cable/DSL or fiber modem.

Note—For best performance, use CAT5e or higher rated cables on the Internet port.

(5) USB 3.0 port—Connect and share a USB or eSATA drive on your network or on the Internet.

(6) USB 2.0/eSATA combo port—Connect and share a USB or eSATA drive on your network or on the Internet. You can also connect a USB printer and share it across your network.

(7) Reset button—Press and hold for 10 seconds (until the power LED starts flashing) to reset the router to factory settings. You can also restore the factory settings using Linksys Smart Wi-Fi on the Internet or mobile app.

(8) Power port—Connect the included AC power adapter.

(9) Power button (EU models only)—Press to turn on the router.

Avoid Overheating



Wall-Mounting Placement

The router has wall-mount slots on the bottom of each foot for flexibility in mounting the router on the wall. The distance between the slots on the short side is 104 mm. The distance between the slots on the longer side is 210 mm. Two screws are needed to mount the router.



Note—Linksys is not responsible for damages incurred by unsecured wall-mounting hardware.

Mounting Instructions

1. Determine where you want to mount the router and which side you should use to mount it. Make sure that the wall you use is smooth, flat, dry, and sturdy. Make sure the location is within reach of an electrical outlet.

- 2. Before drilling holes, choose the template (short side or long side) that fits your installation. Drill the holes using the correct template.
- 3. Insert a screw into each hole and leave 4 mm of its head exposed.
- 4. Position the router so the wall-mount slots line up with the two screws.
- 5. Place the wall-mount slots over the screws and slide the router down until the screws fit snugly into the wall-mount slots.

Wall-Mounting Template

Print this page at 100% size.

Place on the wall with desired router position and mark screw locations.



Setting Up: Basics

Where to find more help

In addition to this user guide, you can find help at these locations:

- Linksys.com/support/WRT3200ACM (documentation, downloads, FAQs, technical support, live chat, forums)
- Linksys Smart Wi-Fi help (connect to Linksys Smart Wi-Fi, then click Help at the top of the screen)



Note—Licenses and notices for third party software used in this product may be viewed on http://support.linksys.com/en-us/license. Please contact http://support.linksys.com/en-us/gplcodecenter for questions or GPL source code requests.

How to install your router

- 1. If replacing an existing router, disconnect that router first.
- 2. Turn the antennas so they are positioned straight up and plug in your router to a power source. European versions: press the power switch to | (on).
- Connect the Internet cable from your modem to the yellow Internet port on your router. Wait until the indicator light on your router is solid.
- 4. Connect to the secure wireless name shown in the Quick Start Guide that came with your router. (You can change the network name and password later.) If you need help connecting to the network refer to your device documentation on the provided CD. Note—You will not have Internet access until router setup is complete.

5. Open a web browser to launch the Linksys Smart Wi-Fi Router setup instructions. If you don't see the instructions, type linksyssmartwifi.com in the address bar.

At the end of setup, follow the on-screen instructions to set up your Linksys Smart Wi-Fi account. Use Linksys Smart Wi-Fi to configure your router from any computer with an Internet connection.

Manage your router's settings:

- Change your router's name and password
- Set up guest access
- Configure parental controls
- Connect devices to your network
- Test your Internet connection speed

Note—As part of Linksys Smart Wi-Fi account setup, you will be sent a verification e-mail. From your home network, click the link in the email to associate your router with the Linksys Smart Wi-Fi account.

Tip—Print the next page, then record your router and account settings in the table as a reference. Store your notes in a safe place.

2.4 GHz Network Name	
Network Password	
5 GHz Network Name	
Network Password	
Router Password	
Guest Network Name	
Guest Network Password	
Linksys Smart Wi-Fi Username	
Linksys Smart Wi-Fi Password	

How to Use Linksys Smart Wi-Fi

You can configure your router from anywhere in the world by using Linksys Smart Wi-Fi, but you can also configure your router directly from your home network. Linksys Smart Wi-Fi may be available for your mobile device, as well. See your device's app store for information.

How to connect to Linksys Smart Wi-Fi

To connect to Linksys Smart Wi-Fi:

- 1. Open your computer's web browser.
- 2. Go to www.linksyssmartwifi.com and log in to your account.

		-		
			1	Ema) Adams
-			<i>p</i>	
0 ₽ 10 ₽	Give guests Internet access		Remember Me Forgot your pass	sword?
			Don't have an accourt	nt? Click here.
	(1011)			English (United States)
se your Linksys Smart Wi nywhere, at any time, ever evices, set parental contro pps, and more.	-Fi account to access your home network from n from your mobile device. Easily connect new als, get access to Smart Wi-Fi mobile		For local access, clic	k hero.
or more information clock h	CTD .			

If you can't remember your password, click *Forgot your password?* and follow the on-screen instructions to recover it.

Network Map

Lets you display and manage all network devices connected to your router. You can view devices on your main network and your guest network, or display information about each device.



Guest Access

Lets you configure and monitor a network that guests can use without accessing all of your network resources.



Parental Controls

Lets you block web sites and set Internet access times.

Enable parental controls	
OFF	
Restrict Internet access on	Block Internet access
Christopher's MacBook Air	O Naver
CMK's Galaxy S5	Always
ChristohersiPad	Specific Times
ODK's Kindle Fire	Block specific sites 1
ODKs-IPod	
TTKs-IPad	www.blockedaile.com Grow s exceller cribick

Media Prioritization

Lets you set which devices and applications have top priority for your network traffic.

High	Priority		
		A.L	
		Drag and drop devices to prioritize	
		Drag and drop devices to prioritize	
Norm	al Priority	Drag and drop devices to prioritize	
Norm Device	al Priority es	Drag and drop devices to prioritize	Applications Edit Delete
Norm Devic	al Priority es Christopher's MacB ==	Drag and drop devices to prioritize	Applications Edit Delete
Norm Device	al Priority es Christopher's MacB = ChristophersiPad =	Drag and drop devices to prioritize	Applications Edit Delete
Norm Device	al Priority es Christopher's MacB = ChristophersiPad = trodocaria	Drag and drop devices to prioritize	Applications Edit (Delete Skype = = Online Games Edit (Delete

Speed Test

Lets you test your network's Internet connection speed.



External Storage

Lets you access an attached USB drive (not included) and set up file sharing, a media server, and FTP access.

Status Folder Access FTP Server Media Server	
	Secure Folder Access is OFF Any user can access content via shared folders. PC access (File explorer): V192-168.1.1 Mac access (Finder): smb//192-168.1.1 FTP Server is OFF Content is not accessible to any user via FTP.
	Media Server (DLNA) is ON Media content is accessible to DLNA disetts. DLNA server: EA8350

Connectivity

Lets you configure basic and advanced network settings.

Basia Internet Settiv	igs Local Network Advanced Ro	uting Administration
Network Name and Pas	sword I Edit	Router Firmware Update
2.4 GHz network name:	EA6350	Automatic (Ourrent Version: 1.0.4.164719)
Network password:	EA6350pass	Check for Updates
5 GHz network name:	EA6350_5Ghz	
Network password;	EA6050pass	Manual: No file chosen Choose File Sam
Router Password 1 Ed	6	Time Zone
Houter password: *******		(GMT-05:00) Indiana East, Colombia, Panama
		Automatically adjust for Daylort Savings Time
		Activity Lights
		ON Enable/disable activity lights. Power light will remain on

Troubleshooting

Lets you diagnose problems with your router and check the status of the network.

Status Diagnostics Logs	
Ping IPv4	Router configuration
IP or host name:	Backup Restore
Number to ping: 5 -	Router Firmware
Start to Ping	Restore previous firmware
Trace route	Internet Address:
IP or host name:	IPv4: 10.0.0.253 Retease and Renew
Start to Traceroute	IPv6: 2601:0540:0000:0019:0000:0000:0000:314e Release and Renew
Reboot	Factory reset
Reboot the router	Heset to factory default settings.

Wireless

Lets you configure your router's wireless network. You can change the security mode, password, MAC filtering, and connect devices using Wi-Fi Protected Setup[™].

Wimless M	AC Filtening Wi-Fi Protect	od Selup Winsk	ng Scheduler				
Network name:	13thirty	24 GHz				Network: ON	
Password:	hencemoose	Broadcast 55ID:	Yes	0	Channel:	Auto	1
Security mode:	WPA2/WPA Mixed Pt	Network mode:	Mixed	(1)	Channel width:	Auto	3
Network name;	13thirty	5 GHz				Network: ON	
Password:	hencemoose	Broadcast SSID:	Yes	\$	Channel:	Auto	1
Security mode:	WPA2/WPA Mixed Pt \$	Network mode:	Mixed	0	Channel width:	Auto	1

Security

Lets you configure your router's wireless security. You can set up the firewall, VPN settings, and make custom settings for applications and games.

Firewall DMZ	Apps and Gaming				
Firewall		Interne	et filters		
IPv4 SPI firewall protection	Enabled	🗹 F	ilter anonymous Internet requests		
IPv6 SPI firewall protection	I Enabled	_ F	ilter multicast		
VPN Passthrough		Filter Internet NAT redirection			
IPSec Passthrough	Enabled	V F	ilter ident (Port 113)		
PPTP Passthrough	Enabled				
L2TP Passthrough	Z Enabled				
Pv6 Port Services					
Description	Protocol	IPv6 Address	Allow	Enabled	
				Add IDus Eiros	uall Sotting

Troubleshooting

You can find more help from our award-winning customer support at Linksys.com/support/WRT3200ACM.

Your router was not successfully set up

If Linksys Smart Wi-Fi did not complete the setup, you can try the following:

• Press and hold the Reset button on your router with a paperclip or pin until the LED starts blinking (about 10 seconds). Install the router again.



- Temporarily disable your computer's firewall (see the security software's instructions for help). Install the router again.
- If you have another computer, use that computer to install the router again.

Your Internet cable is not plugged in message

If you get a "Your Internet cable is not plugged in" message when trying to set up your router, follow these troubleshooting steps.

 Make sure that an Ethernet or Internet cable (or a cable like the one supplied with your router) is securely connected to the yellow Internet port on the back of the router and to the appropriate port on your modem. This port on the modem is usually labeled Ethernet, but may be named Internet or WAN.



- Make sure that your modem is connected to power and is turned on. If it has a power switch, make sure that it is set to the ON or I (as opposed to O) position.
- If your Internet service is cable, verify that the cable modem's CABLE port is connected to the coaxial cable provided by your ISP.



• If your Internet service is DSL, make sure that the DSL phone line is connected to the modem's DSL port.



- If your computer was previously connected to your modem with a USB cable, disconnect the USB cable.
- Install the router again.

Cannot access your router message

To access your router, you must be connected to your own network. If you currently have wireless Internet access, the problem may be that you have accidentally connected to a different wireless network.

To fix the problem on Windows computers, do the following*:

- 1. On your Windows desktop, click on the wireless icon in the system tray. A list of available networks will appear.
- 2. Click your own network name. Click **Connect**. In the example below, the computer was connected to another wireless network named wraith_5GHz. The wireless network name of the Linksys WRT3200ACM router, Damaged_Beez2.4 in this example, is shown selected.

Wireless Network Con	nection 2	*
wraith_5GHz	Connected	
wraith	line,	
wraith_5GHz-guest	31	
wraith-guest	3.1	
wraith2.4_6700	lite	
wraith5_6700	In.	-
Damaged_Beez2.4	lite	
Connect automatic	cally <u>Connect</u>	
80LCVBM5	ille.	
Other Network	lite.	-
Open Network a	and Sharing Center	

- 3. If you are prompted to enter a network key, type your password (Security Key) into the Network key and Confirm network key fields. Click **Connect**.
- 4. Your computer connects to the network, and you should now be able to access the router.

*Depending on your version of Windows, there could be some differences in wording or icons in these steps.

To fix the problem on Mac computers, do the following:

- 1. In the menu bar across the top of the screen, click the Wi-Fi icon. A list of wireless networks will appear. Linksys Smart Wi-Fi has automatically assigned your network a name.
- 2. In the example below, the computer was connected to another wireless network named wraith_5GHz. The wireless network name of the Linksys WRT3200ACM router, Damaged_Beez2.4 in this example, is shown selected.



- 3. Click the wireless network name of your Linksys WRT3200ACM router (Damaged_Beez2.4 in the example).
- 4. Type your wireless network password (Security Key) into the Password field. Click OK.

After setup

The Internet appears to be unavailable

If the Internet has difficulty communicating with your router, the problem may appear as a "Cannot find [Internet address]" message in your Web browser. If you know that the Internet address is correct, and if you've tried several valid Internet addresses with the same result, the message could mean that there's a problem with your ISP or modem communicating with your router.

Try the following:

- Make sure that the network and power cables are securely connected.
- Make sure that the power outlet that your router is connected to has power.
- Reboot your router.
- Contact your ISP and ask about outages in your area.

The most common method of troubleshooting your router is to turn it off, then back on again. Your router can then reload its custom settings, and other devices (such as the modem) will be able to rediscover the router and communicate with it. This process is called rebooting.

To reboot your router using the power cord, do the following:

- 1. Disconnect the power cord from the router and the modem.
- 2. Wait 10 seconds, and reconnect the power cord to the modem. Make sure it has power.
- 3. Wait until the modem's online indicator has stopped blinking (about two minutes). Reconnect the power cord to the router.
- 4. Wait until the power indicator stops blinking. Wait two minutes before trying to connect to the Internet from a computer.

To reboot your router using Linksys Smart Wi-Fi, do the following:

- 1. Log in to Linksys Smart Wi-Fi. (See "How to connect to Linksys Smart Wi-Fi" on page 13.)
- 2. Under Router Settings, click Troubleshooting.
- 3. Click the *Diagnostics* tab.
- 4. Under *Reboot*, click Reboot.



5. Click **Yes**. The router will reboot. While the router is rebooting, all connected devices will lose their Internet connection, and will automatically reconnect when the router is ready again.

Linksys Smart Wi-Fi does not open in your web browser

The latest versions of Google Chrome[™], Firefox®, Safari® (for Mac® and iPad®), Microsoft Edge, and Internet Explorer® version 8 and newer work with Linksys Smart Wi-Fi.

Specifications

Linksys WRT3200ACM

Model Name	Linksys Dual-Band G
Description	Dual-Band AC Route
Model Number	WRT3200ACM
Switch Port Speed	10/100/1000 Mbps
Radio Frequency	2.4 GHz and 5 GHz
# of Antennas	4 external adjustable
Ports	Power, USB 3.0, Con Internet, Ethernet (1
Buttons	Reset, Wi-Fi Protecte
Front Panel Indicators	Power, Internet, 2.4 (USB2, Ethernet (1-4
UPnP	Supported
Security Features	WPA, WPA2, RADIUS
Security Key Bits	Up to 128-bit encryp
Storage File System Support	FAT, NTFS, and HFS [.]
Browser Support	Latest versions of Go Safari® (for Mac® a

Environmental

Dimensions

Unit Weight Power Certifications Operating Temperature Storage Temperature Operating Humidity Storage Humidity Linksys Dual-Band Gigabit Wi-Fi Router Dual-Band AC Router with Gigabit and 2×USB WRT3200ACM 10/100/1000 Mbps (Gigabit Ethernet) 2.4 GHz and 5 GHz 4 external adjustable antennas Power, USB 3.0, Combo USB 2.0/eSATA, Internet, Ethernet (1-4), RP-SMA (4) Reset, Wi-Fi Protected Setup, Power Power, Internet, 2.4 GHz, 5 GHz, eSATA, USB1, USB2, Ethernet (1-4), Wi-Fi Protected Setup, Supported WPA, WPA2, RADIUS Up to 128-bit encryption FAT, NTFS, and HFS+ Latest versions of Google Chrome[™], Firefox®, Safari® (for Mac® and iPad®), Microsoft Edge, Internet Explorer® version 8 and newer

9.68" x 7.64" x 2.05" (without antennas) (246 x 194 x 52 mm) 31 oz. (883 g) 12V, 3.0A FCC, IC, CE, Wi-Fi a/ac/b/g/n, Windows 7, Windows 8, DLNA 32 to 104°F (0 to 40°C) -4 to 140°F (-20 to 60°C) 10% to 80% relative humidity, non-condensing 5% to 90% non-condensing

Notes:

For regulatory, warranty, and safety information, see the CD that came with your router or go to Linksys.com/support/WRT3200ACM.

Specifications are subject to change without notice.

Maximum performance derived from IEEE Standard 802.11 specifications. Actual performance can vary, including lower wireless network capacity, data throughput rate, range and coverage. Performance depends on many factors, conditions and variables, including distance from the access point, volume of network traffic, building materials and construction, operating system used, mix of wireless products used, interference and other adverse conditions.

BELKIN, LINKSYS and many product names and logos are trademarks of the Belkin group of companies. Third-party trademarks mentioned are the property of their respective owners. Licenses and notices for third party software used in this product may be viewed here: http://support.linksys.com/en-us/license. Please contact http://support.linksys.com/en-us/gplcodecenter for questions or GPL source code requests.

© 2016 Belkin International, Inc. and/or its affiliates. All rights reserved.

LNKPG-00113 Rev. B00 (update)