


WELCOME to Device

Device is a quick, convenient and accessible new way to shop at home. You can shop by pressing the button on Device. Device then uses your Wi-Fi connection to the Company's server where the transaction of the single product you would like to purchase takes place.

Re-order your favorite home essentials at any time at home with the click of a button.

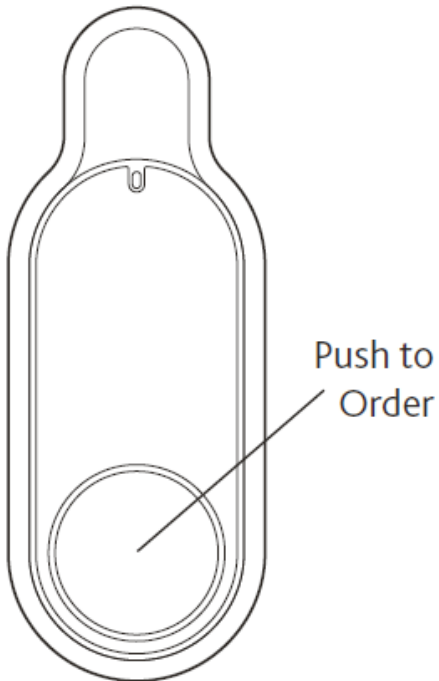

WHAT'S IN THE BOX

- Device
- Removable Hook
- Quick-Start Guide

Battery

Device is powered by one AAA non-rechargeable lithium battery that comes with the Device. No installation is required. Once Device runs out of battery, please contact the manufacturer for replacement of the Device.

Website Overview

URL is TBD.

APP Overview

Download the Company's iPhone or Android app at: XXXXXX

Wi-Fi Connection

To use the Device you must connect it to your Wi-Fi network so that the Device can be connected to the company server and know the specific product of interest. To setup Wi-Fi, follow the prompts in your web browser at URL or Company app.

GET STARTED

On your iPhone or Android phone, go to device.com/devicesetup. For help, visit device.com/help/device.

SAFETY AND COMPLIANCE INFORMATION

Use responsibly. Read all instructions and safety information before use.



FAILURE TO FOLLOW THESE
SAFETY INSTRUCTIONS COULD
RESULT IN FIRE, ELECTRIC
SHOCK, OR OTHER
INJURY OR DAMAGE.

Maintaining Your Device: Do not use this device in rain, or near sinks or other wet or highly humid locations. Take care not to spill any food or liquid on this device. Clean the Device with a soft cloth and avoid using liquids or harsh chemicals that may damage the Device.

Servicing your Device: If you need service for your Device, please contact Customer Support. Contact details can be found at <http://www.Device.com/devicesupport>.

Batteries: The lithium battery in this device cannot be recharged or replaced. Do not open, disassemble, bend, deform, puncture or shred the battery. Do not modify, attempt to insert foreign objects into the battery or immerse or expose to water or other liquids. Do not expose the battery to fire, explosion or other hazard. Promptly dispose of used batteries in accordance with applicable laws and regulations. If dropped and you suspect damage, take steps to prevent any ingestion or direct contacts of fluids and any other materials from the battery with skin or clothes.

Recycling Device: In some areas, the disposal of certain electronic devices is regulated. Make sure you dispose of or recycle the Device in accordance with your local laws and regulations. For information about recycling the Device, go to <http://www.device.com/devicesupport>.

Radio Frequency Exposure: The output power of the radio technology used in the Device is below the radio frequency exposure limits set by the Federal Communications Commission of the United States (FCC). Information on the device is on file with the FCC and can be found under the Display Grant section of <http://transition.fcc.gov/oet/ea/> after searching on the FCC ID for your device which can be found on the back cover. It is advised to use the wireless equipment in such a manner that the potential for human contact during normal operation is minimized.

Radio Frequency Information: This Device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this Device may not cause harmful interference, and (2) this Device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (i) reorient or relocate the receiving antenna; (ii) increase the separation between the equipment and the receiver; and (iii) consult the dealer or an experienced radio/tv technician for help. Changes or modifications that are not expressly approved by the party responsible for compliance could make the Device no longer comply with the FCC rules.

Other Safety Considerations: Small parts contained in your device and its accessories may present a choking hazard to small children.