

SpeedTouch[™]706 (WL)

Residential ADSL Gateway with VoIP (MGCP)

User's Guide





A C THOMSON BRAND

SpeedTouch™ 706 (WL)

User's Guide MGCP

speed**touch**™

C THOMSON

Copyright

Copyright ©1999-2006 THOMSON. All rights reserved.

Distribution and copying of this document, use and communication of its contents is not permitted without written authorization from THOMSON. The content of this document is furnished for informational use only, may be subject to change without notice, and should not be construed as a commitment by THOMSON. THOMSON assumes no responsibility or liability for any errors or inaccuracies that may appear in this document.

Thomson Telecom Belgium Prins Boudewijnlaan, 47 B-2650 Edegem Belgium

http://www.thomson-broadband.com

Trademarks

The following trademarks are used in this document:

- ▶ SpeedTouch[™] is a trademark of THOMSON.
- DECT is a trademark of ETSI.
- Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc.
- Ethernet[™] is a trademark of Xerox Corporation.
- Wi-Fi® and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance. "Wi-Fi CERTIFIED", "Wi-Fi ZONE", "Wi-Fi Alliance", their respective logos and "Wi-Fi Protected Access" are trademarks of the Wi-Fi Alliance.
- ▶ UPnPTM is a certification mark of the UPnPTM Implementers Corporation.
- Microsoft®, MS-DOS®, Windows® and Windows NT® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Apple® and Mac OS® are registered trademarks of Apple Computer, Incorporated, registered in the United States and other countries.
- UNIX® is a registered trademark of UNIX System Laboratories, Incorporated.
- Adobe®, the Adobe logo, Acrobat and Acrobat Reader are trademarks or registered trademarks of Adobe Systems, Incorporated, registered in the United States and/or other countries.

Other brands and product names may be trademarks or registered trademarks of their respective holders.

Document Information

Status: v2.0 (August 2006) Reference: E-DOC-CTC-20051017-0152 Short Title: User's Guide ST706 (WL) R6.1

speed**touch**™

Contents

About this User's Guide	1
-------------------------	---

1	Getting to know your SpeedTouch™3	
1.1	SpeedTouch™ LED Behaviour	4
1.2	Accessing your SpeedTouch™	6
1.2.1	Access via the Web Interface	7
1.2.2	Access via CLI	8
1.2.3	Access via FTP	10
1.2.4	Remote Assistance	13

2	Local Network Setup	15
2.1	Wired Ethernet	16
2.2	Wireless Ethernet	17
2.2.1	Wireless Basics	18
2.2.2	Connecting Wireless Clients for the First Time	20
2.2.3	Wireless Security	22
2.2.4	Connecting Additional Wireless Clients	24
2.2.5	Extending the Range of Your Wirelstess Network	26

3	Internet Connectivity Dial-In Clients	29
3.1	SpeedTouch™ Web Pages	31
3.2	Internet Gateway Device Control Agent	33



4	Voice over IP	35
4.1	Telephony Setup	. 36
4.2	Supplementary Telephony Services	. 38

5 SpeedTouch™ Web Interface		41
5.1	Navigation	42
5.1.1	Menu	
5.1.2	Language Bar	
5.1.3	Navigation Bar	
5.1.4	Notification Area	
5.1.5	Tasks	
5.2	Home	48
5.3	SpeedTouch	49
5.3.1	Information	50
5.3.2	SpeedTouch™ Easy Setup	51
5.3.3	Restart	
5.3.4	Configuration	53
5.3.5	Back up & Restore	54
5.3.6	Reset to Factory Defaults	55
5.3.7	Event Logs	56
5.4	Broadband Connection	57
5.4.1	Connectivity Check	
5.4.2	DSL Connection	59
5.4.3	Internet Services	60
5.4.4	Internet Service Settings	61



5.5	Toolbox	62
5.5.1	Remote Assistance	63
5.5.2	Telephony	64
5.5.3	Game & Application Sharing	65
5.5.4	Defined Games & Applications	67
5.5.5	Game or Application Definition	68
5.5.6	New Game or Application	70
5.5.7	Parental Control	71
5.5.8	Content Level	74
5.5.9	Firewall	75
5.5.10	Intrusion Detection	78
5.5.11	Dynamic DNS	79
5.5.12	User Management	80
5.5.13	Edit User	82
5.5.14	Change Default User	83
5.5.15	Add User	84
5.6	Home Network	85
5.6.1	Devices	86
5.6.2	Device Settings	87
5.6.3	Assign Public IP	89
5.6.4	Wireless Device Settings	90
5.6.5	Access Point Settings	91
5.6.6	Configuring WDS	95
5.6.7	Interfaces	96
5.6.8	Interface Settings	97
5.6.9	DHCP Pool	98

6	Troubleshooting	10	1
---	-----------------	----	---



6.1	General SpeedTouch™ Troubleshooting	102
	Wired Ethernet Troubleshooting Wireless Ethernet Troubleshooting	
	UPnP™ on Windows XP Systems	
6.3	Voice over IP Troubleshooting	107
6.4	Reset to Factory Defaults	108



About this User's Guide

Used symbols	The following symbols are used in this User's Guide:		
	A <i>note</i> provides additional information about a topic.		
	A <i>tip</i> provides an alternative method or shortcut to perform an action.		
	A <i>caution</i> warns you about potential problems or specific precautions that need to be taken.		
Terminology	Generally, the SpeedTouch™706(i) and the SpeedTouch™ 706(i) WL will be referred to as SpeedTouch™ in this User's Guide.		
Documentation and software updates	THOMSON continuously develops new solutions, but is also committed to improve its existing products.		
	For suggestions regarding this document, please contact documentation.speedtouch@thomson.net.		
	For more information on THOMSON's latest technological innovations, documents and software releases, visit us at: <u>www.speedtouch.com</u> .		
	For more information on THOMSON's latest technological innovations, documents		



About this User's Guide

speed**touch**™

1 Getting to know your SpeedTouch[™]


Introduction	With the SpeedTouch [™] 706 (WL) (Wireless) Residential DSL Gateway with Voice over IP (VoiP) you can build a secure home or small office network, seamlessly connecting wired and wireless devices, surf the Internet at high speed, make and receive phone calls over the Internet or over the traditional phone line - all combined in one device.
Installation	For more information on how to set up, install and wire your SpeedTouch™ and set up Internet connection, refer to the Installation and Setup Guide.
Configuration	This User′s Guide will help you configuring your SpeedTouch™.
Before you begin	Before connecting the SpeedTouch™, please read the SpeedTouch™ Quick Installation Guide and the Safety Instructions and Regulatory Notices.



1.1 SpeedTouch™ LED Behaviour

Front panel LEDs

The SpeedTouch[™] is equipped with a number of LEDs on its front panel, indicating the state of the device during normal operation.

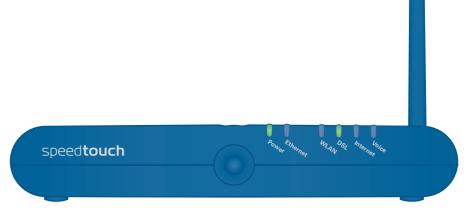

The following table shows the meaning of the different LEDs.

Indicator			Description
Name	Colour	State	
Power	Green	Solid on	Power on, normal operation
	Red	Solid on	Power on, self-test failed, indicating device malfunction
	Orange	Solid on	Bootloader active
	Off		Power off
Ethernet	Green	Blinking	Ethernet activity
		Solid on	Ethernet connection, no activity
	Off		No Ethernet connection
WLAN	Green	Blinking	Wireless activity, WPA encryption
		Solid on	No wireless activity, WPA encryption
	Amber	Blinking	Wireless activity, WEP encryption
		Solid on	No wireless activity, WEP encryption
	Red	Blinking	Wireless activity, no security
		Solid on	No wireless activity, no security
	Red/ green	Toggling	Wireless client registration phase
	Off		WLAN disabled



Indicator			Description
Name	Colour	State	
DSL	Green Blinking		Pending DSL line synchronisation
		Solid on	DSL line synchronised
	Off		No DSL line
Internet	Internet Green Blinking Solid on Red Solid on		Internet activity
			Internet connectivity, no activity
			Internet connection setup failed
Off		•	No Internet connection
Voice	Green Solid on		VoIP service up
Blin		Blinking	VoIP activity
			VoIP service down



1.2 Accessing your SpeedTouch™

Access methods

Your SpeedTouch[™] is accessible in one of the following ways:

Access Method	Can be used to	
Web browser	Configure your SpeedTouch™ via HTTP or HTTPS. For more information, see "1.2.1 Access via the Web Interface" on page 7.	
Command Line Interface (CLI)	Fine-tune your SpeedTouch™ configuration. For more information, see "1.2.2 Access via CLI" on page 8.	
File Transfer Protocol (FTP)	Back up and restore data on your SpeedTouch™. For more information, see "1.2.3 Access via FTP" on page 10.	
Remote Assistance	Allow a remote user to help you configuring your SpeedTouch™. For more information, see "1.2.4 Remote Assistance" on page 13.	



1.2.1 Access via the Web Interface

To access the SpeedTouch™ via the Web interface Proceed as follows:

- 1 Open a Web browser.
- 2 In the address bar, type your SpeedTouch™'s IP address or DNS host name (<u>http://speedtouch.lan</u> or <u>192.168.1.254</u> by default)
 - You can access the pages via HTTP or HTTPS.

For remote assistance the secure version HTTPS is used in combination with certificates. Simply provide your ISP with the link as shown, user name and password before he can log on to the pages. For more information, see "1.2.4 Remote Assistance" on page 13.

The SpeedTouch[™] Home page appears, from where you can navigate to all the configurable aspects of the SpeedTouch[™].

For more information on the Web pages, see "5 SpeedTouch™ Web Interface" on page 41.



1.2.2 Access via CLI

To access the SpeedTouch™ via the Command Line Interface (CLI) You can access the Command Line Interface (CLI) via:

A Telnet session

This requires a TCP/IP connection between the host from which the Telnet session is opened and the SpeedTouch[™]. Your SpeedTouch[™] and the connected computer must have an IP address in the same subnet.

Quote site commands (over FTP)
 For more information, see " Quote site command" on page 12.

For more information on CLI commands, see the SpeedTouch[™] CLI Reference Guide.



To start a Telnet session

Proceed as follows:


- 1 Open a telnet application.
 - You can use the **Command Prompt** window.
 - In Microsoft Windows XP for instance:
 - 1 On the Windows taskbar, click **Start**.
 - 2 Select (All) Programs > Accessories > Command Prompt.
- 2 Connect to your SpeedTouch[™].
- In the Command Prompt window:

At the prompt, type **telnet** followed by the IP address of your SpeedTouch[™] (192.168.1.254 by default).

3 Enter your SpeedTouch[™] security user name and password.


The default user is 'Administrator' and the default password is blank.

As soon as you have opened a session to the CLI, the SpeedTouch[™] banner is displayed, followed by the CLI prompt, as shown in the example below.

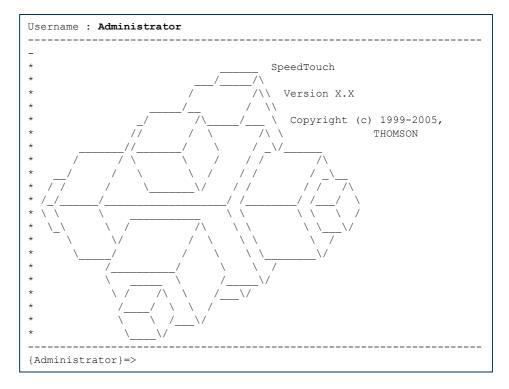

1.2.3 Access via FTP

To access the SpeedTouch™ via the	(FTP), in order to:		
File Transfer Protocol	 Restore or back up configuration files, templates or language packs. 		
(FTP)	 Upgrade your configuration. 		
File system	The SpeedTouch™ file system is stored on non-volatile memory and contains the SpeedTouch™ software, service template files and (optionally) default setting files.		
To open an FTP session	Proceed as follows:		
	1 Open a Command Prompt window.		
	In Microsoft Windows XP for instance:		
	1 On the Windows taskbar, click Start .		
	2 Select (All) Programs > Accessories > Command Prompt.		
	At the prompt, type ftp followed by the IP address of your SpeedTouch™ (192.168.1.254 by default).		
	3 Enter your SpeedTouch [™] security user name and password.		
	The default user is 'Administrator' and the default password is blank. The example below shows an FTP session to the SpeedTouch™ file system.		
	· · · ·		
	Image: Strategy of the system 32 \cmd.exe - ftp 192.168.1.254 Microsoft Windows XP [Version 5.1.2600] \lambda (C) Copyright 1985-2001 Microsoft Corp.		
	C:\Documents and Settings\nielsenv>ftp 192.168.1.254 Connected to 192.168.1.254. 220 Inactivity timer = 120 seconds. Use 'site idle <secs>' to change. User (192.168.1.254:<none>>: Administrator 331 SpeedTouch (00-0E-50-5A-D9-A0) Password reguered. Password: 230 OK ftp></none></secs>		
File system structure	The structure of the file system is very simple: it consists of a single root directory called <i>root</i> and a subdirectory called <i>dl</i> (download).		
	• The <i>root</i> directory contains:		
	all the necessary files for the SpeedTouch™ to start correctly		
	the dl directory		
	The <i>dl</i> directory contains the software image.		
	function and a share as the Canad Taush IM as a firm with a stad as used		

 

speed**touch**™

File system access rights

In the different directories you have the following rights:

Directory	Access rights
root	NO read/write
dl	read/write

Common FTP commands

Depending on the access rights you have in a directory, you can use one of the following commands:

Use the command	to
cd	access another directory than the one currently open. Example: ftp>cd dl.
dir	list the directory files. Example: ftp>dir.
bin	set the transfer mode to 'binary'.
hash	turn on the hashing option.
put	upload files. Example: ftp>put C:/MyBackupFiles/user.ini. A configuration file must be uploaded to the dl directory.
get	download files. Example: ftp>get user.ini. Downloading the configuration file must be done from the dl directory.
delete	delete files.
bye	quit FTP.

 


FTP file transfer



type bin and press ENTER. Turn on the hashing option to see the progression of the file transfer: At the

To allow correct file transfers, set the transfer mode to "binary": at the ftp prompt,



Example.

```
/home/doejohn{1}$ftp 192.168.1.254
Connected to 192.168.1.254
220 Inactivity timer = 120 seconds. Use 'site idle <secs>' to change.
Name (192.168.1.254:doejohn):
331 SpeedTouch™ (00-90-D0-01-02-03) User 'doejohn' OK. Password requir
ed.
Password : ######
330 OK
ftp>
ftp>bin
200 TYPE is now 8-bit binary
ftp>
ftp>hash
200Hash mark printing on (8192 bytes/hash mark).
ftp>cd dl
250 Changed to /dl
ftp>put C:\user.ini
200 Connected to 192.168.1.10 port 1271
150 Opening data connection for user.ini
226 File written successfully
ftp: 256 bytes sent in 0,000Seconds 256000,000Kbytes/sec.
ftp>
```

Quote site command

All the CLI commands can be executed from within an FTP session. Only complete CLI commands (in other words, the complete command syntax with all the parameters already specified) can be executed.

Example: To execute the CLI command : ip iplist to list all IP addresses currently assigned to SpeedTouch™ interfaces, at the FTP prompt, type 'quote site ip iplist' and press ENTER.

iplist		
Туре	IP-address	Point-to-point/Mask
Ethernet	10.0.0.138	255.255.255.0
Ethernet	*192.168.1.254	255.255.255.0
Serial	81.240.198.191	81.240.198.1
Internal	127.0.0.1	255.255.255.255
200-		
200 CLI command "ip iplist" executed		
ftp>		
	Ethernet Ethernet Serial Internal	Type IP-address Ethernet 10.0.0.138 Ethernet *192.168.1.254 Serial 81.240.198.191 Internal 127.0.0.1

For more information on CLI commands, see the SpeedTouch™ CLI Reference Guide.



1.2.4 Remote Assistance

To access the You can make your SpeedTouch accessible from the Internet with regard to remote SpeedTouch[™] remotely support. In this way, you can allow your help desk to access your SpeedTouch™ remotely. To enable remote Proceed as follows: access 1 Go to the SpeedTouch[™] pages, as described in "1.2.1 Access via the Web Interface" on page 7. 2 In the menu, select Toolbox > Remote Assistance. 3 Click Enable Remote Assistance. 4 Provide the following parameters to your help desk: URL (the HTTPS link) • User name Password Your ISP is now able to access your SpeedTouch™ via the HTTPS link in combination with the provided certificate (a secure authentication mechanism). For security reasons, remote assistance will be automatically disabled after 20 minutes of inactivity, or after restarting your SpeedTouch™. To disable remote Proceed as follows: access 1 Go to the SpeedTouch[™] pages, as described in "1.2.1 Access via the Web Interface" on page 7.

- 2 In the menu, select **Toolbox > Remote Assistance**.
- 3 Click Disable Remote Assistance.



2 Local Network Setup

Introduction	The SpeedTouch™ offers you the following local networking solutions:		
	Wired Ethernet		
	Wireless Ethernet on the SpeedTouch™706 WL		
Device settings	Once you have connected a device, you can personalise its settings. For more information, see " Configure" on page 88.		



2.1 Wired Ethernet

Local network	The Ethernet ports on the back panel allow you to connect the SpeedTouch™ to an existing 10 or 100Base-T Ethernet network or one (or more) computer(s) with an installed Ethernet card.		
	Using the SpeedTouch™ Ethernet switch, you can create a local Ethernet network of up to two devices, without needing extra networking devices.		
	In the SpeedTouch™ package, a yellow full-wired straight-through RJ-45/ RJ-45 Ethernet cable is included.		
Standard wiring procedure	Use the yellow Ethernet cable provided to wire your computer's Ethernet port to one of the SpeedTouch™'s Ethernet ports.		
	The Ethernet cable can also be used to wire an Ethernet port of your SpeedTouch™ to any external Ethernet hub or switch.		
	Please follow the installation instructions supplied with the external hub or switch for connections and Ethernet cabling.		
Ethernet link check	Depending on the SpeedTouch™ model, LED indicators allow you to check your Ethernet. See "1.1 SpeedTouch™ LED Behaviour" on page 4 for more information.		
Device settings	Once you have connected a device, you can personalise its settings.		
	For more information, see " Device settings" on page 15.		
Managed Ethernet switch	Your SpeedTouch™ intelligently switches data between the devices on your LAN, using priority queuing to ensure that higher priority messages are delivered first and in real time. This feature maximizes your network performance.		
	The managed Ethernet switch allows you to configure a Virtual Local Area Network (VLAN), group ports or isolate a port, configure secure channel connections, define Quality of Service (QoS), and configure port mirroring, allowing monitoring from one port to another.		
	You can configure the managed Ethernet switch manually using CLI (For more information, see the SpeedTouch™ CLI Reference Guide).		



2.2 Wireless Ethernet

Introduction The SpeedTouch[™]706 WL Wi-Fi® certified IEEE 802.11g compliant wireless access point allows multiple computers to connect wirelessly to your local network over the SpeedTouch™ Wireless LAN environment. The SpeedTouch™ is backward compatible with IEEE 802.11b, which means 802.11b and 802.11g devices can coexist in the same wireless network. The Wireless Distribution System (WDS) on your SpeedTouch™ allows you to extend the range of your wireless network. To be able to use WDS, you will need to introduce an additional WDS-enabled access point into your wireless network. To be able to connect the computers, make sure that a wireless client adapter (WLAN client) is installed on each computer you want to connect via the WLAN. Wireless client All wireless client adapters compliant to 802.11g and/or 802.11b can communicate requirements with the SpeedTouch[™] and other members of the SpeedTouch[™] (W)LAN environment. However, be aware that only 802.11g compliant wireless clients are able to gain full profit of the 54 Mb/s (Max) bandwidth delivered by the SpeedTouch[™]. It is highly recommended to use only wireless client adapters that are Wi-Fi™

certified to ensure smooth interoperability with the SpeedTouch™'s WLAN.

E-DOC-CTC-20051017-0152 v2.0



2.2.1 Wireless Basics

802.11b/g	 802.11b is an IEEE standard, operating at 2,4 GHz at a speed of up to 11 Mb/s. 802.11g, a newer IEEE standard also operating at 2,4 GHz, gives you up to 54 Mb/s speed, more security and better performance. 			
Wireless Fidelity	The Wi-Fi certification ensures that your SpeedTouch™ will interoperate with any Wi-Fi certified 802.11g and 802.11b compliant wireless device.			
Access Point	The SpeedTouch™ Wireless LAN Access Point (AP) behaves as a networking hub allowing to wirelessly interconnect several devices to the local (W)LAN and to provide access to the Internet.			
Network Name or SSID	The WLAN's 'radio' link is a shared medium. As no physical connection exists between the SpeedTouch [™] and wireless clients, a name must be given to allow unique identification of your WLAN radio link. This is done by the Service Set ID (SSID), also referred to as Network Name. Wireless clients must be part of this SSID environment in order to be able to communicate with other clients on the (W)LAN - including the SpeedTouch [™] .			
Radio channels	The 802.11g standard allows several WLAN networks using different radio channels to be co-located. The SpeedTouch™ supports multiple radio channels and is able to select the best radio channel at each startup.			
	You can choose to set the channels automatically or manually.			
	The different channels overlap. To avoid interference with another access point, make sure that the separation (in terms of frequency) is as high as possible. It is recommended to keep at least 3 channels between 2 different access points.			
	The SpeedTouch™ supports all channels allowed for wireless networking. However, depending on local regulations, the number of channels actually allowed to be used may be additionally restricted, as shown in the table below.			
	Regulatory Domain	Allowed Radio Channels		
	China	1 to 13		
	Europe	1 to 13		
	Israel	5 to 8		
	Japan	1 to 14		
	Jordan	10 to 13		
	Thailand	1 to 14		
	USA / Canada	1 to 11		



Antennas

Direct the external antenna to allow optimization of the wireless link. If for example the antenna is erect, wireless links in the horizontal plane are favoured. Please note that the antenna characteristics are influenced by the environment, that is by reflections of the radio signal against walls or ceilings. It is advisable to use the received signal strength as indicated by the wireless client manager to optimize the antenna position for the link to a given client.

Concrete walls weaken the radio signal and thus affect the connection.



2.2.2 Connecting Wireless Clients for the First Time

Wireless default settings

After every Reset-to-Defaults, the SpeedTouch[™] wireless access point configuration is returned to its initial default settings.

These default settings are:

- Security level is low (security disabled) for an easy first use, meaning the data will not be encrypted. Wireless security settings are described in "2.2.3 Wireless Security" on page 22.
- This default network name (SSID) is printed on the identification label located on the bottom of your SpeedTouch[™] and is unique for each device. It consists of the concatenation of the word "SpeedTouch" and 6 hexadecimal characters, without any spaces, for example SpeedTouch123456.
- The SpeedTouch[™] is broadcasting its network name (SSID).
- The radio channel number is set to 'automatically scan for the best radio channel'.
- Registration is not activated. New stations are allowed automatically. The Access Control List is open and empty. No wireless client will be denied access to the SpeedTouch[™] based on its physical hardware address.



The default wireless settings may differ from the settings listed above depending on your Service Provider's requirements. If this is the case, refer to the installation/configuration instructions provided by your Service Provider.

To prepare wireless clients for the first time

Make sure that:

- The SpeedTouch[™] is turned on and ready for service.
- The SpeedTouch™ is in its default configuration.
 - If necessary, reset the SpeedTouch™ to its default configuration (See "6.4 Reset to Factory Defaults" on page 108 for more information).
- A wireless client adapter is installed on your computer.
- The wireless client adapter's IP configuration is set to dynamically obtain its IP configuration (DHCP) this is usually the default. For more information, see the documentation of your wireless client adapter.

To configure wireless clients for the first time

The wireless client must be correctly configured for the default network name. As the SpeedTouch[™] broadcasts its network name to the wireless clients, you can select the SpeedTouch[™] wireless network from a list of available networks. Depending on your wireless client a wireless icon may become green or a message similar to the following may appear: "Successfully joined Wireless network SpeedTouch123456".



Some wireless clients do not automatically join a wireless network. If so, follow the instructions for the wireless client software to initiate association.

speed**touch**™


First-time association example

The example below shows how the SpeedTouch[™] wireless network is presented towards a Windows XP Service Pack 2 system.



Proceed as follows to associate your wireless client to the SpeedTouch™:

- 1 Click the network icon in the notification area:
 - The Wireless Network Connection window appears:

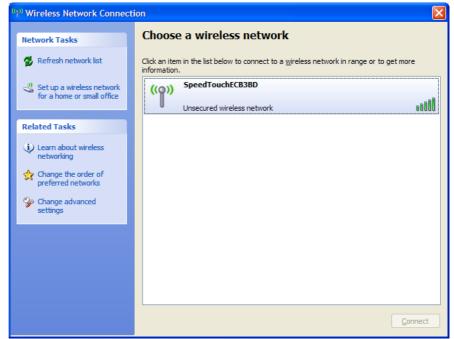

2 In the **Choose a wireless network** list, select the SpeedTouch[™] wireless network and click **Connect**.

The following window appears:

Wireless Network Connection		
♪	You are connecting to the unsecured network "SpeedTouchECB3BD". Information sent over this network is not encrypted and might be visible to other people.	
	Cancel	

3 Click **Connect Anyway**.

Your computer is now connected to the SpeedTouch[™] wireless network.

((Q))	SpeedTouchECB3BD	Connected 👷
Ū	Unsecured wireless network	



For other Operating Systems the wireless client will in most cases be configured via dedicated client managers.



2.2.3 Wireless Security

Introduction		h™ wireless environment is a radio environment, precautions ure that your wireless network is safe from malicious intruders.			
	To secure your wirele personalised:	ess network, the following wireless access point settings can be			
	 Your Network Name (SSID) 				
	ACL setting				
	Data encryption	1			
Security settings	To personalise the wi	ireless security settings on your SpeedTouch™:			
	1 Go to the SpeedTouch™ Web pages.				
	 In the menu, select Home Network. Click your WLAN. In the upper right corner, click Configure. 				
				5 On the Wireless	Access Point page, you can modify the Security settings.
					 Security
		Broadcast Network Name:			
	Allow New Devices:	New stations are allowed (automatically)			
	Encryption:	O Disabled			
		O Use WEP Encryption			
		Use WPA-PSK Encryption			
	WPA-PSK Encryption Key:	4627F08CB3			
	WPA-PSK Version:	WPA 💌			
		Apply Cancel			
Network Name (SSID)	On the Wireless Acce Name (SSID).	ess Point page, you can give a new name to your Network			

Under **Security**, you can clear **Broadcast Network Name (SSID)**, to prohibit the Network Name from being broadcast.



Access Control List (ACL)	The SpeedTouch™ features a managed Access Control List (ACL) and a physical registration mechanism in the form of the Association / Registration button on the front panel of your SpeedTouch™.			
	On the Wireless Access Point page, you have the following options for the ACL: New stations are			
	Allowed (automatically): All new stations can access the SpeedTouch™.			
	Allowed (via registration): Only allowed stations in the ACL have access.You can add new stations via:			
	The Association / Registration button.			
	The Search for wireless devices task.			
	For more information, see " Registering wireless clients" on page 24.			
	Not allowed: Only allowed stations in the ACL have access. You can add new stations to the ACL only via the Search for wireless devices task. For more information, see " Registering clients via Web pages" on page 24.			
Data encryption	To set up wireless connectivity, you can choose different levels of security:			
	 Security disabled (default) No security; the data will not be encrypted, no authentication process will be used. 			
	WEP (Wired-Equivalent Privacy) Traffic between the SpeedTouch [™] and the clients is encrypted by sharing a pre-defined 64-bit or a 128-bit Network key for secure communication with legacy 802.11b clients.			
	The default 64 bit hexadecimal WEP key is printed on the identification label located at the bottom of the SpeedTouch [™] and is unique for each device.			
	WPA-PSK (Wi-Fi Protected Access Pre-Shared Key) The highest form of security available for home users. Make sure that your wireless client and client manager are compatible with it.			
	The default WPA-Personal pass phrase is printed on the identification label located at the bottom of the SpeedTouch [™] and is unique for each device.			
	The WPA-Personal pass phrase must consist of 8 to 63 ASCII characters or 8 to 64 HEX digits.			
	Wireless access points may already have been configured during the Home Install Wizard.			

If you change wireless settings, wireless clients will be disconnected. In this case, you need to reconfigure the wireless clients before you can connect to the Internet again.

2.2.4 Connecting Additional Wireless Clients

Preconditions	Mak	ce sure that:		
	•	The SpeedTouch™ is turned on and ready for service.		
	•	The SpeedTouch™ has been configured as DHCP server (default).		
	•	The wireless client adapters have been installed on all the computers you want to connect to the WLAN.		
Security issues	•	Depending on the personalised wireless settings:		
		Make sure you use the same encryption or security level on the client as on your SpeedTouch [™] . If for instance WPA-PSK is enabled on the SpeedTouch [™] , you must also configure the wireless client to use WPA- PSK and configure the same WPA-PSK pass phrase.		
		If the Network Name (SSID) is not broadcast, you must configure the wireless client for the SpeedTouch™ Network Name. Refer to the documentation of your wireless client for more information.		
	•	If the SpeedTouch™ ACL settings are set to:		
		New stations are allowed (automatically), your device can access the SpeedTouch™ WLAN without additional configuration.		
		New stations are allowed (via registration), you have to register your wireless client(s).For more information, see "Registering wireless clients" on page 24.		
		New stations are not allowed, you have to search for wireless client(s) using the SpeedTouch [™] web pages, see " Registering clients via Web pages" on page 24.		
Registering wireless clients	If 'New stations are allowed (via registration)', you can add a wireless client to the ACL via:			
	•	Registering clients via Web pages		
	•	Registering clients via the association button		
Registering clients via	Proc	ceed as follows to add a wireless client to the ACL:		
Web pages	1	Go to the SpeedTouch™ Web pages.		
	2	In the menu, select Home Network > Devices.		
	3	In the Pick a task list, click Search for wireless devices .		
		The SpeedTouch™ searches for new wireless stations that use the encryption key of the SpeedTouch™ Access Point.		
		The SpeedTouch™ takes you to the Home Network. The new station will be shown next to the name of the SpeedTouch™ WLAN.		
	4	Click the name of the new station.		
	5	Click Configure .		
	6	Select Allowed on WLAN, and then click Apply.		
		The device is added to the ACL and will always be allowed to connect to the SpeedTouch™.		



Registering clients via the association button

Proceed as follows to register new wireless network clients via the association button:

1 Push the Association button on the SpeedTouch[™]front panel for at least two seconds.

The WLAN LED toggles between green and red.

The ACL will be unlocked for a time frame of one minute. Any new wireless client successfully attempting to connect to the SpeedTouch[™] (having the correct wireless settings, that is the network name and, if required, the network key) within the time frame of one minute, will be added to the table. The SpeedTouch[™] automatically saves your current configuration at the end of the registration phase.



- Some WLAN clients do not automatically join a WLAN. If so, follow the instructions for the WLAN client software to initiate the association.
- 2 Successfully registered stations are associated to the SpeedTouch[™] WLAN. Depending on your WLAN client adapter, a wireless icon may become green or a message similar to the following may appear: "Successfully joined Wireless network SpeedTouch123456".
- 3 The wireless clients will be added to the SpeedTouch[™] ACL.
- 4 After one minute the ACL is locked.

speed**touch**™




The registration procedure can be repeated as often as needed.

2.2.5 Extending the Range of Your Wirelstess Network

Wireless Distribution System (WDS)

The SpeedTouch[™] features the Wireless Distribution System (WDS) functionality. This feature allows you to extend the range of your wireless network by introducing one or more WDS-enabled devices into your wireless network.

WDS enables data packets to pass from one wireless access point to another, as if the access points were ports on a wired Ethernet switch. WDS allows you to extend the range of your SpeedTouch[™] by means of one or more wireless repeaters, like for instance a SpeedTouch[™]180. The following illustration depicts two WDSenabled devices communicating via WDS.

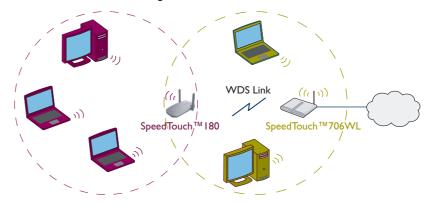



Make sure that:

The SpeedTouch[™] allows you to add up to four wireless repeaters.

Repeaters extend the coverage area of your wireless LAN. However, bear in mind that throughput is reduced for wireless clients that are connected through a repeater.

Preconditions

• Your wireless repeater is be WDS enabled.

- Both your SpeedTouch[™] and your wireless repeater use:
 - The same WEP key if WEP is enabled.

WPA encryption is not supported when using WDS.

The same *fixed* channel.

The SpeedTouch[™] and your wireless repeater do not necessarily need to use the same SSID. Using different SSIDs allows you to force your wireless clients to use either the access point of the SpeedTouch[™] or the one of your wireless repeater.



configure WDS Pro	oceed as follows:
1 connigure vvbo	Go to the SpeedTouch™ Web pages.
2	In the menu, select Home Network .
3	
4	Click your WLAN.
-	In the upper right corner, click Configure . If not already done, set a <i>fixed</i> channel and check whether the securi
	settings (WEP encryption or no encryption) on your SpeedTouch™ a the same as on the repeater.
5	On the Wireless Access Point page, in the Pick a task list, click Configure WD
	SpeedTouch123456
	• Configuration
	WDS Enabled:
	Accessible Access Points
	WDS SSID BSSID Channel Noise
	There are no networks detected.
	Apply Cancel
	Pick a task
	Scan for wireless accesspoints
6	Scan for wireless accesspoints Select WDS Enabled.
6 7	
-	Select WDS Enabled . In the Pick a task list, click Scan for wireless access points .
-	Select WDS Enabled . In the Pick a task list, click Scan for wireless access points . A warning is displayed.
-	Select WDS Enabled . In the Pick a task list, click Scan for wireless access points . A warning is displayed. <u>Microsoft Internet Explorer</u>
-	Select WDS Enabled . In the Pick a task list, click Scan for wireless access points . A warning is displayed.
-	Select WDS Enabled . In the Pick a task list, click Scan for wireless access points . A warning is displayed. <u>Microsoft Internet Explorer</u>
7	Select WDS Enabled. In the Pick a task list, click Scan for wireless access points. A warning is displayed. Microsoft Internet Explorer WARNING: All associated stations will loose connectivity for a few seconds. Do you want to continue? CK Cancel
-	Select WDS Enabled. In the Pick a task list, click Scan for wireless access points. A warning is displayed. Microsoft Internet Explorer WARNING: All associated stations will loose connectivity for a few seconds. Do you want to continue? CK Cancel Click OK.
7	Select WDS Enabled. In the Pick a task list, click Scan for wireless access points. A warning is displayed. Microsoft Internet Explorer
7	Select WDS Enabled. In the Pick a task list, click Scan for wireless access points. A warning is displayed. Microsoft Internet Explorer WARNING: All associated stations will loose connectivity for a few seconds. Do you want to continue? CK Cancel Click OK.
7	Select WDS Enabled. In the Pick a task list, click Scan for wireless access points. A warning is displayed. Microsoft Internet Explorer WARNING: All associated stations will loose connectivity for a few seconds. Do you want to continue? WARNING: All associated stations will loose connectivity for a few seconds. Do you want to continue? Click OK. The SpeedTouch [™] scans for access points on the same radio channel. Select your repeater in the List of Accessible Access Points, and then click
7	Select WDS Enabled. In the Pick a task list, click Scan for wireless access points. A warning is displayed. Microsoft Internet Explorer warNNING: All associated stations will loose connectivity for a few seconds. Do you want to continue? WARNING: All associated stations will loose connectivity for a few seconds. Do you want to continue? Click OK. The SpeedTouch™ scans for access points on the same radio channel. Select your repeater in the List of Accessible Access Points, and then click Apply.
7	Select WDS Enabled. In the Pick a task list, click Scan for wireless access points. A warning is displayed. Microsoft Internet Explorer warning: All associated stations will losse connectivity for a few seconds. Do you want to continue? WARNING: All associated stations will losse connectivity for a few seconds. Do you want to continue? Click OK. The SpeedTouch™ scans for access points on the same radio channel. Select your repeater in the List of Accessible Access Points, and then click Apply. SpeedTouch123456
7	Select WDS Enabled. In the Pick a task list, click Scan for wireless access points. A warning is displayed. Microsoft Internet Explorer () () () () () () () () () () () () () (
7	Select WDS Enabled. In the Pick a task list, click Scan for wireless access points. A warning is displayed. Microsoft Internet Explorer WARNING: All associated stations will loose connectivity for a few seconds. Do you want to continue? WARNING: All associated stations will loose connectivity for a few seconds. Do you want to continue? WARNING: All associated stations will loose connectivity for a few seconds. Do you want to continue? WARNING: All associated stations will loose connectivity for a few seconds. Do you want to continue? WARNING: All associated stations will loose connectivity for a few seconds. Do you want to continue? WARNING: All associated stations will loose connectivity for a few seconds. Do you want to continue? Citck OK. The SpeedTouch TM scans for access points on the same radio channel. Select your repeater in the List of Accessible Access Points, and then click Apply. PoedTouch123456 . Configuration WD Enabled: D Enabled: <u>VD Enabled</u> : <u>VD Enabled</u> :
7	Select WDS Enabled. In the Pick a task list, click Scan for wireless access points. A warning is displayed. Microsoft Internet Explorer () () () () () () () () () () () () () (



Chapter 2 Local Network Setup



3 Internet Connectivity Dial-In Clients

Introduction	the		ernet connectivity using th d Easy Setup, refer to the p		
Access methods	Depending on the configuration of the SpeedTouch™ you may have:				
	 Direct access: 				
		As soon as the initial configuration is finished, immediate and uninterrupted WAN access is provided.			
		_*	t access, the remote organi vord on an Internet welcom	-	
	•	Dial-in access:			
		Access must be explicitly Remote Access Server (I	y established, that is by "di 3RAS).	alling" into a Broadband	
			ITouch™ configuration, dia ted PPPoA or Routed PPPo		
Connection protocols	The applied connection protocol model depends on the service profile you selected to configure the SpeedTouch [™] and should correspond with the Service Provider's requirements. If, for instance, your ISP provides PPPoE, you should configure PPPoE.				
	You can find more information on connection protocols in the Internet Connection Configuration Guide.				
Dial-in clients	There are different ways to dial in, depending on the operating system on your computer and your preferences.				
	Dial-in method:		canbeusedonfollowing operating system:	For more information, see:	
	Embedded PPP dial-in client:				
	1	Dial-in client on embedded pages	Windows, Mac, unix, other	"3.1 SpeedTouch™ Web Pages″	
	2	Windows XP/UPnP (Internet Gateway Device)	Windows XP	"3.2 Internet Gateway Device Control Agent" on page 33	



Embedded PPP dial-in clients	The SpeedTouch™'s embedded PPP dial-in client allows you to establish an Internet connection for computers residing on your local network, using only one computer of the network to control the client.
	If this computer runs:
	 Any Operating System you can always use the SpeedTouch™ Web pages. See "3.1 SpeedTouch™ Web Pages" on page 31 to proceed.
	 Windows XP you can use the Windows XP Internet Gateway Device Control Client. See "3.2 Internet Gateway Device Control Agent" on page 33 to proceed.
Broadband host PPPoE dial-in clients	You can also connect to the Internet using a Broadband PPPoE dial-in application. The PPP over Ethernet connection scenario provides PPP-like dial-in behaviour over the virtual Ethernet segment.
	To be able to use a broadband dial-in application on your computer for connecting to the Internet, the SpeedTouch™ needs to be configured for Bridged Ethernet or

to the Internet, the SpeedTouch[™] needs to be configured for Bridged Ethernet or Routed PPPoE (with PPPoE relay) via the SpeedTouch[™] Home Install Wizard on the Setup CD or the embedded Easy Setup. .

If your computer runs	you can use
Windows XP	the Windows XP broadband dial-in client
Mac OS X	a Mac OS X broadband dial-in client
	a broadband PPPoE dial-in client provided by you Service Provider

Upon availability of OS-specific PPPoE dial-in client applications, the latter method is Operating System independent.

For PPPoE session connectivity from a Mac OS 8.6/9.x, a Windows 95/ 98(SE)/ME/2000 or a Linux system, a host PPPoE dial-in application is mandatory.



3.1 SpeedTouch[™] Web Pages

Introduction


As the SpeedTouch[™] Web pages are controllable from any Operating System with an installed Web browser, the method to establish PPP sessions described later, can be used on any computer system.

For more information on Internet connection setup, refer to the provided Installation and Setup Guide.

Starting an Internet session

Proceed as follows to start an Internet session:

1 Open a Web browser on your computer and browse to the SpeedTouch[™] Web pages (see "1.2.1 Access via the Web Interface" on page 7 for more information).

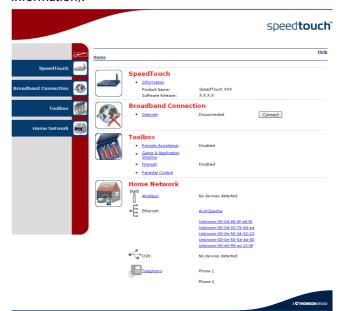

The SpeedTouch[™] home page appears by default.

Click **Connect** at the appropriate broadband connection.

2

You might be requested to enter your user name and password.

The SpeedTouch ${}^{\rm T\!M}$ embedded PPP dial-in client establishes the Internet connection.

3 Browse the Web.

Monitoring your Internet connection You can view and monitor your connection to the Internet as long as the session is running via:

- The SpeedTouch[™] System Information page: see "5.3.1 Information" on page 50.
- The SpeedTouch™ Diagnostics task: see "5.4.1 Connectivity Check" on page 58.

speed**touch**™

C THOMSON

Terminating an Internet session

2

Proceed as follows to close an active PPP connection:

- **1** Go to the SpeedTouch[™] Web pages.
 - Click **Disconnect** at the appropriate broadband connection.

The SpeedTouch[™] embedded PPP dial-in client closes the Internet connection. The Internet Link status changes to **Disconnected** and your computer is offline.

3.2 Internet Gateway Device Control Agent

Introduction	Windows XP users can easily establish PPP sessions, thanks to the Windows XP Internet Gateway Device (IGD) Discovery and Control Client that allows you to control the SpeedTouch™ directly from you computer.
	The IGD Control Client only allows to connect or disconnect a fully configured connection.
Preconditions	Make sure that:
	The following subcomponents of the Windows XP Networking Services are added to your Windows XP system:
	 UPnP[™] (see " SpeedTouch[™] not detected by UPnP[™] or IGD Control Client" on page 105).
	 IGD Discovery and Control Client (see "Adding IGD Discovery and Control" on page 106).
	 UPnP[™] is enabled on your SpeedTouch[™]. To enable UPnP, see "5.5.3 Game & Application Sharing" on page 65.
Starting an Internet	Proceed as follows to start an Internet session:
session	1 In the Windows taskbar, click Start .
	2 Select (Settings >) Control Panel.
	The Control Panel window appears.
	3 Go to (Network and Internet Connections >) Network Connections.
	The Network Connections window appears.
	Network Connections
	File Edit View Favorites Tools Advanced Help 🦧
	Address 🗞 Network Connections 🔍 🄁 Go
	Network Tasks Internet Gateway Image: See Also Internet Gateway

Local Area Connection Enabled PCMCIA Fast Ethernet Card

You will find an **Internet Gateway** icon, representing the SpeedTouch™ IGD Internet connection ability.

4 Double-click the Internet Connection icon.

۱ (E)

Other Places
Control Panel
My Network Place
My Documents
My Computer
Details
Network Connection
System Fulare

The SpeedTouch[™] embedded PPP dial-in client establishes the Internet connection. The **Internet Gateway** icon displays **Connected** and your computer is online.

5 Open a Web browser and surf the Internet.

speed**touch**™

Internet connection status

As long as the SpeedTouch[™] embedded PPP dial-in client is connected, you can view the connection status and some counters by double-clicking the **Internet Connection** icon in the **Network Connections** window.

🨼 Internet Conn	ection Status	? 🛛
General		
- Internet Gatewa	y	
Status:		Connected
Duration:		00:01:16
Speed:		3.3 Mbps
Activity Internet	Internet Gateway	My Computer
Bytes: Sent: Received:	3.579.037 4.155.677	5.606.288 12.582.862
Properties	Disconnect	

Terminating an Internet session

Proceed as follows to terminate an Internet session:

- 1 In the Windows taskbar, click **Start**.
- 2 Select (Settings >) Control Panel > (Network and Internet Connections >) Network Connections.
- **3** In the **Network Connections** window, right-click the **Internet Connection** icon and select **Disconnect** to close the session.



- You can also double-click the icon. Then the **Internet Connection Status** window will appear on which a **Disconnect** button is available to close the session.
- 4 The SpeedTouch[™] embedded PPP dial-in client will close the Internet connection. The **Internet Gateway** icon displays **Disconnected** and your computers are offline.



4 Voice over IP

Voice over IP	Internet telephony or Voice over IP (VoIP) can be defined as the transfer of telephone calls over your Internet connection.	
The SpeedTouch™ VolP solution	With your SpeedTouch™ you can make Internet and regular telephone calls using traditional analogue phones, connected to your SpeedTouch™.	
	As VoIP signalling protocol your SpeedTouch [™] uses the Media Gateway Control Protocol (MGCP), RFC 3435.	
Multi-line service	The voice service on your SpeedTouch™ provides additional lines without the need for additional copper pairs. The additional lines allow you to make and receive several internal and external Internet calls simultaneously.	
Fax	You can also connect a fax machine to your SpeedTouch [™] in order to send and receive faxes over your Internet connection or over the traditional phone line. The following MGCP configuration parameters are provided by your ISP: IP address and port number (usually 2727) of the provider's call agent	
Call agent	The provider's call agent contains the call control "intelligence". It creates, modifies and deletes connections in order to establish and control media sessions with other multimedia endpoints.	

speed**touch**™

Telephony installation

 
4.1 Telephony Setup

Telephone Internet (PSTN) Use a phone cable with RJ-11 connectors to: Wire the SpeedTouch[™] Phone port(s) to your phone(s) or fax. 1 2 If your SpeedTouch has a black-coloured port labeled "PSTN", you must connect this port to the telephone output of your DSL splitter to allow regular phone calls with the same telephone set. In the other case, no additional connections are needed. This is only required if you still want to make phone calls using the regular telephone line. Be aware that, if the PSTN port (if provided) is not wired to your telephone wall outlet or distributed filter, emergency calls are not always possible! As distributed filters are country-specific, you cannot use the device everywhere. Telephony configuration The telephony service might already have been configured on your SpeedTouch™ during initial setup.

The SpeedTouch[™] is equipped to connect one or two analogue phones or faxes.

If not, follow the instructions below:

- Enable the telephony service
- Configure the telephony service





Go to the SpeedTouch™ Web pages. For more information, see "1.2.1 Access via the Web Interface" on page 7. In the menu, select Toolbox > Telephony. In the upper right corner, click Configure. Select Service Enabled. Click Apply. roceed as follows to configure the MGCP telephony service: Go to the SpeedTouch™ Web pages. In the menu, select Toolbox > Telephony. In the menu, select Toolbox > Telephony service: In the menu, select Toolbox > Telephony. In the upper right corner, click Expert configure.		
page 7. In the menu, select Toolbox > Telephony. In the upper right corner, click Configure. Select Service Enabled. Click Apply. roceed as follows to configure the MGCP telephony service: Go to the SpeedTouch [™] Web pages. In the menu, select Toolbox > Telephony.		
 In the upper right corner, click Configure. Select Service Enabled. Click Apply. roceed as follows to configure the MGCP telephony service: Go to the SpeedTouch™ Web pages. In the menu, select Toolbox > Telephony. 		
 Select Service Enabled. Click Apply. roceed as follows to configure the MGCP telephony service: Go to the SpeedTouch™ Web pages. In the menu, select Toolbox > Telephony. 		
Click Apply . roceed as follows to configure the MGCP telephony service: Go to the SpeedTouch™ Web pages. In the menu, select Toolbox > Telephony .		
roceed as follows to configure the MGCP telephony service: Go to the SpeedTouch™ Web pages. In the menu, select Toolbox > Telephony .		
Go to the SpeedTouch™ Web pages. In the menu, select Toolbox > Telephony .		
Go to the SpeedTouch™ Web pages. In the menu, select Toolbox > Telephony .		
In the menu, select Toolbox > Telephony .		
In the upper right corner, click Expert configure .		
Enter the IP address and the port number of the call agent, as provided by your ISP.		
[Administrator] Overview Details Expert Configure Help Home > Toolbox > Telephony		
Telephony • Service Configuration Call Agent: Call Agent Port: 2727 Apply Cancel		

Verifying telephone connectivity

Proceed as follows to verify the voice connection:

speed**touch**™

- **1** Make sure the SpeedTouch[™] is turned on and ready for service.
- 2 Check whether your phone is properly attached to the SpeedTouch[™].
- 3 Make sure the Internet telephony service is enabled and configured.
- 4 The VoIP Ready LED must be lit.

- **5** Pick up your phone, wait for the dialling tone, and dial the number. If you dial a '#' after the phone number, the phone number will be called instantly.
 - The phone(s) attached to the SpeedTouch[™] can receive incoming VoIP calls, as long as your SpeedTouch[™] is turned on and the VoIP Ready LED is lit.

For calls over the regular phone line, your phones are line powered by the telephone company and can therefore always be reached, even if the modem is turned off.

4.2 Supplementary Telephony Services

Supported telephony services

Depending on your provider's configuration, the following services will be available.

Service	Description
Call Hold	Allows you to put a call on hold, to dial another number, and to switch between the active and held call whenever you want, or to terminate the active or held call.
Call Waiting	Allows you to answer or reject an incoming call while you are in a conversation.
Call Transfer	Allows you to transfer a call to another person.
Conference Call (3 Parties)	Allows you to make a conference call.
Calling Line Identification Presentation (CLIP)	Allows you to see the phone number of the person who is calling you on your phone display. If you cannot take the call, the phone number is stored on the SpeedTouch™ Web pages, guaranteeing you do not miss important calls. CLIP will only work if CLIR is deactivated on the calling phone.
Calling Line Identification Restriction (CLIR)	Restricts the transmission of your phone number when you make a call, in order to protect your confidentiality. Your phone number will not appear on the screen of your partner. When this service is activated, your phone number will never be transmitted. To activate CLIR on call basis, see "Using the services on the phone" on page 39.
Forced FXO	Allows you to force the SpeedTouch™ to make the phone call over the PSTN, that is the regular telephone line.

For more information on how to use some of these services, see " Using the services on the phone" on page 39.



Using the services on the phone

The following table explains how to use a telephony service. The commands depend on your provider's configuration and might be different from those described here. For more information, see your provider's documentation.

F

Make sure your phone is off-hook when you dial the commands.

If your phone does not have an **R** or another hook flash button, put down the hook for 1/2 second and then dial the command number.

To use the service:	Proceed as follows:	
Call Hold	To put person A on hold:	
	1 Dial <i>R</i> , <i>2</i> to put the call with person A on hold.	
	2 Dial <i>R</i> , <i>1</i> to retrieve the call on hold.	
	To put person A on hold and set up a call to person B:	
	1 Dial <i>R</i> , <i>2</i> to put the call with person A on hold.	
	2 Wait for the dialling tone, and dial the number of person B.	
	3 Dial <i>R</i> , <i>2</i> to switch back to person A.	
	Person B is put on hold.	
Call Waiting	You are in a phone conversation with person A while person B is calling you. The phone produces a waiting tone and - if CLIP is enabled and CLIR disabled - displays the number of person B.	
	Do one of the following:	
	• To reject the incoming call, dial R , 0 .	
	To terminate the first call and to switch to the waiting call, dial <i>R</i> , <i>1</i> .	
	If you do not want to terminate the first call, dial <i>R</i> , <i>2</i> to keep the first caller on hold while answering the second call.	
	To return to person A while putting person B on hold, dial <i>R</i> , <i>2</i> .	
	To return to person A while terminating the call with person B, dial R, 1.	
Call Transfer	You receive a phone call from person A and you want to transfer him to person B.	
	1 Dial <i>R, 2</i> .	
	2 Wait for the dialling tone.	
	3 Dial the number of person B.	
	Person B picks up the phone.	
	4 Dial <i>R</i> , <i>4</i> to transfer the call.	
	5 Hang up.	



To use the service:	Proceed as follows:	
Conference Call (3 Parties)	 To set up a conference call: Call person A. Dial <i>R</i>, <i>2</i>. Person A is put on hold. Wait for the dialling tone. Dial the number of person B. Person B picks up the phone. Dial <i>R</i>, <i>3</i>. Once the conference call has been established, you can: Dial <i>R</i>, <i>2</i> to put the 2 calls on hold. Dial <i>R</i>, <i>3</i> to retrieve the 2 held calls. 	
CLIR on call basis	It is possible to hide your phone number for one particular call. Dial *31 * directly followed by the phone number of person A.	
Forced FXO	 To make a phone call over the regular telephone line: 1 Dial *01*. 2 Wait for the dialling tone, and then dial the phone number of person A. 	

Command overview

The table below lists all standard service codes of the telephony services. These might be different on your SpeedTouch[™], depending on your provider.

Phone command:	Is used to:	
R 0	drop a held callreject an incoming call	
R 1	 terminate an active call and switch to the waiting or held call 	
R 2	 put a call on hold switch between active and waiting or held call put a conference call on hold 	
R 3	 establish a 3-party conference call 	
R 4	 transfer a call 	
31	 make an anonymous call (use CLIR) on call basis 	
01	• use the regular telephone line	

speed**touch**™ ∙

5 SpeedTouch™ Web Interface

Embedded The SpeedTouch[™] comes with embedded Web pages, providing an interface to the software installed on the device. It allows easy setup and management of the SpeedTouch[™] via your Web browser from any PC connected to the SpeedTouch[™]. See "1.2.1 Access via the Web Interface" on page 7 to access the pages.

SpeedTouch™ documentation Consult: ► The SpeedTouch[™] Installation and Setup Guide

for more information on setup and installation procedures.



5.1 Navigation

Navigation components	The SpeedTo	uch™ Web interface consists of the following components:
	Menu	
	Language	ge Bar
	Navigati	ion Bar
	_	tion Area
	Tasks	
	Menu —	<complex-block> Navigation by Outfind on and Outfind on and</complex-block>



5.1.1 Menu

Menu items

The menu is located on the left side of the page and consists of the following menu items:

- SpeedTouch: Provides basic information on the SpeedTouch™.
 - Broadband Connection: Allows you to view/configure your broadband connections.
 - Toolbox: Allows you to assign games or applications to a device and secure your Internet connection.
 - Home Network: Allows you to manage your local network.

Collapsing and You can collapse/expand the menu by clicking the arrow located at the top of the menu.



5.1.2 Language Bar

Language bar

The language bar is located under the SpeedTouch[™] logo and allows you to change the language of the SpeedTouch[™] Web interface.



The language bar will only be shown if more than one language is available.



5.1.3 Navigation Bar

Navigation bar	The navigation bar is located at the top of the page and allows you to:
	 View the current user name. Click this name to change your password or switch to another user.
	View the current position on the SpeedTouch™ Web interface.
	Get context-related Help information.
Display level	Depending on the page you are viewing, the following buttons will be available:
	• Overview to view a summary of the current status or configuration.
	 Details to view more detailed information on the current status or configuration.
	Configure to change the current settings.



5.1.4 Notification Area

7

Notification area

The notification area is located under the Navigation Bar and is used to display:

- Error messages, indicated by a red traffic light.
- Warnings, indicated by an orange traffic light.
- Information, indicated by a green traffic light.

If none of these events occur, the notification area will not be shown.



5.1.5 Tasks

Tasks

To allow a quick configuration of your SpeedTouch™, some pages may offer you a number of related tasks in the **Pick a task** list. These tasks will guide you to the page where you can perform the selected task.

5.2 Home

SpeedTouch™ home page

The SpeedTouch[™] home page gives you a short overview of all the configurable aspects of the SpeedTouch[™]:

- SpeedTouch
- Broadband Connection
- Toolbox
- Home Network

				speed touch
E	[Administrato	or]		Help
SpeedTouch Broadband Connection		SpeedTouch Information Product Name: 	SpeedTouch XXX	
Toolbox		Software Release: Broadband Conne • Internet:	X.X.X.X ection Disconnected	Update Connect
Home Network		Toolbox • <u>Remote Assistance</u> :	Disabled	
		Game & Application Sharing Firewall: Parental Control	Disabled	
		Home Network	<u>Unknown-00-0d-88-4f-a8-f6</u>	
				A Q THOMSON BRAND



5.3 SpeedTouch

The SpeedTouch menu	The SpeedTouch menu consists of the following items:	
	Information	
	Configuration	
	Event Logs	
The SpeedTouch page	The SpeedTouch page gives you some basic information on the SpeedTouch™:	
	Product Information	
	Configuration	
	speed tou	chĩ
	Home > SpeedTouch	<u>Help</u>
	SpeedTouch SpeedTouch	
	Information Information	
	Configuration Product Name: SpeedTouch 585	
	Event Logs Software Release: X.X.X.X	
	Configuration	
	Broadband Connection Service Name: Routed PPPoE on 0/35 and 8/35 (modified by user) Date & Time: Wed, 20-Jul-2005 18:27:22+01:00	
	Toolbox Toolbox	
	Set Up	
	Home Network	
	View event logs	
	Check connectivity to the Internet	
	A O THOMSON	BRAND



5.3.1 Information

Information

The **Information** page summarizes important information on your SpeedTouch[™]. You may need this information when you contact your helpdesk.



System Information This page summarizes important information on your SpeedTouch. You may need this information when you contact your helpdesk.

 you contact your neipdesk.	
Product Name:	SpeedTouch XXX
Serial Number:	0452DT108
Software Release:	X.X.X.X
Software Variant:	АА
Boot Loader Version:	1.0.16
Product Code:	35723430
Board Name:	BANT-K



5.3.2 SpeedTouch™ Easy Setup

Easy Setup Wizard

The Easy Setup Wizard helps you to configure your SpeedTouch™ Internet connection.

Proceed as follows to configure the SpeedTouch[™] using the SpeedTouch[™] Easy Setup wizard:

- 1 In the left menu, click **SpeedTouch**.
- 2 In the **Pick a task** list, click **Set up**.

The **Easy Setup** wizard will now guide you through the configuration of your SpeedTouchTM.



speed**touch**™

5.3.3 Restart

Restarting your SpeedTouch™ Proceed as follows:

1 In the left menu, click **SpeedTouch**.

2 In the **Pick a task** list, click **Restart**. The following message appears:



Warning: System Restart You are about to restart your SpeedTouch. All active connections will be restarted. Do you want to proceed?

Yes, restart my SpeedTouch No

Click Yes, restart my SpeedTouch.
 The SpeedTouch[™] restarts.

The SpeedTouch[™] returns to the Home page.



5.3.4 Configuration

Overview	The Overview p	bage displays the curr	ent configuration of your SpeedTouch™.
Details	The Details pag your SpeedToud		led information on the current configuration of
Configure	The Configure p	bage allows you to ch	ange the current configuration.
		tem Configuration age lets you configure your Spec Service Configuration	adTouch.
			vice settings of your SpeedTouch. In order to modify those iguration Wizard and follow the instructions appearing on the
		Service Name:	Routed PPPoE on 0/35 and 8/35
		Time Configuration	
		Auto-configuration:	
		Date (dd-mm-yyyy):	· · · ·
		Time (hh:mm:ss):	
		Timezone:	(UTC+01:00) Amsterdam, Bern, Rome, Str
		Summer Time:	
		System Configuration	
		Web Browsing Interception:	Disabled 💌
			Apply Cancel
	lf you want to:		
	Click Confi		^M : er Service Configuration . For more buch™ Easy Setup″ on page 51.

- ▶ Configure the time settings of your SpeedTouch[™]:
 - Select Auto-configuration if you want the SpeedTouch[™] to use a time server to synchronise its clock to a dedicated time server.
 - Clear Auto-configuration to manually configure the SpeedTouch™ time settings.
- Disable/enable Web browsing interception or set it to automatic: In the Web Browsing Interception list, click the Web browsing interception setting of your choice.



If you disable Web browsing interception or set it to automatic you will not be able to use Parental Control.

Click Apply to apply and save your settings.

speed**touch**™

5.3.5 Back up & Restore

Introduction

- The Back up & Restore page allows you to:
- Save your current configuration.
- Restore a previously saved configuration.



Backup & Restore

This page enables you to save and restore the configuration of your SpeedTouch. Follow instructions helow.

Backup current configuration

In order to store the current configuration of your SpeedTouch, click on the `Backup Configuration Now...' button. You will be prompted by your web browser to store the configuration file locally on your hard disk. Choose a location and store the file on your computer. Backup Configuration Now...

Restore saved configuration

You can restore a configuration file you have previously stored on your computer.

Click on `Browse', choose the configuration file you want to restore on your SpeedTouch and click on `Restore Configuration Now...' to restore the configuration.

Configuration File:	Browse

Restore Configuration Now.

Accessing the Backup & Restore page 1

Proceed as follows:

- In the SpeedTouch menu, click Configuration.
- 2 Click Configure.
- 3 In the Pick a task list, click Save or Restore Configuration.

Saving your current configuration Proceed as follows:

- 1 Click Back up Configuration Now.
- 2 Click Save.
- 3 Choose a location to save your backup file and click Save.

Restoring a previously saved configuration Proceed as follows:

- 1 Click Browse.
- 2 Select the configuration file you want to restore and click **Open**.

3 Click Restore Configuration Now.

The SpeedTouch[™] loads your configuration and restarts.

At the end of the procedure, the SpeedTouch[™] returns to the Home page.



5.3.6 Reset to Factory Defaults

Introduction

The **Reset to Factory Defaults** page allows you to reset the SpeedTouch[™] to return to the initial configuration of your SpeedTouch[™]. All your changes will be deleted.The following message appears:



Yes, reset my SpeedTouch No

Resetting the SpeedTouch™ factory defaults

- Proceed as follows:
- 1 In the left menu, click **SpeedTouch**.
- 2 In the Pick a task list, click Return to Factory Default Settings.

3 Click Yes, reset my SpeedTouch.



If you reset your SpeedTouch[™] to factory default settings, all active connections will be disconnected.



5.3.7 Event Logs

Event Logging The Event Logging

The Event Logs page summarizes the last events recorded on your SpeedTouch™.

age su	.ogging mmarizes the last events tha	at have been recorded on your SpeedTouch. Choose a displa
Categ	jory:	LAN
Reco	orded Events	
	Time	Message
	00:23:11 (since last boot)	DHCS server up
8	00:23:10 (since last boot)	DHCS server went down
8	00:00:04 (since last boot)	DHCS server up
8	00:00:03 (since last boot)	WIRELESS interface turned on.
B	00:00:03 (since last boot)	WIRELESS automatic channel selection done (channel = 1)

Recorded Events

The **Recorded Events** table gives you an overview of the last event logs that have been recorded since the SpeedTouch[™] was turned on. The first column of the table indicates the importance of the event log.

Indicator	Description
8	Informational
8	Warning
8	Error

Category

The **Category** list allows you to filter the events shown in the **Recorded Events** table. For example, by clicking **Security** you can view all security related events, for example generated by the SpeedTouch[™] firewall.



5.4 Broadband Connection

The Broadband Connection menu

The Broadband Connection menu consists of following menu items:

DSL Connection

Internet Services

The Broadband Connection page The **Broadband Connection** page gives you a short status overview of the connections configured on the SpeedTouch[™].

					speed touch `
ť		Administrator Iome > Broadb] and Connection		Help
SpeedTouch			DSL Connection		
Broadband Connection			<u>View more</u> Uptime:	0 days, 0:24:01	
DSL Connection			Bandwidth (Up/Down) [kbps/kbps]:	544 / 2.272	
Internet Services			Data Transferred (Sent/Received) [KB/KB]:	0,00 / 0,00	
Toolbox	T		Internet		Disconnect
			View more		
Home Network			Type:	PPPoE	
			Uptime: IP Address:	0 days, 0:01:43 101.101.101.39	
			Data Transferred	0/0	
		_	(Sent/Received) [B/B]: c a task <u>Check connectivity to the</u>	Internet	
					A O THOMSON BRAND

Click **View more** to see more information on the selected broadband connection.

If you configured a dial-up connection, you can establish/terminate the connection by clicking Connect/Disconnect.



5.4.1 Connectivity Check

Introduction

On this page, you can perform a connectivity check on an Internet service of your SpeedTouch[™]. The following message appears:

Internet

V	,
Ň.	
X —	
×	_

Connectivity Check This page enables you to perform a connectivity check on an Internet service of your SpeedTouch. Choose an Internet service and click the button to launch the tests.

-

Check Connectivity

Internet Service to Check:

Checking your Internet connectivity Proceed as follows:

- 1 In the left menu, click Broadband Connection.
- 2 In the Pick a task list, click Check connectivity to the Internet.
- 3 In the **Internet Service to Check** list, click the Internet service that you want to check.
- 4 Click Check Connectivity.

The SpeedTouch[™] lists the test results in the **Test Results** list.

Analysing the test results

If the test is successful, you will get a list of green check marks. Otherwise a red cross will indicate which tests have failed.

\sim		
	¥	
	іх — —	
	l∛ =	
	· ·	

Connectivity Check

Its page enables you to perform a connectivity check on an Internet service of your SpeedTouch.

Choose an Internet service and click the button to launch the tests.

Internet Service to Check:

Internet

Check Connectivity **1 2 2 1**

V Connectivity to DNS Server 1 (10.50.2.20)

Connectivity to DNS Server 2 (10.50.2.21)



5.4.2 DSL Connection

Overview

Click **Overview** to view basic information on your DSL connection.

Details

Click **Details** to view more detailed information on your DSL connection.

	DSL Connection	
	Link Information	
V	Uptime:	4 days, 4:19:08
	Modulation:	G.992.1 Annex A
	Bandwidth (Up/Down) [kbps/kbps]:	512 / 4.640
	Data Transferred (Sent/Received) [MB/MB]:	36,15 / 385,19
	Output Power (Up/Down) [dBm]:	11,5 / 19,5
	Line Attenuation (Up/Down) [dB]:	14,0 / 25,0
	SN Margin (Up/Down) [dB]:	19,0 / 19,5
	Vendor ID (Local/Remote):	TMMB / ALCB
	Loss of Framing (Local/Remote):	0 / 0
	Loss of Signal (Local/Remote):	0/0
	Loss of Power (Local/Remote):	0/0
	Loss of Link (Remote):	0
	Error Seconds (Local/Remote):	0/0
	FEC Errors (Up/Down):	0 / 0
	CRC Errors (Up/Down):	0 / 0
	HEC Errors (Up/Down):	0/0



5.4.3 Internet Services

Internet Services information The Internet Services page displays information on your Internet Connection(s).

Inte	rnet	Disconnect	
 •	View more		
T	Гуре:	PPPoE	
L. L.	Jptime:	1 day, 4:14:25	
1	IP Address:	217.136.53.59	
	Data Transferred (Sent/Received) [MB/MB]:	14,70 / 328,71	



If you configured a dial-up connection you can establish/terminate the connection by clicking **Connect/Disconnect**.

To view more detailed information on a specific connection, click the **View more** link of the corresponding connection.



5.4.4 Internet Service Settings

Accessing the Internet	Proceed as follows:				
Service Settings page	1 In the Broadband Connection menu, click Internet Services.				
			he Internet service you want to view.		
			,		
Overview	The Overview page gives you basic information on the selected Internet Service.				
		onfigured a conne ng Connect/Disco	ction you can establish/terminate the connection onnect .		
Details	The Details page Service.	e gives you more	detailed information on the selected Internet		
	Inte	ernet	Disconnect		
		Connection Informati	ion		
		Uptime:	1 day, 4:13:24		
		Data Transferred (Sent/Received) [KB/B]:	14,65 / 325,99		
	•	Connection Settings			
		PVC Info (VPI.VCI):	8.35		
		Туре:	PPPoE		
	•	PPP Settings			
		Username:	cpesit@rednet		
		Password: Connection Mode:	******		
		Service Name:	Always-On -		
		Concentrator Name:	15031100007146-Redback		
	•	TCP/IP Settings			
		IP Address:	101.101.101.39/32		
		Default Gateway:	101.101.101.1		
		Primary DNS: Secondary DNS:	10.50.2.20		
		Secondary DNS:	10.50.2.21		



If you configured a dial-up connection you can establish/terminate the connection by clicking **Connect/Disconnect**.



5.5 Toolbox

The Toolbox menu	The Toolbox menu consists of the following menu items:														
	Remote Assistance Allows you to make your SpeedTouch™ accessible for remote support.														
	 Telephony Allows you to configure your Voice over IP (VoIP) network. Game & Application Sharing Allows you to share services and games that you run in your private network towards the Internet. Parental Control Allows you to block/allow access to specific Web sites. 														
								Firewall Allows you to configure the security level of the SpeedTouch™ firewall.							
								 Intrusion Detection Allows you to view the intrusions you are protected against. 							
		 Dynamic DNS Allows you to assign a DNS host name to your broadband connection(s). 													
		► User Management Allows you to manage the users configured on your SpeedTouch [™] .													
The Toolbox page	The Toolbox page gives you an overview of the available services and their current status. You can click on the names of these services to go to the corresponding Web page.														
	speed touch														
	[Administrator] Home > Ioolbox														
	SpeedTouch Image: Constraint of the service service analy you to protect your network, to ease sharing of games and applications with other people on the Internet, or manage your local network.														
	Toolbox														
	Game & Application Sharing														
	Parental Control Parental Control Parental Control Firewall														
	Firewall Address Filtering: Enabled Security Level: Disabled Intrusion Detection Content Filtering: Disabled Security Level: Disabled														
	Dynamic DNS														
	User Management														

speed**touch**™

User Managem

Logged In As: Administrator

ent

A O THOMSON BR

Enabling Remote Assistance The **Remote Assistance** page allows you to make your SpeedTouch[™] accessible for remote support.



Remote Assistance Remote assistance is currently disabled. By clicking on the 'Enable Remote Assistance' button your SpeedTouch will be accessible from your broadband connection. After 20 minutes of inactivity, or on reboot, remote assistance will be automatically disabled.

Provide the following parameters to your ISP:

URL:	https://101.101.101.39:51003		
Username:	tech		
Password:	yhxj3mtq		
	Enable Remote Assistance Qu	iit	

 
If you want to enable remote assistance, you must be connected to the Internet.

Proceed as follows to use remote assistance:

1 If necessary, type a password in the **Password** box.

- 2 Click Enable Remote Assistance.
- **3** Pass the information listed under:
 - URL
 - Username
 - Password

to your technical support, in order for them to be able to access your SpeedTouch ${}^{\rm T\!M}$.



Terminating remote assistance

The remote assistance session ends:

- if the technical support disables remote assistance.
- after 20 minutes of inactivity.
- ▶ after restarting your SpeedTouch[™].

5.5.2 Telephony

Introduction	The SpeedTouch™ is equipped with:				
	Two Phone ports allowing you to connect up to two phones for making phone calls over the Internet.				
	 One PSTN port allowing you to make phone calls over the Public Switched Telephone Network (PSTN) network. 				
	For more information on how to set up your Voice over IP (VoIP) network,				
	consult the User's Guide on the SpeedTouch™ Setup CD.				
Overview	On this page you can view information on your current VoIP configuration.				
	Telephony				
	Service Configuration				
	Service Enabled: Yes				
	Telephone Numbers Id Port Registered				
	aaln/2 Phone 2				
	aaln/1 Phone 1				
	Telephony • Service Configuration Service Enabled: ✓ Apply Cancel				
Expert Configure	 On this page you can view/change the following MGCP parameters: Call agent: The IP address of your provider's MGCP server. 				
	 Call agent port: The port used by your call agent (usually port 2727). This port will be used to contact the call agent. 				
	Telephony				
	Service Configuration				
	Call Agent: 10.50.2.205				
	Call Agent Port: 2727				
	Apply Cancel				



5.5.3 Game & Application Sharing

Overview

The **Overview** page summarizes the applications or games installed on a particular local host on your network, for which the SpeedTouch[™] should accept inbound initiated connections coming from the Internet.

Configure

On the **Configure** page, you can:

Select **Use UPnP** to enable UPnP on the SpeedTouch[™]. UPnP provides NAT-Traversal: UPnP aware applications on a PC will automatically create Hyper-NAT entries on the SpeedTouch[™] for incoming traffic on the protocol ports this type of traffic needs. As a consequence these applications are able to traverse the SpeedTouch[™] without the need for extra and manual configuration.



UPnP is an architecture for transparent peer-to-peer connectivity of computers, intelligent appliances, and (wireless) devices. It enables seamless operation of a wide range of games and messaging applications.

 For security reasons you are able to configure the UPnP policy towards Windows XP and UPnP aware applications and Operating Systems.

In case you select the **Use Extended Security** check box, only limited UPnP operation between a host running MS Windows XP and the SpeedTouch[™] is allowed: A local host is:

- NOT allowed to connect/disconnect the SpeedTouch™ Internet Gateway Device (IGD) connection.
- Allowed to add/delete Hyper-NAT entries only for its own IP address, not for other local hosts.

If you clear the **Use Extended Security** check box, all UPnP- and IGD-based communication between any local host and the SpeedTouch[™] is allowed.



Assign a game or application to a specific network device.



Game & Application Sharing
his page summarizes the games and applications defined on your SpeedTouch. Each game o
pplication can be assigned to a device on your local network.

Universal Plug and Play

Universal Plug and Play (UPnP) is a technology that enables seamless operation of a wide range of games and messaging applications.

Use UPnP:	•
Use Extended Security:	

Apply Cancel

Assigned Games & Applications

Click on 'Unassign' to disable a game or a application or use the last row in the table to assign a game or application to a local network device.

If the game or the application you are looking for does not exist, <u>click here</u> to create it (you will be asked for game or application details).

Choose 'User-defined' in the device list and enter its IP address if the device you are looking for does not appear in the device list.

Game or Application	Device	Log		
FTP Server	YourPC	Off	<u>Edit</u>	<u>Unassign</u>
HTTP Server (World Wide Web)	YourPC	Off	Edit	<u>Unassign</u>
NetMeeting	YourPC	Off	<u>Edit</u>	<u>Unassign</u>
ABC (Another Bittorent Client)	▼ YourPC ▼			Add



5.5.4 Defined Games & Applications

Accessing the Defined Games & Applications page Proceed as follows to access the **Defined Games & Applications** page:

- 1 In the Toolbox menu, click Game & Application Sharing.
- 2 In the Pick a task list, click Modify a game or application.

The Defined Games & Applications page

This page gives you an overview of the games and applications defined on your SpeedTouch[™]. Each game or application can be assigned to a device on your local network.



Defined Games & Applications This page summarizes the games and applications defined on your SpeedTouch. Each game or application can be assigned to a device on your local network.

Game or Application	Assigned to	Mode		
ABC (Another Bittorent Client)		Client	<u>Edit</u>	Delet
Age of Empires		Server	Edit	Delet
Age of Mythology		Server	Edit	Delet
AIM Talk		Client	Edit	Delet
Aliens vs. Predator		Server	Edit	Delet
America s Army		Server	Edit	Delet
Azureus		Client	<u>Edit</u>	Delet
Bay VPN		Server	Edit	Delet
BearShare		Server	<u>Edit</u>	Delet
BitTorrent		Client	Edit	Delet
Black and White		Server	Edit	Delet
Call of Duty		Server	Edit	Delet
Call of Duty - United Offensive		Server	Edit	Dele
CarbonCopy32		Server	Edit	Dele
Castle Wolfenstein		Server	Edit	Dele
Championship Manager 03-04		Server	Edit	Dele
Checkpoint FW1 VPN		Server	Edit	Dele
Command and Conquer Generals		Server	Edit	Dele
Command and Conguer Zero Hour		Server	Edit	Dele
Counter Strike		Server	Edit	Dele
Cu-SeeMe Cornell		Server	Edit	Dele
Cu-SeeMe White Pine 3.1.2 and 4.0		Server	Edit	Dele
Dark Reign 2		Server	Edit	Dele
Default Server		Server	Edit	Dele
Delta Force		Server	Edit	Dele
Destroyer Command		Server	Edit	Dele
Diablo II		Server	Edit	Dele
Direct Connect		Server	Edit	Dele
DirectX 7		Server	Edit	Dele
DirectX 8		Server	Edit	Dele
DirectX 9		Server	Edit	Dele
Doom3		Server	Edit	Dele
Dune 2000		Server	Edit	Dele
Dungeon Siege		Server	Edit	Dele
eDonkey		Server	Edit	Dele
Elite Force		Server	Edit	Dele
eMule		Server	<u>Edit</u>	Dele
Enemy Territory		Server	Edit	Dele
Everguest		Server	Edit	Dele

If you want to:

- View the translation rules of a game or application, click the name of the rule.
- Change the translation rules of a game or application, click the **Edit** link of the game or application.
- Remove a game or application from your SpeedTouch[™], click the **Delete** link of the game or application.



Game or Application Definition 5.5.5

Accessing the Game or Proceed as follows to access the Game or Application Definition page: Application Definition 1 In the Toolbox menu, click Game & Application Sharing. page 2 In the Pick a task list, click Modify a game or application. 3 Click the name of the game or application you want to view/change. Overview This page gives you an overview of the port mappings used to allow this service or game to be initiated from the Internet. Consult the user's guide or support pages of your application to know which ports are being used by this application.

A service consists of one or more TCP/UDP port ranges. Each incoming port range can be translated into a different internal (local network) port range. Port ranges can be statically assigned to devices or dynamically assigned using an outgoing trigger.

Configure Under:

- Game or Application Name you can: Change the name of the game or application.
- Game or Application Definition you can: Change the TCP/UDP port definition for this game or application.



Game or Application Name

New Name:

٠

Lotus Notes

Apply Cancel

Game or Application Definition

A game or application is made of one or more TCP/UDP port ranges. Each incoming port range can be translated into a different internal (local network) port range. Port ranges can be statically assigned to devices or dynamically assigned using an outgoing trigger.

Protocol	Port Range	Translate To	Trigger Protocol	Trigger Port	
Any	1352 - 1352	1352 - 1352	-	-	Edit Delete
Any 💌	to		Any		Add



Adding a Port Translation rule

Proceed as follows:

- 1 Click the **Edit** link of the TCP/UDP port definition of the game or application.
- 2 In the **Protocol** list, click the protocol the game or application uses.
- 3 In the **Port Range** box, type the port range the game or application uses.
- 4 In the **Translate To** box, type the port range to which the SpeedTouch[™] has to translate the ports specified under **Port Range**.
- **5** If you want to make a dynamic translation rule you must specify a trigger protocol and port.



6 Click Apply.



5.5.6 New Game or Application

Creating a new game or application

Proceed as follows:

- 1 In the Toolbox menu, click Game & Application Sharing.
- 2 In the **Pick a task** list, click **Create a new game or application**. The following window appears:

		w Game or App or the name of the new game		
N	Nam	ne: N	lew_entry	
	Sele	ct how you want to define th	he new game or application.	
	o	Clone Existing Game or Ap	oplication	
		ABC (Another Bittorent Cl	ient) 💌	
	0	Manual Entry of Port Maps		

- **3** Type the name of the game or application in the **Name** box.
- 4 Click:
 - **Clone Existing Game or Application** if you want to start from the port mappings of the selected game or application.

Next Cancel

• **Manual Entry of Port Maps** if you want to manually configure the port mapping for this game or application.

The SpeedTouch[™] creates the game or application and takes you to the Game or Application Definition page to configure the port mappings for this game or application.

5 Enter the necessary port mappings and click Add.



5.5.7 Parental Control

Parental Control	 The SpeedTouch[™] allows you to block/allow particular Web sites: Based on the Web site's URL. As within a Web site lots of references can be made to other URLs, it is recommended to use this feature in combination with content based filtering. By redirecting a Web site to another Web site. If your administrator account is configured as default user, make sure you configure a password for this account or change the default user. Otherwise users on your local network can browse to your SpeedTouch[™] to disable your filtering rules. For more information, see "5.5.12 User Management" on page 80 and "5.5.14 Change Default User" on page 83.
Overview	 The Overview page displays: The current Address Based Filtering rules.
Configure	 On the Configure page, you can: Deny access to a specific web site. Allow access to a specific Web site. Redirect a Web site.

Deny access to a	Use	this feature if:
specific Web site	•	Allow is selected under Action for Unknown Sites.
	•	Block is selected under Action for Unknown Sites and you want to make an exception on an allow rule. For example: you are allowing "provider.com" but you want to deny access to "mail.provider.com".
	•	A content category/group is allowed by Content Based Filtering and you want to make an exception. For example: you are allowing Web Mail content but you want to deny access to "mail.provider.com".
	Pro	ceed as follows:
	1	Type the URL of the Web site you want to block (for example "mail.provider.com") in the Web Site box.
	2	In the Action list, click:
		Block if you want to block this Web site.
		 Redirect if you want to redirect to another page. Type the address of the redirect page in the Redirect box.
	3	Click Add.
Allow access to a	Use	this feature if:
specific Web site	•	Block is selected under Action for Unknown Sites
	•	Allow is selected under Action for Unknown Sites and you want to make an exception on a block/redirect rule. For example: you are blocking "bank.com" but you want to allow access to "netbanking.bank.com".
	•	A content category/group is blocked by Content Based Filtering and you want to make an exception. For example: you are blocking Finance / Investment content but you want to allow access to "netbanking.bank.com".
	Pro	ceed as follows:
	1	Type the URL of the Web site you want to allow (for example "netbanking.bank.com") in the Web Site box.
	2	Click Allow in the Action list.
	3	Click Add.
Redirect a Web site	Pro	ceed as follows:
	1	Type the URL of the Web site you want to redirect (for example "cracks.am") in the Web Site box.
	2	Click Redirect in the Action list.
	3	Type the URL of the Web site you want to redirect to (for example "mycompany.com/internetpolicy.htm") in the Redirect box.
	4	Click Add.



Redirecting all Web sites

Proceed as follows:

- 1 Type "*" in the **Web Site** box.
- 2 Click **Redirect** in the **Action list**.
- **3** Type the URL of the Web site you want to redirect to (for example "mycompany.com/internetpolicy.htm") in the **Redirect** box.
- 4 Click Add.
- **5** Type the URL of the Web site you want to redirect to (for example "mycompany.com/internetpolicy.htm") in the **Web Site** box.
- 6 Click Allow in the Action list.
- 7 Click Add.

Configure content based filtering settings

Under Content Based Filtering you can:

- Enable/disable content based filtering.
- Allow/block uncategorized Web sites.
- Select a content level in the Content Level list.

speed**touch**™

To change a content level definition, click the **Edit** link of the content level you want to change. For more information, see "5.5.8 Content Level" on page 74.

5.5.8 Content Level

Accessing the Content Level page

Proceed as follows:

- 1 In the **Toolbox** menu, click **Web Site Filtering**.
- 2 Click Configure.
- 3 Click the Edit link of the content level you want to edit.

Overview The **Content Level** page gives you an overview of the different categories and their rules.

The following icons indicate whether the content type is allowed or not.

lcon	Description
V	The category/group is allowed.
×	The category/group is not allowed.
×	The group is partly allowed.

Configure

This page allows you to change:

- The content level name.
- The content level description.
- The content level configuration.



5.5.9 Firewall

About the firewall				ic from and to the SpeedTouch™. There are n the degree of security you need.
Overview	The Overv SpeedTou		es the o	verall security policy configured on your
Configure	On the Co r	nfigure page you car	n select	the security level of the SpeedTouch™.
	<u></u>	Firewall This page summarizes the ov	verall securi	ty policy configured on your SpeedTouch.
		 Security Settings 		
		Security Level:	0	BlockAll
				Use this Security Level to block all traffic from and to the Internet. Game & Application sharing is not allowed by the firewall.
			O	Standard
				Use this Security Level to allow all outgoing connections and block all incoming traffic. Game & Application sharing is allowed by the firewall
			0	Disabled
				Disable the firewall. All traffic is allowed to pass through your SpeedTouch. Game & Application sharing is allowed by the firewall.
				Apply Cancel
Security Levels	Select one	of following securit	y levels	:
	Block	All:		
				t is blocked. Game and Application Sharing is
	not a	llowed by the firewa		
	2		DNS wi	I block all connections, some mandatory types Il still be relayed between LAN and WAN via
	Stand	dard:		
	exce			owed. All incoming connections are blocked, assigned to a local host via Game and

Disabled:

All in- and outgoing traffic is allowed to pass through your SpeedTouch[™], including Game and Application Sharing. This is the default firewall level.

The firewall levels only have impact on the forward hook. This means that the handling of traffic from and to the Web pages of the SpeedTouch[™] is independent of the selected firewall level.



7

Protocol checks will be performed on all accepted connections, irrespective of the chosen level. You can only disable protocol checks via the CLI.



Details of a security	То \	view the details of the currently active security level:
level	1	In the Toolbox menu, click Firewall .
	2	Click the Details link.
	Foll	owing information is provided per rule that is part of the security level
	•	The name of the rule
		The Action that is applied on the traffic when the rule is valid
	•	The Source and Destination interface or IP address (range) to which the rule applies
	•	The protocol or SpeedTouch™ Service for which the rule applies.
	•	The number of Hits (number of times that the rule was applied to traffic).
Creating a new security	Pro	ceed as follows:
level	1	In the Toolbox menu, click Firewall .
	2	In the upper right corner, click Configure .
	3	In the Pick a task list, click Create a new Security Level .
	4	In the Name box, type a name for the new security level.
	5	Choose an existing security level to clone from.
	6	Click Apply.
Editing a security level	_	ceed as follows:
	1	In the Toolbox menu, click Firewall .
	2	In the upper right corner, click Configure .
	3	Select a security level, and then click the Edit link.
		The firewall settings of the selected security level appear.
	4	You can:
		Select a row using the Edit link to modify the security rule.
		Click Add to create a new security rule.
	5	Edit or define following parameters of the rule:
		The Name of the security rule
		The Source Interface and IP Address (range)
		Use Any as IP address in case all traffic for the interface should be parsed.
		Or you can type a User-defined IP address (range).
		The Destination Interface and IP Address (range)
		Use Any as IP address in case all traffic for the interface should be parsed.
		Or you can type a User-defined IP address (range).
		 The Service type of the traffic; this can be a protocol (dns, smtp,) or a specific SpeedTouch™ system service.



- 6 Select an **Action** that should be done on traffic for which the security rules applies:
 - Accept: to allow the traffic to pass
 - **Deny**: to drop the traffic (without notification)
 - Count: to let the traffic pass, but count it (Hits)
- 7 Click Apply.



5.5.10 Intrusion Detection

Intrusion Detection

Your SpeedTouch[™] protects your network against malicious intrusions. The **Intrusion Detection** page shows you the intrusions you are protected against.

The **Protected Intrusions** table shows the number of times the SpeedTouch[™] actively protected your network against each intrusion since last statistics reset.



5.5.11 Dynamic DNS

Dynamic DNS	The Dynamic DNS service allows you to assign a dynamic DNS host name (for example john.dyndns.org) to a broadband connection even if it is using a dynamic IP address. As soon as the device gets a new IP address, the dynamic DNS server updates its entry to the new IP address.						
Overview Click Overview to view the different Dynamic DNS clients with their name, names, interface and IP address.							
Configure		e Configure pa		n a Dynamic DNS host na	me to a broadband		
	1 (Create an acco	ount at the Dynami	c DNS service of your ch	oice, for example:		
		• <u>www.dyn</u>	<u>idns.org</u>				
		• <u>www.no-</u>	<u>ip.com</u>				
		• <u>www.dtd</u>	<u>ns.com</u>				
	2	On the Dynam	ic DNS page, click	Configure.			
	3	Select the Enabled check box.					
		Σ	/namic DNS Ser	vice			
			 Configuration 				
			Enabled:				
			Interface:	Internet	•		
			Username:	MyName			
			Password:	•••••			
			Confirm password:	•••••			
			Service:	gnudip	•		
			Host:	MyDomainName			
					Apply		

- 4 If necessary, click the broadband connection to which you want to assign the Dynamic DNS hostname in the **Interface** list.
- **5** Type the user name and password of your Dynamic DNS service account in the corresponding fields.
- 6 In the **Service** list, click your Dynamic DNS service.
- 7 In the **Host** box, type the host name you want to assign to this interface (for example myspeedtouch.dyndns.org).
- 8 Click Apply.



5.5.12 User Management

Overview

The **Overview** page gives you an overview of the currently configured users and their privileges.

This page provides you with information regarding the users configured on your SpeedTouch.

Click the name of a user to edit his user account.

100	

Local User Data

User Management

The table below shows the configured users who are able to access your SpeedTouch. You need to configure user privileges if you want to differentiate between people using your SpeedTouch. The current privileges of the user are mentioned in the privileges column.

Username	Privileges	Default User		
Administrator	Administrator	\checkmark	Edit	
<u>Jon</u>	User		<u>Edit</u>	<u>Delete</u>
<u>Melissa</u>	User		Edit	<u>Delete</u>
				Ad

Configure

On the **Configure** page, you can:

- Click Add to create a new user account.
 - Click Edit to change a user account.
- Click **Delete** to remove a user.

Types of users

The table below shows the types of users and their privileges:

User	Privileges
root	This is the root (master) account. This user has all privileges without any exceptions or limitations.
SuperUser	This user can perform any service via any access channel from any access origin.
TechnicalSupport	This user can perform any service via any access channel from WAN origin only.
Administrator	This user can perform any service via any access channel from LAN or Local origin only.
LAN_Admin	This user can perform only LAN related configurations via any access channel from any origin.
Poweruser	This user has access to the GUI (Service/overview page) via HTTP or HTTPS access channel from LAN origin only.



User	Privileges
WAN_Admin	This user can perform only WAN related configurations via any access channel from any origin.
User	This user has access to the GUI (Overview pages, remote assistance) via HTTP or HTTPS access channel from LAN origin only.
Guest	This user does not have any privileges.



 
5.5.13 Edit User

Editing a user account

Proceed as follows:

1 In the Toolbox menu, click User Management.

2 Under Local User Data, click the name of the user you want to edit.



The Edit User page appears. On this page, you can:

- Click Reset Password to reset the password of the selected user to the user name. So, if you reset the password of John his password will be "John".
- Change the administration rights of the selected user.



You can not change the administration rights of the account you are logged on with.

Reset Password Apply Cancel



Change Default User Cancel

5.5.14 Change Default User

 On this page you can change the default user. If users browse to the SpeedTouch™ Web pages, they will be automatically logged on with this account. To allow users to automatically log on under this account, this default user account must be configured with a blank password.
Proceed as follows:
1 In the Toolbox menu, click User Management.
2 In the Pick a task list, click Set the default user.
3 The Change Default User page appears.
Change Default User This page allows you to change the default user. The default user is the user whose settings will be chosen as the default login settings. • Change Default User User Name:

- 4 In the **User Name** list, click the name of the new default user.
- 5 Click Change Default User to confirm your choice.

5.5.15 Add User

Adding users

Proceed as follows: **1** In the **Toolbox** menu, click **Use**

- 1 In the **Toolbox** menu, click **User Management**.
- 2 In the Pick a task list, click Add new user.
- **3** The **Add User** page appears.

	You're only allowed to add a user who has privileges which are the assword of the new user will be the same as the account name.	
Name:	New_user	
Administration Privileges:	Administrator	
	Apply Cancel	

- 4 Under User definition you can configure:
 - The name of the new user.



The password of the new user will be equal to the user name; for example if the user name is John Doe, the password will be John Doe. Also when resetting a user, the password will be changed into the user name.

The administration rights of the new user.



You can only add users with less than or equal administration rights as yourself.



5.6 Home Network

Home Network Menu	The Home Network menu consists of the following items:
	 Devices Allows you the view/configure the devices detected on your local network.
	Interfaces Allows you to view/configure the interfaces that are available on the SpeedTouch [™] .
The Home Network page	The Home Network page gives you an overview of your SpeedTouch™ network.
Viewing (wireless) client information	If you click on a (wireless) client you can:
	 View the (wireless) client's network settings. Configure the (wireless) client's network settings by clicking Configure.
Viewing Telephony information	If you click Telephony you can view/change your VoIP configuration. For more information, see "5.5.2 Telephony" on page 64.

5.6.1 Devices

Overview

The **Overview** page gives you an overview of the devices that are currently connected to the SpeedTouch[™] network. Click on a device name to get more information on a specific device.

Local Network Devi	ces			
 Detected Device(s) 	Detected Device(s)			
		المتحدية والمتحاد والمتحد والمتحد والمتحد والمحاف		
The table below contains the on a device name to get mo 	e list of devices the SpeedTouch (ore information on a device, IP Address	Interface		
on a device name to get mo	pre information on a device.			



The detected device 'dsldevice' is the SpeedTouch™ itself.

Configure

The **Configure** page gives you an overview of the devices that are currently connected to the SpeedTouch[™] network.

If you want to:

F

- Get more information on a specific device, click on the name of the device. See "5.6.2 Device Settings" on page 87 for more information.
- Edit a device from the **Detected Device(s)** list, click **Edit**.
- > Delete a device from the **Detected Device(s)** list, click **Delete**.
 - Once a device connects to the SpeedTouch™ network, it will remain listed in the Detected Device(s) list until you delete it.



5.6.2 Device Settings

Accessing the device	Proceed as follows:				
settings page	1	In the Home Network menu, click Devices.			
	2	In the Detected Device(s) list, click the name of the device you want to view.			
Overview	The	e Overview page displays the following items:			
	•	Information allows you to view:			
		Status shows whether the device is currently connected to the SpeedTouch [™] network.			
		• Type shows the device type.			
		• Connected To shows the interface to which the device is currently connected.			
	•	Addressing allows you to view:			
		Physical Address shows the MAC address of the device.			

- IP Address Assignment shows whether the device is using a static or dynamic IP address.
- IP Address shows the current IP address of the device.
- Always use the same address indicates whether the wireless client has a static DHCP lease or not.
- **DHCP Lease Time** displays the time for which the wireless client can use this IP address.
- Connection Sharing:

Gives you an overview of the games or services that are currently assigned to this device. Click the name of the game or service to view the used port mappings.

For more information, see "5.5.5 Game or Application Definition" on page 68.



Configure

- The **Configure** page allows you to:Change the device information.
- Allow a game or service running on this device to be initiated from the Internet.

	PC1					
	•	Information				
A		New Name:	PC1			
		Status:	Active			
		Туре:	Generic Device			
		Connected To:	ethif1 (Ethernet)			
		Addressing				
		Physical Address:	00:01:02:98:1f:df			
		IP Address Assignment:	DHCP			
		IP Address:	192.168.1.64			
		Always use the same address:				
		DHCP Lease Time:	1 day, 0:00:00			
				Apply Cancel		
		Connection Sharing				
		Game or Service				
		FTP Server		<u>Unassign</u>		
		HTTP Server (World Wide	Web)	<u>Unassign</u>		
		Age of Empires	•	Add		



5.6.3 Assign Public IP

Introduction

On this page you can assign the public IP address of your Internet Connection(s) to a specific device on your local network. You might want to do this if:

- You do not want to use the Network Address Translation engine of your SpeedTouch™.
- This device is running server applications (Web server,...) and you want it to be accessible from the Internet.

 You can also achieve this by creating a port mapping for the specified server, as described in "5.5.3 Game & Application Sharing" on page 65.

• This device has to be considered as the unique access point to your local network (DMZ).



7

Be aware that the device to which you assign the public IP address will lose all security offered by the SpeedTouch™.

Assigning the public IP address to a device

Proceed as follows:

- 1 In the **Home Network** menu, click **Devices**.
- 2 In the Pick a task list, click Assign the public IP address of a connection to a device.
- 3 Click the Edit link of your Internet connection.
- 4 In the **Device** list, select the device you want to assign the public address to.



Assign the public IP address of a connection to a LAN

device This page allows you to assign the public IP address of your Internet Connection(s) to a specific device on your local network...

You might want to do this if:

- You encounter issues with some applications through the Network Address Translation engine of
- This device is running server applications (web server, ...) and you want it to be accessible
- from the internet.
 This device has to be considered as the unique entry to your local network (DMZ).

Internet Service	Device		
Internet	YourLaptop 🔽	<u>Apply</u>	Cancel

5 Click Apply.

The SpeedTouch[™] prompts you to make some adjustments as a result of the new configuration.

- 6 Click OK.
- 7 Release and renew the IP address of the device.

speed**touch**™

For more information, see your operating system's user guide or help.

8 If necessary, reassign server applications to this device.

5.6.4 Wireless Device Settings

Availability	This page is only available on SpeedTouch [™] devices equipped with a wireless access point.			
Accessing the wireless	Proce	ed as follows:		
device settings page	1 1	n the Home Network menu, click Devices .		
		n the Detected Device(s) list, click the name of the wireless device you want to <i>v</i> iew.		
Overview	The O	verview page displays the following items:		
	► I	nformation allows you to view:		
		Status displays whether the device is currently connected to the SpeedTouch [™] network.		
		• Type displays the device type.		
		• Connected To displays the interface to which the device is currently connected.		
		Allowed on LAN indicates whether the wireless client is allowed to connect to the SpeedTouch [™] WLAN.		
	•	Addressing allows you to view:		
		Physical Address displays the MAC address of the device.		
		 IP Address Assignment displays whether the device is using a static or dynamic IP address. 		
		IP Address displays the current IP address of the device.		
		• Always use the same address indicates whether the wireless client has a static DHCP lease or not.		
		• DHCP Lease Time displays the time for which the wireless client can use this IP address.		
	(t r	Connection Sharing : Gives you an overview of the games or services that are currently assigned to this device. Click the name of the game or service to view the used port mappings. For more information, see "5.5.5 Game or Application Definition" on page 68.		
Configure	On the	e Configure page you can:		
		Change the device information.		
	•	Assign a static DHCP server lease to this device by selecting the Always use the same address check box.		

• Allow a game or service running on this device to be initiated from the Internet.



5.6.5 Access Point Settings

Availability	his page is only available on SpeedTouch™ devices equipped wi ccess point.	th a wireless		
Accessing the Access	Proceed as follows:			
Point settings	In the left menu, click Home Network .			
	Under Wireless , click the name of the Access Point you want configure.	to view or		
	The Access Point names have the following format: ' Network Name, for example "WLAN: SpeedTouch12:			
Overview	he Overview page displays a brief overview of the current config	uration.		
Details	he Details page displays a more detailed overview of the current	configuration.		
	nder Configuration, the following fields are available:			
	Interface Enabled: Indicates whether the wireless interface is enabled or disable	ed.		
	 Physical Address: Displays the Base Service Set Identifier (BSSID) of the selected 	ed Access Point.		
	Network Name (SSID): Displays the network name of your WLAN.			
	Interface Type: Displays one of the following interface types:			
	 802.11b Only stations that are configured in 802.11b mode can a 	associate.		
	802.11b(legacy)/g This is a special compatibility mode for 802.11b/g and is for older types of b-clients. Use this mode if you are exp problems with wireless clients that connect to the Spee Point.	periencing		
	 802.11b/g Only stations that are configured in 802.11b/g mode car 	1 associate.		
	 802.11g Only stations that are configured in 802.11g mode can a 	associate.		
	Actual Speed: Displays the current transmission speed.			
	 Channel Selection: Displays whether you select a fixed channel yourself or the S selects a channel for you. 	peedTouch™		
	Region: Displays your region.			
	 Channel: Displays the channel that is currently used by the Access Poi 	nt.		

speed**touch**™

Allow multicast from Broadband Network:

Displays whether you to allow/deny multicast messages from the Internet.



Large bandwidth streams, like video streams, have a large impact on your wireless performance.

WMM:

Displays whether WMM is enabled or disabled.

WMM or Wi-Fi MultiMedia enhances QoS at wireless driver level. It provides a mechanism to prioritise wireless data traffic to and from the associated (WMM capable) stations.

Under **Security** the following fields are available:

Broadcast Network Name:

By default the SpeedTouch[™] broadcasts its network name, allowing you to easily recognise your wireless network in the list of available networks. Once you have configured your wireless clients, it is recommended to disable this feature by clearing this check box.

Allow New Devices:

Allows you to change the access control used by the SpeedTouch™.

Encryption:

Allows you to select an encryption level for your wireless network. The following encryption methods are supported by the SpeedTouch[™]:

- The Wired Equivalent Protocol (WEP)
- WPA-Pre Shared Key (WPA-PSK)

The default WEP key and the default WPA key are printed on the SpeedTouch™ bottom label.



Before configuring the SpeedTouch[™] encryption, make sure you know which encryption methods are supported by your wireless client.

Configure On the **Configure** page, you can change the configuration details displayed on the **Details** page.

WEP The Wired Equivalent Privacy (WEP) algorithm protects wireless communication from eavesdropping.

WEP relies on a secret key that is shared between the wireless client (for example a laptop with a wireless Ethernet card and the SpeedTouch[™]. The fixed secret key is used to encrypt packets before they are transmitted. Meaning during transmission between client and AP ("in the air") the information in the packets is encrypted.

If your wireless client(s) support(s) WPA-PSK we recommend you to use WPA-PSK, because WEP encryption has been proven to have some security issues.

To enable WEP:

- **1** Select Use WEP Encryption
- 2 In the **WEP Key Length** list, click the desired Data Security level (either 64-bit or 128-bit and Alphanumeric or Hexadecimal).
- 3 In the **Encryption key** box, type a Network key of your choice. In case of:
 - 64 bit, Alphanumeric: The 40-bit Network key must consist of 5 alphanumeric characters.
 - 64 bit, Hexadecimal: The 40-bit Network key must consist of 10 hexadecimal digits.

- 128 bit, Alphanumeric:
- The 104-bit Network key consists of 13 alphanumeric characters.
- 128 bit, Hexadecimal: The 104-bit Network key consists of 26 hexadecimal digits.
- 4 Click Apply to immediately apply your changes.
- **5** Configure your wireless client(s) with the same settings.
- WPA-PSK The SpeedTouch[™] supports WPA-PSK, which offers three advantages over WEP:
 - Authentication via a 4-way handshake to check whether the Pre-Shared Keys (PSKs) are identical.
 - Stronger encryption types:
 - Temporal Key Integrity Protocol (TKIP) (default): Instead of using a fixed WEP key, TKIP uses in pairs temporary session keys which are derived from the PSK during the 4-way handshake. For each packet it uses a different key. TKIP also provides a message integrity check (MIC) and a rekeying mechanism (in seconds).
 - Advanced Encryption Standard (AES): State-of-the-art encryption; can only be used if all wireless devices in your WLAN support AES.
 - Message Integrity Check (MIC). Which is a strong mathematical function in which the recipient and transmitter each compute and compare the MIC. If they don't match it is assumed that a third person has been trying to read the data.

Proceed as follows to enable WPA-PSK:

- 1 Select Use WPA-PSK Encryption.
- 2 In the WPA-PSK Encryption Key box, type a pass phrase (also known as Preshared key) of your choice. The pass phrase must consist of 8 to 63 ASCII characters or 64 HEX digits.
- 3 In the WPA-PSK Version list, click the desired WPA-PSK version.

Depending on the WPA-PSK version you choose, one of the following WPA-PSK encryption will be set automatically:

- WPA: TKIP
- WPA2: AES
- WPA+WPA2: TKIP+AES

AES is not yet implemented in most clients but it is in the SpeedTouch[™] because it will be the future security standard.

4 Click Apply to immediately apply your changes.

speed**touch**

5 Configure your wireless client(s) with the same settings.

Access control on the SpeedTouch™ The following modes are available:

- New stations are allowed (automatically): All New stations can access the SpeedTouch™ WLAN.
- New stations are allowed (via registration): Only allowed stations in the Access Control List (ACL) have access. You can add new stations via registration. For more information, see " Allowing new wireless" on page 94
- New stations are not allowed: Only allowed stations in the Access Control List (ACL) have access.

Allowing new wireless If you selected New stations are allowed (via registration) or in the New stations are not allowed list, wireless clients have to be added manually. Proceed as follows: 1 In the Home Network menu, click Devices.

2 In the Pick a task list, click Search for wireless devices.

The SpeedTouch[™] searches for new wireless stations that use the encryption key of the SpeedTouch[™] Access Point.

The SpeedTouch[™] takes you to the **Home Network**. The new station will be shown next to the name of the SpeedTouch[™] WLAN.



To view the device settings, click the name of the new station. For more Information, see "5.6.4 Wireless Device Settings" on page 90.



5.6.6 Configuring WDS


Availability	This page is only available on SpeedTouch™ devices equipped with a wireless access point.
What is WDS	The Wireless Distribution System (WDS) allows you to extend the range of your wireless network by introducing one or more WDS-enabled devices into your wireless network.
	You can only establish WDS links with WDS-enabled devices.
Configuring WDS	Proceed as follows to access the WDS pages on the SpeedTouch™:
	1 In the left menu, click Home Network.
	2 Under Wireless , click the Access Point you want to configure for WDS.
	The Access Point names have the following format: "WLAN: " + Network Name, for example "WLAN: SpeedTouch123456.
	3 Click Configure.
	4 In the Pick a task list, click Configure WDS .
Establishing a WDS	Proceed as follows:
connection	1 In the Pick a task list, click Scan for wireless Access Points.
	The SpeedTouch™ warns you that all associated stations will lose connectivity for a few seconds.
	2 Click OK.
	The SpeedTouch™ lists the results in the Accessible Access Points table.
	3 Select the Access Point to which you want to establish a WDS connection.
	4 Click Apply.
	5 Configure this Access Point with:
	The same WEP key if WEP is enabled.
	The same fixed channel.



5.6.7 Interfaces

Interfaces overview

The **Interfaces** page gives you an overview of the interfaces used on your SpeedTouchTM. If you want to know more about the network settings of a specific interface, click the name of the interface you want to view.

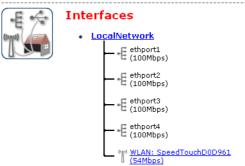



5.6.8 Interface Settings

Interface - LocalNetwork Image: Second Secon	Overview	The Overview page gives you an overview of the current interface settings.				
Interface Group: Late Auto-19: Disabled Jube-19: Disabled Use DHCP Server: Enabled IP Addresses IP Address/Nask IP Deols DHCP Pools DHCP Pools DHCP Pools DHCP Pools DHCP Pool Name Address settings of the SpeedTouch™. 6 Change the IP address settings of the SpeedTouch™. Image: Configure Change the IP address settings of the SpeedTouch™. Image: Configure Before changing the DHCP pools, make sure that at least one IP address of the SpeedTouch™ uses the same subnet as the IP addresses in the DHCP pools. Image: Configure Dudder SpeedTouch™ uses the same subnet as the IP addresses in the DHCP pools. Assigning a new P addresses, proceed as follows: 1 Type the IP addresses of your choice (for example 192.168.1.1) in the left text box. Image: Configure Page subnet mask (for example 255.255.255.0) in the right text box.		E	Interface - Loca	INetwork .		-
 • TCP/IP Configuration Auto-IP: Disabled Use DHCP Server: Enabled • <u>IP Addresses</u> P Addresses P Addresses P Addresses P Addresses DHCP Pools DHCP Pools DHCP Pool Name Address Range <u>Gateway</u> Gateway UAU_private 192.166.1.254 Static Static Outprease Configure The Configure page allows you to: Configure Change the IP address settings of the SpeedTouch™. Change the DHCP IP address pool settings. Outprease Outprease DHCP pools Defore changing the DHCP pools, make sure that at least one IP address of the SpeedTouch™ uses the same subnet as the IP addresses in the DHCP pools. Assigning a new IP Under IP Addresses, proceed as follows: 1 Type the IP address of your choice (for example 192.168.1.1) in the left text box. 2 Type subnet mask (for example 255.255.255.0) in the right text box.		(upu)	 Interface Information 	ation		
Auto-IP: Disabled Use DHCP Server: Enabled • IP Addressses Type 10.0.0.138/24 Static 102.168.1.254/24 Static • DHCP Pools DHCP Pools DHCP Pool Name Address Range DHCP Pool Name Address Static Other Pool Name Address Range DHCP Pool Name Address Static Disabled Image: Static Static Configure Decomposition Before changing the DHCP pools, make sure that at least one IP address of the SpeedTouch TM uses the same subnet as the IP addresses in the DHCP pools. Assigning a new IP address to the SpeedTouch TM Static SpeedTouch TM Image: Static In Type the IP address of your choice (for example 192.168.1.1) in the left text box. <tr< td=""><td></td><td></td><td>Interface Group:</td><td>lan</td><td></td><td></td></tr<>			Interface Group:	lan		
Use DHCP Server: Enabled • IP Addresses IP Address/Nask Type 100.0130/24 Static 192.168.1.254/2 Static 0.0130/24 Static 192.168.1.254/2 Static 0.0130/24 Static 192.168.1.254/2 Static 0.0130/24 Static 192.168.1.254/2 Static 0.0130/24 Static 192.168.1.254/2 Static 0.0140/24 Static 192.168.1.254/2 Static 0.0140/24 Static 192.168.1.253 192.168.1.254 DEPCP Pools DHCP Pools Gateway LM_private 192.168.1.64 - 192.168.1.253 192.168.1.254 Static 100 Change the IP address settings of the SpeedTouch TM . 100 Change the DHCP IP address pool settings. 100 Before changing the DHCP pools, make sure that at least one IP address of the SpeedTouch TM uses the same subnet as the IP addresses in the DHCP pools. Assigning a new IP address to the SpeedTouch TM . 1 100 Type the IP address			 TCP/IP Configura 	tion		
 P Addresses P Addresses P Addresses P Addresses 10.0.0138/24 192.168.1.254/24 Static Static DHCP Pools <u>DHCP Pool Name Address Range Gateway</u> <u>LN_private 192.168.1.253 192.168.1.254</u> Configure P Configure page allows you to: Change the IP address settings of the SpeedTouch™. Change the DHCP IP address pool settings. Change the DHCP IP address pool settings. Mere Changing the DHCP pools, make sure that at least one IP address of the SpeedTouch™ uses the same subnet as the IP addresses in the DHCP pools. Assigning a new IP addresses, proceed as follows: 1 SpeedTouch™ 1 Type the IP address of your choice (for example 192.168.1.1) in the left text box. 2 Type subnet mask (for example 255.255.0) in the right text box.						
IP Address/Mask Type 10.0.0.136/24 Static 192.168.1.254/24 Static 192.168.1.254/24 Static DHCP Pools DHCP Pools DHCP Pool Name Address Range Gateway LAN_private 192.168.1.64 + 192.168.1.253 192.168.1.254 Configure The Configure page allows you to: Change the IP address settings of the SpeedTouch™. Change the DHCP IP address pool settings. Image: the DHCP IP address of the SpeedTouch™. Change the DHCP IP address pool settings. Image: the DHCP pools. Image: the IP address of your choice (for example 192.168.1.1) in the left text box. Image: the IP address of your choice (for example 192.168.1.1) in the left text box. Image: the IP address of your choice (for example 192.168.1.1) in the left text box.			Use DHCP Server:	Enabled		
10.0.0.138/24 Static 192.168.1.254/24 Static DHCP Pools DHCP Pool Name Address Range Gateway LAN_private 192.168.1.64 - 192.168.1.253 Configure The Configure page allows you to: • Change the IP address settings of the SpeedTouch™. • Change the DHCP IP address pool settings. • Before changing the DHCP pools, make sure that at least one IP address of the SpeedTouch™ uses the same subnet as the IP addresses in the DHCP pools. Assigning a new IP address to the SpeedTouch™ Under IP Addresses, proceed as follows: 1 Type the IP address of your choice (for example 192.168.1.1) in the left text box. 2 Type subnet mask (for example 255.255.255.0) in the right text box.						
192.168.1.254/24 Static DHCP Pools DHCP Pool Name Address Range Gateway LNN_private 192.168.1.64 - 192.168.1.253 192.168.1.254 Configure The Configure page allows you to: • Change the IP address settings of the SpeedTouch™. • Change the DHCP IP address pool settings. • Change the DHCP IP address pool settings. • Other Pools Defore changing the DHCP pools, make sure that at least one IP addresses of the SpeedTouch™ uses the same subnet as the IP addresses in the DHCP pools. Assigning a new IP address to the SpeedTouch™ address to the SpeedTouch™ SpeedTouch™ 2 Type the IP address of your choice (for example 192.168.1.1) in the left text box.						
 DHCP Pools <u>DHCP Pool Name Address Range Gateway</u> <u>LAN_private 192.168.1.64 - 192.168.1.253</u> 192.168.1.254 Configure The Configure page allows you to: Change the IP address settings of the SpeedTouch[™]. Change the DHCP IP address pool settings. Change the DHCP IP address pool settings. Change the DHCP IP address pool settings. Change the DHCP IP address pool settings. Change the DHCP Pools, make sure that at least one IP address of the SpeedTouch[™] uses the same subnet as the IP addresses in the DHCP pools. Assigning a new IP addresses, proceed as follows: Type the IP address of your choice (for example 192.168.1.1) in the left text box. Type subnet mask (for example 255.255.0) in the right text box. 						
DHCP Pool Name Address Range Gateway LAN_private 192.168.1.64 - 192.168.1.253 192.168.1.254 Configure The Configure page allows you to: . . Change the IP address settings of the SpeedTouch™. . Change the DHCP IP address pool settings. . . Before changing the DHCP pools, make sure that at least one IP address of the SpeedTouch™ uses the same subnet as the IP addresses in the DHCP pools. Assigning a new IP address to the SpeedTouch™ Under IP Addresses, proceed as follows: 1 Type the IP address of your choice (for example 192.168.1.1) in the left text box. 2 Type subnet mask (for example 255.255.0) in the right text box.			192,100,1,234/24		Statuc	
LM_private 192.168.1.64 - 192.168.1.253 192.168.1.254 Configure The Configure page allows you to: . . Change the IP address settings of the SpeedTouch™. . Change the DHCP IP address pool settings. . Defore changing the DHCP pools, make sure that at least one IP address of the SpeedTouch™ uses the same subnet as the IP addresses in the DHCP pools. Assigning a new IP address to the SpeedTouch™ Under IP Addresses, proceed as follows: 1 Type the IP address of your choice (for example 192.168.1.1) in the left text box. 2 Type subnet mask (for example 255.255.255.0) in the right text box.						
Configure The Configure page allows you to: • Change the IP address settings of the SpeedTouch™. • Change the DHCP IP address pool settings. • Change the DHCP IP address pool settings. • Operation of the SpeedTouch™ uses the same subnet as the IP addresses of the SpeedTouch™ uses the same subnet as the IP addresses in the DHCP pools. Assigning a new IP address to the SpeedTouch™ • Under IP Addresses, proceed as follows: • Type the IP address of your choice (for example 192.168.1.1) in the left text box. • Type subnet mask (for example 255.255.255.0) in the right text box.				-		
 Change the IP address settings of the SpeedTouch™. Change the DHCP IP address pool settings. Change the DHCP IP address pool settings. Before changing the DHCP pools, make sure that at least one IP address of the SpeedTouch™ uses the same subnet as the IP addresses in the DHCP pools. Assigning a new IP address to the SpeedTouch™. Under IP Addresses, proceed as follows: Type the IP address of your choice (for example 192.168.1.1) in the left text box. Type subnet mask (for example 255.255.255.0) in the right text box. 			private	192,100,1,04 - 192,100,1,233	192,100,1,204	
 Change the IP address settings of the SpeedTouch™. Change the DHCP IP address pool settings. Change the DHCP IP address pool settings. Before changing the DHCP pools, make sure that at least one IP address of the SpeedTouch™ uses the same subnet as the IP addresses in the DHCP pools. Assigning a new IP address to the SpeedTouch™. Under IP Addresses, proceed as follows: Type the IP address of your choice (for example 192.168.1.1) in the left text box. Type subnet mask (for example 255.255.255.0) in the right text box. 						
 Change the DHCP IP address pool settings. Change the DHCP IP address pool settings. Before changing the DHCP pools, make sure that at least one IP address of the SpeedTouch™ uses the same subnet as the IP addresses in the DHCP pools. Assigning a new IP address to the SpeedTouch™ Under IP Addresses, proceed as follows: Type the IP address of your choice (for example 192.168.1.1) in the left text box. Type subnet mask (for example 255.255.255.0) in the right text box. 	Configure	The Confi	gure page allows you	u to:		
Image: Constraint of the second stress o		Char	nge the IP address se	ttings of the SpeedToud	:h™.	
Image: Constraint of the second stress o		Char	nge the DHCP IP addu	ress pool settings.		
Assigning a new IP address to the SpeedTouch™ uses the same subnet as the IP addresses in the DHCP pools. Under IP Addresses, proceed as follows: 1 Type the IP address of your choice (for example 192.168.1.1) in the left text box. 2 Type subnet mask (for example 255.255.255.0) in the right text box.			0		sura that at loast	one IP
Assigning a new IP address to the SpeedTouch™ Under IP Addresses, proceed as follows: 1 Type the IP address of your choice (for example 192.168.1.1) in the left text box. 2 Type subnet mask (for example 255.255.255.0) in the right text box.		- CI)				
Assigning a new IP address to the SpeedTouch™ Under IP Addresses, proceed as follows: 1 Type the IP address of your choice (for example 192.168.1.1) in the left text box. 2 Type subnet mask (for example 255.255.255.0) in the right text box.						
address to the SpeedTouch™1Type the IP address of your choice (for example 192.168.1.1) in the left text box.2Type subnet mask (for example 255.255.255.0) in the right text box.						
address to the SpeedTouch™1Type the IP address of your choice (for example 192.168.1.1) in the left text box.2Type subnet mask (for example 255.255.255.0) in the right text box.						
SpeedTouch™Type the iP address of your choice (for example 192, 166, 1, 1) in the left text box.2Type subnet mask (for example 255, 255, 255, 0) in the right text box.	u	Under IP /	Addresses, proceed a	as follows:		
		• · · , p c	the IP address of yo	ur choice (for example	192.168.1.1) in th	ne left text
3 Click Add.		2 Type	subnet mask (for ex	ample 255.255.255.0) in	the right text be	ox.
		3 Click	Add.		-	
Network devices using the same subnet mask can now access the		Netv	vork devices using th	e same subnet mask ca	n now access th	е

speed**touch**™

Network devices using the same subnet mask can now access the SpeedTouchTM using this IP address.

5.6.9 DHCP Pool

DHCP Pool page

On the **DHCP Pool** page, you can create/change a DHCP pool.

Accessing the DHCP Pool page Proceed as follows:

- 1 In the Home Network menu, click Interfaces.
- 2 Click the name of the interface which DHCP pool settings you want to change.
- 3 Click Configure.
- 4 Under DHCP Pools, click:
 - Add to add a new DCHP pool.
 - Edit to edit an existing DHCP pool.
 - **Delete** to delete an existing DHCP pool.
 - This link will only be shown if there are more than one DHCP pools.

The DHCP Pool page appears.

Your_DHCP_pool

	E •4	A.
	Ε7	
(tens)		
1	" (I	
	<u> </u>	

• Pool Configuration

Configure parameters for your DHCP pool.

Interface:	LocalNetwork
Start Address:	192.168.1.10
End Address:	192.168.1.20
Subnet Mask:	255.255.255.0
Server:	192.168.1.254
Gateway:	192.168.1.254
Primary DNS:	192.168.1.254
Secundary DNS:	0.0.0
Primary WINS:	0.0.0
Secondary WINS:	0.0.0
Lease Time:	Infinite
Always give same address t DHCP clients:	N 0

Apply Cancel



Components of the DHCP Pool page

- The following settings are available for configuration:
- Interface:
 - The SpeedTouch™ interface to which the DHCP pool applies.
- Start Address:
 - The start IP address of the DHCP server's address pool.
- End Address:
 - The end IP address of the DHCP server's address pool.

Both the start and end IP address define the IP address range used by the DHCP server to assign leases.

Subnet Mask:

F

The subnet mask of the DHCP server's address pool.

- Server: The SpeedTouch™ IP address used as DHCP server address.
- Gateway: The IP address that will be assigned to the DHCP clients as their default gateway.
- Primary DNS:
 - The IP address of the primary DNS server.
- Secondary DNS: The IP address of the secondary DNS server.
- Primary WINS:

The IP address of the primary WINS server.

- Secondary WINS: The IP address of the secondary WINS server.
- Lease Time:

The time for which the DHCP client is allowed to use the assigned IP address:

If you select **Always give same address to DHCP clients**, the lease time will be automatically set to **Infinite**.

Always give same address to DHCP clients:

speed**touch**™

Select this check box if you always want to use the same IP address for the DHCP clients.



6 Troubleshooting

Introduction This chapter suggest solutions for problems you may encounter while installing or configuring y our SpeedTouch[™].

If the suggestions do not resolve the problem, look at the support pages on http:// www.speedtouch.com/support or contact your service provider.

For Internet connection troubleshooting, refer to the provided Installation and Setup Guide.

Topics In this chapter:

► General SpeedTouchTM Troubleshooting

speed**touch**™

- ▶ UPnP[™] on Windows XP Systems
- Voice over IP Troubleshooting
- Reset to Factory Defaults

6.1 General SpeedTouch™ Troubleshooting

SpeedTouch™ does not work	 If none of the LEDs light up, make sure that: The SpeedTouch[™] is plugged into a power socket outlet. You are using the correct power supply for your SpeedTouch[™] device. The power requirements for your SpeedTouch[™] are clearly indicated on the identification label on the bottom of the SpeedTouch[™].
SpeedTouch™ unreachable	The SpeedTouch™ is turned on via the push button at the back panel. If your SpeedTouch™ is cannot be reached due to misconfiguration, you might consider a hardware reset to factory defaults as described in "6.4 Reset to Factory Defaults" on page 108.
	However, note that resetting the SpeedTouch™ to its factory settings will revoke all the changes you made to the configuration.
Poor SpeedTouch™ performance	Make sure that the SpeedTouch™ is installed and configured as instructed in the Installation and Setup Guide or as instructed by the Service Provider.



6.1.1 Wired Ethernet Troubleshooting

LANLEDdoesnotlightup

Make sure that:

- The LAN cable is securely connected to the 10/100Base-T port.
- You are using the correct cable type for your Ethernet equipment, that is UTP CAT5 with RJ-45 connectors.



6.1.2 Wireless Ethernet Troubleshooting

Not able to connect	Check the following:
wireless clients	 If registration is enabled, you must press the 'Association' button to register the wireless client or search for wireless devices via the embedded Web pages.
	Make sure the SpeedTouch [™] Association Control List is not locked. You can check this on the Web pages. On the Wireless Access Point settings, make sure New stations are not allowed is NOT selected.
No wireless connectivity	Make sure that:
	Both the wireless client adapter and the SpeedTouch [™] are allowed to connect through wireless channels as defined for local regulatory domain.
	 The WLAN client is configured for the correct wireless settings (SSID, security settings).
	Check the signal strength, indicated by the wireless client manager. If the signal is low, try to place the SpeedTouch™ or to direct the SpeedTouch™'s antenna for optimal performance.
	Make sure that the wireless client adapter is enabled (message like "radio on").
Poor wireless	Check the following:
connectivity or reach	 Choose automatic channel selection or carefully select a radio channel that does not interfere with other radio channels.
	Make sure both the WLAN client adapter and the SpeedTouch [™] are allowed to connect through wireless channels as defined for local regulatory domain.
	Check the location of the SpeedTouch™ in the building.

Check the signal strength, indicated by the wireless client manager. If the signal is low, try to place the SpeedTouch[™] or to direct the SpeedTouch[™]'s antenna for optimal performance.



6.2 UPnP™ on Windows XP Systems

SpeedTouch™ not	Che	ck the following:
detected by UPnP™ or IGD Control Client	•	Make sure the UPnP™ and Internet Gateway Device Control Client Networking components are added to your Windows XP system.
	•	Your computer doesn't support UPnP™ if you run an operating system other than Windows XP and Windows Millennium.
	•	Make sure that UPnP™ is not disabled in the SpeedTouch™ Web page; see "5.5.3 Game & Application Sharing″ on page 65.
Adding UPnP™		ou are running Microsoft Windows XP, it is recommended to add the UPnP™ aponent to your system.
	Pro	ceed as follows:
	1	In the Start menu, click (Settings >) Control Panel.
		The Control Pane l window appears.
	2	Click Add or Remove Programs.
		The Add or Remove Programs window appears.
	3	Click Add/Remove Windows Components.
	4	In the Windows Components Wizard, select Networking Services in the
		Components list and click Details. Vindows Components Vindows Components To add or remove a component of Windows XP. To add or remove a component, click the checkbox. A shaded box means that only besit. To add or remove a component, click the checkbox. A shaded box means that only besit. To add or remove a component, click the checkbox. A shaded box means that only besit. To add or remove a component, click the checkbox. A shaded box means that only besit. To add or remove a component, will be installed. To see what's included in a component, click. Components: Com
	5	In the Networking Services window, select Universal Plug and Play or UPnP User Interface and click OK.
		Networking Services Image: Component of the component, click the check box. A shaded box means that only part of the component what's included in a component, click Details. Subgromponents of Networking Services: Image: Component will be installed. To see what's included in a component, click Details. Subgromponents of Networking Services: Image: Component will be installed. To see what's included in a component, click Details. Subgromponents of Networking Services: Image: Component will be installed. To see what's included in a component, click Details. Subgromponents of Networking Services: Image: Component will be installed. To see what's included in a component, click Details. Subgromponents of Networking Services: Image: Component will be installed. To see what's included in a component, click Details. Subgromponents of Networking Services: Image: Component will be installed. To see what's included in a component, click Details. Subgromponents of Networking Services: Image: Component will be installed. To see what's included in a component will be installed. Description: Allows your computer to discover and control Universal Plug and Play Description: Allows your computer to discover and control Universal Plug and Play

6 Click Next to start the installation and follow the instructions in the Windows Components Wizard.

OK Cancel

7 At the end of the procedure the wizard informs you that the installation was successful. Click **Finish** to quit.

Total disk space required: Space available on disk: 0.0 MB 2387.9 MB

Adding IGD Discovery and Control

Your Windows XP system is able to discover and control Internet Gateway Devices (IGD), like the SpeedTouch[™] on your local network. Therefore it is recommended to add the IGD Discovery and Control client to your system.

Proceed as follows:

- 1 On the Windows taskbar, click **Start**.
- 2 Select (Settings >) Control Panel > Add or Remove Programs.
- 3 In the Add or Remove Programs window, click Add/Remove Windows Components.

The Windows Components Wizard appears:

indows Components		8
You can add or remove comp	ionents of Windows XP.	
To add or remove a compone part of the component will be Details.		
Components:		
🗹 🎀 MSN Explorer		13.5 MB 🔼
🗹 🚼 Networking Services		0.3 MB
Band Street Price and Street Price and Street Price and Street Price and Street Price	d Print Services	0.0 MB
		оомв 📃
🗹 🔛 Update Root Certifica	tes	0.01110
		~
Description: Contains a varie		~
		~

- 4 Select Networking Services in the Components list and click Details.
- 5 In the Networking Services window, Select Internet Gateway Device Discovery and Control Client and click OK.

Networking Services	
To add or remove a component, click the check box. A shaded box me of the component will be installed. To see what's included in a compone Subgomponents of Networking Services:	
Section 2 Sector	0.0 MB 0.0 MB 0.0 MB 0.0 MB 0.2 MB
Description: Allows you to find and control Internet connection sharing software that uses UP:NP(TM). Total disk space required: 56.5 MB Space available on disk: 28541.4 MB OK	g hardware and Details Cancel

- 6 Click Next to start the installation and follow the instructions in the Windows Components Wizard.
- 7 At the end of the procedure the wizard informs you that the installation was successful. Click **Finish** to quit.



6.3 Voice over IP Troubleshooting

Introduction	If you cannot establish a phone call via your SpeedTouch™, try the suggestions below.
Calling over VolP	 If you have problems calling via VoIP, check whether: Your telephone is correctly connected to the SpeedTouch[™]. Your telephone is working on the PSTN network: Connect your phone directly to PSTN. Try to make a phone call. The call agent's IP address and call agent's port number are configured correctly. The PWR, PPP and VoIP Ready LEDs are on. As soon as the VoIP Ready LED turns on, you will hear a click, indicating the switch from PSTN to VoIP.
Calling over PSTN	 If you have problems calling via the regular phone line, check whether: Your telephone is correctly connected to the SpeedTouch[™]. If the SpeedTouch[™] is turned off, phone calls are always routed over PSTN. Your telephone is working on the PSTN network: Connect your phone directly to PSTN. Try to make a phone call. The Forced FXO service is activated, or whether your service provider requested you to dial an extra prefix for making calls via PSTN.

speed**touch**™

If VoIP is enabled (VoIP Ready LED is on), and when making a forced FXO call, you will hear a click, indicating the switch from VoIP to PSTN.

6.4 Reset to Factory Defaults

Resetting your SpeedTouch™ You might consider a reset to factory defaults as described below.

Be aware that a reset to factory defaults will revoke all configurational changes you made to the SpeedTouch™.

You can choose between:

- Software reset
- Hardware reset

A reset to factory default settings deletes the configuration profile settings. Therefore, after the reset, a reconfiguration of your SpeedTouch[™] will be needed.

Also your WLAN clients will have to be re-associated, as described in "2.2.2 Connecting Wireless Clients for the First Time" on page 20.

Software reset Proceed as follows:

- 1 Go to the SpeedTouch[™] Web pages.
- 2 In the menu, select **SpeedTouch > Configuration**.
- 3 In the Pick a task list, click Reset my SpeedTouch to default settings. The SpeedTouch™ restarts.
- 4 The SpeedTouch[™] returns to the SpeedTouch[™] home page (unless the IP address of your computer is not in the same subnet as the default IP address of the SpeedTouch[™], being 192.168.1.254).

Hardware reset

Proceed as follows:


- 1 Make sure the SpeedTouch[™] is turned on.
- 2 Use a pen or an unfolded paperclip to push the recessed reset button on the back panel. The reset button is marked with a red circle. Push it until the power LED lights red this will take about 7 seconds.



- **3** Release the reset button.
- 4 The SpeedTouch[™] restarts.





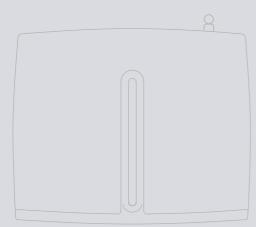

Need more help? Additional help is available online at www.speedtouch.com

