



PROLiNK WNR1009 and WNR1010 Universal Repeater Setup Guide


- **Connect a LAN cable from any LAN port from the WNR1009/1010 to your LAN Port in your PC.**
- 1) Open IE and access <http://192.168.123.254> and enter **admin** as username and **password** as password.
 - 2) Go to Wireless Settings > Basic Settings > Mode: Change to “**Client**” > Apply Changes > Reboot Later

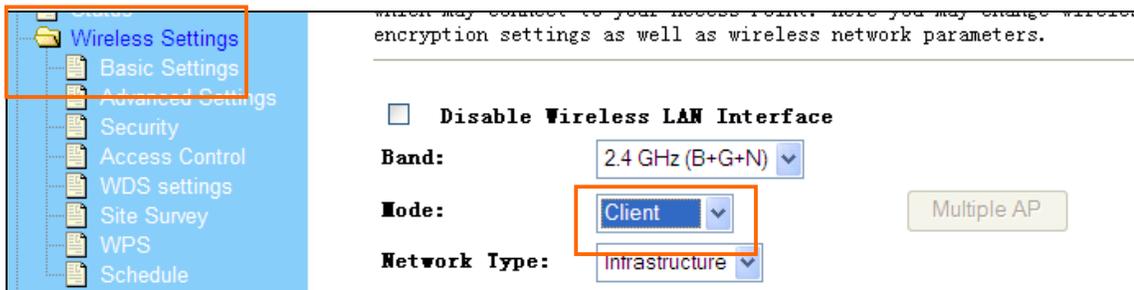

- 3) Go to Site Survey > Click “**Site Survey**” > It will scan the list of wireless AP available > Select your wireless AP SSID e.g. PROLiNK_H5004N > Next

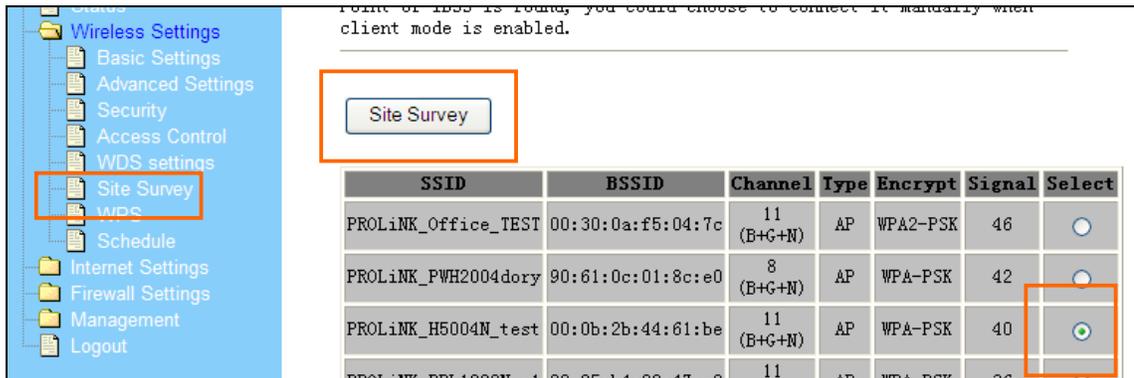


- 4) If your wireless AP is secured with wireless encryption, you need to key in the password when prompted, then click “Connect”.

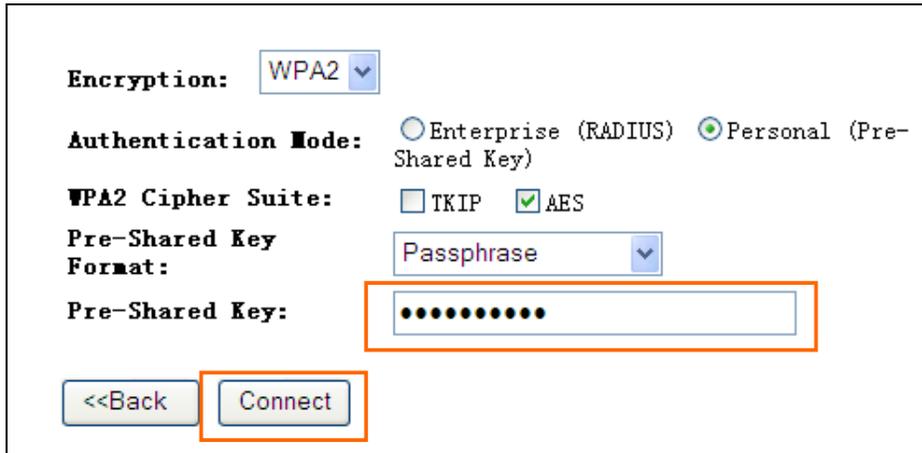


The screenshot shows a configuration window for wireless security. The 'Encryption' dropdown is set to 'WPA2'. Under 'Authentication Mode', the 'Personal (Pre-Shared Key)' radio button is selected. The 'WPA2 Cipher Suite' has 'TKIP' unchecked and 'AES' checked. The 'Pre-Shared Key Format' dropdown is set to 'Passphrase'. The 'Pre-Shared Key' text field contains ten black dots and is highlighted with an orange box. At the bottom, the '<<Back' and 'Connect' buttons are also highlighted with orange boxes.

It will show “Connect successfully” if the password entered is correct. Click “OK”

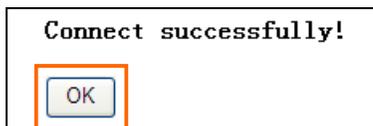


The screenshot shows a small dialog box with the text 'Connect successfully!' and a single 'OK' button highlighted with an orange box.

- 5) Go back to Basic settings > You will see the SSID had been changed to your connected wireless AP SSID > Tick “**Enable Universal Repeater Mode**” > You can change the SSID of Extended Interface – this is the SSID you will see for your WNR1009/1010 when in repeater mode. Click “**Apply Changes**” > Reboot Later

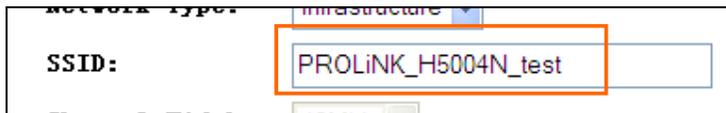


The screenshot shows a configuration window with the 'SSID' field highlighted by an orange box. The text inside the field is 'PROLiNK_H5004N_test'.

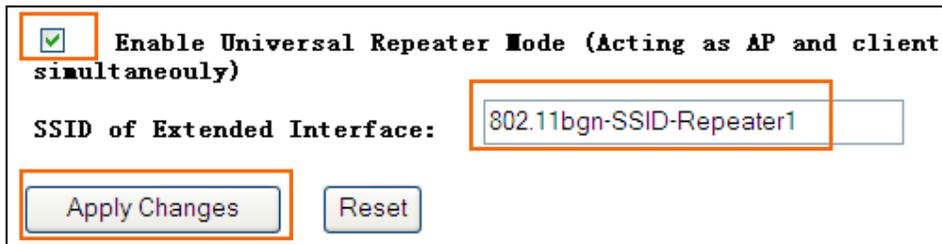


The screenshot shows a configuration window with the 'Enable Universal Repeater Mode (Acting as AP and client simultaneously)' checkbox checked and highlighted with an orange box. Below it, the 'SSID of Extended Interface' field is highlighted with an orange box and contains the text '802.11bgn-SSID-Repeater1'. At the bottom, the 'Apply Changes' and 'Reset' buttons are also highlighted with orange boxes.

- To setup wireless security when in repeater mode, go to Security > Select SSID: make sure the **Repeater AP** is selected > Select **WPA(TKIP)** or **WPA2(AES)** as the Encryption Mode. Pre-Shared Key Format: Passphrase. Enter your desired password in Pre-Shared Key e.g. testing 123. The Pass Phrase entered must be a minimum of 8 characters. Click **Apply Changes** > Reboot Later

** WPA2, AES provides the best security. But not all wireless adaptors in notebook or PC support it. *Please check with your wireless adaptor manufacturer or notebook manufacturer if their product support WPS2-PSK, AES.* If not sure, please choose WPA-PSK, AES or TKIP.

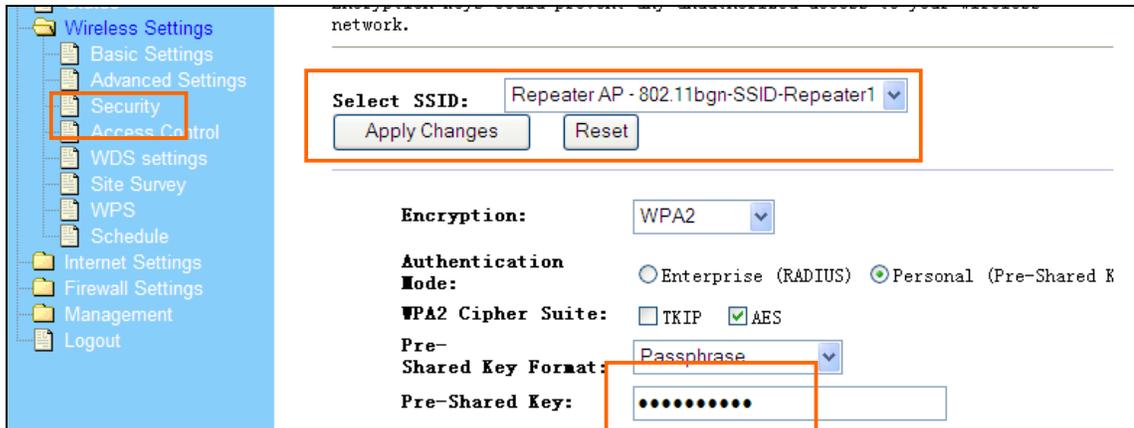

- Go to Internet Settings > LAN Interface > Change the IP address to be in the same range of your wireless AP e.g. if my wireless AP is 192.168.1.1, then I will input the IP Address to be in range of 192.168.1.x > Default Gateway: the IP address of your wireless AP e.g. 192.168.1.1 > DHCP Client Range: change the range to be in the same subnet range e.g. 192.168.1.100 – 192.168.1.200 > **Apply Changes** > the router will reboot now

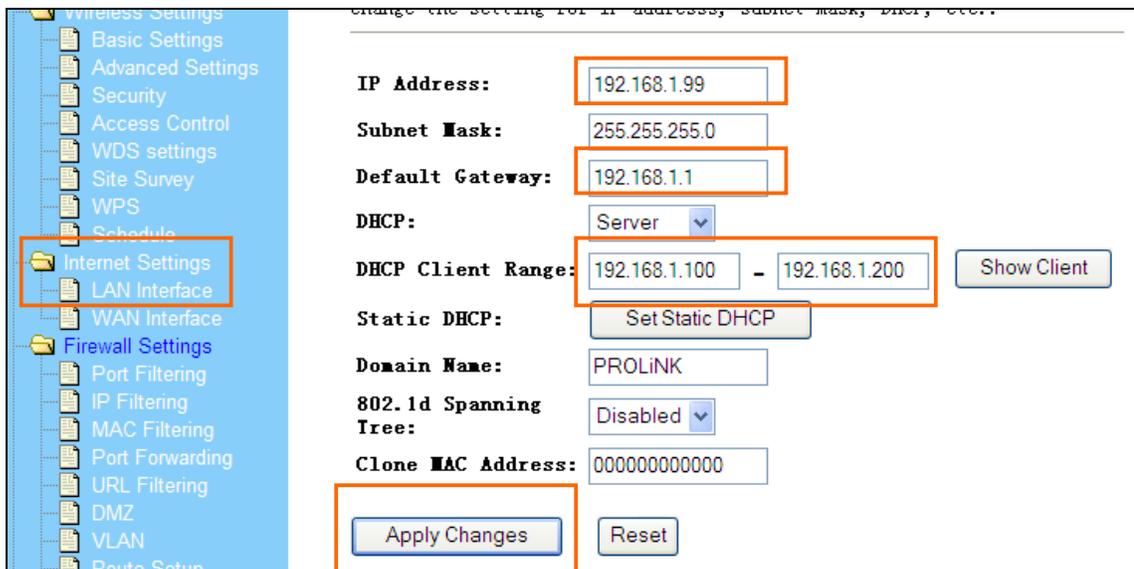

That's it, your Universal Repeater had been setup!