

ZyXEL® PK5000Z
How to configure remote management



Use this document if:

- You want to configure remote management

This document assumes:

- You are using the ZyXEL PK5000Z modem


1. Open a web browser and type 192.168.0.1 in the address bar.




2. Select **Advanced Setup**.



3. Select **Remote Management**

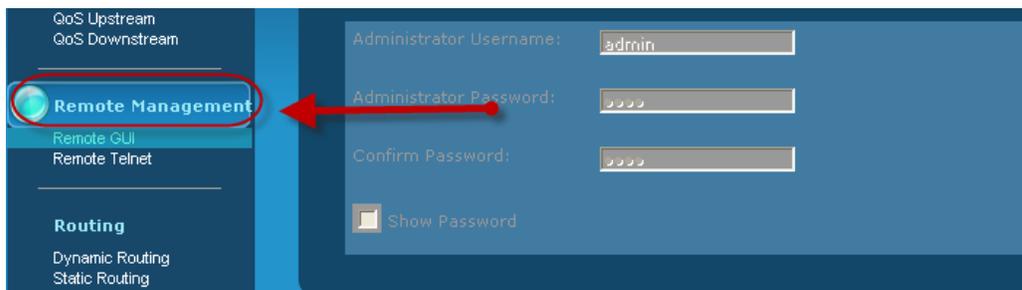

4. Select the **remote GUI state**. If you are **disabling** this feature, select the apply button. If you **enabling** this option, proceed to the next step.

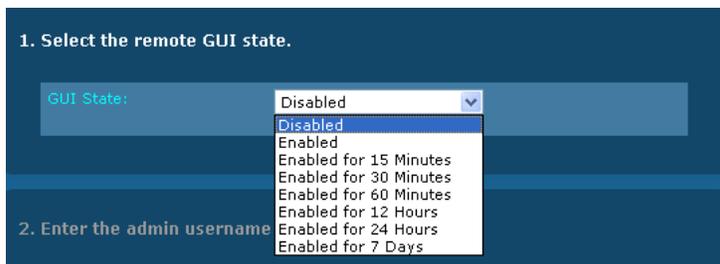

5. Enter the **Administrator Username** and **Administrator Password**. Write these down, you will use them to access your modem in the future.

2. Enter the admin username and password below.

Administrator Username:	<input type="text" value="admin"/>
Administrator Password:	<input type="password" value="••••"/>
Confirm Password:	<input type="password" value="••••"/>
<input type="checkbox"/> Show Password	

6. By default, remote management is set to port 443 for HTTPS access. If port 443 has been Do not change this setting, without understanding the technical impacts.

3. Set the remote management port.

Remote GUI Port:	<input type="text" value="443"/>
------------------	----------------------------------

7. Click **Apply**. To access your modem remotely you will need to use https:// followed by the modem IP.

5. Click "Apply" to save your changes.