

# **Quick Installation Guide**

Model:BL-WR3000 300Mbps Wireless N Router

# 1.Connecting the device



Note: Please use wired network connections only to configure the Router.

Connect the WAN port on your Router to the Modem's LAN port with an Ethernet cable. (If there is no Modem, please use the incoming cable directly into the router's WAN port ).



Connect your computer to the Port labeled 1~4 on the Router with an Ethernet cable.



Plug the provided power adapter into the power jack on the back of the router and the other end to a standard electrical wall socket.





- O + Power: Solid light
   SYS: Flashing
   WPS: Flashing
  - -
- (I) + WLAN: Flashing
- 9 \* WAN:Flashing or solid light
- □~[] → LAN:Flashing or solid light if the corresponding port is connected



# 2.Configuring the device



Note: First of all, please configure your computer's IP address to automatically obtain, if not clear, please refer to FAQ3.

# 1 Login

Open your web browser,input	🔊 about:blank - Microsoft Internet Explorer				
field and press Enter.	 :A <u>d</u> dress	192.168.16.1		💌 🔁 Go	

A dialog box will prompt you for the User name and Password. Enter the default values and click OK.

User name: admin Password: admin

Click OK





# Internet Paremeters Configuration



### A Configuration for Dynamic

When you choose the Dynamic IP no change required. Click "Next" to go on the next setting.

E Configuration for Static Mode	Quick Setup         Network         Wireless         Firewall         Virtual Server         QOS
This page will then display	Quick Setup
Enter the IP address,subnet Mask, Gateway,DNS provided by your ISP Manually.	Qucik Setup       IP address       Subnet Mask       Gateway       Primary DNS Server       Control DNS Control
Click Next	Back Next Cancel Apply

Configuration for PPPOE	Quick Setup         Network         Wireless         Firewall         Virtual Server         QOS
This page will then display	Quick Setup
Enter the Access Account and Password provided by your ISP.	Qucik Setup           Access Account           Password
	Back Next Cancel Apply
Click Next	

## 3 Wireless Settings Configuration

This page will then display

	Quick Setup	Network	Wireless	Firewall	Virtual Server	QOS
Create a unique and easy-to-remember name for your wireless network. You can	Quick Set	up				
also keep default settings without the device being affected.	Quci	ik Setup Network na	ime(SSID)	B-LINK_S	90E09F	
-		Security		WPA2-PS	зк 🖌	
Coloct Coourity and M/DA Algorithms		WPAAlgori	thms	AES (	TKIP&AES	
Select Security and WPA Algorithms,	_	Key				
Suggest to choose AES .		Bac	k Next	Cancel	Apply	
Set up a wireless Key,the length is more than 8 characters.						
Click Apply						



**Note:** The basic setting for your Router is completed. You will be able to access to the Internet, if not, please refer to the **troubleshooting** 

# 3.Troubleshooting

### FAQ1: What should I do if I forget the user name and password?

(How to restore the router 's configuration to its factory default settings.)

Answer: If you forget the user name and password, the only way to solve this problem is to reset the router. Press and hold the RESET button on the rear panel for 5 to 8 seconds before releasing it.



Hold for 5 to 8 seconds

#### FAQ2: What can I do if I cannot access the Internet?

1. Check to see if all the connectors are connected well, including the telephone line (for your modem), Ethernet cables and power adapter.

2.Disconnect the Router and directly connect your computer to the Modem and try to access the Internet. If you still cannot access to the Internet, please contact your ISP or the Modem's manufacturer; otherwise, please reconnect the physical connection between your Modem, Router and the computer, then continue to follow the next step.

3.Make sure that you are connected to the Router with the computer that was originally connected to your modem, then login to the web-based management page and browse to "Network > MAC Clone", click "Clone MAC" and then click "Apply". Reboot the Router and try to access the Internet from your computer, if the problem still, please go to the next step.

- MAG	Address Clone	
	MAC Address:	44:33:4C:90:E0:98
		Clone MAC Restore
	Cancel	Apply

## FAQ3: How to configure the IP address of the computer?

#### For Windows XP OS









## For Windows XP OS

Click OK

	Internet Protocol (TCP/IP) Properties 🛛 💽 🔀
	General Alternate Configuration You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for
Select Obtain an IP address automatically	© ©btain an IP address automatically ○ Use the following IP address:
	IP address:
Select Obtain DNS server address automatically	Obtain DNS server address automatically     Use the following DNS server addresses:     Preferred DNS server:
	Alternate DNS server:
Click OK	OK Cancel

	🕹 Local Area Connection Properties 🛛 🔹 💽
	General Authentication Advanced
	Connect using:
	Realtek PCIe GBE Family Controller
	This connection uses the following items:
	AEGIS Protocol (IEEE 802.1x) v3.7.5.0      Tealtek EAPPkt Protocol
	Tritemet Protocol (TLP/IP)
	Install Uninstall Properties
	Description Transmission Control Protocol/Internet Protocol. The default wide area network protocol that provides communication across diverse interconnected networks.
	✓ Show icon in notification area when connected ✓ Notify me when this connection has limited or no connectivity
L	

### For Windows 7 OS

## Go to **Start** > **Control Panel**, you will then see the following







## For Windows 7 OS

	📱 Local Area Connection Properties 🛛 🔀
	Networking
	Connect using
	Connect using:     Restark PCIa GPE Exmits Controller
	Configure
	This connection uses the following items:
	✓ Client for Microsoft Networks ✓ ■ QoS Packet Scheduler
	☑ ➡ File and Printer Sharing for Microsoft Networks
Double-click Internet Protocol	
Version 4 (TCP/IPv4)	Link-Layer Topology Discovery Mapper I/O Driver
	Link-Layer Topology Discovery Responder
	Transmission Control Protocol/Internet Protocol. The default
	wide area network protocol that provides communication across diverse interconnected networks.
Click OK	OK Cancel
Shok OK	
	Internet Protocol Version 4 (TCP/IPv4) Properties
	Internet Protocol Version 4 (TCP/IPv4) Properties
	Internet Protocol Version 4 (TCP/IPv4) Properties
	Internet Protocol Version 4 (TCP/IPv4) Properties
Select Obtain an IP	Internet Protocol Version 4 (TCP/IPv4) Properties
Select Obtain an IP address automatically	Internet Protocol Version 4 (TCP/IPv4) Properties  General Alternate Configuration You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.
Select Obtain an IP address automatically	Internet Protocol Version 4 (TCP/IPv4) Properties           General         Alternate Configuration           You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings. <ul></ul>
Select Obtain an IP address automatically	Internet Protocol Version 4 (TCP/IPv4) Properties           General         Alternate Configuration           You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings. <ul></ul>
Select Obtain an IP address automatically	Internet Protocol Version 4 (TCP/IPv4) Properties           General         Alternate Configuration           You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings. <ul></ul>
Select Obtain an IP address automatically Select Obtain DNS server	Internet Protocol Version 4 (TCP/IPv4) Properties  General Alternate Configuration  You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.
Select Obtain an IP address automatically Select Obtain DNS server address automatically	Internet Protocol Version 4 (TCP/IPv4) Properties  General Alternate Configuration  You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.   © Detain an IP address automatically  Uge the following IP address:  LP address:  Subnet mask:  Default gateway:  O Obtain DNS server address automatically  Uge the following DNS server addresses:
Select Obtain an IP address automatically Select Obtain DNS server address automatically	Internet Protocol Version 4 (TCP/IPv4) Properties         General       Alternate Configuration         You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.            ④
Select Obtain an IP address automatically Select Obtain DNS server address automatically	Internet Protocol Version 4 (TCP/IPv4) Properties         General       Alternate Configuration         You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings. <ul> <li>Qbtain an IP address automatically</li> <li>Uge the following IP address:</li> <li>IP address:</li> <li>Subnet mask:</li> <li>Lefault gateway:</li> <li>Use the following DNS server addresses:</li> <li>Preferred DNS server:</li> <li>Alternate DNS server:</li> <li>Alternate DNS server:</li> <li>Image: Image: Imag</li></ul>
Select Obtain an IP address automatically Select Obtain DNS server address automatically	Internet Protocol Version 4 (TCP/IPv4) Properties         General       Alternate Configuration         You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.
Select Obtain an IP address automatically Select Obtain DNS server address automatically	Internet Protocol Version 4 (TCP/IPv4) Properties         General       Alternate Configuration         You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.         Image: Description of the properties         Image: Descrin of the properties         Image: Desc

## For Windows 7 OS

ĺ	📱 Local Area Connection Properties 🛛 🕰
	Networking
	Connect using:
	Realtek PCIe GBE Family Controller
	Configure This connection uses the following items:
	✓     Client for Microsoft Networks       ✓     QoS Packet Scheduler       ✓     ■ File and Printer Sharing for Microsoft Networks       ✓     → Internet Protocol Version 6 (TCP/IPv6)       ✓     → Internet Protocol Version 4 (TCP/IPv4)       ✓     → Link-Layer Topology Discovery Mapper I/O Driver       ✓     → Link-Layer Topology Discovery Responder
	Install Uninstall Properties
	Allows your computer to access resources on a Microsoft network.
Click OK	OK

### For Windows 8 OS







### For Windows 8 OS



# Double-Click Internet Protocol Version4(TCP/Ipv4)

## For Windows 8 OS

Click OK

	Internet Protocol Version 4 (TCP/IPv4) Properties
	General Alternate Configuration
	You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.
Select Obtain an IP	Detain an IP address automatically
General Alternate Configuration         You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.         Select Obtain an IP address automatically         Ogetain an IP address automatically         Ogetain DNS server         address automatically         Select Obtain DNS server address automatically         Objetain DNS server address automatically         Objetain DNS server address automatically         Outge the following DNS server addresses:         Preferred DNS server:         Alternate DNS server:         Click OK	
	IP address:
	Sybnet mask:
	Default gateway:
Select Obtain DNS server	Obtain DNS server address automatically
addreee actemationly	Use the following DNS server addresses:
	Preferred DNS server:
	Alternate DNS server:
	Validate settings upon exit Advanced
Click OK	OK Cancel
	Ethernet Properties X

Networking Connect using: Intel(R) PRO/1000 MT Network Connection	
<u>Configure</u> This connection uses the following items:	
Clernt for Microsoft Networks     GoS Packet Scheduler     GoS Packet Scheduler     GoS Packet Scheduler     Microsoft Network Adapter Multiplexor Protocol     Amicrosoft LLDP Protocol Driver     Amicrosof	~
Install Uninstall Properties Description Allows your computer to access resources on a Microsoft network.	

## SHENZHEN BILIAN ELECTRONIC CO., LTD

**LB-LINK** is the registered trademark of Shenzhen BILIAN Electronic CO.,Ltd.All the products and product names mentioned herein are the trademarks or registered trademarks of their respective holders © 2012 **LB-LINK** All Rights Reserved.