

D-Link[®] Quick Installation Guide

This product can be set up using any current web browser, i.e., Internet Explorer 6 or Netscape Navigator 7 and above.



DWL-G700AP
D-Link AirPlus™ G
802.11g Wireless
Access Point

Before You Begin

It's best to use a computer (with an Ethernet adapter) that is connected to a switch for configuring the DWL-G700AP. The default IP address for the DWL-G700AP is **192.168.0.50** with a Subnet Mask of **255.255.255.0**. You will need to assign your computer a Static IP address within the same range as the DWL-G700AP's IP address for the purpose of configuring the DWL-G700AP. **See the Appendix if you need assistance in assigning a Static IP address for your network adapter.**

Check Your Package Contents



**DWL-G700AP 802.11g Wireless
Access Point**



**CD-ROM (containing Manual and
Warranty)**



Ethernet (CAT5 UTP) Cable



7.5V 1.0A DC Power Adapter




Using a power supply
with a different voltage
rating will damage and void
the warranty of this product.

If any of the above items are missing, please contact your reseller.


1

Connecting the DWL-G700AP Wireless Access Point to Your Network

- A. First, connect the power adapter to the **receptor** at the back panel of the DWL-G700AP and then plug the other end of the power adapter to a wall outlet or power strip. The Power LED will turn **ON** to indicate proper operation.
- B. Insert one end of the cable to the **Ethernet port** on the back panel of the DWL-G700AP and the other end of the cable to an **Ethernet Broadband Router** (i.e., D-Link DI-604) or **Switch** (i.e., D-Link DES-1005D). **Note:** You also have the option of connecting the DWL-G700AP directly to the computer that will be used for configuration. The Link LED light will illuminate to indicate a proper Ethernet connection. (**Note:** The Ethernet Port on the DWL-G700AP is Auto-MDI/MDIX. Meaning you can use a straight-through or crossover-Ethernet cable to connect to the Ethernet port on the DWL-G700AP.)
- C. The DWL-G630 AirPlus G Wireless Cardbus Adapter and the DWL-G510 AirPlus G Wireless PCI Adapter will connect, out of the box, with the DWL-G700AP, using their default wireless settings. Computers with 802.11b/g wireless adapters can also connect to the DWL-G700AP.

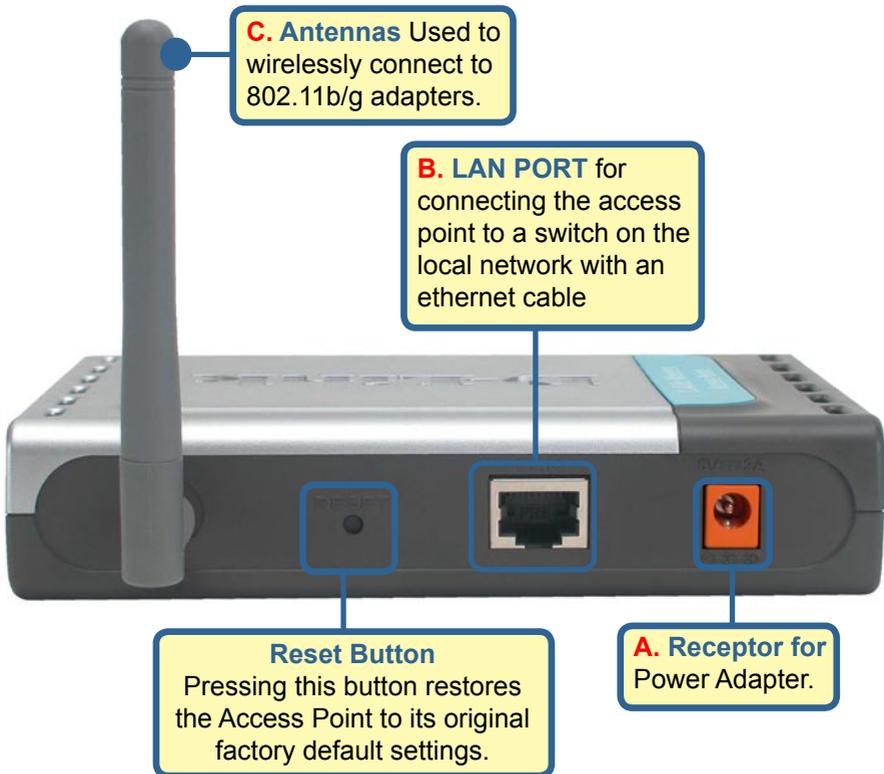

When you have completed the steps in this *Quick Installation Guide*, your connected network should look similar to this:

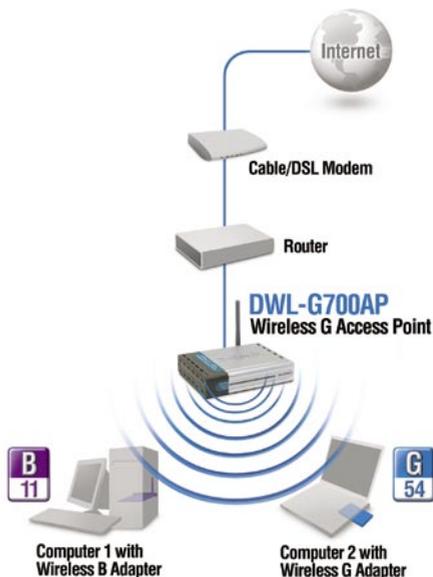

2 Using the Setup Wizard

Open your **Web browser** and type **“http://192.168.0.50”** into the URL address box. Then press the **Enter** or **Return** key.



The logon pop-up screen will appear.

Type **“admin”** for the username and leave the password field blank.




Click **OK**

2

Using The Setup Wizard (continued)

Once you have logged in, the **Home** screen will appear.

Click **Run Wizard**

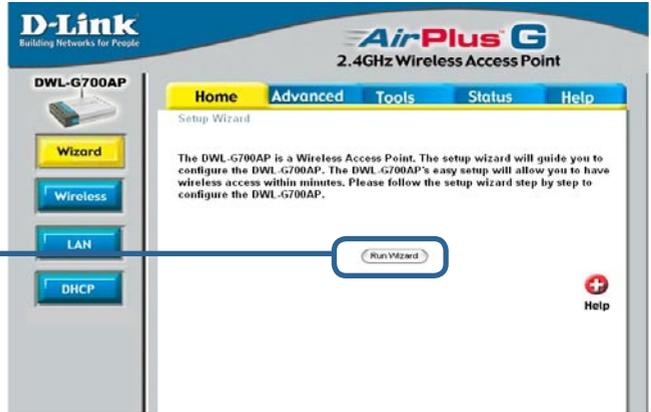

You will see the following screens.

Click **Next**



2

Using The Setup Wizard (continued)

Step 1 - Set up your new password. You have the option to establish a password.

Click **Next**



Step 2 - Wireless Setup

The default wireless settings are:

SSID = **default**

Channel = **6**

You can change these settings to match an existing wireless network.

Click **Next**



2

Using The Setup Wizard (continued)


Step 3 - Encryption

The DWL-G700AP is capable of two levels of wireless encryption 64-bit and 128-bit. **By default the encryption is disabled.** You can change the encryption settings for more secure wireless communication.




Click **Next**


Your Setup is Complete!

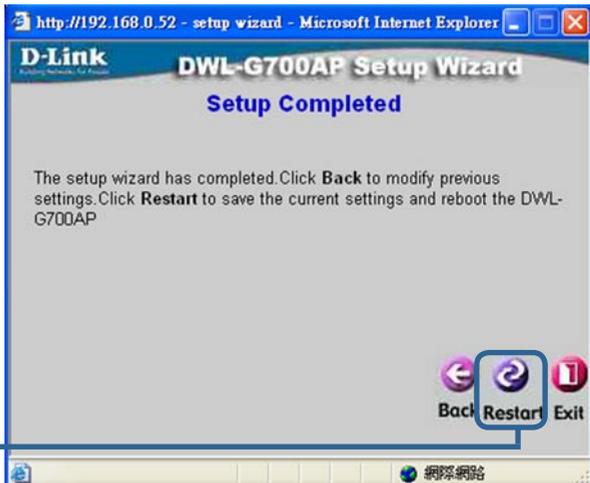

Click **Restart**

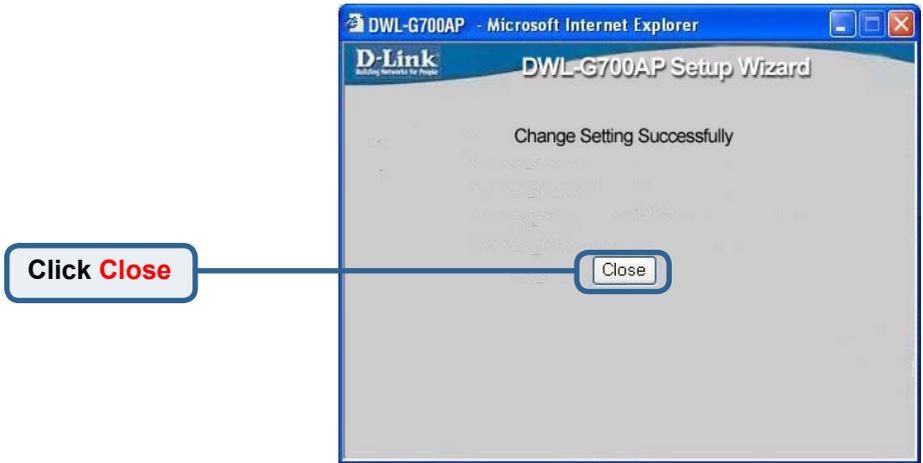

You will be returned to the **Home** tab.

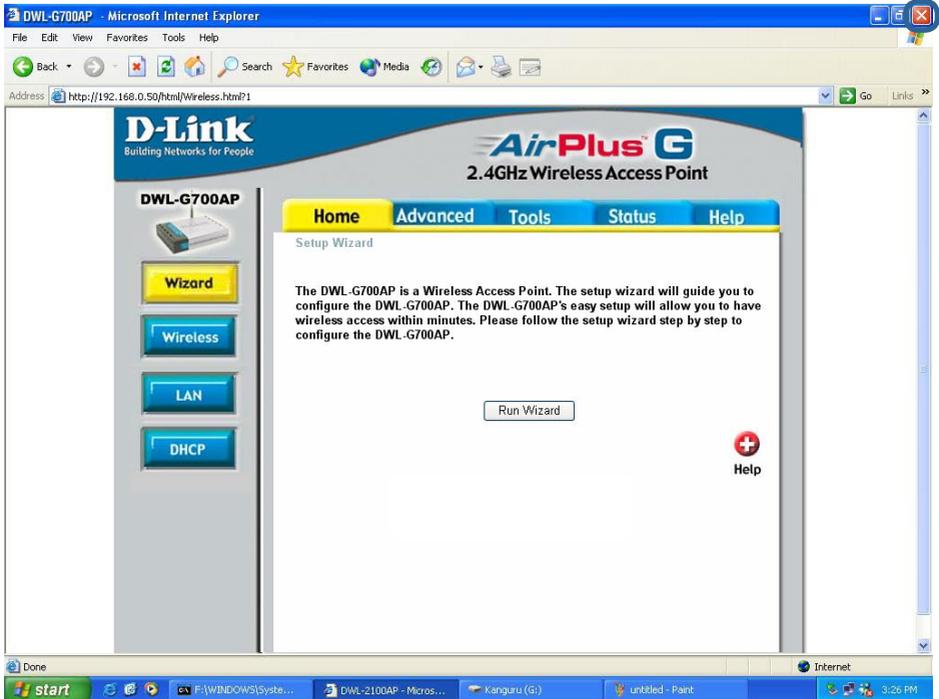


For additional settings or information, refer to the **Advanced**, **Tools**, or **Status** tabs on the web-management interface; or to the manual located on the CD-ROM.

Appendix

Assigning a Static IP Address in Windows


To assign a Static IP Address to the laptop or computer that you are using to configure the DWL-G700AP, please do the following:

Go to **Start** > Double-click on **Control Panel** > Double-click on **Network Connections** > Right-click on **Local Area Connections** > Click **Properties**

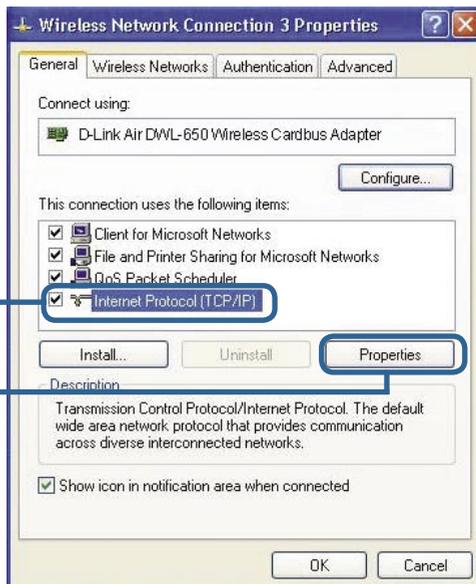

Highlight **Internet Protocol (TCP/IP)**

Click **Properties**

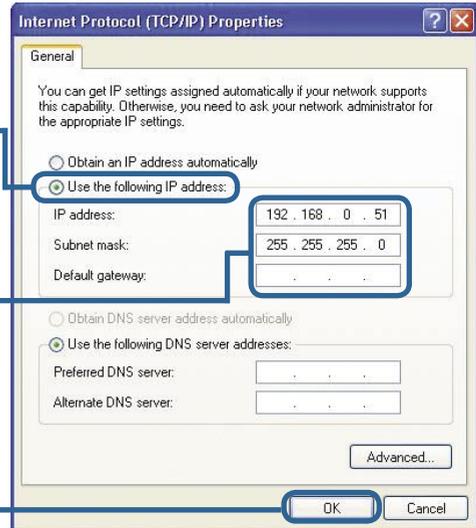

Select **Use the following IP address** in the Internet Protocol (TCP/IP) Properties window

Input your IP address and subnet mask. (The IP Address must be within the same range as the DWL-G700AP. The IP Address of the DWL-G700AP is **192.168.0.50**. You can assign 192.168.0.51 for your computer. **No two computers can have the same IP Address.** Assign a subnet mask of **255.255.255.0**.)


Click **OK**

For Windows 2000 users:

Go to **Start > Settings > Network and Dial-up Connections** > Double-click on the **Local Area Connection** associated with the Network Adapter installed on your system > select **Properties**


Click **Internet Protocol (TCP/IP)**

Click **Properties**

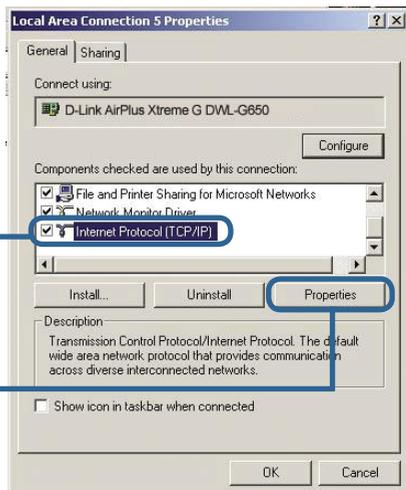

Select **Use the following IP address**

Input your **IP address and subnet mask**. (The IP Address must be within the same range as the DWL-G700AP. The IP Address of the DWL-G700AP is **192.168.0.50**. You can assign 192.168.0.52 for your computer. **No two computers can have the same IP Address**. Assign a subnet mask of **255.255.255.0**.)

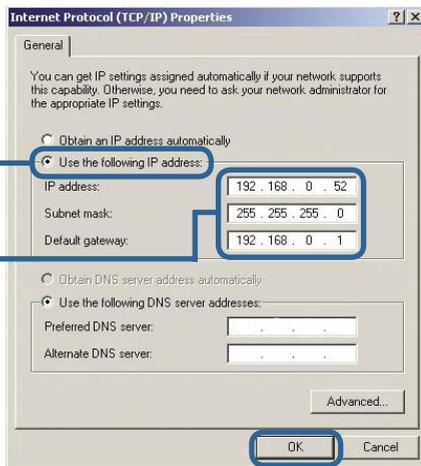

Click **OK**

For Windows Me and 98se users:


Click **Internet Protocol (TCP/IP)**

Go to **Start > Settings > Control Panel >**

Double-click on the **Local Area Connection** associated with the Network Adapter installed on your system > select **Properties**

Click **Internet Protocol (TCP/IP)**

Click **Properties**

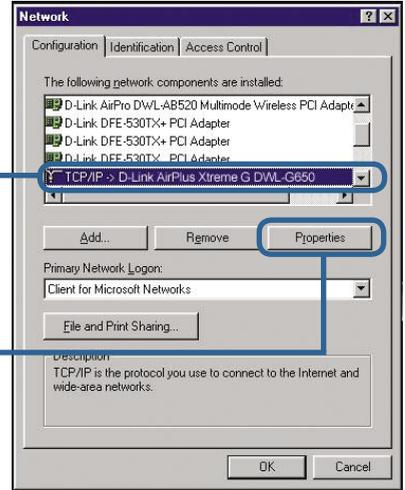


Select **Specify IP Address**

Input your IP address and subnet mask.

(The IP Address must be within the same range as the DWL-G700AP. The IP Address of the DWL-G700AP is **192.168.0.50**. You can assign 192.168.0.52 for your computer.

No two computers can have the same IP Address. Assign a subnet mask of **255.255.255.0**.)

Click **OK**

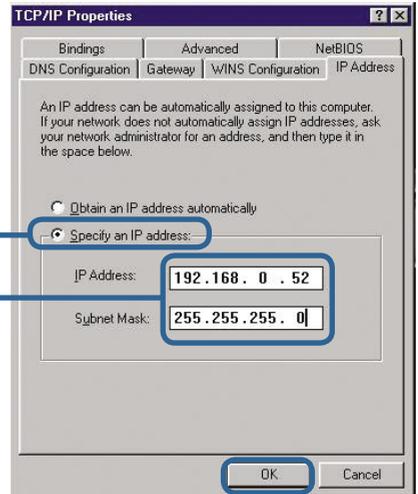


For Apple Macintosh OS X:

Go to the **Apple Menu** Click on **Network** and Select **System Preferences**

Select **Built in Ethernet** in the Show pull-down menu

Select **Manually** in the Configuration pull-down menu

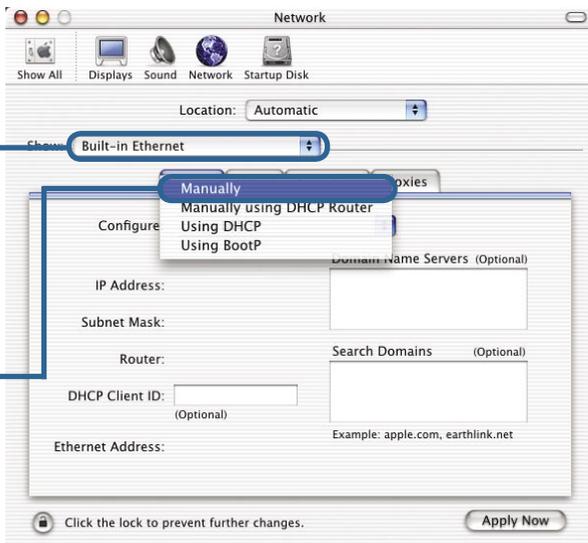

Input your **IP address** and **subnet mask**. (The IP Address must be within the same range as the DWL-G700AP. The IP Address of the DWL-G700AP is **192.168.0.50**. You can assign 192.168.0.51 for your Macintosh. **No two computers can have the same IP Address**. Assign a subnet mask of **255.255.255.0**.)

Click on **Apply Now**

