

Click the **Infrastructure** radio button if you want the Camera to communicate using an access point or wireless router. Click the **Ad-Hoc** radio button if you want the Camera to communicate without using an access point or wireless router. Click **Next**. Click Next.

Enter your wireless network's SSID or network name. If you chose Ad-Hoc mode, select the channel at which the network broadcasts its wireles signal. Then click **Next**.

The Security Settings screen will appear. If your network has WEP encryption enabled, then select the level of WEP select the level of WEP encryption and enter a Passphrase, if you do not have a Passphrase and want to manually enter a WEP key, leave the Passphrase field blank and complete the Key 1 field.

If your network has WEP encryption disabled, keep the default, **Disabled**.

Then click Next.

LINKSYS Disponentime protect an integral to well applied of the loss. It means the set of the loss and and advantages from such in control to control and • Alter Jack Miller Fact worther the weaks solar when with

And Andrews Conference of the former function The BBC is a cross device over a receipt of organization of a part where where our and both service of these receipts. The BBC is any service and where it may any our and the service of the The Descel of by a sequence of the desce of the descence of the desce







LINKSYS'
Elected Filter Ealers, etc.
Comprehension 🕺
Peur Windows C Internet Video Campo
has successfully been configured
2.4 GHz Wireless-G
Internet Video Camera Seto Mard 1
Interference in the property of the second s
White States - Entered Veter Gamera Sing Work Autor - VICS4
N

Install the Viewer & Recorder Utility

After you clicked the Install Viewer & Recorder Utility button, the We/come screen will appear. Click **Next**.

- To install the Utility files in the default folder, click **Next**. To select a different folder, click Browse and follow the on-screen directions.
- To add program icons to the default folder, click **Next**. To add program icons to an existing folder, select one from the Existing Folders listed, and then click **Next**.
- When the ActiveX plug-in has been installed, you will see the screen shown in Figure D. Then click **OK**.
- When the setup is complete, click **OK**.
- To open the Utility, double-click its shortcut on your desktop.

NOTE: On the Congratulations screen of the Setup Ward, you can click the Setup SoluLink DDNS Service button to take advantage of the Camera's Dynamic Domain Name System (DDNS) feature. This is useful for remote access of the Camera via the Internet. Refer to the SoluLink" (usick Installation for more information.







×



Connect the Video Camera for Wireless Network Use

Unplug the power adapter from the electrical outlet.

- Unplug the Ethernet network cable from the Camera as well as the PC, router, or switch.
 - Place the Camera in the location you want.
- Plug the power adapter into a local electrical outlet.

The Ready LED flashes while the Camera is initializing. When the Ready and Wireless LEDs are solidly lit, the Camera is ready for use.

For additional information or troubleshootin help, refer to the User Guide on the Setup C ROM. You can also call or e-mail for further Aim and focus the Camera support.

Linksys

24-hour Technical Support 800-326-7114 (toil-free from US or Canada) E-mail Support support@inksys.com Website http://www.linksys.com or http://support.linksys.com RMA (Return Merchandise Au http://support.linksys.com/support.

Sales Information 800-546-5797 (800-LINKSYS)

Congratulations! The installation of the Wireless-G Internet Video Camera is complete.

To view the Camera's video, open your web browser, and enter the Camera's IP address. (Use Internet Explorer version 5.5 or higher. Netscape users should use the Viewer & Recorder Utility.)

accordingly.

NOTE: To use the Viewer & Recorder Utility, double-click its icon. Click Find to search for the Camera. Click Add to add the Camera to the Utility's list. Then click View.

Linksys is a registered trademark or trademark and SoloLink is a trademark of Cisco Systems, Inc. and/or its affiliates in the U.S. and certain other countries. Copyright © 2004 Cisco System Inc. All rights reserved. WVC54G-QI-40420A JL

http://www.lin FTP Site Pp://ftp.linksy

distriction and as rectain rec

Downloaded from www.Manualslib.com manuals search engine