


N300 Wireless Dual Band ADSL2+ Modem Router DGND3300v2

 
Package Contents



Resource CD

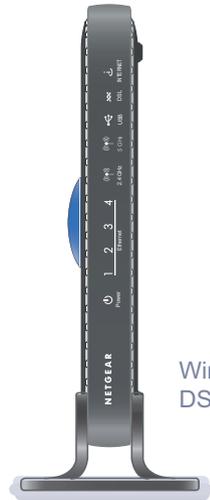


Wireless router with DSL modem




Filter



 Splitter
(varies by country)




Filter/splitter

 

Telephone cable



Ethernet cable

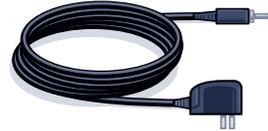


Power adapter

Tip: Use an ADSL filter for every telephone on the same phone line as your wireless modem router.



Internet

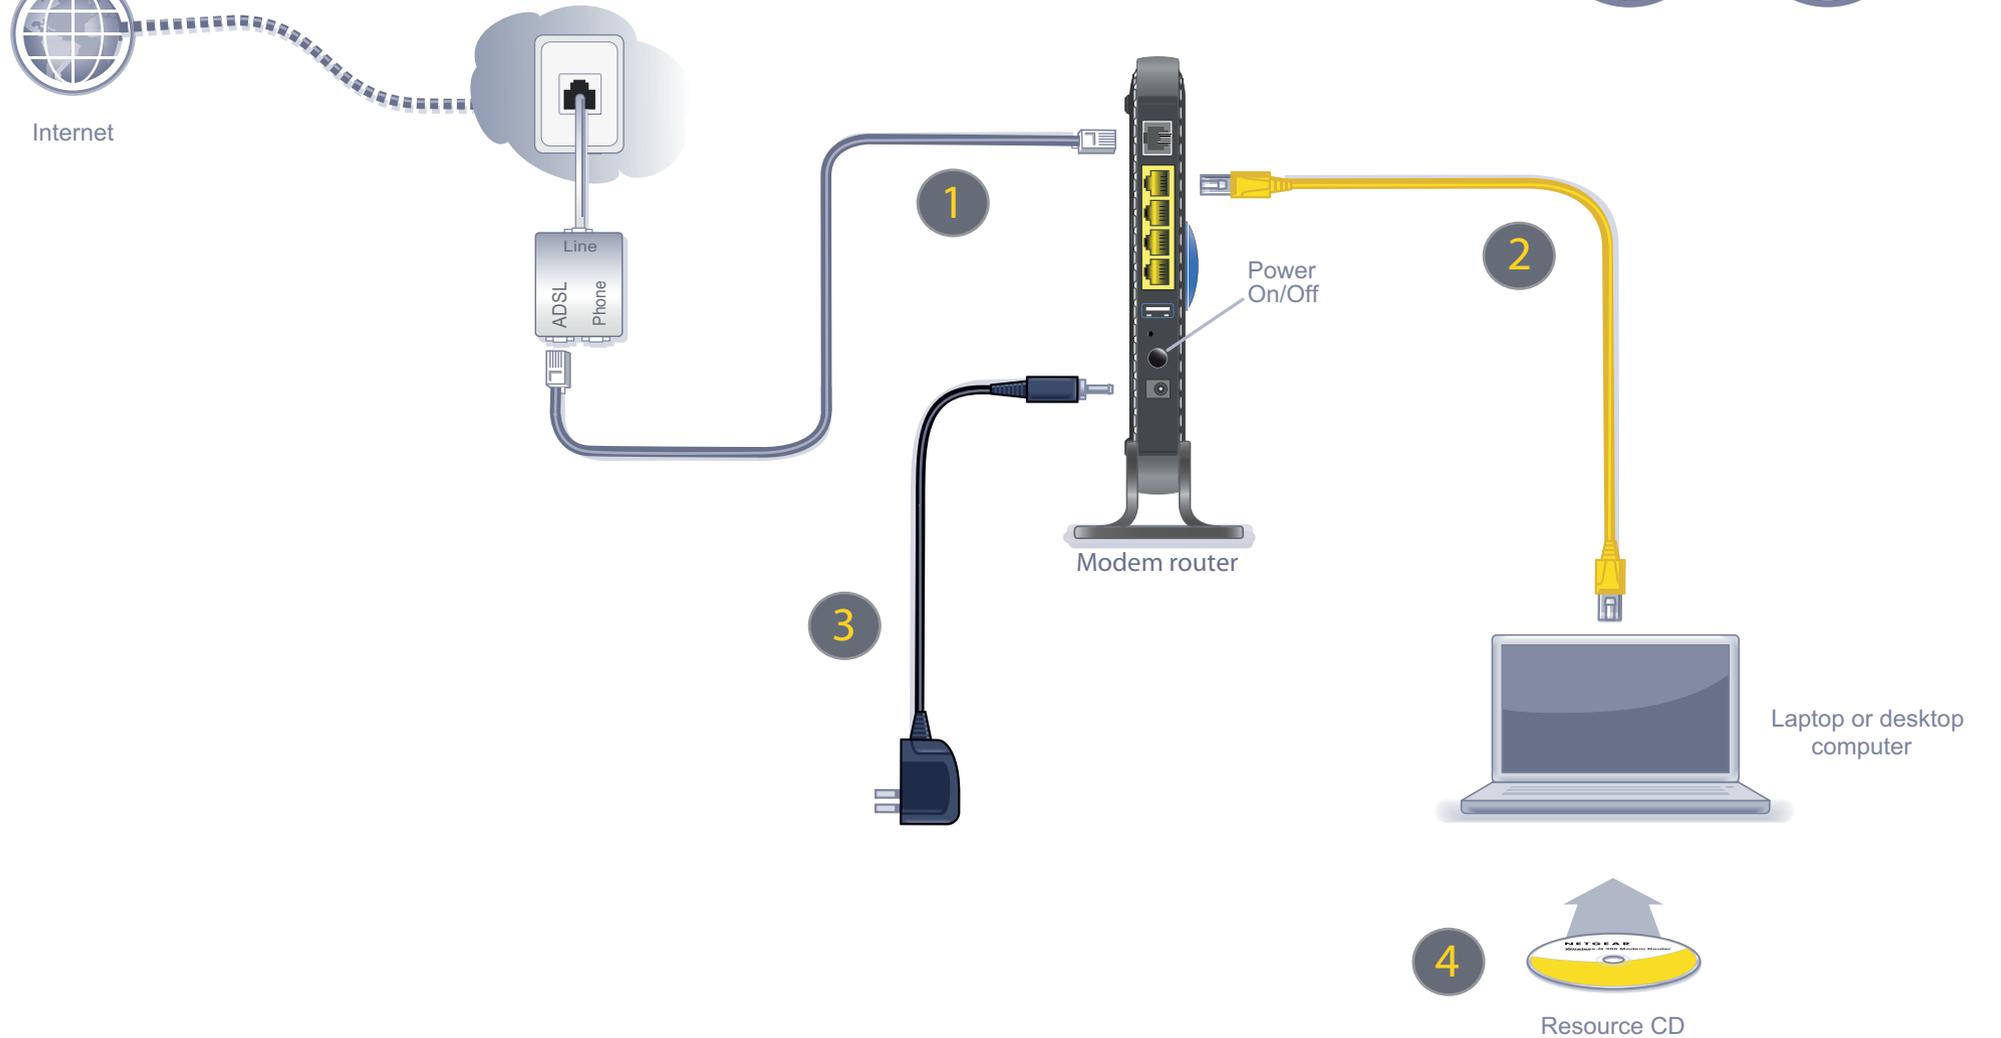


No CD Drive Installation

Set Up Internet Access

1. In the address field of your browser, type <http://www.routerlogin.net> and press Enter.
2. Enter the router user name **admin** and default password **password** to open your router's main settings screen.
3. When the main settings screen opens, you are asked if you want to check for updates. Click **Cancel**. You can always check for new firmware later after you are connected to the Internet.
4. Select the first menu item on the left: Setup Wizard. Make sure **Yes** is selected. Then click **Next** and follow the prompts to complete the Setup Wizard.*



User name: admin
Password:
 Remember my password
OK Cancel

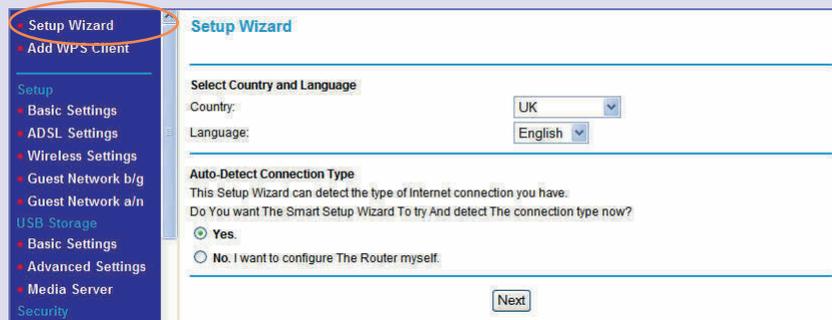

Setup Wizard
Add WPS Client
Setup
Basic Settings
ADSL Settings
Wireless Settings
Guest Network b/g
Guest Network a/n
USB Storage
Basic Settings
Advanced Settings
Media Server
Security

Select Country and Language
Country: UK
Language: English

Auto-Detect Connection Type
This Setup Wizard can detect the type of Internet connection you have.
Do you want The Smart Setup Wizard To try And detect The connection type now?
 Yes.
 No. I want to configure The Router myself.
Next

*Your router menu might display different or additional features not shown in this image.

When the Setup Wizard has finished detecting your connection, the Basic Settings screen displays your settings. You are now connected to the Internet.


Note: If your ISP requires that you enter a user name or password, you are prompted to enter this information. If you do not have this information, contact your ISP.

After connecting to the Internet, you can check for firmware updates by selecting Router Upgrade under Maintenance on the main menu and following the on screen prompts.

Set Up Wireless Security

You should set up a secure wireless network. Once your router security is established, your wireless laptops, gaming devices (such as Wii® or PlayStation 3® with wireless), or other wireless equipment can safely and securely connect to the Internet.

1. Under Setup on the main menu, select Wireless Settings.*

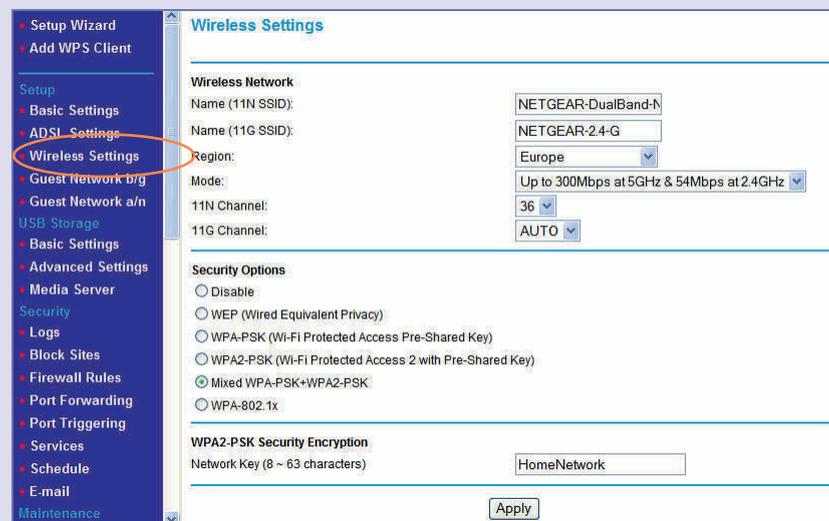

Wireless Settings

Wireless Network
Name (11N SSID): NETGEAR-DualBand-N
Name (11G SSID): NETGEAR-2.4-G
Region: Europe
Mode: Up to 300Mbps at 5GHz & 54Mbps at 2.4GHz
11N Channel: 36
11G Channel: AUTO

Security Options
 Disable
 WEP (Wired Equivalent Privacy)
 WPA-PSK (Wi-Fi Protected Access Pre-Shared Key)
 WPA2-PSK (Wi-Fi Protected Access 2 with Pre-Shared Key)
 Mixed WPA-PSK+WPA2-PSK
 WPA-802.1x

WPA2-PSK Security Encryption
Network Key (8 ~ 63 characters): HomeNetwork
Apply

*Your router menu might display different or additional features not shown in this image.

2. Name your wireless networks. Choose names that are easy to remember (the default names are NETGEAR-DualBand-N and NETGEAR-2.4-G).
3. Select your security method. NETGEAR recommends WPA2-PSK (AES). Then, enter a passphrase. In the example, the passphrase is HomeNetwork.
Note: Both your network name (SSID) and passphrase are case-sensitive. Your network name, security method, and passphrase must be the same on all the wireless devices connected to your router.
4. Click **Apply**, and close your browser.

Connect Wireless Devices to Your Router

Enter your wireless information here:

Wireless Network Name (11N SSID) _____

Wireless Network Name (11G SSID) _____

Wireless Security Passphrase _____

If you don't remember your passphrase, type <http://www.routerlogin.net> in the address field of your browser and log in by entering your user name **admin** and password (the default is **password**). Then, select **Wireless Settings** to retrieve your passphrase.

You can add wireless computers and other equipment to your wireless network:

1. Open the wireless software that manages your wireless connections on the wireless device (iPhone®, laptop computer, gaming device) that you want to connect to your router.
2. The wireless software scans for all wireless networks in your area. Look for your network—the one you named when you set up your router. Select it.
3. If you set up security, you are prompted for a passphrase or network key. Enter the passphrase you selected and click **Connect**.

If your wireless device supports WPS (Wi-Fi Protected Setup)—NETGEAR calls this method Push 'N' Connect—you might be prompted to press a WPS button on the router instead of entering a passphrase. Then:

1. Press the WPS button on the router. It looks similar to .
2. Within 2 minutes, follow the wireless software instructions on the wireless device to complete the WPS process. The device is then connected to your router.
3. Repeat this process to add other wireless devices.

For complete DoC please visit the NETGEAR EU Declarations of Conformity website at: http://kb.netgear.com/app/answers/detail/a_id/11621/



201-12324-03



August 2010