



**AC.TOP**

**Wireless Access Point  
Quick Installation Guide**

## Support

You can download the complete guides and supporting programs from <http://www.airlive.com/product/ac.top/download>, or scan the QR code here.



Please consult with the FAQs <http://www.airlive.com/product/ac.top/faq> before writing to OvisLink Tech Support Team for further assistance




For any other question, please read the user manual in the CD or mail to [tech@airlive.com](mailto:tech@airlive.com) for technical support.

# AC.TOP Package Contents


Please check the package contents and contact your distributor if any part is missing.




AC.TOP

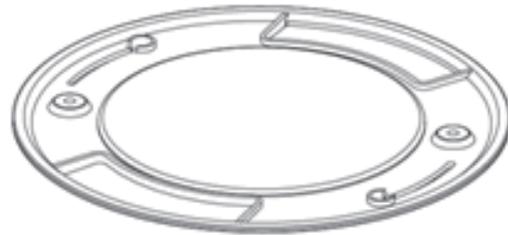

Ceiling Mount Bracket

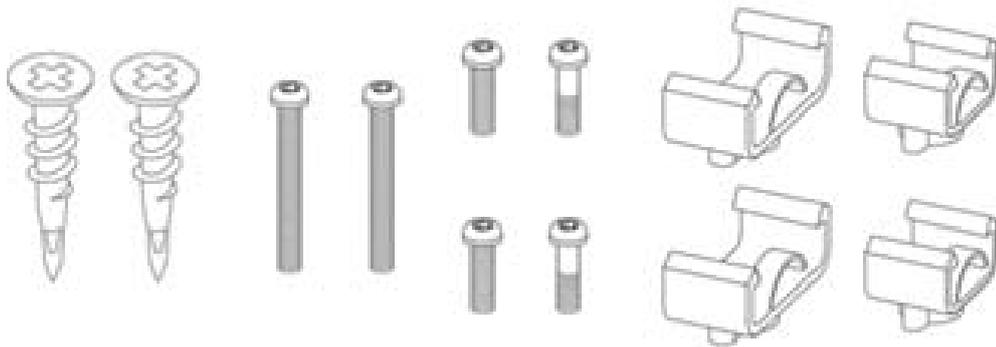

T-Rail Mounting Kit & Screws

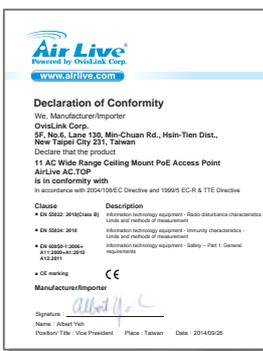

Quick  
Installation Guide




Power Adapter




User Manual CD

# I/O Interface

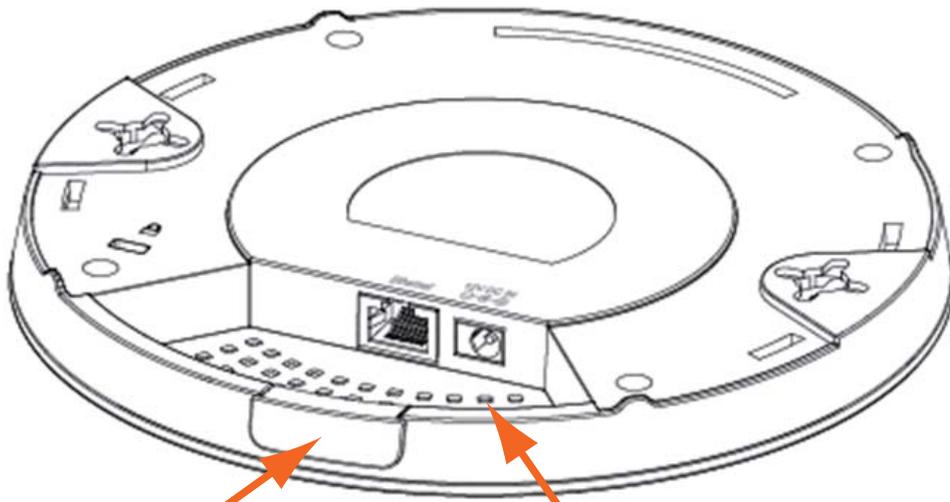

**PoE Ethernet Port**

**Power Jack (DC IN)**

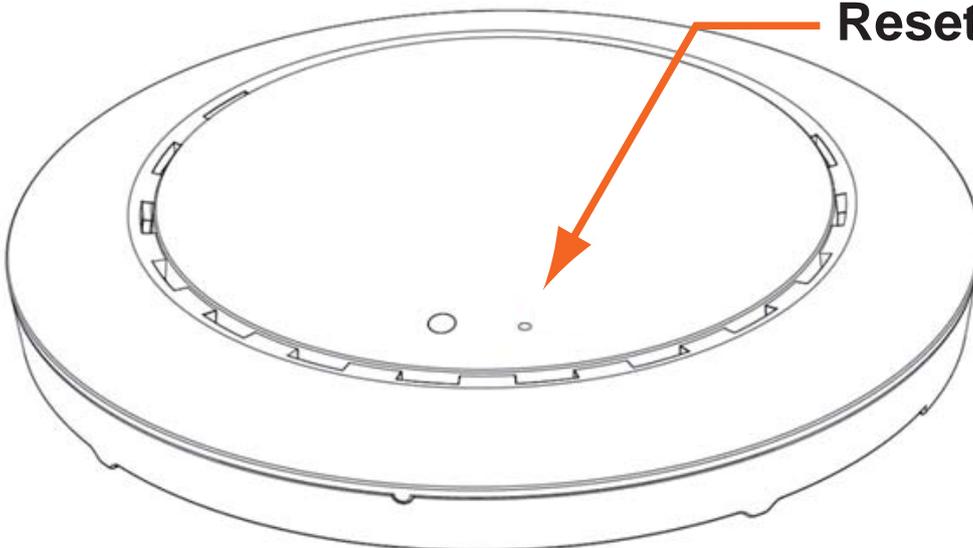


**Reset Button**

## **01** Mounting the AC.TOP: Ceiling Mount

- 1 Place the ceiling mount bracket to a ceiling in your desired location and insert screw through hole (x 2) and tighten to fix the bracket in place,
- 2 Insert screw through hole and into the rear of screw and tighten to provide additional strength.
- 3 When the ceiling bracket is in place, insert screw into hole (x 2) on the access point.
- 4 Fix the access point to the ceiling bracket by inserting the attached screws into hole and twisting the access point.
- 5 Lock the access point firmly into place by twisting it to align screws with the grooves in the ceiling mount.


# 01 Mounting the AC.TOP: Ceiling Mount

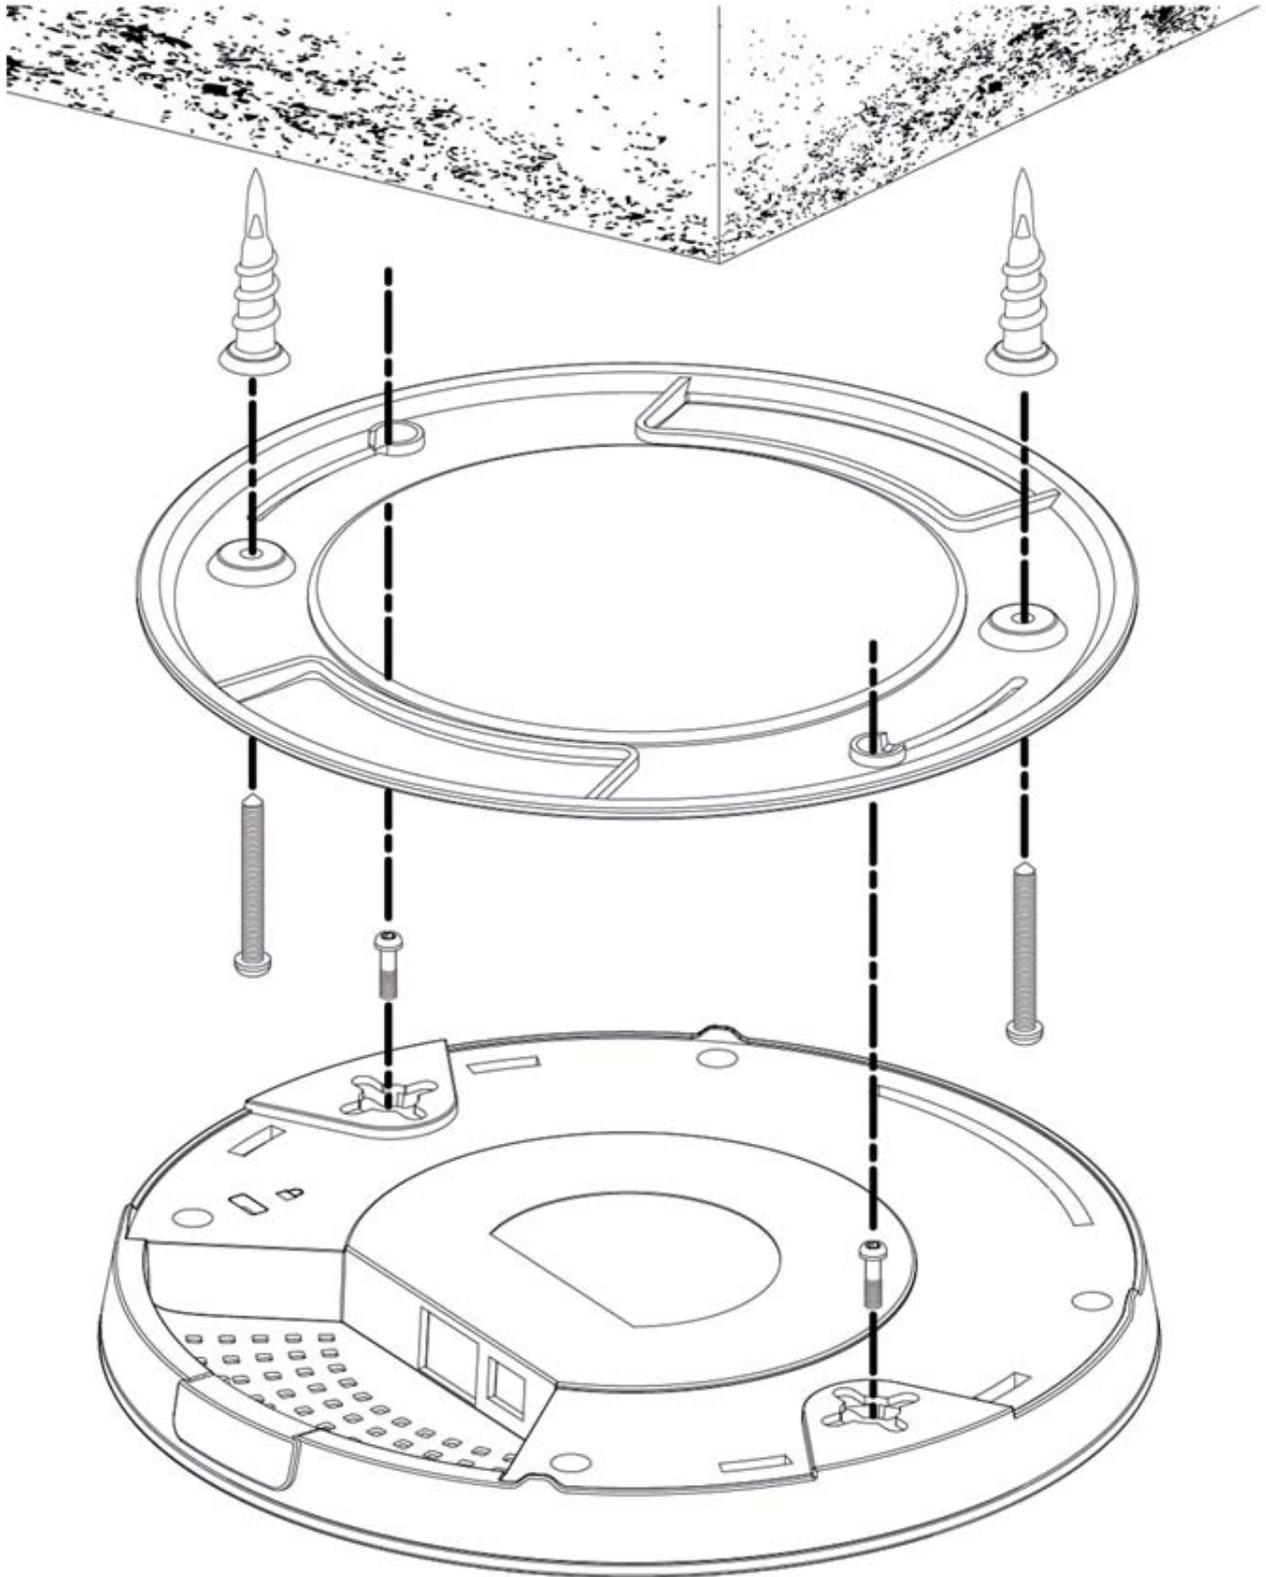

## 02 Mounting the AC.TOP :Wall Mount


To mount the access point to a T-Rail, please follow the instructions below and refer to diagram C, D & E.

- 1 Select the correct size T-Rail bracket from the two sizes which are included in the package contents.
- 2 Attach the T-Rail bracket into hole using screw (x 2) as shown in C.
- 3 Clip the access point onto your T-Rail using the attached T-Rail bracket.

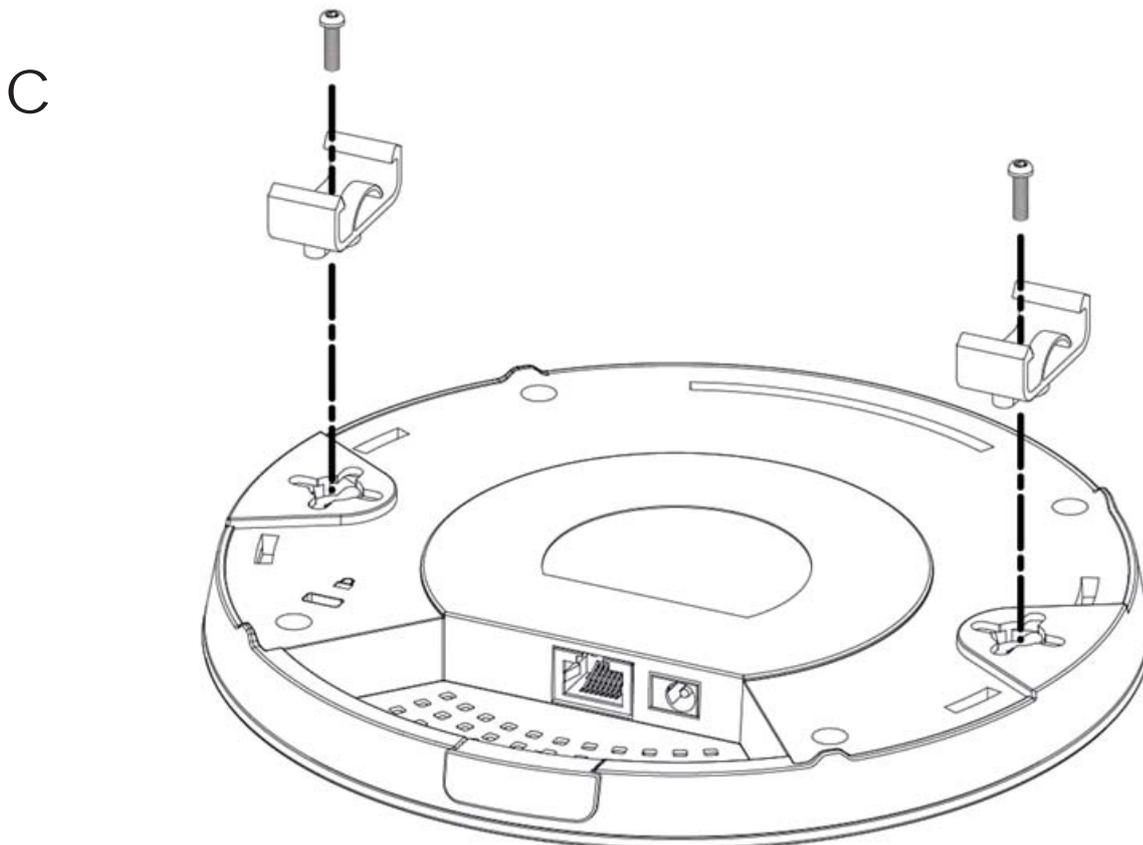


## 02 Mounting the AC.TOP :Wall Mount

D

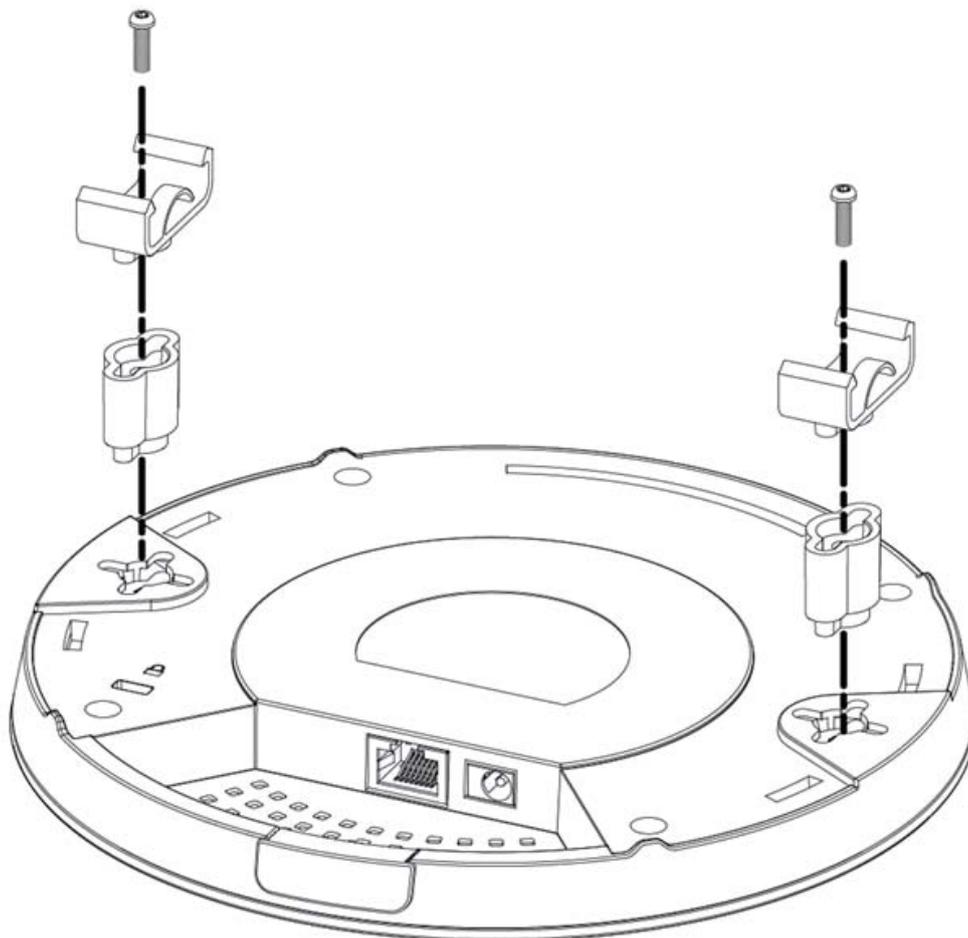


E

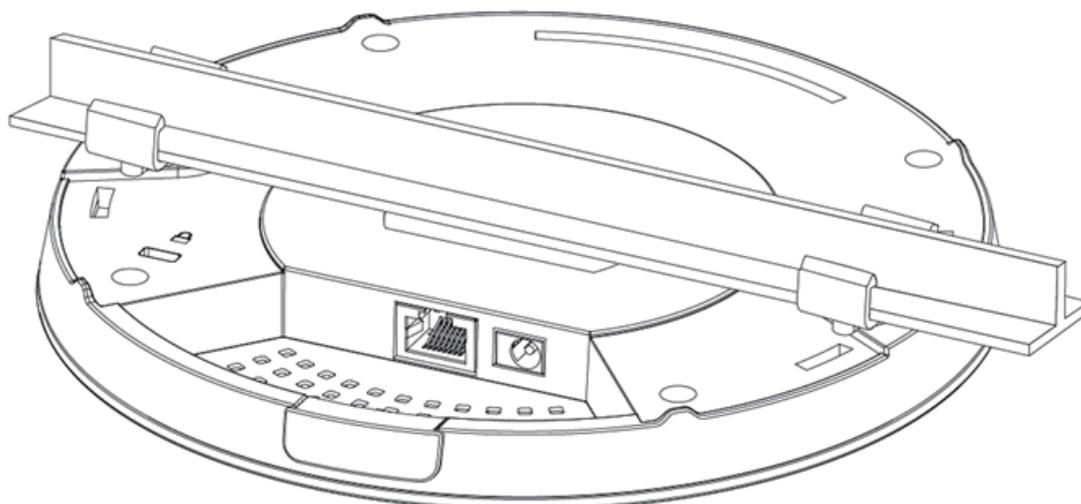


### 03 Power up the Camera

Connect the 12V adapte to power up the AC.TOP

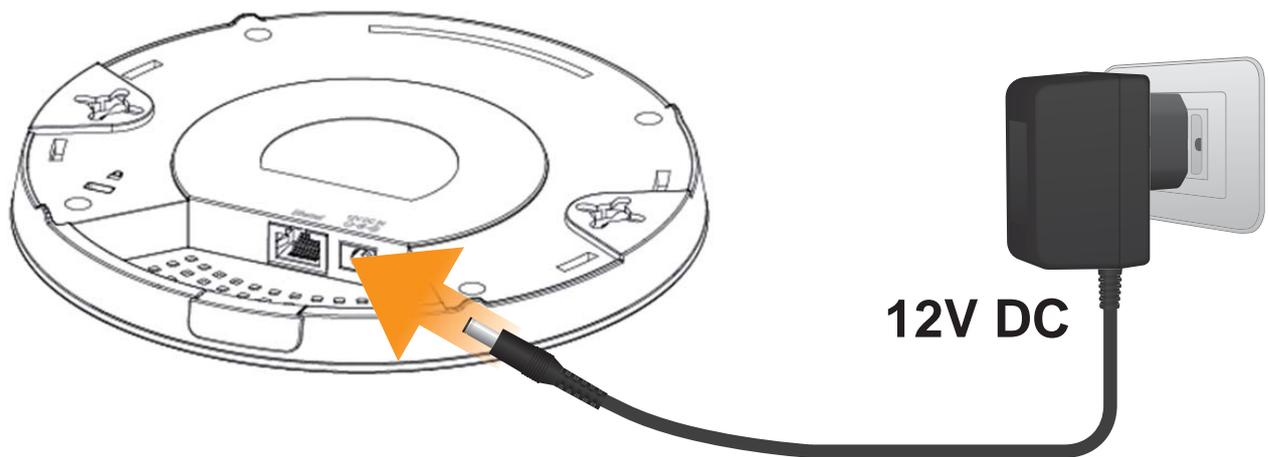


You can also use RJ45 ethernet cable to power up the camera if you have PoE switch.

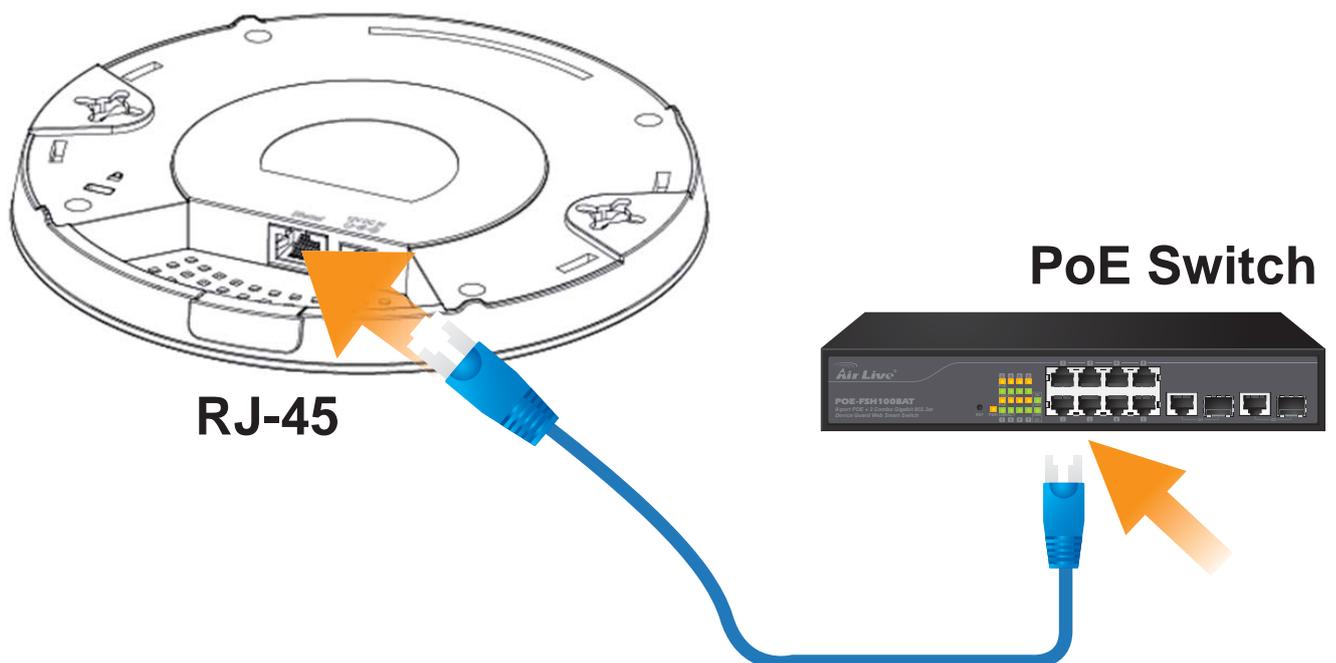


## 04 Connect AC.TOP to Network

- Connect AC.TOP to the LAN port of the switch.
- Connect switch to the LAN port of the router.
- Connect the PC/NB to the LAN port of the switch.

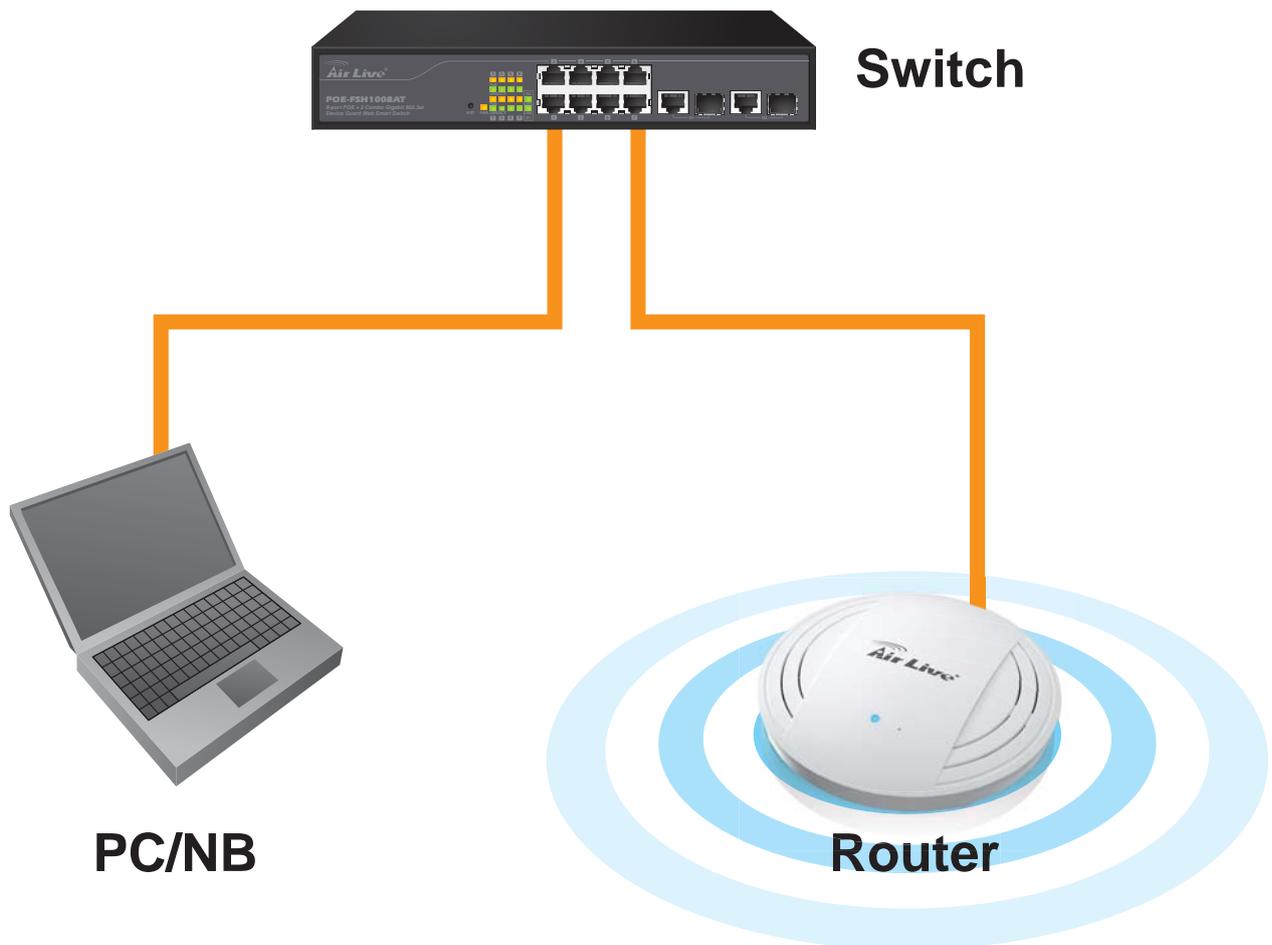

## 05 Access AC.TOP via Browser

The default IP address of AC.TOP is 192.168.1.254. Please set your PC/NB to the same subnet

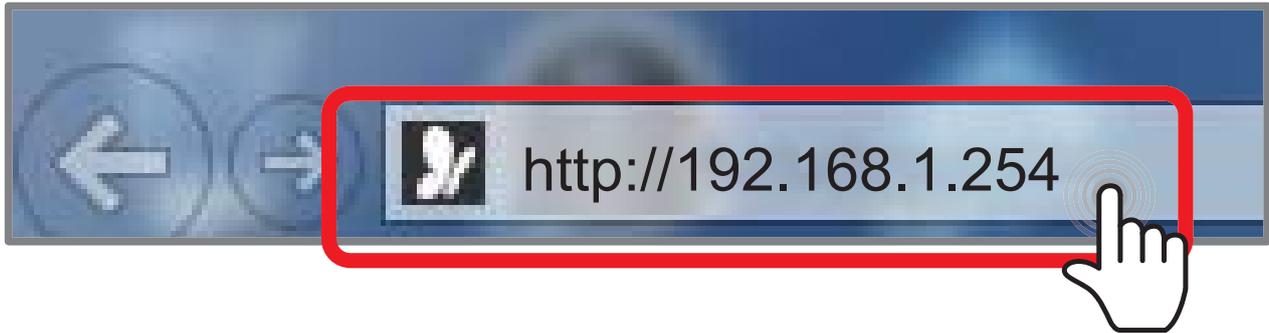

Enter the AC.TOP's IP address into browser to visit the AC.TOP web UI. The default username/password is admin/airlive