


Connecting the Cables

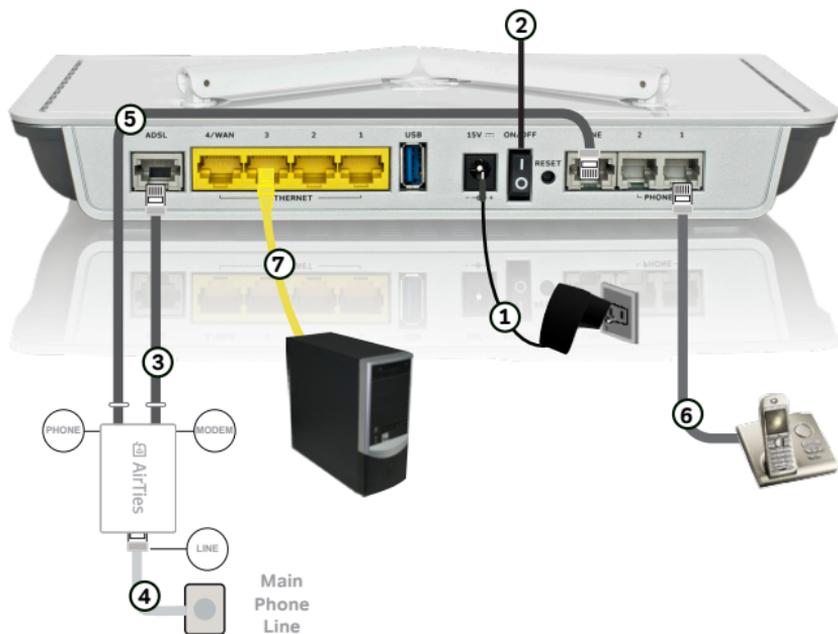

www.airties.com



Easy setup CD



3 year warranty



7/24 people support
+90 212 444 0 239



YMMWR.6271.UMI.EN.D00.REV08072009



Quick Setup

2 VoIP Port Wireless ADSL2+ Gateway
Air 6271

After you take the device out of its box, remember to remove the clear plastic from around it so that the ventilation holes are not blocked.

Step 1 Insert the Air 6271 Easy Setup CD into your PC



Easy Setup CD

Connecting the Cables

All wiring and configuration procedures explained in this document are also demonstrated with the animation that starts when you run the Air 6271 Easy Setup CD.

Please run the Easy Setup CD first.

- 1- Connect the power adapter provided to the power port of your router and plug it into the wall outlet.
- 2- Turn on the Air 6271 by setting the On/Off switch to the "I" position.
- 3- Using the short telephone cable provided, connect the Modem port of the Splitter to the ADSL port of your router.
- 4- Connect the main phone line in your home to the Line port of the Splitter. If the main phone line is currently connected to your phone, first disconnect it from your phone, and then connect it to the Line port of the Splitter.
- 5- Using the short telephone cable provided, connect the Phone port of the splitter to the Line port of the Router.
- 6- Using the long telephone cable provided, connect your phone to one the Phone ports of the Router.
- 7- Using the Ethernet cable provided in the box, connect your PC to any one of the four Ethernet ports of your router.

When you are done connecting the cables, click "**HARDWARE SETUP COMPLETE**".

*Please see the back of this guide for the cabling diagram

Step 2 To begin the configuration process, click **“Next>”** in the AirTies ADSL Utility Setup Wizard



Step 3 Enter the ADSL username and password assigned to you by your ADSL service provider. Fill out the Customer Information fields for warranty registration, and click **“Next>”**.

File Language Help

AirTies Wireless life

ADSL Settings Wireless Settings

ADSL ACCOUNT INFORMATION
User Name and Password provided by your ADSL Service Provider

Protocol: PPPoE

User Name: username@isp

Password: ****

CUSTOMER INFORMATION
This information will be used for your warranty registration.

Name Surname:

Phone number:

Email address:

Next > Cancel

Saving: [Progress Bar]

User Name

Password



Step 4 . In the Wireless Settings section, you can configure the wireless security level, wireless network name (SSID), and password settings of your router. If you do not change anything, then the AirTies ADSL Utility will automatically configure wireless security settings and set a secure password for you. When you click **“Next>”**, the ADSL Utility automatically stores your settings on your router and PC. You do not need to enter wireless settings on your PC.



Step 5 After your wireless security settings are saved, a screen that shows the wireless password for your router will come up. Please make a note of your password. Any PC that will wirelessly connect to your router will need this password.



Congratulations! You have successfully completed the ADSL and wireless configuration of your router. Now, you can enjoy wireless high speed Internet

For detailed information and advanced settings, please refer to the User Manual included in the Easy Setup CD (Air 6271.pdf).

