

Easy Start Guide




This Easy Start Guide will help you setup the router and connect to the Internet. Before proceeding with the installation, please ask your service provider for the correct modem and Internet connection settings.

1 Check Contents

The package includes:

- WL830RT4 Router
- Resource CD
- Power Adapter
- Network Cable
- Easy Start Guide

2 Setup the Hardware

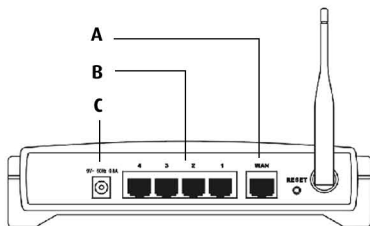

A. Use an Ethernet cable to connect a modem into the router's WAN port. The modem is a separate device connected to your Internet line.

B. Use an Ethernet cable to connect a computer with any of the available Ethernet ports from 1-4.

C. Connect the 9V Power Adapter and then plug it into an electrical source.

3 Use the Web Manager

Open a browser and go to 192.168.1.1. This opens the login screen. Enter **admin** as the username and password.

From the Web Manager, click **Quick Setup** and then click **Next**. The Quick Setup screen provides three options to connect to the Internet - **PPPoE**, **Dynamic IP**, **Static IP**. Please contact your Internet service provider for the correct option and then proceed with the on screen instructions.

Please choose WAN Connection Type:

PPPoE

Dynamic IP

Static IP



Securing Your Wireless Home Network

Follow these steps to block unauthorized users from connecting to your wireless home network.

1 Select Wireless Menu


After completing the installation, open a browser and go to **192.168.1.1**. This opens the login screen. Enter **admin** as the username and password.

In the left pane under **Basic Settings**, select **Wireless** to open Wireless Settings.

- Status
- Basic Settings
- Quick Setup
- + Network
- + **Wireless** 

2 Change SSID

Replace the default SSID to more familiar term to you. SSID means Service Set Identifier. This is the name that identifies your wireless network.

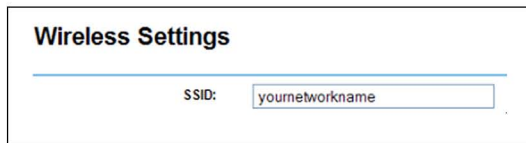

The screenshot shows a window titled "Wireless Settings". Below the title is a horizontal line. Underneath, the label "SSID:" is followed by a text input field containing the text "yournetworkname".

3 Apply Security

Select **Enable Wireless Security**. For Security Type, select **WPA-PSK/WPA2-PSK**, enter a PSK Passphrase composed of letter, numbers, or a combination then click **Save**.



The screenshot shows the "Wireless Security" configuration page. At the top, there is a checked checkbox labeled "Enable Wireless Security". Below this are four settings:

- Security Type:** WPA-PSK/WPA2-PSK (dropdown menu)
- Security Option:** Automatic (dropdown menu)
- Encryption:** Automatic (dropdown menu)
- PSK Passphrase:** MyPa55phra2e (text input field)

Below the PSK Passphrase field, there is a note: "(The Passphrase is between 8 and 63 characters long)".