

D-Link[®]

WIRELESS N300 GIGABIT CLOUD
ADSL2+ MODEM ROUTER
DSL-2770L

**QUICK
INSTALLATION
GUIDE**

A large, light gray, stylized letter 'D' logo is positioned in the background, partially overlapping the text. The 'D' is composed of a thick vertical bar on the left and a rounded top and bottom that curve inward to meet the bar. The interior of the 'D' is white, creating a negative space effect.

CONTENTS OF PACKAGING

CONTENTS



INSTALLATION CD

INCLUDES SET-UP WIZARD & TECHNICAL MANUALS



WIRELESS N300 GIGABIT CLOUD ADSL2+ MODEM ROUTER DSL-2770L



POWER ADAPTER ADAPTER



ETHERNET CABLE (RJ-45 CABLE) CONNECT THE ROUTER TO YOUR PC DURING SET-UP



RJ-11 PHONE CABLE



ADSL2+ MICROFILTER/SPLITTER



If any of these items are missing from your packaging contact your reseller

PRODUCT SET-UP

CD SET-UP WIZARD



SET-UP WIZARD CD

The CD contains all of the instructions required to set-up the DSL-2770L



INSERT CD

Insert the CD into the CD drive of your computer. The set-up wizard should start automatically. Make sure that your internet connection is active. (Do not plug in DSL-2770L yet)



SET-UP WIZARD

Select your language from the list of options and follow the steps within the wizard to complete the set-up of DSL-2770L

ADVANCED WEB-BASED SET-UP (ACCESS VIA IP ADDRESS)

After connecting cables provided in the box, please open a browser to configure DSL-2770L manually by entering in below information. Upon establishing the internet connection, you are able to register the DSL-2770L on the mydlink™ portal with your newly created or existing mydlink™ account.

Simply open a browser window and enter the IP address in the browser address field:

IP ADDRESS: <http://192.168.1.1>

USERNAME: admin

PASSWORD: admin

TROUBLESHOOTING

SET-UP AND CONFIGURATION PROBLEMS

1. HOW DO I CONFIGURE MY DSL-2770L ROUTER WITHOUT THE CD, OR CHECK MY WIRELESS NETWORK NAME (SSID) AND WIRELESS ENCRYPTION KEY?

- Connect your PC to the router using an Ethernet cable.
- Open a web browser and enter the address `http://192.168.1.1`
- The default username is "admin". The default password is "admin".
- If you have changed the password and can not remember it, you will need to reset the router to set the password back to "admin".

2. HOW DO I RESET MY DSL-2770L ROUTER TO FACTORY DEFAULT SETTINGS?

- Ensure the router is powered on.
 - Press and hold the reset button on the rear of the device for 10 seconds.
- Note: Resetting the router to factory default will erase the current configuration settings. To re-configure your settings, log into the router as outlined in question 1, then run the Setup Wizard.

3. HOW DO I ADD A NEW WIRELESS CLIENT OR PC IF I HAVE FORGOTTEN MY WIRELESS NETWORK NAME (SSID) OR WIRELESS ENCRYPTION KEY?

- Every PC that needs to connect to the router wirelessly, you will need to ensure you use the correct Wireless Network Name (SSID) and encryption key.
- Use the web based user interface (as described in question 1 above) to check or choose your wireless settings.
- Make sure you write down these settings so that you can enter them into each wirelessly connected PC. You will find a dedicated area on the back of this document, this important information for future use.

4. WHY CAN I NOT GET AN INTERNET CONNECTION?

For ADSL users please contact your ISP to make sure the service has been enabled/connected by your ISP and that your ISP username and password is correct.

NOTES

NOTES

NOTES

WIRELESS NETWORK REMINDER

Wireless Network Name (SSID)

Wireless Network Password

— **3-YEAR LIMITED WARRANTY** —

| | | |
|---|---|---|
|  |  AUSTRALIA Technical Support: http://support.dlink.com.au 1300 766 868 |  NEW ZEALAND Technical Support: http://support.dlink.co.nz 0800 900 900 |
|---|---|---|