

A large, light gray watermark of the D-link logo is positioned diagonally across the page, starting from the bottom left and extending towards the top right. The logo consists of a stylized 'D' with a vertical bar through it, forming a shape similar to a speech bubble or a stylized 'D' with a tail.

D-Link[®]

3G/4G PORTABLE WIRELESS N 150 ROUTER
DWR-161

**QUICK
INSTALLATION
GUIDE**

CONTENTS OF PACKAGING

CONTENTS



CD-ROM
INCLUDES TECHNICAL MANUALS



3G/4G PORTABLE WIRELESS N 150 ROUTER
DWR-161



ETHERNET CABLE
CAT5



POWER ADAPTER
5 V / 1 A



1700 mAh Li-ion BATTERY




If any of these items are missing from your packaging, contact your reseller.

PRODUCT SETUP


EASY SETUP: 3G/4G CONNECTION MODE

Choose this mode if you want to use your DWR-161 to share a mobile Internet connection through a 3G/4G USB adapter.

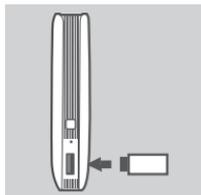

INSTALL THE 3G/4G USB ADAPTER

Plug your 3G/4G USB adapter into the USB port of the DWR-161.

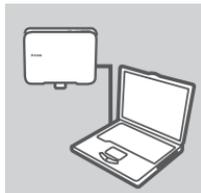

CONNECT TO THE DWR-161

Plug one end of the Ethernet cable into the DWR-161. Plug the other end of the cable into your PC's Ethernet port. You may also connect to the router wirelessly. Please see the step below.



CONNECT TO THE DWR-161 WIRELESSLY (OPTIONAL)

Use a PC or mobile device with an active wireless adapter to scan for available wireless networks. Connect to the network with the SSID labeled **dlink**.




CONFIGURE THE DWR-161

Open a web browser and go to **http://192.168.0.1**. Enter **admin** as the User Name, and leave the Password field blank. You may use the Setup Wizard to configure your DWR-161.

PRODUCT SETUP

EASY SETUP: WAN CONNECTION MODE

Choose this mode if you want to use your DWR-161 to share an Internet connection from a cable or DSL modem.

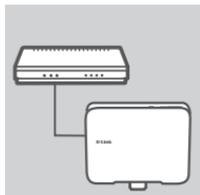

CONNECT TO A CABLE/DSL MODEM

Plug one end of the Ethernet cable into the DWR-161. Plug the other end of the cable into your cable/DSL modem.



CONNECT TO THE DWR-161

Use a PC or mobile device with an active wireless adapter to scan for available wireless networks. Connect to the network with the SSID labeled **dlink**.



CONFIGURE THE DWR-161

Open a web browser and go to **http://192.168.0.1**. Enter **admin** as the User Name, and leave the Password field blank. You may use the Setup Wizard to configure your DWR-161.

TROUBLESHOOTING

SETUP AND CONFIGURATION PROBLEMS

1. HOW DO I CONFIGURE MY DWR-161 3G/4G PORTABLE WIRELESS N 150 ROUTER?

- Connect your PC to the DWR-161 using an Ethernet cable.
- Open a web browser and enter the router address: **http://192.168.0.1**
- The default username is **admin**. The default password is blank (leave this box empty).
- If you have changed the password and cannot remember it, you will need to reset the router to factory default settings in order to set the password back to blank.

2. HOW DO I RESET MY DWR-161 3G/4G PORTABLE WIRELESS N 150 ROUTER TO FACTORY DEFAULT SETTINGS?

- Ensure that the DWR-161 is plugged in and receiving power.
 - Press and hold the reset button on the top of the device for 5 seconds.
- Note:** Resetting the product to the factory default will erase the current configuration. To reconfigure your settings, log into the DWR-161 as outlined in question 1, then run the Setup Wizard.

3. HOW DO I ADD A NEW WIRELESS CLIENT OR PC IF I HAVE FORGOTTEN MY WIRELESS NETWORK NAME (SSID) OR WIRELESS ENCRYPTION KEY?

- For each PC that needs to connect to the DWR-161 wirelessly, you must ensure that the correct Wireless Network Name (SSID) and encryption key has been entered.
- Use the web-based user interface (as described in question 1 above) to verify or choose your wireless settings.
- Make sure you write down these settings so that you can enter them into each wirelessly connected PC. You will find a dedicated area on the back of this document to write down this important information for future use.

4. WHY AM I UNABLE TO ESTABLISH AN INTERNET CONNECTION?

- If connecting using a 3G/4G connection, make sure that you are within range of your mobile service provider, and that the service has been correctly configured on your 3G/4G USB adapter.
- If connecting using ADSL/Cable service, make sure your modem has been enabled/connected and is operational, and that the service is correctly configured.

TECHNICAL SUPPORT

You can find software updates and user documentation on the D-Link website.

Tech Support for customers in

Australia:

Tel: 1300-766-868
24/7 Technical Support
Web: <http://www.dlink.com.au>
E-mail: support@dlink.com.au

India:

Tel: +91-22-27626600
Toll Free 1800-22-8998
Web: www.dlink.co.in
E-Mail: helpdesk@dlink.co.in

Singapore, Thailand, Indonesia, Malaysia, Philippines, Vietnam:

Singapore - www.dlink.com.sg
Thailand - www.dlink.co.th
Indonesia - www.dlink.co.id
Malaysia - www.dlink.com.my
Philippines - www.dlink.com.ph
Vietnam - www.dlink.com.vn

Korea:

Tel : +82-2-2028-1810
Monday to Friday 9:00am to 6:00pm
Web : <http://d-link.co.kr>
E-mail : g2b@d-link.co.kr

New Zealand:

Tel: 0800-900-900
24/7 Technical Support
Web: <http://www.dlink.co.nz>
E-mail: support@dlink.co.nz

South Africa and Sub Sahara Region:

Tel: +27 12 661 2025
08600 DLINK (for South Africa only)
Monday to Friday 8:30am to 9:00pm South Africa Time
Web: <http://www.d-link.co.za>
E-mail: support@d-link.co.za

Saudi Arabia (KSA):

Tel: +966 01 217 0008
Fax: +966 01 217 0009
Saturday to Wednesday 9.30AM to 6.30PM
Thursdays 9.30AM to 2.00 PM
E-mail: Support.sa@dlink-me.com

D-Link Middle East - Dubai, U.A.E.

Plot No. S31102,
Jebel Ali Free Zone South,
P.O.Box 18224, Dubai, U.A.E.
Tel: +971-4-8809022
Fax: +971-4-8809066 / 8809069
Technical Support: +971-4-8809033
General Inquiries: info.me@dlink-me.com
Tech Support: support.me@dlink-me.com

Egypt

1, Makram Ebeid Street - City Lights Building
Nasr City - Cairo, Egypt
Floor 6, office C2
Tel.: +2 02 26718375 - +2 02 26717280
Technical Support: +2 02 26738470
General Inquiries: info.eg@dlink-me.com
Tech Support: support.eg@dlink-me.com

Kingdom of Saudi Arabia

Office # 84 ,
Al Khaleej Building (Mujamathu Al-Khaleej)
Opp. King Fahd Road, Olaya
Riyadh - Saudi Arabia
Tel: +966 1 217 0008
Technical Support:
+966 1 2170009 / +966 2 6522951
General Inquiries: info.sa@dlink-me.com
Tech Support: support.sa@dlink-me.com

Pakistan

Islamabad Office:
61-A, Jinnah Avenue, Blue Area,
Suite # 11, EBC, Saudi Pak Tower,
Islamabad - Pakistan
Tel.: +92-51-2800397, 2800398
Fax: +92-51-2800399

Karachi Office:

D-147/1, KDA Scheme # 1,
Opposite Mudassir Park, Karsaz Road,
Karachi – Pakistan
Phone: +92-21-34548158, 34326649
Fax: +92-21-4375727
Technical Support: +92-21-34548310, 34305069
General Inquiries: info.pk@dlink-me.com
Tech Support: support.pk@dlink-me.com

TECHNICAL SUPPORT

Iran

Unit 5, 5th Floor, No. 20, 17th Alley , Bokharest
St., Argentine Sq.,
Tehran IRAN
Postal Code : 1513833817
Tel: +98-21-88880918,19
+98-21-88706653,54
General Inquiries: info.ir@dlink-me.com
Tech Support: support.ir@dlink-me.com

ISRAEL

מטלון סנטר
רח' המגשימים 20
קרית מטלון, פ"ת 49348
ת.ד. 7060
טלפון: 073-796-2797
אי-מאייל כללי: info@dlink.co.il
אי-מאייל תמיכה: support@dlink.co.il

Morocco

M.I.T.C
Route de Nouaceur angle RS et CT 1029
Bureau N° 312 ET 337
Casablanca, Maroc
Phone : +212 663 72 73 24
Email: support.na@dlink-me.com

Lebanon RMA center

Dbayeh/Lebanon
PO Box:901589
Tel: +961 4 54 49 71 Ext:14
Fax: +961 4 54 49 71 Ext:12
Email: taoun@dlink-me.com

Bahrain

Technical Support: +973 1 3332904

Kuwait:

Technical Support: + 965 22453939 /
+965 22453949

Türkiye Merkez İrtibat Ofisi

Ayazağa Maslak yolu
Erdebil Cevahir İş Merkezi No: 5/A Ayazağa /
Maslak İstanbul
Tel: +90 212 2895659
Ücretsiz Müşteri Destek Hattı: 0 800 211 00 65
Web:www.dlink.com.tr
Teknik Destek: support.tr@dlink.com.tr

WIRELESS NETWORK REMINDER

Wireless Network Name (SSID)

Wireless Network Password