



Package Contents

- Dual-Band Wireless A+G Broadband Router
- Setup CD-ROM with Symantec Internet Security
- User Guide on CD-ROM
- Power Adapter
- Ethernet Network Cable
- Quick Install Guide
- Registration Card

Dual-Band
5GHz +
802.11a

2.4GHz
802.11g

Dual-Band
Wireless A+G

Broadband Router

Quick Installation

Wireless




1 Router Installation using the Setup Wizard

NOTE: Do not connect the Router until instructed to do so.

- A** Locate your PC's CD-ROM drive and insert the Setup CD-ROM. The Setup Wizard should run automatically and the Welcome screen should appear. If it does not, click the **Start** button and select **Run**. In the field that appears, enter **D:\setup.exe** (if "D" is the letter of your CD-ROM drive).
- B** When the Welcome screen appears, click the **Click Here to Start** button in the middle of the screen.
- C** The first screen reminds you that you need a **modem** connected to your **PC** and an **Internet connection** before you start.
- D** Screen 2 asks you to disconnect the cable that connects the **modem** to the **PC's network port**.



E Then the next screen asks you to reconnect the modem's cable to the **Internet** port on the back of the Router.

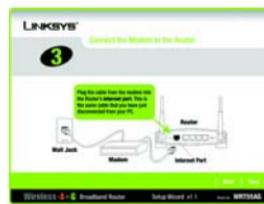

F Screen 4 asks you to locate the supplied network cable and the PC's network port from where you disconnected the modem. Connect one end of the network cable to the network port.



G Connect the other end of the network cable to one of the numbered ports on the back of the Router.



H Screen 6 asks you to locate the supplied power adapter. Connect one end to the power port on the back of the Router, and the other to an electrical outlet.



I Screen 7 asks you to look for the LEDs on the front of the Router. Make sure that the LEDs are lit for Power, Internet, and one of the numbered network connections.

If an LED isn't lit, check your connections again.

If a Static IP Internet connection is detected, the Setup Wizard will help you configure the network settings.



J If your Router is connected correctly, a **Password** screen will appear. Enter the default **admin** in the field. Then, click **Enter**.



K Screen 8 asks you to change the password to make your Router more secure. Enter a new password, which can be between 1 and 32 characters, in the **Password** field, then repeat it in the **Confirm** field.



L The Screen 9 you see will depend on the Internet connection that is detected by the Setup Wizard.

If you have a DSL Internet connection (L1) and your Internet Service Provider (ISP) requires you to log in to the Internet, enter your Internet User Name and Password in the fields, and click **Next**.



If you have a cable Internet connection (L2), your Host Name and Domain Name will appear in the fields. Click **Next**.



If your ISP uses a Static IP Address for your Internet connection, the *IP Address*, *Subnet Mask*, *Gateway*, and a *DNS* will appear in the fields. Click **Next**.



L3



M



N

If you select *WEP* security, choose between 64-bit and 128-bit encryption. Then, enter a passphrase to generate an automatic WEP key or enter it manually in *Key 1*. Click **Next**.



O



P



Q

If you select *PSK* security, select from *TKIP* or *AES* encryption, then enter a passphrase between 8 and 32 characters. Click **Next**.

If you select *WEP* security, choose between 64-bit and 128-bit encryption. Then, enter a passphrase to generate an automatic WEP key or enter it manually in *Key 1*. Click **Next**.



R



S

If you select *PSK* security, select from *TKIP* or *AES* encryption, then enter a passphrase between 8 and 32 characters. Click **Next**.

The next screen gives you the opportunity to check your settings. If anything is incorrect, click **Back** to find the screen it was entered on. Click **Save** if the settings are correct.



T

The Congratulations screen will appear when the installation is complete. Click **Online Registration** to register your Router or click **Exit** to exit the wizard.



U

The Router installation is complete.

LINKSYS
A Division of Cisco Systems, Inc.

For additional information or troubleshooting help, refer to the User Guide on the Setup CD-ROM. You can also call or email for further support.

24-hour Technical Support
800-326-7114
(toll-free from US or Canada)

E-mail Support
support@linksys.com

Website
<http://www.linksys.com> or
<http://support.linksys.com>

RMA (Return Merchandise Authorization)
<http://www.linksys.com/support>

FTP Site
<ftp://ftp.linksys.com>

Sales Information
800-546-5797 (800-LINKSYS)

Linksys is a registered trademark or trademark of Cisco Systems, Inc. and/or its affiliates in the U.S. and certain other countries. Copyright © 2004 Cisco Systems, Inc. All rights reserved.