

## Quick Installation Guide

WDRT-1202AC

1200Mbps 802.11ac Dual Band  
Wireless Gigabit Router



### 1. Package Contents

Thank you for choosing PLANET WDRT-1202AC. Before installing the router, please verify the contents inside the package box.

WDRT-1202AC

Quick Guide

Ethernet Cable

Power Adapter




If there is any item missing or damaged, please contact the seller immediately.


- 1 -

### 2. Physical Introduction

Front Panel of WDRT-1202AC

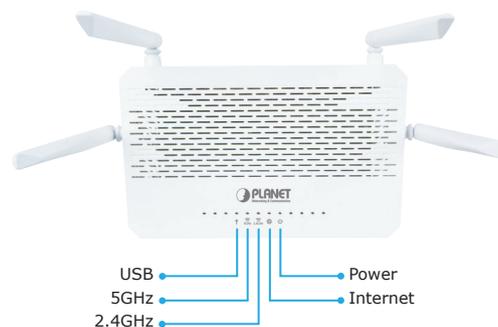

Rear Panel of WDRT-1202AC

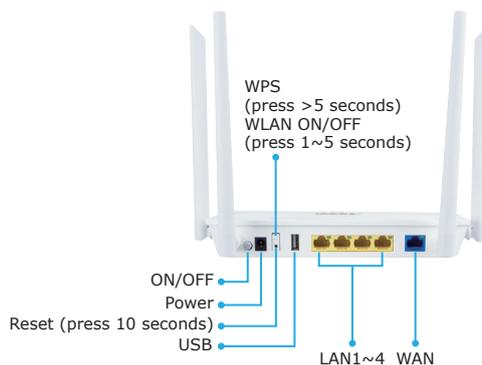

- 2 -

### 3. Hardware Installation

**Step 1:** Locate the WDRT-1202AC in an optimum place, and adjust the antenna for the best coverage.




**Step 2:** Connect the Power Adapter provided in the package to the WDRT-1202AC. The Power LED on the front panel will turn on accordingly.



- 3 -

**Step 3:** Follow the figure below to connect the network devices. It depends on your network environment to connect the WAN port to a Cable/xDSL modem, or the Ethernet directly in your place.

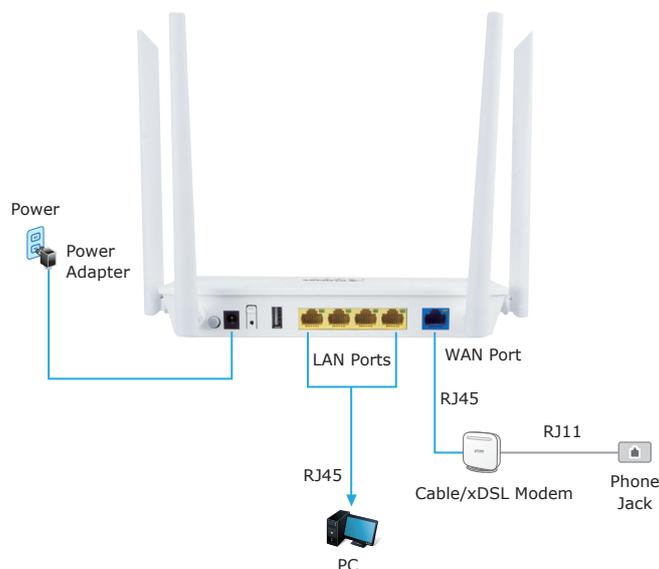


- 4 -

## 4. Network Configuration (Windows 7)

Set your computer to get an IP address from the Wireless Router:

1. Click the **"Start"** button located at the lower-left corner of your computer.
2. Click **"Control Panel"**.
3. Double-click the **"Network and Sharing Center"** icon.
4. Click **"Change Adapter Settings"**.
5. Double-click **"Local Area Connection"**.
6. Select **"Internet Protocol Version 4 (TCP/IPv4)"** and click **"Properties"**.
7. Select **"Obtain an IP Address automatically"** and **"Obtain DNS Server Address automatically"**, and then click the **"OK"** button twice to save the configuration.

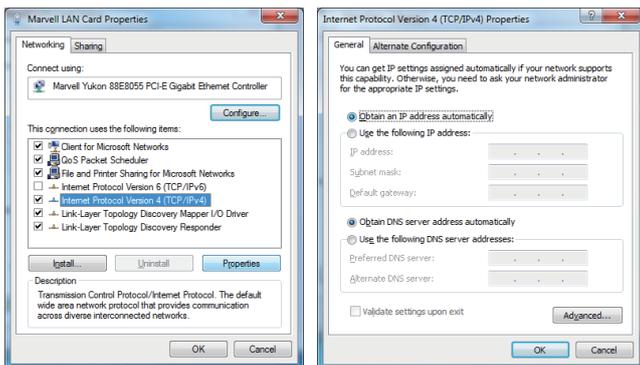

- 5 -

## 5. Enter into the Web Management

Default IP Address: **192.168.1.1**

Default User Name: **admin**

Default Password: **admin**

Default SSID: **PLANET\_2.4G\_XXXX**

**PLANET\_5G\_XXXX**

(**"X"** means the last 4 digits of the MAC address.)

**Step 1:** The Web management allows you to access and manage the Wireless Router easily. Launch the Web browser and enter the default IP address <http://192.168.1.1>



**Step 2:** When the login window pops up, please enter the User Name and Password. The default User Name and Password are both **"admin"**. Then click the **"Log In"** button to continue.




- 6 -

**Step 3:** Follow the wizard to configure WAN, Wi-Fi and router password.



**Step 4:** You can see the Web management UI of the WDRT-1202AC after configuring this device.

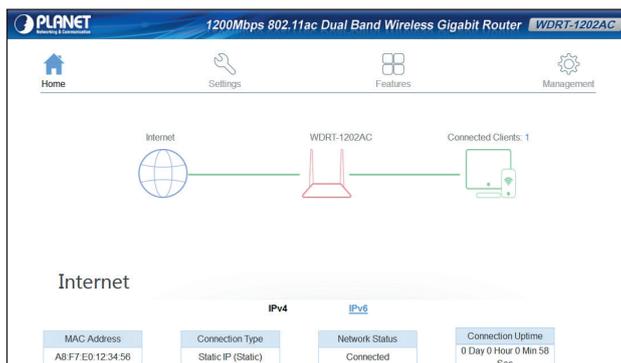

- 7 -

## Further Information:

The above steps introduce the simple installations and configurations of the WDRT-1202AC. For further configurations of LAN, Wireless, Access Control, etc, please refer to the user manual, which can be downloaded from the website.

<http://www.planet.com.tw/en/support/download.php?type1=4&model=49025&type=3>



If you have further questions, please contact the local dealer or distributor where you purchased this product.



2011-E50340-000

- 8 -