


Quick Start Guide

Hardware Connections

Installation der Hardware | Instalación del Dispositivo. | Installation du matériel
 Installazione hardware | Hardware installatie | Installation av hårdvara | Laitteiston asennus

- 1** Connect using the gray telephone cable.
 Schließen Sie das graue Telefonkabel an.
 Conectar utilizando el cable de teléfono gris.
 Branchez le câble téléphonique gris.
 Collegare il cavetto telefonico grigio.
 Verbindt met de grijze telefoon kabel.
 Anslut med den grå telefonkabeln.
 Kytke harmaa puhelinkaapeli.
- 2** Connect using yellow Ethernet cable.
 Schließen Sie das gelbe Netzwerkkabel an.
 Conectar utilizando el cable de Ethernet amarillo.
 Branchez le câble Ethernet jaune.
 Collegare il cavetto Ethernet giallo.
 Verbindt met de gele ethernet kabel.
 Anslut med den gula Ethernet-kabeln.
 Kytke keltainen Ethernet-kaapeli.
- 3** Connect power and turn on.
 Schließen Sie das Stromkabel an,
 und schalten Sie das Gerät ein.
 Conectar la energía y encender.
 Branchez l'alimentation et allumez.
 Collegare l'alimentazione e accendere.
 Verbind stroom en schakel in.
 Anslut strömmen och slå på enheten.
 Kytke virtakaapeli ja kytke virta päälle.
- 4** Check LEDs.
 Prüfen Sie die LEDs.
 Verificar los indicadores LED.
 Vérifiez l'allumage des voyants.
 Controllare i LED.
 Controlleer LED's
 Kontrollera LED-lamporna.
 Tarkista merkivalot.

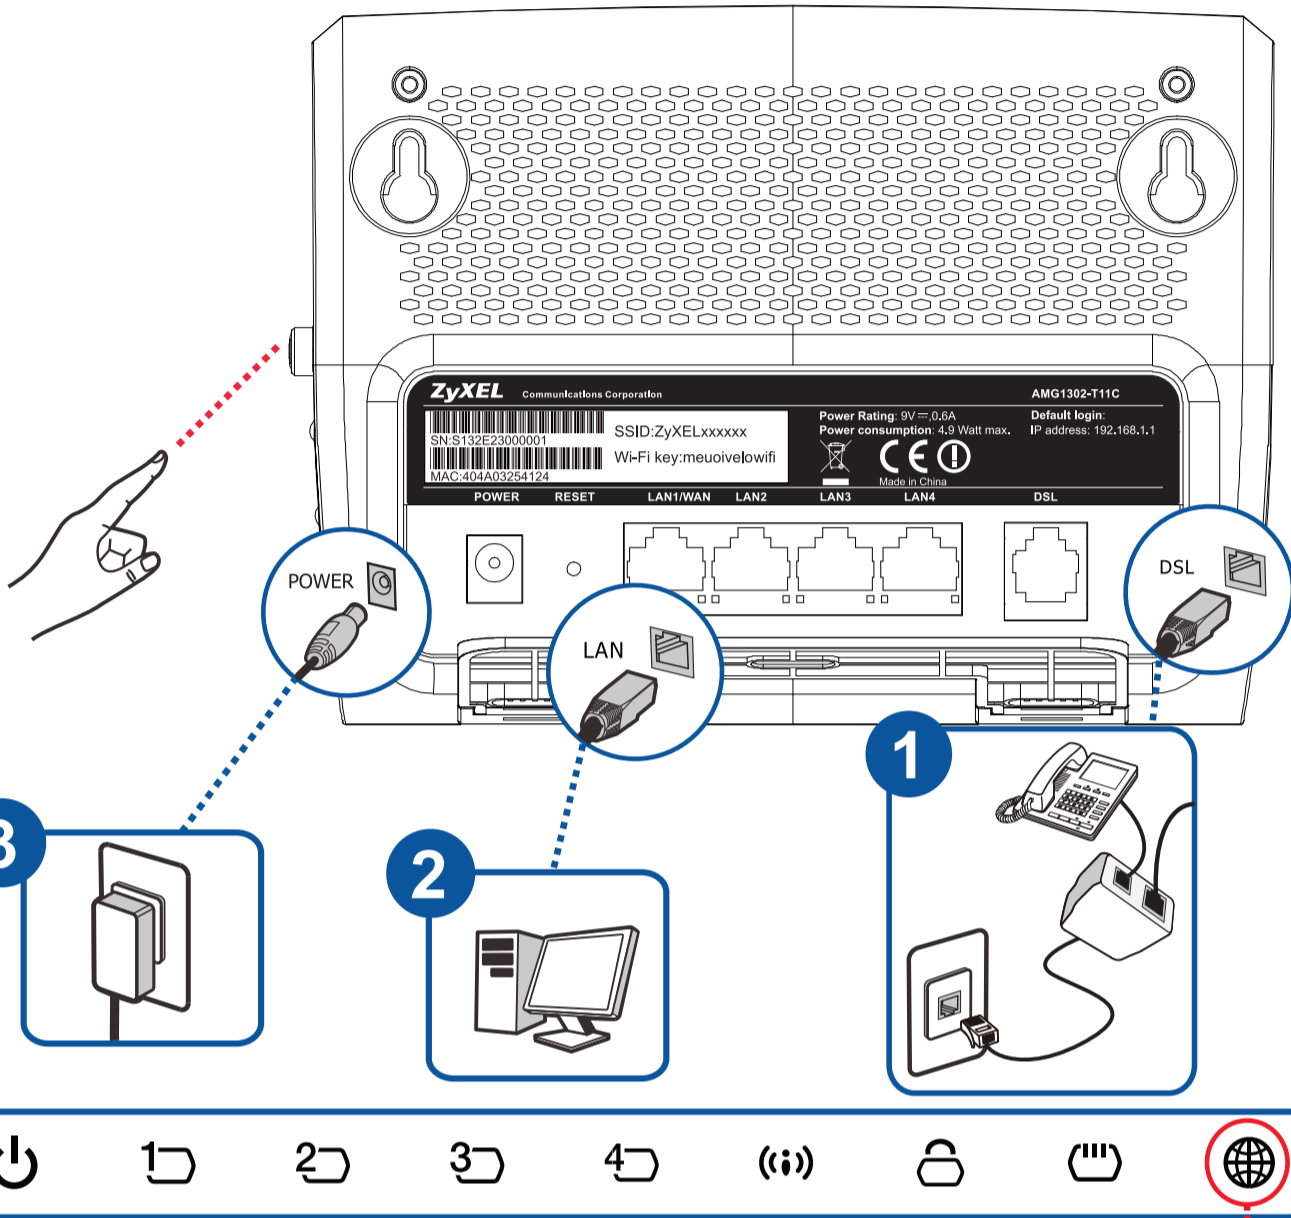

 INTERNET ON	Internet is ready. Go to Wireless Setup. Die Internetverbindung ist bereit. Sie können das WLAN einrichten. Configuración de acceso a Internet preparada, vaya a configuración Wi-Fi. Vous êtes connecté à Internet. Vous pouvez maintenant configurer votre connection WiFi.	Internet è pronto. Andare alla configurazione Wireless Setup. Internet is klaar. Ga naar Draadloze instellingen. Internet är redo. Gå till trådlösa inställningar. Internet-yhteys on valmis. Siirry langattoman yhteyden määrittäseen.
 INTERNET OFF	Internet is not ready. Go to Internet Setup. Die Internetverbindung ist nicht bereit. Sie müssen zunächst die Internetverbindung einrichten. Configuración de acceso a Internet no correcta, vuelva a configuración. Vous n'êtes pas connecté à Internet. Suivez la procédure d'installation à Internet.	Internet non è pronto. Andare alla configurazione Internet Setup. Internet is niet OK. Ga naar Internet instellingen. Internet är inte redo. Gå till Internet-inställningarna. Internet-yhteys ei ole valmis. Siirry Internet-asetusten määrittäseen.

Internet Setup

Einrichten des Internets | Configuración Internet. | Installation d'Internet
 Configurazione Internet | Internet instellingen | Internet-inställningar | Internet-asetusten määrittys

Wireless Setup

Check Wi-Fi (**WLAN**) is on



If not, turn it on

No WPS


1

The SSID and Wireless key are on the device sticker.
Die SSID und der Schlüssel für die WLAN-Verbindung befinden sich auf dem Etikett am Gerät.
El SSID y la contraseña inalámbrica están en la pegatina del Dispositivo.
Le SSID et la clé WiFi se trouvent sur l'étiquette de l'appareil.
La chiave Wireless e SSID sono riportati sull'etichetta del dispositivo.
De SSID en sleutel staan op de sticker van het apparaat.
SSID och den trådlösa nyckeln finns på enhetens etikett.
SSID-tunnus ja langattoman verkon avain lukevat laitteeseen kiinnitetyssä tarrassa.


2

Find the device with this SSID. Enter Wireless key to connect.
Suchen Sie das Gerät mit dieser SSID. Geben Sie den Schlüssel für die WLAN-Verbindung ein.
Buscar el Dispositivo con este SSID. Escriba la contraseña inalámbrica (WiFi) para conectarse.
Saisissez la clé WiFi pour vous connecter.
Individuare il dispositivo con questo SSID. Immettere la chiave Wireless per effettuare il collegamento.
Zoek het apparaat met deze SSID. Voer de sleutel in om te verbinden.
Sök enheten med detta SSID. Ange trådlös nyckel för att ansluta.
Etsi laite SSID-tunnuksella. Muodosta yhteys syöttämällä langattoman verkon avain.

1

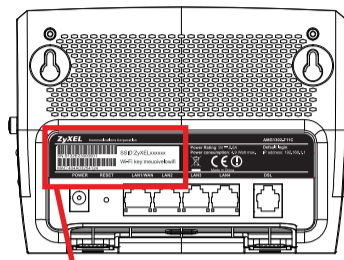

2

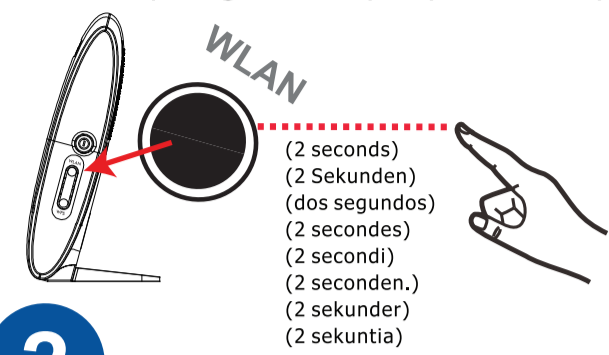

Secure Wi-Fi with WPS


1

Press the WPS Button on the device.
Drücken Sie auf die WPS-Taste des Geräts.
Pulse el botón WPS en el Dispositivo.
Appuyez sur le bouton WPS de l'équipement.
Premere il pulsante WPS sul dispositivo.
Druk de WPS knop op het apparaat.
Tryck på enhetens WPS-knapp.
Paina WPS-painiketta laitteessa.


2

Press the WPS button on the client.
Drücken Sie auf die WPS-Taste des Client-Geräts.
Pulse el botón WPS en el Cliente.
Appuyez sur le bouton WPS du client.
Premere il pulsante WPS sul client.
Druk de WPS knop op de client.
Tryck på klientens WPS-knapp.
Paina WPS-painiketta verkkoon liitettävissä laitteessa.

1

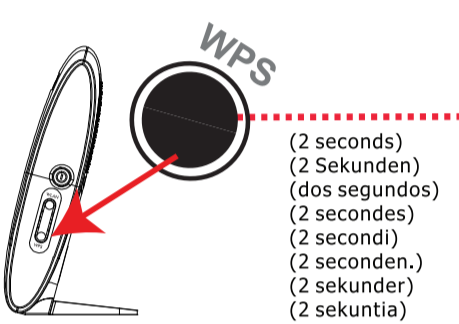

2

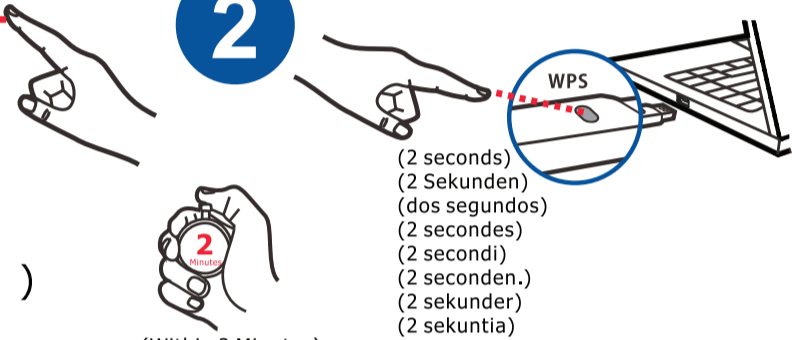


Freestanding Installation

1

Connecting the stand carefully as shown.
Verbinden Sie den Standfuß wie im Bild.
Conectando el soporte cuidadosamente como se muestra.
Connecter le support précautionneusement comme indiqué.
Collegare e posizionare come indicato.
Bevestig de voet voorzichtig, zoals afgebeeld.
Asenna jalka huolellisesti kuvan mukaan.
Installera stativet enligt anvisningar.

2

Place the device vertically on a smooth level surface.
Stellen Sie das Gerät auf einen ebenen Untergrund.
Coloque el dispositivo en posición vertical sobre una superficie plana lisa.
Poser l'équipement verticalement sur une surface plane.
Mettere il dispositivo su una superficie lineare.
Plaats het apparaat vertikaal, op een vlakke ondergrond.
Sijoi laite pystyasentoon tasaisella alustalla.
Placera enheten vertikalt på en plan yta.

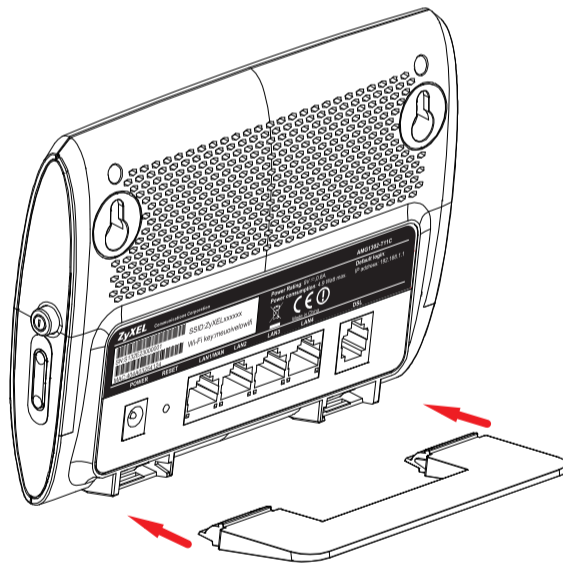

Troubleshooting

None of the LEDs turn on

- Make sure that you have the correct power cord connected to the AMG1302-T11C and plugged into an appropriate power source.

PWR Red

- The AMG1302-T11C has a malfunction. Restart the AMG1302-T11C using the included power cable connected to an appropriate power source.

DSL Off

- Make sure that the cables from the splitter are properly connected to the **DSL** port and telephone wall jacks.

DSL Green Blinking

- The AMG1302-T11C is initializing the DSL line. Wait until it turns green.
- If the DSL LED is continuously blinking, make sure that the cables from the splitter are properly connected to the **DSL** port and telephone wall jacks.

WLAN Off

- Make sure the wireless LAN is enabled on the AMG1302-T11C.
- Make sure you are using the correct SSID and key.

INTERNET Off

- If the Internet connection is down, make sure that the Ethernet cable is properly connected from the AMG1302-T11C **ETHERNET** port to your computer.

INTERNET Red

- The AMG1302-T11C cannot get an IP address. Make sure you entered your ISP account information correctly in the wizard.


Cannot see the **Login** screen

- Make sure your Internet browser does not block pop-up windows and has JavaScript and Java enabled.

Declarations

European Union - Disposal and Recycling Information

The symbol below means that according to local regulations your product and/or its battery shall be disposed of separately from domestic waste. If this product is end of life, take it to a recycling station designated by local authorities. At the time of disposal, the separate collection of your product and/or its battery will help save natural resources and ensure that the environment is sustainable development.

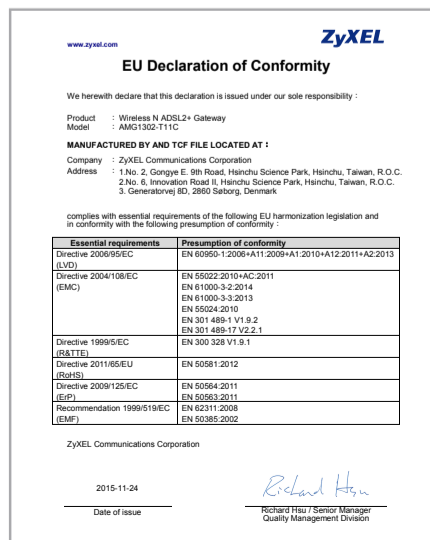

EN, DE, ES, FR, IT, NL, SUO, SVE

Copyright © 2015 ZyXEL Communications Corp. All Rights Reserved