

# **User's Manual of WLAN Broadband Router (1T1R)**

USER MANUAL 1.0.0

© 2011

## Table of Contents

<b>1. Terminology</b> .....	<b>5</b>
<b>2. Introduction</b> .....	<b>7</b>
2.1 Package contents .....	7
2.2 Rear Panel Description .....	8
2.3 Front Panel Description .....	9
<b>3. Installation</b> .....	<b>10</b>
3.1 Hardware Installation.....	10
3.1.1 Appearance and Interface Introduction .....	10
3.1.2 Hardware installation steps .....	12
3.2 Software Installation .....	15
<b>4. Software configuration</b> .....	<b>15</b>
4.1 Prepare your PC to configure the WLAN Broadband Router .....	15
4.2 Connect to the WLAN Broadband Router .....	16
4.3 Management and configuration on the WLAN Broadband Router .....	16
4.3.1 Setup Wizard.....	16
4.3.2 Operation Mode .....	20
4.3.3 Wireless.....	21
4.3.3.1 Basic Settings.....	21
4.3.3.2 Advanced Settings .....	23
4.3.3.3 Security .....	24
4.3.3.3.1 Disable .....	24
4.3.3.3.2 WEP .....	25
4.3.3.3.3 WPA .....	26
4.3.3.3.4 WPA2 .....	27
4.3.3.3.5 WPA-Mixed .....	28
4.3.3.4 Access Control .....	29
4.3.3.5 WDS Settings.....	30
4.3.3.5.1 WDS Security Setup .....	31
4.3.3.5.2 WDS AP Table .....	31
4.3.3.6 Site Survey.....	32
4.3.3.7 WPS .....	33
4.3.3.8 Schedule.....	34
4.3.4 TCP/IP Settings.....	35
4.3.4.1 LAN Interface Setup .....	35
4.3.4.1.1 Static DHCP Setup.....	37
4.3.4.2 WAN Interface Setup .....	38

4.3.4.2.1	Static IP .....	38
4.3.4.2.2	DHCP Client .....	40
4.3.4.2.3	PPPoE .....	42
4.3.4.2.4	PPTP .....	44
4.3.4.2.5	L2TP .....	46
4.3.5	Firewall .....	48
4.3.5.1	Port Filtering .....	48
4.3.5.2	IP Filtering .....	49
4.3.5.3	MAC Filtering.....	50
4.3.5.4	Port Forwarding .....	51
4.3.5.5	URL Filtering.....	52
4.3.5.6	DMZ.....	53
4.3.5.7	VLAN .....	54
4.3.6	QoS .....	55
4.3.7	Management.....	57
4.3.7.1	Status.....	57
4.3.7.2	Statistics .....	59
4.3.7.3	DDNS.....	60
4.3.7.4	Time Zone Setting.....	61
4.3.7.5	Denial-of-Service .....	62
4.3.7.6	Log .....	63
4.3.7.7	Upgrade Firmware .....	64
4.3.7.8	Save/ Reload Settings .....	64
4.3.7.9	Password .....	65
<b>5.</b>	<b>FREQUENTLY ASKED QUESTIONS (FAQ).....</b>	<b>66</b>
5.1	What and how to find my PC's IP and MAC address .....	66
5.2	What is Wireless LAN .....	66
5.3	What are ISM bands .....	66
5.4	How does wireless networking work .....	66
5.5	What is BSSID .....	67
5.6	What is ESSID .....	67
5.7	What are potential factors that may causes interference .....	67
5.8	What are the Open System and Shared Key authentications .....	67
5.9	What is WEP .....	67
5.10	What is Fragment Threshold .....	68
5.11	What is RTS (Request to Send) Threshold .....	68
5.12	What is Beacon Interval .....	68
5.13	What is Preamble Type .....	68

5.14	What is SSID Broadcast .....	68
5.15	What is Wi-Fi Protected Access (WPA) .....	69
5.16	What is WPA2 .....	69
5.17	What is 802.1x Authentication .....	69
5.18	What is Temporal Key Integrity Protocol (TKIP) .....	69
5.19	What is Advanced Encryption Standard (AES) .....	69
5.20	What is Inter-Access Point Protocol (IAPP) .....	69
5.21	What is Wireless Distribution System (WDS) .....	69
5.22	What is Universal Plug and Play (uPNP) .....	69
5.23	What is Maximum Transmission Unit (MTU) Size .....	70
5.24	What is Clone MAC Address .....	70
5.25	What is DDNS .....	70
5.26	What is NTP Client .....	70
5.27	What is VPN .....	70
5.28	What is IPSEC .....	70
5.29	What is WLAN Block Relay between Clients .....	70
5.30	What is WMM .....	70
5.31	What is WLAN ACK TIMEOUT .....	70
5.32	What is Modulation Coding Scheme (MCS) .....	70
5.33	What is Frame Aggregation .....	71
5.34	What is Guard Intervals (GI) .....	71

## 1. Terminology

3DES	Triple Data Encryption Standard
AES	Advanced Encryption Standard
ANSI	American National Standards Institute
AP	Access Point
CCK	Complementary Code Keying
CSMA/CA	Carrier Sense Multiple Access/Collision Avoidance
CSMA/CD	Carrier Sense Multiple Access/Collision Detection
DDNS	Dynamic Domain Name Server
DH	Diffie-Hellman Algorithm
DHCP	Dynamic Host Configuration Protocol
DSSS	Direct Sequence Spread Spectrum
EAP	Extensible Authentication Protocol
ESP	Encapsulating Security Payload
FCC	Federal Communications Commission
FTP	File Transfer Protocol
IEEE	Institute of Electrical and Electronic Engineers
IKE	Internet Key Exchange
IP	Internet Protocol
ISM	Industrial, Scientific and Medical
LAN	Local Area Network
MAC	Media Access Control
MD5	Message Digest 5
NAT	Network Address Translation
NT	Network Termination
NTP	Network Time Protocol
PPTP	Point to Point Tunneling Protocol
PSD	Power Spectral Density
RF	Radio Frequency
SHA1	Secure Hash Algorithm
SNR	Signal to Noise Ratio
SSID	Service Set Identification
TCP	Transmission Control Protocol
TFTP	Trivial File Transfer Protocol

TKIP	Temporal Key Integrity Protocol
UPNP	Universal Plug and Play
VPN	Virtual Private Network
WDS	Wireless Distribution System
WEP	Wired Equivalent Privacy
WLAN	Wireless Local Area Network
WPA	Wi-Fi Protected Access

## 2. Introduction

The Wireless LAN Broadband Router is an affordable IEEE 802.11b/g with 802.11n specifications of wireless LAN broadband router solution; setting SOHO and enterprise standard for high performance, secure, manageable and reliable WLAN. This document describes the steps required for the initial IP address assign and other WLAN router configuration. The description includes the implementation of the above steps.

### 2.1 Package contents

The package of the WLAN Broadband Router includes the following items,

- ✓ The WLAN Broadband Router
- ✓ The DC Power Adapter
- ✓ The Documentation CD
- ✓ PoE Injector
- ✓ Tie

## 2.2 Rear Panel Description



LED Indicator	State	Description
⏻	ON	The WLAN Broadband Router is powered ON.
	Off	The WLAN Broadband Router is powered Off.
((•))	Flashing	Data is transmitting or receiving on the wireless.
	Off	No data is transmitting or receiving on the wireless.
Main	Flashing	Data is transmitting or receiving on the WAN interface.
	ON	Port linked.
	Off	No link.
Sec.	Flashing	Data is transmitting or receiving on the LAN interface.
	ON	Port linked.
	Off	No link.

## 2.3 Front Panel Description



Interfaces	Description
LAN	The RJ-45 sockets allow LAN connection through Category 5 cables. Support auto-sensing on 10/100M speed and half/ full duplex; comply with IEEE 802.3/ 802.3u respectively.
WAN	The RJ-45 socket allows WAN connection through a Category 5 cable. Support auto-sensing on 10/100M speed and half/ full duplex; comply with IEEE 802.3/ 802.3u respectively.

## 3. Installation

### 3.1 Hardware Installation

#### 3.1.1 Appearance and Interface Introduction

Notes: The product shot is for reference only please refer to physical product.

LED Panel



Waterproof Sliding Door

Pass trough Ethernet cable from this cable



Wall Mount

Pole Mount



LAN port with POE

WAN port with POE



### 3.1.2 Hardware installation steps

Step1: Push the button in the side to remove upper housing.



Step2: Pass through Ethernet cable from the hole; insert the cable to LAN port.

**Note: RJ-45 8P8C Ethernet cable is required.**



Step3: Install the upper housing and make sure the housing is well installed.



Step4:

Install POE Injector

DC: Insert adapter

POE: This hole is linked to Outdoor AP with RJ-45

LAN: This hole is linked to Hub/router/ADSL modem device with RJ-45

Reset: Push continually the reset button 5 ~ 10 seconds to reset the configuration parameters to factory defaults.



Step5: Complete the hardware installation as diagram at below.



## 3.2 Software Installation

There is no software driver or utility installation needed, but only the configuration setting. Please refer to chapter 4 for software configuration.

**Notice:** It will take about 50 seconds to complete the boot up sequence after powered on the WLAN Broadband Router; Power LED will be active, and after that the WLAN Activity LED will be flashing to show the WLAN interface is enabled and working now.

## 4. Software configuration

There are web based management and configuration functions allowing you to have the jobs done easily.

The WLAN Broadband Router is delivered with the following factory default parameters on the Ethernet LAN interfaces.

Default IP Address: 192.168.1.254  
Default IP subnet mask: 255.255.255.0  
WEB login User Name: <empty>  
WEB login Password: <empty>

### 4.1 Prepare your PC to configure the WLAN Broadband Router

#### **For OS of Microsoft Windows 2000/ XP:**

1. Click the *Start* button and select *Settings*, then click *Control Panel*. The *Control Panel* window will appear.
2. Move mouse and double-click the right button on *Network and Dial-up Connections* icon. Move mouse and double-click the *Local Area Connection* icon. The *Local Area Connection* window will appear. Click *Properties* button in the *Local Area Connection* window.
3. Check the installed list of *Network Components*. If TCP/IP is not installed, click the *Add* button to install it; otherwise go to step 6.
4. Select *Protocol* in the *Network Component Type* dialog box and click *Add* button.
5. Select *TCP/IP* in *Microsoft of Select Network Protocol* dialog box then click *OK* button to install the TCP/IP protocol, it may need the Microsoft Windows CD to complete the installation. Close and go back to *Network* dialog box after the TCP/IP installation.
6. Select *TCP/IP* and click the *properties* button on the *Network* dialog box.
7. Select *Specify an IP address and type* in values as following example.
  - ✓ IP Address: 192.168.1.1, any IP address within 192.168.1.1 to 192.168.1.253 is good to connect the Wireless LAN Access Point.
  - ✓ IP Subnet Mask: 255.255.255.0
8. Click *OK* to complete the IP parameters setting.

#### **For OS of Microsoft Windows Vista / 7:**

1. Click the *Start* button and select *Settings*, then click *Control Panel*. The *Control Panel* window will appear.
2. Move mouse and double-click the right button on *Network Connections* item. The *Network Connections* window will appear. Double click *Local Area Connection* icon, then *User Account Control* window shown. Right click *Continue* button to set properties.
3. In *Local Area Connection Properties* window, Choose *Networking* tab, move mouse and click *Internet Protocol Version 4 (TCP/IPv4)*, then click *Properties* button.
4. Move mouse and click *General* tab, Select *Specify an IP address* and type in values as following example.
  - ✓ IP Address: 192.168.1.1, any IP address within 192.168.1.1 to 192.168.1.253 is good to connect the Wireless LAN Access Point.
  - ✓ IP Subnet Mask: 255.255.255.0
5. Click *OK* to complete the IP parameters setting.

## 4.2 Connect to the WLAN Broadband Router

Open a WEB browser, i.e. Microsoft Internet Explorer 6.1 SP1 or above, then enter 192.168.1.254 on the URL to connect the WLAN Broadband Router.

## 4.3 Management and configuration on the WLAN Broadband Router

### 4.3.1 Setup Wizard

This page guides you to configure wireless broadband router for first time.

### Setup Wizard

The setup wizard will guide you to configure access point for first time. Please follow the setup wizard step by step.

---

**Welcome to Setup Wizard.**

**The Wizard will guide you the through following steps. Begin by clicking on Next.**

1. Setup Operation Mode
2. Choose your Time Zone
3. Setup LAN Interface
4. Setup WAN Time Zone
5. Wireless LAN Setting
6. Wireless Security Setting

#### I. Operation Mode

This page followed by Setup Wizard page to define the operation mode.

### Operation Mode

You can setup different modes to LAN and WLAN interface for NAT and bridging function.

---

**Gateway:** In this mode, the device is supposed to connect to internet via ADSL/Cable Modem. The NAT is enabled and PCs in LAN ports share the same IP to ISP through WAN port. The connection type can be setup in WAN page by using PPPOE, DHCP client, PPTP client , L2TP client or static IP.

**Bridge:** In this mode, all ethernet ports and wireless interface are bridged together and NAT function is disabled. All the WAN related function and firewall are not supported.

**Wireless ISP:** In this mode, all ethernet ports are bridged together and the wireless client will connect to ISP access point. The NAT is enabled and PCs in ethernet ports share the same IP to ISP through wireless LAN. You must set the wireless to client mode first and connect to the ISP AP in Site-Survey page. The connection type can be setup in WAN page by using PPPOE, DHCP client, PPTP client , L2TP client or static IP.

## II. Time Zone Setting

This page is used to enable and configure NTP client.

### 2. Time Zone Setting

You can maintain the system time by synchronizing with a public time server over the Internet.

---

**Enable NTP client update**  
 **Automatically Adjust Daylight Saving**

**Time Zone Select :**

**NTP server :**

## III. LAN Interface Setup

This page is used to configure local area network IP address and subnet mask.

### 3. LAN Interface Setup

This page is used to configure the parameters for local area network which connects to the LAN port of your Access Point. Here you may change the setting for IP address, subnet mask, DHCP, etc..

---

**IP Address:**

**Subnet Mask:**

#### IV. WAN Interface Setup

This page is used to configure WAN access type.

### 4. WAN Interface Setup

This page is used to configure the parameters for Internet network which connects to the WAN port of your Access Point. Here you may change the access method to static IP, DHCP, PPPoE, PPTP or L2TP by click the item value of WAN Access type.

---

**WAN Access Type:**

#### V. Wireless Basic Settings

This page is used to configure basic wireless parameters like Band, Mode, Network Type SSID, Channel Number, Enable Mac Clone (Single Ethernet Client).

### 5. Wireless Basic Settings

This page is used to configure the parameters for wireless LAN clients which may connect to your Access Point.

---

**Band:**

**Mode:**

**Network Type:**

**SSID:**

**Channel Width:**

**ControlSideband:**

**Channel Number:**

**Enable Mac Clone (Single Ethernet Client)**

## VI. Wireless Security Setup

This page is used to configure wireless security.

### 6. Wireless Security Setup

This page allows you setup the wireless security. Turn on WEP or WPA by using Encryption Keys could prevent any unauthorized access to your wireless network.

---

**Encryption:**

### 4.3.2 Operation Mode

This page is used to configure which mode wireless broadband router acts.

## Operation Mode

You can setup different modes to LAN and WLAN interface for NAT and bridging function.

---

- Gateway:** In this mode, the device is supposed to connect to internet via ADSL/Cable Modem. The NAT is enabled and PCs in LAN ports share the same IP to ISP through WAN port. The connection type can be setup in WAN page by using PPPOE, DHCP client, PPTP client , L2TP client or static IP.
- Bridge:** In this mode, all ethernet ports and wireless interface are bridged together and NAT function is disabled. All the WAN related function and firewall are not supported.
- Wireless ISP:** In this mode, all ethernet ports are bridged together and the wireless client will connect to ISP access point. The NAT is enabled and PCs in ethernet ports share the same IP to ISP through wireless LAN. You must set the wireless to client mode first and connect to the ISP AP in Site-Survey page. The connection type can be setup in WAN page by using PPPOE, DHCP client, PPTP client , L2TP client or static IP.

Item	Description
Gateway	Traditional gateway configuration. It always connects internet via ADSL/Cable Modem. LAN interface, WAN interface, Wireless interface, NAT and Firewall modules are applied to this mode
Bridge	Each interface (LAN, WAN and Wireless) regards as bridge. NAT, Firewall and all router's functions are not supported
Wireless ISP	Switch Wireless interface to WAN port and all Ethernet ports in bridge mode. Wireless interface can do all router's functions
Apply Changes	Click the <i>Apply Changes</i> button to complete the new configuration setting.
Reset	Click the <i>Reset</i> button to abort change and recover the previous configuration setting.

### 4.3.3 Wireless

#### 4.3.3.1 Basic Settings

This page is used to configure the parameters for wireless LAN clients that may connect to your Broadband Router. Here you may change wireless settings as well as wireless network parameters.

## Wireless Basic Settings

This page is used to configure the parameters for wireless LAN clients which may connect to your Access Point. Here you may change wireless encryption settings as well as wireless network parameters.

---

**Disable Wireless LAN Interface**

**Band:**

**Mode:**

**Network Type:**

**SSID:**

**Channel Width:**

**Control Sideband:**

**Channel Number:**

**Broadcast SSID:**

**WMM:**

**Data Rate:**

**Associated Clients:**

**Enable Mac Clone (Single Ethernet Client)**

**Enable Universal Repeater Mode (Acting as AP and client simultaneously)**

**SSID of Extended Interface:**

Item	Description
Disable Wireless LAN Interface	Click on to disable the wireless LAN data transmission.
Band	Click to select 2.4GHz(B) / 2.4GHz(G) / 2.4GHz(N) / 2.4GHz(B+G) / 2.4GHz(G+N) / 2.4GHz(B+G+N)
Mode	Click to select the WLAN AP / Client / WDS / AP+WDS / AP+MESH / MESH wireless mode.
Network Type	While Mode is selected to be Client. Click to select the network type infrastructure or Ad hoc.
SSID	It is the wireless network name. The SSID can be 32 bytes long.

Channel Width	Select the operating channel width 20 MHz or 40 MHz. <a href="#">[N band only]</a>
Control Sideband	Select the Sideband with Upper or Lower for channel width 40MHz. <a href="#">[N band only]</a>
Channel Number	Select the wireless communication channel from pull-down menu.
Broadcast SSID	Click to enable or disable the SSID broadcast function.
WMM	Click Enabled/Disabled to init WMM feature.
Data Rate	Select the transmission data rate from pull-down menu. Data rate can be auto-select, 1M to 54Mbps or MCS.
Associated Clients	Click the <b>Show Active Clients</b> button to open Active Wireless Client Table that shows the MAC address, transmit-packet, receive-packet and transmission-rate for each associated wireless client.
Enable Mac Clone (Single Ethernet Client)	Take Laptop NIC MAC address as wireless client MAC address. <a href="#">[Client Mode only]</a>
Enable Universal Repeater Mode	Click to enable Universal Repeater Mode
SSID of Extended Interface	Assign SSID when enables Universal Repeater Mode.
Apply Changes	Click the <b>Apply Changes</b> button to complete the new configuration setting.
Reset	Click the <b>Reset</b> button to abort change and recover the previous configuration setting.

### 4.3.3.2 Advanced Settings

These settings are only for more technically advanced users who have a sufficient knowledge about wireless LAN. These settings should not be changed unless you know what effect the changes will have on your WLAN Broadband Router.

## Wireless Advanced Settings

These settings are only for more technically advanced users who have a sufficient knowledge about wireless LAN. These settings should not be changed unless you know what effect the changes will have on your Access Point.

---

**Fragment Threshold:**  (256-2346)

**RTS Threshold:**  (0-2347)

**Beacon Interval:**  (20-1024 ms)

**Preamble Type:**  Long Preamble  Short Preamble

**EXTERNAL ANTENNA:**  Directional  Omni-Directional

**IAPP:**  Enabled  Disabled

**Protection:**  Enabled  Disabled

**Aggregation:**  Enabled  Disabled

**Short GI:**  Enabled  Disabled

**WLAN Partition:**  Enabled  Disabled

**RF Output Power:**  100%  70%  50%  35%  15%

Item	Description
Fragment Threshold	Set the data packet fragmentation threshold, value can be written between 256 and 2346 bytes.
RTS Threshold	Set the RTS Threshold, value can be written between 0 and 2347 bytes.
Beacon Interval	Set the Beacon Interval, value can be written between 20 and 1024 ms.
Preamble Type	Click to select the <i>Long Preamble</i> or <i>Short Preamble</i> support on the wireless data packet transmission.
External Antenna	Select the <i>Directional</i> or <i>Omni-Directional</i> function.
IAPP	Click to enable or disable the IAPP function.
Protection	Protect 802.11n user priority.

Aggregation	Click to enable or disable the Aggregation function.
Short GI	Click to enable or disable the short Guard Intervals function.
WLAN Partition	Click to enable or disable the WLAN Partition function.
RF Output Power	To adjust transmission power level.
Apply Changes	Click the <b>Apply Changes</b> button to complete the new configuration setting.
Reset	Click the <b>Reset</b> button to abort change and recover the previous configuration setting.

### 4.3.3.3 Security

This page allows you setup the wireless security. Turn on WEP, WPA; WPA2 by using encryption keys could prevent any unauthorized access to your wireless network.

#### 4.3.3.3.1 Disable

### Wireless Security Setup

This page allows you setup the wireless security. Turn on WEP or WPA by using Encryption Keys could prevent any unauthorized access to your wireless network.

---

**Select SSID:** Root AP - RTK 11n AP ▼

---

**Encryption:** Disable ▼

**802.1x Authentication:**

Item	Description
Select SSID	Select the SSID from multiple APs.
Disable	Select the “Disable” option to disable wireless encryption.
Use 802.1x Authentication	While Encryption is selected to be WEP. Click the check box to enable IEEE 802.1x authentication function.
Apply Changes	Click the <b>Apply Changes</b> button to complete the new configuration setting.
Reset	Click the <b>Reset</b> button to abort change and recover the previous configuration setting.

### 4.3.3.3.2 WEP

## Wireless Security Setup

This page allows you setup the wireless security. Turn on WEP or WPA by using Encryption Keys could prevent any unauthorized access to your wireless network.

---

Select SSID: Root AP - RTK 11n AP Apply Changes Reset

---

**Encryption:** WEP

**802.1x Authentication:**

**Authentication:**  Open System  Shared Key  Auto

**Key Length:** 64-bit

**Key Format:** Hex (10 characters)

**Encryption Key:** \*\*\*\*\*

Item	Description
Select SSID	Select the SSID from multiple APs.
WEP	Select the “WEP” to enable WEP encryption for wireless security.
802.1x Authentication	While Encryption is selected to be WEP. Click the check box to enable IEEE 802.1x authentication function.
Authentication Type	Click to select the authentication type in <i>Open System</i> , <i>Shared Key</i> or <i>Auto</i> selection.
Key Length	Select the WEP shared secret key length from pull-down menu. The length can be chose between 64-bit and 128-bit (known as “WEP2”) keys. The WEP key is composed of initialization vector (24 bits) and secret key (40-bit or 104-bit).
Key Format	Select the WEP shared secret key format from pull-down menu. The format can be chose between plant text (ASCII) and hexadecimal (HEX) code.
Encryption Key	Secret key of WEP security encryption function.
Apply Changes	Click the <i>Apply Changes</i> button to complete the new configuration setting.
Reset	Click the <i>Reset</i> button to abort change and recover the previous configuration setting.

WEP encryption key (secret key) length:

Format	Length	
	64-bit	128-bit
ASCII	5 characters	13 characters
HEX	10 hexadecimal codes	26 hexadecimal codes

### 4.3.3.3.3 WPA

## Wireless Security Setup

This page allows you setup the wireless security. Turn on WEP or WPA by using Encryption Keys could prevent any unauthorized access to your wireless network.

---

Select SSID: Root AP - RTK 11n AP ▼

---

**Encryption:** WPA ▼

**Authentication Mode:**  Enterprise (RADIUS)  Personal (Pre-Shared Key)

**WPA Cipher Suite:**  TKIP  AES

**Pre-Shared Key Format:** Passphrase ▼

**Pre-Shared Key:**

Item	Description
Select SSID	Select the SSID from multiple APs.
WPA	Select the “WPA” to enable WPA encryption for wireless security.
Authentication Mode	While Encryption is selected to be WPA. Click to select the WPA Authentication Mode with Enterprise (RADIUS) or Personal (Pre-Shared Key).
WPA Cipher Suite	Select the Cipher Suite for WPA encryption.
Pre-Shared Key Format	While Encryption is selected to be WPA. Select the Pre-shared key format from the pull-down menu. The format can be Passphrase or Hex (64 characters). <b>[WPA, Personal(Pre-Shared Key) only]</b>
Pre-Shared Key	Fill in the key value. <b>[WPA, Personal(Pre-Shared Key) only]</b>
RADIUS Server IP Address	Fill in the IP address of RADIUS Server. <b>[WPA, Enterprise(RADIUS) only]</b>
RADIUS Server Port	Fill in the port number for authentication with RADIUS Server. <b>[WPA, Enterprise(RADIUS) only]</b>
RADIUS Server Password	Fill in the password for authentication with RADIUS Server. <b>[WPA, Enterprise(RADIUS) only]</b>
Apply Changes	Click the <i>Apply Changes</i> button to complete the new configuration setting.
Reset	Click the <i>Reset</i> button to abort change and recover the previous configuration setting.

#### 4.3.3.3.4 WPA2

### Wireless Security Setup

This page allows you setup the wireless security. Turn on WEP or WPA by using Encryption Keys could prevent any unauthorized access to your wireless network.

---

Select SSID: Root AP - RTK 11n AP ▼

---

**Encryption:** WPA2 ▼

**Authentication Mode:**  Enterprise (RADIUS)  Personal (Pre-Shared Key)

**WPA2 Cipher Suite:**  TKIP  AES

**Pre-Shared Key Format:** Passphrase ▼

**Pre-Shared Key:**

Item	Description
Select SSID	Select the SSID from multiple APs.
WPA2	Select the “WPA2” to enable WPA2 encryption for wireless security.
Authentication Mode	While Encryption is selected to be WPA. Click to select the WPA Authentication Mode with Enterprise (RADIUS) or Personal (Pre-Shared Key).
WPA2 Cipher Suite	Select the Cipher Suite for WPA2 encryption.
Pre-Shared Key Format	While Encryption is selected to be WPA. Select the Pre-shared key format from the pull-down menu. The format can be Passphrase or Hex (64 characters). <b>[WPA, Personal(Pre-Shared Key) only]</b>
Pre-Shared Key	Fill in the key value. <b>[WPA, Personal(Pre-Shared Key) only]</b>
RADIUS Server IP Address	Fill in the IP address of RADIUS Server. <b>[WPA, Enterprise(RADIUS) only]</b>
RADIUS Server Port	Fill in the port number for authentication with RADIUS Server. <b>[WPA, Enterprise(RADIUS) only]</b>
RADIUS Server Password	Fill in the password for authentication with RADIUS Server. <b>[WPA, Enterprise(RADIUS) only]</b>
Apply Changes	Click the <i>Apply Changes</i> button to complete the new configuration setting.
Reset	Click the <i>Reset</i> button to abort change and recover the previous configuration setting.

### 4.3.3.3.5 WPA-Mixed

## Wireless Security Setup

This page allows you setup the wireless security. Turn on WEP or WPA by using Encryption Keys could prevent any unauthorized access to your wireless network.

---

Select SSID: Root AP - RTK 11n AP ▼

---

**Encryption:** WPA-Mixed ▼

**Authentication Mode:**  Enterprise (RADIUS)  Personal (Pre-Shared Key)

**WPA Cipher Suite:**  TKIP  AES

**WPA2 Cipher Suite:**  TKIP  AES

**Pre-Shared Key Format:** Passphrase ▼

**Pre-Shared Key:**

Item	Description
Select SSID	Select the SSID from multiple APs.
WPA-Mixed	Select the “WPA-Mixed” to enable WPA-Mixed encryption for wireless security.
Authentication Mode	While Encryption is selected to be WPA. Click to select the WPA Authentication Mode with Enterprise (RADIUS) or Personal (Pre-Shared Key).
WPA Cipher Suite	Select the Cipher Suite for WPA encryption.
WPA2 Cipher Suite	Select the Cipher Suite for WPA2 encryption.
Pre-Shared Key Format	While Encryption is selected to be WPA. Select the Pre-shared key format from the pull-down menu. The format can be Passphrase or Hex (64 characters). <b>[WPA, Personal(Pre-Shared Key) only]</b>
Pre-Shared Key	Fill in the key value. <b>[WPA, Personal(Pre-Shared Key) only]</b>
RADIUS Server IP Address	Fill in the IP address of RADIUS Server. <b>[WPA, Enterprise(RADIUS) only]</b>
RADIUS Server Port	Fill in the port number for authentication with RADIUS Server. <b>[WPA, Enterprise(RADIUS) only]</b>
RADIUS Server Password	Fill in the password for authentication with RADIUS Server. <b>[WPA, Enterprise(RADIUS) only]</b>
Apply Changes	Click the <i>Apply Changes</i> button to complete the new configuration setting.
Reset	Click the <i>Reset</i> button to abort change and recover the previous configuration setting.

#### 4.3.3.4 Access Control

If you enable wireless access control, only those clients whose wireless MAC addresses are in the access control list will be able to connect to your Access Point. When this option is enabled, no wireless clients will be able to connect if the list contains no entries.

### Wireless Access Control

If you choose 'Allowed Listed', only those clients whose wireless MAC addresses are in the access control list will be able to connect to your Access Point. When 'Deny Listed' is selected, these wireless clients on the list will not be able to connect the Access Point.

---

**Wireless Access Control Mode:**

**MAC Address:**  **Comment:**

**Current Access Control List:**

MAC Address	Comment	Select

Item	Description
Wireless Access Control Mode	Click the <i>Disabled</i> , <i>Allow Listed</i> or <i>Deny Listed</i> of drop down menu choose wireless access control mode. This is a security control function; only those clients registered in the access control list can link to this WLAN Broadband Router.
MAC Address	Fill in the MAC address of client to register this WLAN Broadband Router access capability.
Comment	Fill in the comment tag for the registered client.
Apply Changes	Click the <i>Apply Changes</i> button to complete the new configuration setting.
Reset	Click the <i>Reset</i> button to abort change and recover the previous configuration setting.
Current Access Control List	It shows the registered clients that are allowed to link to this WLAN Broadband Router.
Delete Selected	Click to delete the selected clients that will be access right removed from this WLAN Broadband Router.
Delete All	Click to delete all the registered clients from the access allowed list.
Reset	Click the <i>Reset</i> button to abort change and recover the previous configuration setting.

### 4.3.3.5 WDS Settings

Wireless Distribution System uses wireless media to communicate with other APs, like the Ethernet does. To do this, you must set these APs in the same channel and set MAC address of other AP that you want to communicate with in the table and then enable the WDS.

## WDS Settings

Wireless Distribution System uses wireless media to communicate with other APs, like the Ethernet does. To do this, you must set these APs in the same channel and set MAC address of other APs which you want to communicate with in the table and then enable the WDS.

---

**Enable WDS**

**MAC Address:**

**Data Rate:**  ▼

**Comment:**

**Current WDS AP List:**

MAC Address	Tx Rate (Mbps)	Comment	Select

Item	Description
Enable WDS	Click the check box to enable wireless distribution system.
MAC Address	Fill in the MAC address of AP to register the wireless distribution system access capability.
Data Rate	Select the transmission data rate from pull-down menu. Data rate can be auto-select, 1M to 54Mbps or MCS.
Comment	Fill in the comment tag for the registered AP.
Apply Changes	Click the <b>Apply Changes</b> button to complete the new configuration setting.
Reset	Click the <b>Reset</b> button to abort change and recover the previous configuration setting.
Set Security	Click button to configure wireless security like <b>WEP(64bits)</b> , <b>WEP(128bits)</b> , <b>WPA(TKIP)</b> , <b>WPA2(AES)</b> or <b>None</b>
Show Statistics	It shows the TX, RX packets, rate statistics.
Delete Selected	Click to delete the selected clients that will be access right removed from this WLAN Broadband Router.
Delete All	Click to delete all the registered clients from the access allowed list.
Reset	Click the Reset button to abort change and recover the previous configuration setting.

### 4.3.3.5.1 WDS Security Setup

Requirement: Set [Wireless]->[Basic Settings]->[Mode]->AP+WDS This page is used to configure the wireless security between APs.

## WDS Security Setup

This page allows you setup the wireless security for WDS. When enabled, you must make sure each WDS device has adopted the same encryption algorithm and Key.

---

**Encryption:**

**WEP Key Format:**

**WEP Key:**

**Pre-Shared Key Format:**

**Pre-Shared Key:**

### 4.3.3.5.2 WDS AP Table

This page is used to show WDS statistics.

## WDS AP Table

This table shows the MAC address, transmission, reception packet counters and state information for each configured WDS AP.

---

MAC Address	Tx Packets	Tx Errors	Rx Packets	Tx Rate (Mbps)

Item	Description
MAC Address	It shows the MAC Address within WDS.
Tx Packets	It shows the statistic count of sent packets on the wireless LAN interface.
Tx Errors	It shows the statistic count of error sent packets on the Wireless LAN interface.
Rx Packets	It shows the statistic count of received packets on the wireless LAN interface.
Tx Rare (Mbps)	It shows the wireless link rate within WDS.
Refresh	Click to refresh the statistic counters on the screen.
Close	Click to close the current window.

### 4.3.3.6 Site Survey

This page is used to view or configure other APs near yours.

## Wireless Site Survey

This page provides tool to scan the wireless network. If any Access Point or IBSS is found, you could choose to connect it manually when client mode is enabled.

---

**List of APs**

SSID	BSSID	Channel	Type	Encrypt	Signal
None					

Item	Description
SSID	It shows the SSID of AP.
BSSID	It shows BSSID of AP.
Channel	It show the current channel of AP occupied.
Type	It show which type AP acts.
Encrypt	It shows the encryption status.
Signal	It shows the power level of current AP.
Refresh	Click the <i>Refresh</i> button to re-scan site survey on the screen.
Connect	Click the <i>Connect</i> button to establish connection.

### 4.3.3.7 WPS

This page allows you to change the setting for WPS (Wi-Fi Protected Setup). Using this feature could let your wireless client synchronize automatically its setting and connect to the Access Point in a minute without any hassle.

## Wi-Fi Protected Setup

This page allows you to change the setting for WPS (Wi-Fi Protected Setup). Using this feature could let your wireless client automatically synchronize its setting and connect to the Access Point in a minute without any hassle.

---

**Disable WPS**

**WPS Status:**  Configured  UnConfigured

**Self-PIN Number:** 38599880

**Push Button Configuration:**

**Current Key Info:**

Authentication	Encryption	Key
Open	None	N/A

---

**Client PIN Number:**

Item	Description
Disable WPS	Click on to disable the Wi-Fi Protected Setup function.
WPS Status	Show WPS status is <i>Configured</i> or <i>UnConfigured</i> .
Rest to UnConfigured	Click this button to back to UnConfigured status.
Self-PIN Number	Fill in the PIN Number of AP to register the wireless distribution system access capability.
Push Button Configuration	The <i>Start PBC</i> button provides tool to scan the wireless network. If any Access Point or IBSS is found, you could connect it automatically when client join PBC mode.
Apply Changes	Click the <i>Apply Changes</i> button to complete the new configuration setting.
Reset	Click the <i>Reset</i> button to abort change and recover the previous configuration setting.
Client PIN Number	Fill in the <i>Client PIN Number</i> from your Client sites.

### 4.3.3.8 Schedule

This page is used to configure schedule for enabling wireless function.

## Wireless Schedule

This page allows you setup the wireless schedule rule. Please do not forget to configure system time before enable this feature.

---

**Enable Wireless Schedule**

**Days :**

Everyday    Sun    Mon    Tue    Wed    Thu    Fri    Sat

**Time :**

24 Hours    From  :  To  :

Item	Description
Enable Wireless Schedule	Click to enable the Wireless Schedule function.
Days	Select days that you want to enable wireless function.
Time	Select the time that you want to enable wireless function.
Apply Changes	Click the <i>Apply Changes</i> button to complete the new configuration setting.
Reset	Click the <i>Reset</i> button to abort change and recover the previous configuration setting.

## 4.3.4 TCP/IP Settings

### 4.3.4.1 LAN Interface Setup

This page is used to configure the parameters for local area network that connects to the LAN ports of your WLAN Broadband Router. Here you may change the setting for IP address, subnet mask, DHCP, etc.

### LAN Interface Setup

This page is used to configure the parameters for local area network which connects to the LAN port of your Access Point. Here you may change the setting for IP address, subnet mask, DHCP, etc..

---

**IP Address:**

**Subnet Mask:**

**Default Gateway:**

**DHCP:**  ▾

**DHCP Client Range:**  -

**DHCP Lease Time:**  (1 ~ 10080 minutes)

**Static DHCP:**

**Domain Name:**

**802.1d Spanning Tree:**  ▾

**Clone MAC Address:**

Item	Description
IP Address	Fill in the IP address of LAN interfaces of this WLAN Access Point.
Subnet Mask	Fill in the subnet mask of LAN interfaces of this WLAN Access Point.
Default Gateway	Fill in the default gateway for LAN interfaces out going data packets.
DHCP	Click to select <i>Disabled</i> , <i>Client</i> or <i>Server</i> in different operation mode of wireless Access Point.
DHCP Client Range	Fill in the start IP address and end IP address to allocate a range of IP addresses; client with DHCP function set will be assigned an IP address from the range.
Show Client	Click to open the <i>Active DHCP Client Table</i> window that shows the active clients with their assigned IP address, MAC address and time expired information. [ <i>Server mode only</i> ]

Set Static DHCP	Manual setup Static DHCP IP address for specific MAC address. <i>[Server mode only]</i>
Domain Name	Assign Domain Name and dispatch to DHCP clients. It is optional field.
802.1d Spanning Tree	Select enable or disable the IEEE 802.1d Spanning Tree function from pull-down menu.
Clone MAC Address	Fill in the MAC address that is the MAC address to be cloned
Apply Changes	Click the <b><i>Apply Changes</i></b> button to complete the new configuration setting.
Reset	Click the <b><i>Reset</i></b> button to abort change and recover the previous configuration setting.

#### 4.3.4.1.1 Static DHCP Setup

### Static DHCP Setup

This page allows you reserve IP addresses, and assign the same IP address to the network device with the specified MAC address any time it requests an IP address. This is almost the same as when a device has a static IP address except that the device must still request an IP address from the DHCP server.

---

**Enable Static DHCP**

**IP Address:**

**MAC Address:**

**Comment:**

**Static DHCP List:**

IP Address	MAC Address	Comment	Select

Item	Description
Enable Static DHCP	Click the box to enable static DHCP function.
IP Address	If you select the Set Static DHCP on LAN interface, fill in the IP address for it.
MAC Address	If you select the Set Static DHCP on LAN interface, fill in the MAC address for it.
Comment	Fill in the comment tag for the registered Static DHCP.
Apply Changes	Click the <b>Apply Changes</b> button to complete the new configuration setting.
Reset	Click the <b>Reset</b> button to abort change and recover the previous configuration setting.
Static DHCP List	It shows IP Address MAC Address from the Static DHCP.
Delete Selected	Click to delete the selected clients that will be removed from the Static DHCP list.
Delete All	Click to delete all the registered clients from the Static DHCP list.
Reset	Click the <b>Reset</b> button to abort change and recover the previous configuration setting.

#### 4.3.4.2 WAN Interface Setup

This page is used to configure the parameters for wide area network that connects to the WAN port of your WLAN Broadband Router. Here you may change the access method to **Static IP**, **DHCP**, **PPPoE** or **PPTP** by click the item value of **WAN Access Type**.

##### 4.3.4.2.1 Static IP

### WAN Interface Setup

This page is used to configure the parameters for Internet network which connects to the WAN port of your Access Point. Here you may change the access method to static IP, DHCP, PPPoE, PPTP or L2TP by click the item value of WAN Access type.

---

**WAN Access Type:** Static IP ▼

**IP Address:** 172.1.1.1

**Subnet Mask:** 255.255.255.0

**Default Gateway:** 172.1.1.254

**MTU Size:** 1500 (1400-1500 bytes)

**DNS 1:**  

**DNS 2:**  

**DNS 3:**  

**Clone MAC Address:** 000000000000

Enable uPNP

Enable IGMP Prozy

Enable Ping Access on WAN

Enable Web Server Access on WAN

Enable IPsec pass through on VPN connection

Enable PPTP pass through on VPN connection

Enable L2TP pass through on VPN connection

Enable IPv6 pass through

Apply Changes
Reset

Item	Description
Static IP	Click to select Static IP support on WAN interface. There are some fields: IP address, subnet mask and default gateway settings, need to be filled.
IP Address	If you select the Static IP support on WAN interface, fill in the IP address for it.
Subnet Mask	If you select the Static IP support on WAN interface, fill in the subnet mask for it.

Default Gateway	If you select the Static IP support on WAN interface, fill in the default gateway for WAN interface out going data packets.
MTU Size	Fill in the MTU size of MTU Size.
DNS 1~3	Fill in the IP address of Domain Name Server 1~3.
Clone MAC Address	Fill in the MAC address that is the MAC address to be cloned.
Enable uPNP	Click the checkbox to enable uPNP function.
Enable IGMP Proxy	Click the checkbox to enable IGMP Proxy.
Enable Ping Access on WAN	Click the checkbox to enable WAN ICMP response.
Enable Web Server Access on WAN	Click the checkbox to enable web configuration from WAN side.
Enable IPsec pass through on VPN connection	Click the checkbox to enable IPsec packet pass through.
Enable PPTP pass through on VPN connection	Click the checkbox to enable PPTP packet pass through.
Enable L2TP pass through on VPN connection	Click the checkbox to enable L2TP packet pass through.
Apply Changes	Click the <b>Apply Changes</b> button to complete the new configuration setting.
Reset	Click the <b>Reset</b> button to abort change and recover the previous configuration setting.

#### 4.3.4.2.2 DHCP Client

### WAN Interface Setup

This page is used to configure the parameters for Internet network which connects to the WAN port of your Access Point. Here you may change the access method to static IP, DHCP, PPPoE, PPTP or L2TP by click the item value of WAN Access type.

---

**WAN Access Type:**

**Host Name:**

**MTU Size:**  (1400-1492 bytes)

**Attain DNS Automatically**

**Set DNS Manually**

**DNS 1:**

**DNS 2:**

**DNS 3:**

**Clone MAC Address:**

**Enable uPNP**

**Enable IGMP Proxy**

**Enable Ping Access on WAN**

**Enable Web Server Access on WAN**

**Enable IPsec pass through on VPN connection**

**Enable PPTP pass through on VPN connection**

**Enable L2TP pass through on VPN connection**

**Enable IPv6 pass through**

Item	Description
DHCP Client	Click to select DHCP support on WAN interface for IP address assigned automatically from a DHCP server.
Host Name	Fill in the host name of Host Name. The default value is empty.
MTU Size	Fill in the MTU size of MTU Size.
Attain DNS Automatically	Click to select getting DNS address for <i>DHCP</i> support. Please select <i>Set DNS Manually</i> if the <i>DHCP</i> support is selected.
Set DNS Manually	Click to select getting DNS address for <i>DHCP</i> support.
DNS 1~3	Fill in the IP address of Domain Name Server 1~3.

Clone MAC Address	Fill in the MAC address that is the MAC address to be cloned.
Enable uPNP	Click the checkbox to enable uPNP function.
Enable IGMP Proxy	Click the checkbox to enable IGMP Proxy.
Enable Ping Access on WAN	Click the checkbox to enable WAN ICMP response.
Enable Web Server Access on WAN	Click the checkbox to enable web configuration from WAN side.
Enable IPsec pass through on VPN connection	Click the checkbox to enable IPsec packet pass through.
Enable PPTP pass through on VPN connection	Click the checkbox to enable PPTP packet pass through.
Enable L2TP pass through on VPN connection	Click the checkbox to enable L2TP packet pass through.
Apply Changes	Click the <b><i>Apply Changes</i></b> button to complete the new configuration setting.
Reset	Click the <b><i>Reset</i></b> button to abort change and recover the previous configuration setting.

### 4.3.4.2.3 PPPoE

## WAN Interface Setup

This page is used to configure the parameters for Internet network which connects to the WAN port of your Access Point. Here you may change the access method to static IP, DHCP, PPPoE, PPTP or L2TP by click the item value of WAN Access type.

---

**WAN Access Type:** PPPoE ▼

**User Name:**

**Password:**

**Service Name:**

**Connection Type:** Continuous ▼

**Idle Time:** 5 (1-1000 minutes)

**MTU Size:** 1452 (1360-1492 bytes)

**Attain DNS Automatically**

**Set DNS Manually**

**DNS 1:**

**DNS 2:**

**DNS 3:**

**Clone MAC Address:** 000000000000

**Enable uPNP**

**Enable IGMP Proxy**

**Enable Ping Access on WAN**

**Enable Web Server Access on WAN**

**Enable IPsec pass through on VPN connection**

**Enable PPTP pass through on VPN connection**

**Enable L2TP pass through on VPN connection**

**Enable IPv6 pass through**

Item	Description
PPPoE	Click to select PPPoE support on WAN interface. There are user name, password, connection type and idle time settings need to be done.
User Name	If you select the PPPoE support on WAN interface, fill in the user name and password to login the PPPoE server.
Password	If you select the PPPoE support on WAN interface, fill in the user name and password to login the PPPoE server.
Service Name	Fill in the service name of Service Name. The default value is empty.

Connection Type	<p>Select the connection type from pull-down menu. There are <b>Continuous</b>, <b>Connect on Demand</b> and <b>Manual</b> three types to select.</p> <p><b>Continuous</b> connection type means to setup the connection through PPPoE protocol whenever this WLAN AP Router is powered on.</p> <p><b>Connect on Demand</b> connection type means to setup the connection through PPPoE protocol whenever you send the data packets out through the WAN interface; there are a watchdog implemented to close the PPPoE connection while there are no data sent out longer than the idle time set.</p> <p><b>Manual</b> connection type means to setup the connection through the PPPoE protocol by clicking the <b>Connect</b> button manually, and clicking the <b>Disconnect</b> button manually.</p>
Idle Time	If you select the <b>PPPoE</b> and <b>Connect on Demand</b> connection type, fill in the idle time for auto-disconnect function. Value can be between 1 and 1000 minutes.
MTU Size	Fill in the MTU size of MTU Size.
Attain DNS Automatically	Click to select getting DNS address for <b>DHCP</b> support. Please select <b>Set DNS Manually</b> if the <b>DHCP</b> support is selected.
Set DNS Manually	Click to select getting DNS address for <b>DHCP</b> support.
DNS 1~3	Fill in the IP address of Domain Name Server 1~3.
Clone MAC Address	Fill in the MAC address that is the MAC address to be cloned.
Enable uPNP	Click the checkbox to enable uPNP function.
Enable IGMP Proxy	Click the checkbox to enable IGMP Proxy.
Enable Ping Access on WAN	Click the checkbox to enable WAN ICMP response.
Enable Web Server Access on WAN	Click the checkbox to enable web configuration from WAN side.
Enable IPsec pass through on VPN connection	Click the checkbox to enable IPsec packet pass through.
Enable PPTP pass through on VPN connection	Click the checkbox to enable PPTP packet pass through.
Enable L2TP pass through on VPN connection	Click the checkbox to enable L2TP packet pass through.
Apply Changes	Click the <b>Apply Changes</b> button to complete the new configuration setting.
Reset	Click the <b>Reset</b> button to abort change and recover the previous configuration setting.

#### 4.3.4.2.4 PPTP

### WAN Interface Setup

This page is used to configure the parameters for Internet network which connects to the WAN port of your Access Point. Here you may change the access method to static IP, DHCP, PPPoE, PPTP or L2TP by click the item value of WAN Access type.

---

**WAN Access Type:** PPTP

**IP Address:** 172.1.1.2

**Subnet Mask:** 255.255.255.0

**Server IP Address:** 172.1.1.1

**User Name:**  

**Password:**  

**Connection Type:** Continuous

**Idle Time:** 5 (1-1000 minutes)

**MTU Size:** 1460 (1400-1460 bytes)

Request MPPE Encryption     Request MPPC Compression

Attain DNS Automatically  
 Set DNS Manually

**DNS 1:**  

**DNS 2:**  

**DNS 3:**  

**Clone MAC Address:** 000000000000

Enable uPNP  
 Enable IGMP Proxy  
 Enable Ping Access on WAN  
 Enable Web Server Access on WAN  
 Enable IPsec pass through on VPN connection  
 Enable PPTP pass through on VPN connection  
 Enable L2TP pass through on VPN connection  
 Enable IPv6 pass through

Item	Description
PPTP	Allow user to make a tunnel with remote site directly to secure the data transmission among the connection. User can use embedded PPTP client supported by this router to make a VPN connection.
IP Address	If you select the PPTP support on WAN interface, fill in the IP address for it.

Subnet Mask	If you select the PPTP support on WAN interface, fill in the subnet mask for it.
Server IP Address	Enter the IP address of the PPTP Server.
User Name	If you select the PPTP support on WAN interface, fill in the user name and password to login the PPTP server.
Password	If you select the PPTP support on WAN interface, fill in the user name and password to login the PPTP server.
Connection Type	<p>Select the connection type from pull-down menu. There are <b>Continuous</b>, <b>Connect on Demand</b> and <b>Manual</b> three types to select.</p> <p><b>Continuous</b> connection type means to setup the connection through PPTP protocol whenever this WLAN AP Router is powered on.</p> <p><b>Connect on Demand</b> connection type means to setup the connection through PPTP protocol whenever you send the data packets out through the WAN interface; there are a watchdog implemented to close the PPTP connection while there are no data sent out longer than the idle time set.</p> <p><b>Manual</b> connection type means to setup the connection through the PPTP protocol by clicking the <b>Connect</b> button manually, and clicking the <b>Disconnect</b> button manually.</p>
Idle Time	If you select the PPTP and <b>Connect on Demand</b> connection type, fill in the idle time for auto-disconnect function. Value can be between 1 and 1000 minutes.
MTU Size	Fill in the MTU size of MTU Size.
Request MPPE Encryption	Click the checkbox to enable request MPPE encryption.
Request MPPC Compression	Click the checkbox to enable request MPPC compression.
Attain DNS Automatically	Click to select getting DNS address for <b>PPTP</b> support. Please select <b>Set DNS Manually</b> if the <b>PPTP</b> support is selected.
Set DNS Manually	Click to select getting DNS address for <b>PPTP</b> support.
DNS 1~3	Fill in the IP address of Domain Name Server 1~3.
Clone MAC Address	Fill in the MAC address that is the MAC address to be cloned.
Enable uPNP	Click the checkbox to enable uPNP function.
Enable IGMP Proxy	Click the checkbox to enable IGMP Proxy.
Enable Ping Access on WAN	Click the checkbox to enable WAN ICMP response.
Enable Web Server Access on WAN	Click the checkbox to enable web configuration from WAN side.
Enable IPsec pass through on VPN connection	Click the checkbox to enable IPsec packet pass through.
Enable PPTP pass through on VPN connection	Click the checkbox to enable PPTP packet pass through.
Enable L2TP pass through on VPN connection	Click the checkbox to enable L2TP packet pass through.
Apply Changes	Click the <b>Apply Changes</b> button to complete the new configuration setting.
Reset	Click the <b>Reset</b> button to abort change and recover the previous configuration setting.

Note: PPTP Gateway Your ISP will provide you with the Gateway IP Address. If your LAN has a PPTP gateway, then enter that PPTP gateway IP address here. If you do not have PPTP gateway then enter the ISP's Gateway IP address above.

#### 4.3.4.2.5 L2TP

### WAN Interface Setup

This page is used to configure the parameters for Internet network which connects to the WAN port of your Access Point. Here you may change the access method to static IP, DHCP, PPPoE, PPTP or L2TP by click the item value of WAN Access type.

---

**WAN Access Type:** L2TP ▼

**IP Address:** 172.1.1.2

**Subnet Mask:** 255.255.255.0

**Server IP Address:** 172.1.1.1

**User Name:**  

**Password:**  

**Connection Type:** Continuous ▼ Connect Disconnect

**Idle Time:** 5 (1-1000 minutes)

**MTU Size:** 1460 (1400-1460 bytes)

**Attain DNS Automatically**

**Set DNS Manually**

**DNS 1:**  

**DNS 2:**  

**DNS 3:**  

**Clone MAC Address:** 000000000000

**Enable uPNP**

**Enable IGMP Proxy**

**Enable Ping Access on WAN**

**Enable Web Server Access on WAN**

**Enable IPsec pass through on VPN connection**

**Enable PPTP pass through on VPN connection**

**Enable L2TP pass through on VPN connection**

**Enable IPv6 pass through**

Apply Changes Reset

Item	Description
L2TP	Allow user to make a tunnel with remote site directly to secure the data transmission among the connection. User can use embedded L2TP client supported by this router to make a VPN connection.

IP Address	If you select the L2TP support on WAN interface, fill in the IP address for it.
Subnet Mask	If you select the L2TP support on WAN interface, fill in the subnet mask for it.
Server IP Address	Enter the IP address of the L2TP Server.
User Name	If you select the L2TP support on WAN interface, fill in the user name and password to login the L2TP server.
Password	If you select the L2TP support on WAN interface, fill in the user name and password to login the L2TP server.
Connection Type	<p>Select the connection type from pull-down menu. There are <b>Continuous</b>, <b>Connect on Demand</b> and <b>Manual</b> three types to select.</p> <p><b>Continuous</b> connection type means to setup the connection through L2TP protocol whenever this WLAN AP Router is powered on.</p> <p><b>Connect on Demand</b> connection type means to setup the connection through L2TP protocol whenever you send the data packets out through the WAN interface; there are a watchdog implemented to close the L2TP connection while there are no data sent out longer than the idle time set.</p> <p><b>Manual</b> connection type means to setup the connection through the L2TP protocol by clicking the <b>Connect</b> button manually, and clicking the <b>Disconnect</b> button manually.</p>
Idle Time	If you select the L2TP and <b>Connect on Demand</b> connection type, fill in the idle time for auto-disconnect function. Value can be between 1 and 1000 minutes.
MTU Size	Fill in the MTU size of MTU Size.
Attain DNS Automatically	Click to select getting DNS address for <b>L2TP</b> support. Please select <b>Set DNS Manually</b> if the <b>L2TP</b> support is selected.
Set DNS Manually	Click to select getting DNS address for <b>L2TP</b> support.
DNS 1~3	Fill in the IP address of Domain Name Server 1~3.
Clone MAC Address	Fill in the MAC address that is the MAC address to be cloned.
Enable uPNP	Click the checkbox to enable uPNP function.
Enable IGMP Proxy	Click the checkbox to enable IGMP Proxy.
Enable Ping Access on WAN	Click the checkbox to enable WAN ICMP response.
Enable Web Server Access on WAN	Click the checkbox to enable web configuration from WAN side.
Enable IPsec pass through on VPN connection	Click the checkbox to enable IPsec packet pass through.
Enable PPTP pass through on VPN connection	Click the checkbox to enable PPTP packet pass through.
Enable L2TP pass through on VPN connection	Click the checkbox to enable L2TP packet pass through.
Apply Changes	Click the <b>Apply Changes</b> button to complete the new configuration setting.
Reset	Click the <b>Reset</b> button to abort change and recover the previous configuration setting.

## 4.3.5 Firewall

### 4.3.5.1 Port Filtering

Entries in this table are used to restrict certain types of data packets from your local network to Internet through the Gateway. Use of such filters can be helpful in securing or restricting your local network.

### Port Filtering

Entries in this table are used to restrict certain types of data packets from your local network to Internet through the Gateway. Use of such filters can be helpful in securing or restricting your local network.

---

**Enable Port Filtering**

Port Range:  -  Protocol:  Comment:

**Current Filter Table:**

Port Range	Protocol	Comment	Select

Item	Description
Enable Port Filtering	Click to enable the port filtering security function.
Port Range/ Protocol/ Comment	To restrict data transmission from the local network on certain ports, fill in the range of start-port and end-port, and the protocol, also put your comments on it. The <b>Protocol</b> can be TCP, UDP or Both. <b>Comment</b> let you know about whys to restrict data from the ports.
Apply Changes	Click the <b>Apply Changes</b> button to complete the new configuration setting.
Reset	Click the <b>Reset</b> button to abort change and recover the previous configuration setting.
Delete Selected	Click to delete the selected port range that will be removed from the port-filtering list.
Delete All	Click to delete all the registered entries from the port-filtering list.
Reset	Click the <b>Reset</b> button to abort change and recover the previous configuration setting.

### 4.3.5.2 IP Filtering

Entries in this table are used to restrict certain types of data packets from your local network to Internet through the Gateway. Use of such filters can be helpful in securing or restricting your local network.

## IP Filtering

Entries in this table are used to restrict certain types of data packets from your local network to Internet through the Gateway. Use of such filters can be helpful in securing or restricting your local network.

---

**Enable IP Filtering**

Local IP Address:  Protocol: Both Comment:

**Current Filter Table:**

Local IP Address	Protocol	Comment	Select

Item	Description
Enable IP Filtering	Click to enable the IP filtering security function.
Local IP Address/ Protocol/ Comment	To restrict data transmission from local network on certain IP addresses, fill in the IP address and the protocol, also put your comments on it. The <b>Protocol</b> can be TCP, UDP or Both. <b>Comment</b> let you know about whys to restrict data from the IP address.
Apply Changes	Click the <b>Apply Changes</b> button to complete the new configuration setting.
Reset	Click the <b>Reset</b> button to abort change and recover the previous configuration setting.
Delete Selected	Click to delete the selected port range that will be removed from the IP-filtering list.
Delete All	Click to delete all the registered entries from the IP-filtering list.
Reset	Click the <b>Reset</b> button to abort change and recover the previous configuration setting.

### 4.3.5.3 MAC Filtering

Entries in this table are used to restrict certain types of data packets from your local network to Internet through the Gateway. Use of such filters can be helpful in securing or restricting your local network.

## MAC Filtering

Entries in this table are used to restrict certain types of data packets from your local network to Internet through the Gateway. Use of such filters can be helpful in securing or restricting your local network.

---

**Enable MAC Filtering**

MAC Address:  Comment:

**Current Filter Table:**

MAC Address	Comment	Select

Item	Description
Enable MAC Filtering	Click to enable the MAC filtering security function.
MAC Address/ Comment	To restrict data transmission from local network on certain MAC addresses, fill in the MAC address and your comments on it. <i>Comment</i> let you know about whys to restrict data from the MAC address.
Apply Changes	Click the <i>Apply Changes</i> button to register the MAC address to MAC filtering list.
Reset	Click the <i>Reset</i> button to abort change and recover the previous configuration setting.
Delete Selected	Click to delete the selected port range that will be removed from the MAC-filtering list.
Delete All	Click to delete all the registered entries from the MAC-filtering list.
Reset	Click the <i>Reset</i> button to abort change and recover the previous configuration setting.

#### 4.3.5.4 Port Forwarding

Entries in this table allow you to automatically redirect common network services to a specific machine behind the NAT firewall. These settings are only necessary if you wish to host some sort of server like a web server or mail server on the private local network behind your Gateway's NAT firewall.

### Port Filtering

Entries in this table are used to restrict certain types of data packets from your local network to Internet through the Gateway. Use of such filters can be helpful in securing or restricting your local network.

---

**Enable Port Filtering**

Port Range:  -  Protocol:  Comment:

**Current Filter Table:**

Port Range	Protocol	Comment	Select

Item	Description
Enable Port Forwarding	Click to enable the Port Forwarding security function.
Port Range/ Protocol/ Comment	The <b>Port Range</b> for data transmission. The <b>Protocol</b> can be TCP, UDP or Both. <b>Comment</b> let you know about whys to allow data packets forward to the IP address and port number.
Apply Changes	Click the <b>Apply Changes</b> button to register the IP address and port number to Port forwarding list.
Reset	Click the <b>Reset</b> button to abort change and recover the previous configuration setting.
Delete Selected	Click to delete the selected IP address and port number that will be removed from the port-forwarding list.
Delete All	Click to delete all the registered entries from the port-forwarding list.
Reset	Click the <b>Reset</b> button to abort change and recover the previous configuration setting.

### 4.3.5.5 URL Filtering

URL Filtering is used to restrict users to access specific websites in internet.

## URL Filtering

URL filter is used to deny LAN users from accessing the internet. Block those URLs which contain keywords listed below.

---

**Enable URL Filtering**

URL Address:

**Current Filter Table:**

URL Address	Select

Item	Description
Enable URL Filtering	Click to enable the URL Filtering function.
URL Address	Add one URL address.
Apply Changes	Click the <i>Apply Changes</i> button to save settings.
Reset	Click the <i>Reset</i> button to abort change and recover the previous configuration setting.
Delete Selected	Click to delete the selected URL address that will be removed from the URL Filtering list.
Delete All	Click to delete all the registered entries from the URL Filtering list.
Reset	Click the <i>Reset</i> button to abort change and recover the previous configuration setting.

#### 4.3.5.6 DMZ

A Demilitarized Zone is used to provide Internet services without sacrificing unauthorized access to its local private network. Typically, the DMZ host contains devices accessible to Internet traffic, such as Web (HTTP) servers, FTP servers, SMTP (e-mail) servers and DNS servers.

## DMZ

A Demilitarized Zone is used to provide Internet services without sacrificing unauthorized access to its local private network. Typically, the DMZ host contains devices accessible to Internet traffic, such as Web (HTTP) servers, FTP servers, SMTP (e-mail) servers and DNS servers.

---

**Enable DMZ**

DMZ Host IP Address:

Item	Description
Enable DMZ	Click to enable the DMZ function.
DMZ Host IP Address	To support DMZ in your firewall design, fill in the IP address of DMZ host that can be access from the WAN interface.
Apply Changes	Click the <i>Apply Changes</i> button to register the IP address of DMZ host.
Reset	Click the <i>Reset</i> button to abort change and recover the previous configuration setting.

### 4.3.5.7 VLAN

This page allow user to configure VLAN setting for each LAN, WLAN and WAN port. In the setting, you may to assign a VID, priority, CFI and tagging on/off in each port.

#### VLAN Settings

Entries in below table are used to config vlan settings. VLANs are created to provide the segmentation services traditionally provided by routers. VLANs address issues such as scalability, security, and network management.

---

**Enable VLAN**

Enable	Ethernet/Wireless	WAN/LAN	Forwarding Rule	Tag	VID(1-4090)	Priority	CFI
<input type="checkbox"/>	Ethernet Port1	LAN	NAT	UNTAG	3022	7	<input type="checkbox"/>
<input type="checkbox"/>	Ethernet Port2	LAN	NAT	UNTAG	3030	0	<input type="checkbox"/>
<input type="checkbox"/>	Ethernet Port3	LAN	NAT	UNTAG	500	3	<input type="checkbox"/>
<input type="checkbox"/>	Ethernet Port4	LAN	NAT	UNTAG	1	0	<input type="checkbox"/>
<input type="checkbox"/>	Wireless Primary AP	LAN	NAT	UNTAG	1	0	<input type="checkbox"/>
<input type="checkbox"/>	Virtual AP1	LAN	NAT	UNTAG	1	0	<input type="checkbox"/>
<input type="checkbox"/>	Virtual AP2	LAN	NAT	UNTAG	1	0	<input type="checkbox"/>
<input type="checkbox"/>	Virtual AP3	LAN	NAT	UNTAG	1	0	<input type="checkbox"/>
<input type="checkbox"/>	Virtual AP4	LAN	NAT	UNTAG	1	0	<input type="checkbox"/>
<input type="checkbox"/>	Ethernet Port5	WAN	NAT	UNTAG	0	0	<input checked="" type="checkbox"/>

Item	Description
Enable VLAN	Click the box to enable VLAN function.
Enable	Click the box of each interface to enable VLAN.
Ethernet/Wireless	Select the interface (LAN: Ethernet port1~4/Wireless; WAN: Ethernet port5) to enable VLAN function.
WAN/LAN	LAN: When "Tag" is enabled, router will add a 802.11Q tagging (4 bytes long with VID, Priority, and CFI) in the header of each outgoing packet. Also, for every incoming packet without 802.11Q tagging or VID is not matched, router will drop the packet when tagging is enabled. WAN: When "Tag" is enabled on the WAN port, the incoming packet will be forwarded to router itself when its VID is matched with VID of WAN port. Otherwise, this receiving packet will be forwarded to LAN port with the same VID. If no any VID is matched, this incoming packet will be dropped.
Tag	User may choose to enable VLAN "tagging" for each port. Please refer to the above described WAN/LAN. When VLAN tagging is not enabled, but incoming packet has carried 802.11Q VLAN tag, router will drop this packet.
VID(1~4090)	Set the VID number for each port.
Priority	Select the priority value (0~7) from pull-down menu.
CFI	Select this box to set CFI (Canonical Format Indicator) value to 1. The default value is non-selected, CFI value is 0.
Apply Changes	Click the <b>Apply Changes</b> button to commit changes.
Reset	Click the <b>Reset</b> button to abort change and recover the previous configuration setting.

### 4.3.6 QoS

## QoS

Entries in this table improve your online gaming experience by ensuring that your game traffic is prioritized over other network traffic, such as FTP or Web.

---

**Enable QoS**

**Automatic Uplink Speed**

**Manual Uplink Speed (Kbps):**

**Automatic Downlink Speed**

**Manual Downlink Speed (Kbps):**

**QoS Rule Setting:**

**Address Type:**                       IP     MAC

**Local IP Address:**                       -

**MAC Address:**                           

**Mode:**                                       ▾

**Uplink Bandwidth (Kbps):**                     

**Downlink Bandwidth (Kbps):**                     

**Comment:**                                     

**Current QoS Rules Table:**

Local IP Address	MAC Address	Mode	Uplink Bandwidth	Downlink Bandwidth	Comment	Select

Item	Description
Enable QoS	Click the box to enable QoS function.
Automatic Uplink Speed	Click the box to enable automatic uplink speed. Otherwise, fill out the uplink speed manually.
Manual Uplink Speed	Fill out the uplink speed manually. The unit is Kbps.
Automatic Downlink Speed	Click the box to enable automatic downlink speed. Otherwise, fill out the downlink speed manually.
Manual Downlink Speed	Fill out the downlink speed manually. The unit is Kbps.

QoS Rule Setting	
Address Type	Select the type of rule. IP (layer3) or MAC (layer2).
Local IP Address	When you select IP type, you should fill out the IP address range of local NIC or device. Such as "192.168.1.10 – 192.168.1.20".
MAC Address	When you select MAC type, you should fill out the MAC address of local NIC or device. Such as "001122334455".
Mode	Select the mode from pull-down menu. There are "Guaranteed minimum bandwidth" and "Restricted maximum bandwidth".
Uplink Bandwidth	Fill out a value (Kbps) to limit uplink bandwidth.
Downlink Bandwidth	Fill out a value (Kbps) to limit downlink bandwidth.
Comment	Type words or string to make a comment about the rule that you created.
Apply Changes	Click the <b>Apply Changes</b> button to commit changes.
Reset	Click the <b>Reset</b> button to abort change and recover the previous configuration setting.
Delete Selected	Select one rule under Current QoS Rules Table, click <b>Delete Selected</b> button to delete the rule that you selected.
Delete All	Click <b>Delete All</b> button to delete all rules under Current QoS Rules Table.
Reset	Click the <b>Reset</b> button to abort change and recover the previous configuration setting.

## 4.3.7 Management

### 4.3.7.1 Status

This page shows the current status and some basic settings of the device, includes system, wireless, Ethernet LAN and WAN configuration information.

## Access Point Status

This page shows the current status and some basic settings of the device.  
Below status shows current settings, but does not take effect.

System	
Uptime	0day:0h:58m:51s
Firmware Version	v1.2f
Build Time	Wed Jul 27 15:09:06 CST 2011
Wireless Configuration	
Mode	AP+WDS
Band	2.4 GHz (B+G+N)
SSID	RTK 11n AP
Channel Number	6
Encryption	Disabled(AP), Disabled(WDS)
BSSID	00:1a:ef:21:f1:03
Associated Clients	0
TCP/IP Configuration	
Attain IP Protocol	Fixed IP
IP Address	192.168.1.254
Subnet Mask	255.255.255.0
Default Gateway	192.168.1.254
DHCP Server	Enabled
MAC Address	00:1a:ef:21:f1:01
WAN Configuration	
Attain IP Protocol	Getting IP from DHCP server...
IP Address	0.0.0.0
Subnet Mask	0.0.0.0
Default Gateway	0.0.0.0
MAC Address	00:1a:ef:21:f1:02

Item	Description
System	
Uptime	It shows the duration since WLAN AP Router is powered on.
Firmware version	It shows the firmware version of WLAN AP Router.

Build Time	It shows the build time of .firmware.
<b>Wireless configuration</b>	
Mode	It shows wireless operation mode
Band	It shows the current wireless operating frequency.
SSID	It shows the SSID of this WLAN AP Router. The SSID is the unique name of WLAN AP Router and shared among its service area, so all device sat tempts to join the same wireless network can identify it.
Channel Number	It shows the wireless channel connected currently.
Encryption	It shows the status of encryption function.
BSSID	It shows the BSSID address of the WLAN AP or Router. BSSID is a six-byte address.
Associated Clients	It shows the number of connected clients (or stations, PCs).
<b>TCP/IP Configuration (LAN)</b>	
Attain IP Protocol	It shows the type or status of LAN interface.
IP Address	It shows the IP address of LAN interfaces of WLAN AP Router.
Subnet Mask	It shows the IP subnet mask of LAN interfaces of WLAN AP Router.
Default Gateway	It shows the default gateway setting for LAN interfaces outgoing data packets.
DHCP Server	It shows the DHCP server is enabled or not.
MAC Address	It shows the MAC address of LAN interfaces of WLAN AP Router.
<b>WAN Configuration</b>	
Attain IP Protocol	It shows how the WLAN AP Router gets the IP address. The IP address can be set manually to a fixed one or set dynamically by DHCP server or attain IP by PPPoE / PPTP connection.
IP Address	It shows the IP address of WAN interface of WLAN AP Router.
Subnet Mask	It shows the IP subnet mask of WAN interface of WLAN AP Router.
Default Gateway	It shows the default gateway setting for WAN interface outgoing data packets.
MAC Address	It shows the MAC address of WAN interface of WLAN AP Router.

### 4.3.7.2 Statistics

This page shows the packet counters for transmission and reception regarding to wireless, Ethernet LAN and Ethernet WAN networks.

## Statistics

This page shows the packet counters for transmission and reception regarding to wireless and Ethernet networks.

---

<b>Wireless LAN</b>	<i>Sent Packets</i>	5805
	<i>Received Packets</i>	87173
<b>Ethernet LAN</b>	<i>Sent Packets</i>	3289
	<i>Received Packets</i>	2431
<b>Ethernet WAN</b>	<i>Sent Packets</i>	597
	<i>Received Packets</i>	0

Item	Description
<b>Wireless LAN</b>	
<i>Sent Packets</i>	It shows the statistic count of sent packets on the wireless LAN interface.
<i>Received Packets</i>	It shows the statistic count of received packets on the wireless LAN interface.
<b>Ethernet LAN</b>	
<i>Sent Packets</i>	It shows the statistic count of sent packets on the Ethernet LAN interface.
<i>Received Packets</i>	It shows the statistic count of received packets on the Ethernet LAN interface.
<b>Ethernet WAN</b>	
<i>Sent Packets</i>	It shows the statistic count of sent packets on the Ethernet WAN interface.
<i>Received Packets</i>	It shows the statistic count of received packets on the Ethernet WAN interface.
Refresh	Click the <b><i>Refresh</i></b> button to refresh and update the statistic counters.

### 4.3.7.3 DDNS

This page is used to configure Dynamic DNS service to have DNS with dynamic IP address.

## Dynamic DNS Setting

Dynamic DNS is a service, that provides you with a valid, unchanging, internet domain name (an URL) to go with that (possibly everchanging) IP-address.

---

**Enable DDNS**

**Service Provider :**  ▼

**Domain Name :**

**User Name/Email:**

**Password/Key:**

*Note:*  
 For TZO, you can have a 30 days free trial [here](#) or manage your TZO account in [control panel](#)  
 For DynDNS, you can create your DynDNS account [here](#)

Item	Description
Enable DDNS	Click the checkbox to enable <b>DDNS</b> service.
Service Provider	Click the drop down menu to pickup the right provider.
Domain Name	To configure the Domain Name.
User Name/Email	Configure User Name, Email.
Password/Key	Configure Password, Key.
Apply Change	Click the <b>Apply Changes</b> button to save the enable DDNS service.
Reset	Click the <b>Reset</b> button to abort change and recover the previous configuration setting.

#### 4.3.7.4 Time Zone Setting

This page is used to configure Time Zone.

### Time Zone Setting

You can maintain the system time by synchronizing with a public time server over the Internet.

---

**Current Time :**      Yr  Mon  Day  Hr  Mn  Sec

**Time Zone Select :**     

**Enable NTP client update**

**Automatically Adjust Daylight Saving**

**NTP server :**     

(Manual IP Setting)

Item	Description
Current Time	It shows the current time.
Copy Computer Time	Click the <i>Copy Computer Time</i> button to copy the time from PC.
Time Zone Select	Click the time zone in your country.
Enable NTP client update	Click the checkbox to enable NTP client update.
Automatically Adjust Daylight Saving	Click the checkbox to adjust Daylight Saving automatically.
NTP Server	Click select default or input NTP server IP address.
Apply Change	Click the <i>Apply Changes</i> button to save and enable NTP client service.
Reset	Click the <i>Reset</i> button to abort change and recover the previous configuration setting.
Refresh	Click the refresh the current time shown on the screen.

### 4.3.7.5 Denial-of-Service

This page is used to enable and setup protection to prevent attack by hacker's program. It provides more security for users.

## Denial of Service

A "denial-of-service" (DoS) attack is characterized by an explicit attempt by hackers to prevent legitimate users of a service from using that service.

---

**Enable DoS Prevention**

- Whole System Flood: SYN**  **Packets/Second**
- Whole System Flood: FIN**  **Packets/Second**
- Whole System Flood: UDP**  **Packets/Second**
- Whole System Flood: ICMP**  **Packets/Second**
- Per-Source IP Flood: SYN**  **Packets/Second**
- Per-Source IP Flood: FIN**  **Packets/Second**
- Per-Source IP Flood: UDP**  **Packets/Second**
- Per-Source IP Flood: ICMP**  **Packets/Second**
- TCP/UDP PortScan**  **Sensitivity**
- ICMP Smurf**
- IP Land**
- IP Spoof**
- IP TearDrop**
- PingOfDeath**
- TCP Scan**
- TCP SynWithData**
- UDP Bomb**
- UDP EchoChargen**

**Enable Source IP Blocking**  **Block time (sec)**

Item	Description
Enable DoS Prevention	Click the checkbox to enable DoS prevention.
Whole System Flood / Per-Source IP Flood...	Enable and setup prevention in details.
Select ALL	Click the checkbox to enable all prevention items. Clear
ALL	Click the checkbox to disable all prevention items.
Enable Source IP Blocking	Click the checkbox to enable Source IP Blocking. Apply
Changes	Click the <i>Apply Changes</i> button to save above settings.

### 4.3.7.6 Log

This page is used to configure the remote log server and shown the current log.

## System Log

This page can be used to set remote log server and show the system log.

---

**Enable Log**

**system all**                       **wireless**                       **DoS**

**Enable Remote Log**                      **Log Server IP Address:**

Item	Description
Enable Log	Click the checkbox to enable log.
System all	Show all log of wireless broadband router.
Wireless	Only show wireless log
DoS	Only show Denial-of-Service log
Enable Remote Log	Click the checkbox to enable remote log service.
Log Server IP Address	Input the remote log IP address.
Apply Changes	Click the <b><i>Apply Changes</i></b> button to save above settings.
Refresh	Click the refresh the log shown on the screen.
Clear	Clear log display screen.

#### 4.3.7.7 Upgrade Firmware

This page allows you upgrade the Access Point firmware to new version. Please note, do not power off the device during the upload because it may crash the system.

### Upgrade Firmware

This page allows you upgrade the Access Point firmware to new version. Please note, do not power off the device during the upload because it may crash the system.

---

**Firmware Version:** v1.2f

**Select File:**

Item	Description
Select File	Click the <b>Browse</b> button to select the new version of web firmware image file.
Upload	Click the <b>Upload</b> button to update the selected web firmware image to the WLAN Broadband Router.
Reset	Click the <b>Reset</b> button to abort change and recover the previous configuration setting.

#### 4.3.7.8 Save/ Reload Settings

This page allows you save current settings to a file or reload the settings from the file that was saved previously. Besides, you could reset the current configuration to factory default.

### Save/Reload Settings

This page allows you save current settings to a file or reload the settings from the file which was saved previously. Besides, you could reset the current configuration to factory default.

---

**Save Settings to File:**

**Load Settings from File:**

**Reset Settings to Default:**

Item	Description
Save Settings to File	Click the <b>Save</b> button to download the configuration parameters to your personal computer.
Load Settings from File	Click the <b>Browse</b> button to select the configuration files then click the <b>Upload</b> button to update the selected configuration to the WLAN Broadband Router.
Reset Settings to Default	Click the <b>Reset</b> button to reset the configuration parameter to factory defaults.

#### 4.3.7.9 Password

This page is used to set the account to access the web server of Access Point. Empty user name and password will disable the protection.

### Password Setup

This page is used to set the account to access the web server of Access Point. Empty user name and password will disable the protection.

---

**User Name:**

**New Password:**

**Confirmed Password:**

Item	Description
User Name	Fill in the user name for web management login control.
New Password	Fill in the password for web management login control.
Confirmed Password	Because the password input is invisible, so please fill in the password again for confirmation purpose.
Apply Changes	Clear the User Name and Password fields to empty, means to apply no web management login control. Click the <b>Apply Changes</b> button to complete the new configuration setting.
Reset	Click the <b>Reset</b> button to abort change and recover the previous configuration setting.

## 5. FREQUENTLY ASKED QUESTIONS (FAQ)

Enter topic text here.

### 5.1 What and how to find my PC's IP and MAC address

IP address is the identifier for a computer or device on a TCP/IP network. Networks using the TCP/IP protocol route messages based on the IP address of the destination. The format of an IP address is a 32-bit numeric address written as four numbers separated by periods. Each number can be zero to 255. For example, 191.168.1.254 could be an IP address

The MAC (Media Access Control) address is your computer's unique hardware number. (On an Ethernet LAN, it's the same as your Ethernet address.) When you're connected to the Internet from your computer (or host as the Internet protocol thinks of it), a correspondence table relates your IP address to your computer's physical (MAC) address on the LAN.

To find your PC's IP and MAC address,

- ✓ Open the Command program in the Microsoft Windows.
- ✓ Type in "ipconfig /all", then press the Enter button.
- Your PC's IP address is the one entitled IP Address and your PC's MAC address is the one entitled Physical Address.

### 5.2 What is Wireless LAN


A wireless LAN (WLAN) is a network that allows access to Internet without the need for any wired connections to the user's machine.

### 5.3 What are ISM bands

ISM stands for Industrial, Scientific and Medical; radio frequency bands that the Federal Communications Commission (FCC) authorized for wireless LANs. The ISM bands are located at 915 +/-13 MHz, 2450 +/-50 MHz and 5800 +/-75 MHz.

### 5.4 How does wireless networking work

The 802.11 standard define two modes: infrastructure mode and ad hoc mode. In infrastructure mode, the wireless network consists of at least one access point connected to the wired network infrastructure and a set of wireless end stations. This configuration is called a Basic Service Set (BSS). An Extended Service Set (ESS) is a set of two or more BSSs forming a single sub-network. Since most corporate WLANs require access to the wired LAN for services (file servers, printers, Internet links) they will operate in infrastructure mode.

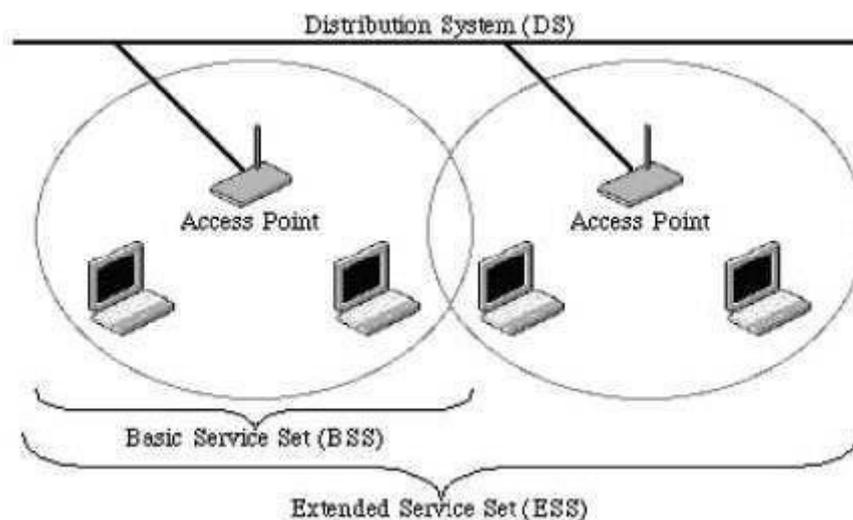

Example 1: wireless Infrastructure Mode

Ad hoc mode (also called peer-to-peer mode or an Independent Basic Service Set, or IBSS) is simply a set of 802.11 wireless stations that communicate directly with one another without using an access point or any connection to a wired network. This mode is useful for quickly and easily setting up a wireless network anywhere that a wireless infrastructure does not exist or is not required for services, such as a hotel room, convention center, or airport, or where access to the wired network is barred (such as for consultants at a client site).



Example 2: wireless Ad Hoc Mode

## 5.5 What is BSSID

A six-byte address is that distinguish a particular a particular access point from others. Also know as just SSID. Serve as a network ID or name.

## 5.6 What is ESSID

The Extended Service Set ID (ESSID) is the name of the network you want to access. It is used to identify different wireless networks.

## 5.7 What are potential factors that may causes interference

Factors of interference:

- ✎ Obstacles: walls, ceilings, furniture... etc.
- ✎ Building Materials: metal door, aluminum studs.
- ✎ Electrical devices: microwaves, monitors and electrical motors.

Solutions to overcome the interferences:

- ✓ Minimizing the number of walls and ceilings.
- ✓ Position the WLAN antenna for best reception.
- ✓ Keep WLAN devices away from other electrical devices, eg: microwaves, monitors, electric motors...etc.
- ✓ Add additional WLAN Access Points if necessary.

## 5.8 What are the Open System and Shared Key authentications

IEEE 802.11 supports two subtypes of network authentication services: open system and shared key. Under open system authentication, any wireless station can request authentication. The station that needs to authenticate with another wireless station sends an authentication management frame that contains the identity of the sending station. The receiving station then returns a frame that indicates whether it recognizes the sending station. Under shared key authentication, each wireless station is assumed to have received a secret shared key over a secure channel that is independent from the 802.11 wireless network communications channel.

## 5.9 What is WEP

An option of IEEE 802.11 function is that offers frame transmission privacy similar to a wired network. The Wired Equivalent Privacy generates secret shared encryption keys that both source and destination stations can use to alert frame bits to avoid disclosure to eavesdroppers.

WEP relies on a secret key that is shared between a mobile station (e.g. a laptop with a wireless Ethernet card) and an access point (i.e. a base station). The secret key is used to encrypt packets before they are transmitted, and an integrity check is used to ensure that packets are not modified in transit.

## 5.10 What is Fragment Threshold

The proposed protocol uses the frame fragmentation mechanism defined in IEEE 802.11 to achieve parallel transmissions. A large data frame is fragmented into several fragments each of size equal to fragment threshold. By tuning the fragment threshold value, we can get varying fragment sizes. The determination of an efficient fragment threshold is an important issue in this scheme. If the fragment threshold is small, the overlap part of the master and parallel transmissions is large. This means the spatial reuse ratio of parallel transmissions is high. In contrast, with a large fragment threshold, the overlap is small and the spatial reuse ratio is low. However high fragment threshold leads to low fragment overhead. Hence there is a trade-off between spatial re-use and fragment overhead.

Fragment threshold is the maximum packet size used for fragmentation. Packets larger than the size programmed in this field will be fragmented.

If you find that your corrupted packets or asymmetric packet reception (all send packets, for example). You may want to try lowering your fragmentation threshold. This will cause packets to be broken into smaller fragments. These small fragments, if corrupted, can be resent faster than a larger fragment. Fragmentation increases overhead, so you'll want to keep this value as close to the maximum value as possible.

## 5.11 What is RTS (Request to Send) Threshold

The RTS threshold is the packet size at which packet transmission is governed by the RTS/CTS transaction. The IEEE 802.11-1997 standard allows for short packets to be transmitted without RTS/CTS transactions. Each station can have a different RTS threshold. RTS/CTS is used when the data packet size exceeds the defined RTS threshold. With the CSMA/CA transmission mechanism, the transmitting station sends out an RTS packet to the receiving station, and waits for the receiving station to send back a CTS (Clear to Send) packet before sending the actual packet data.

This setting is useful for networks with many clients. With many clients, and a high network load, there will be many more collisions. By lowering the RTS threshold, there may be fewer collisions, and performance should improve. Basically, with a faster RTS threshold, the system can recover from problems faster. RTS packets consume valuable bandwidth, however, so setting this value too low will limit performance.

## 5.12 What is Beacon Interval

In addition to data frames that carry information from higher layers, 802.11 include management and control frames that support data transfer. The beacon frame, which is a type of management frame, provides the "heartbeat" of a wireless LAN, enabling stations to establish and maintain communications in an orderly fashion.

Beacon Interval represents the amount of time between beacon transmissions. Before a station enters power save mode, the station needs the beacon interval to know when to wake up to receive the beacon (and learn whether there are buffered frames at the access point).

## 5.13 What is Preamble Type

There are two preamble types defined in IEEE 802.11 specification. A long preamble basically gives the decoder more time to process the preamble. All 802.11 devices support a long preamble. The short preamble is designed to improve efficiency (for example, for VoIP systems). The difference between the two is in the Synchronization field. The long preamble is 128 bits, and the short is 56 bits.

## 5.14 What is SSID Broadcast

Broadcast of SSID is done in access points by the beacon. This announces your access point (including various bits of information about it) to the wireless world around it. By disabling that feature, the SSID configured in the client must match the SSID of the access point.

Some wireless devices don't work properly if SSID isn't broadcast (for example the D-link DWL-120 USB 802.11b adapter). Generally if your client hardware supports operation with SSID disabled, it's

not a bad idea to run that way to enhance network security. However it's no replacement for WEP, MAC filtering or other protections.

## 5.15 What is Wi-Fi Protected Access (WPA)

Wi-Fi's original security mechanism, Wired Equivalent Privacy (WEP), has been viewed as insufficient for securing confidential business communications. A longer-term solution, the IEEE 802.11i standard, is under development. However, since the IEEE 802.11i standard is not expected to be published until the end of 2003, several members of the Wi-Fi Alliance teamed up with members of the IEEE 802.11i task group to develop a significant near-term enhancement to Wi-Fi security. Together, this team developed Wi-Fi Protected Access.

To upgrade a WLAN network to support WPA, Access Points will require a WPA software upgrade. Clients will require a software upgrade for the network interface card, and possibly a software update for the operating system. For enterprise networks, an authentication server, typically one that supports RADIUS and the selected EAP authentication protocol, will be added to the network.

## 5.16 What is WPA2

It is the second generation of WPA. WPA2 is based on the final IEEE 802.11i amendment to the 802.11 standard.

## 5.17 What is 802.1x Authentication

802.1x is a framework for authenticated MAC-level access control, defines Extensible Authentication Protocol (EAP) over LANs (EAPOL). The standard encapsulates and leverages much of EAP, which was defined for dial-up authentication with Point-to-Point Protocol in RFC 2284.

Beyond encapsulating EAP packets, the 802.1x standard also defines EAPOL messages that convey the shared key information critical for wireless security.

## 5.18 What is Temporal Key Integrity Protocol (TKIP)

The Temporal Key Integrity Protocol, pronounced tee-kip, is part of the IEEE 802.11i encryption standard for wireless LANs. TKIP is the next generation of WEP, the Wired Equivalency Protocol, which is used to secure 802.11 wireless LANs. TKIP provides per-packet key mixing, a message integrity check and a re-keying mechanism, thus fixing the flaws of WEP.

## 5.19 What is Advanced Encryption Standard (AES)

Security issues are a major concern for wireless LANs, AES is the U.S. government's next-generation cryptography algorithm, which will replace DES and 3DES.

## 5.20 What is Inter-Access Point Protocol (IAPP)

The IEEE 802.11f Inter-Access Point Protocol (IAPP) supports Access Point Vendor interoperability, enabling roaming of 802.11 Stations within IP subnet.

IAPP defines messages and data to be exchanged between Access Points and between the IAPP and high layer management entities to support roaming. The IAPP protocol uses TCP for inter-Access Point communication and UDP for RADIUS request/response exchanges. It also uses Layer 2 frames to update the forwarding tables of Layer 2 devices.

## 5.21 What is Wireless Distribution System (WDS)

The Wireless Distribution System feature allows WLAN AP to talk directly to other APs via wireless channel, like the wireless bridge or repeater service.

## 5.22 What is Universal Plug and Play (uPnP)

UPnP is an open networking architecture that consists of services, devices, and control points. The

ultimate goal is to allow data communication among all UPnP devices regardless of media, operating system, programming language, and wired/wireless connection.

### 5.23 What is Maximum Transmission Unit (MTU) Size

Maximum Transmission Unit (MTU) indicates the network stack of any packet is larger than this value will be fragmented before the transmission. During the PPP negotiation, the peer of the PPP connection will indicate its MRU and will be accepted. The actual MTU of the PPP connection will be set to the smaller one of MTU and the peer's MRU.

### 5.24 What is Clone MAC Address

Clone MAC address is designed for your special application that request the clients to register to a server machine with one identified MAC address. Since that all the clients will communicate outside world through the WLAN Broadband Router, so have the cloned MAC address set on the WLAN Broadband Router will solve the issue.

### 5.25 What is DDNS

DDNS is the abbreviation of Dynamic Domain Name Server. It is designed for user owned the DNS server with dynamic WAN IP address.

### 5.26 What is NTP Client

NTP client is designed for fetching the current timestamp from internet via Network Time protocol. User can specify time zone, NTP server IP address.

### 5.27 What is VPN

VPN is the abbreviation of Virtual Private Network. It is designed for creating point-to point private link via shared or public network.

### 5.28 What is IPSEC

IPSEC is the abbreviation of IP Security. It is used to transferring data securely under VPN.

### 5.29 What is WLAN Block Relay between Clients

An Infrastructure Basic Service Set is a BSS with a component called an Access Point (AP). The access point provides a local relay function for the BSS. All stations in the BSS communicate with the access point and no longer communicate directly. All frames are relayed between stations by the access point. This local relay function effectively doubles the range of the IBSS.

### 5.30 What is WMM

WMM is based on a subset of the IEEE 802.11e WLAN QoS draft standard. WMM adds prioritized capabilities to Wi-Fi networks and optimizes their performance when multiple concurring applications, each with different latency and throughput requirements, compete for network resources. By using WMM, end-user satisfaction is maintained in a wider variety of environments and traffic conditions. WMM makes it possible for home network users and enterprise network managers to decide which data streams are most important and assign them a higher traffic priority.

### 5.31 What is WLAN ACK TIMEOUT

ACK frame has to receive ACK timeout frame. If remote does not receive in specified period, it will be retransmitted.

### 5.32 What is Modulation Coding Scheme (MCS)

MCS is Wireless link data rate for 802.11n. The throughput/range performance of an AP will depend on its implementation of coding schemes. MCS includes variables such as the number of spatial streams,

modulation, and the data rate on each stream. Radios establishing and maintaining a link must automatically negotiate the optimum MCS based on channel conditions and then continuously adjust the selection of MCS as conditions change due to interference, motion, fading, and other events.

### 5.33 What is Frame Aggregation

Every 802.11 packet, no matter how small, has a fixed amount of overhead associated with it. Frame Aggregation combines multiple smaller packets together to form one larger packet. The larger packet can be sent without the overhead of the individual packets. This technique helps improve the efficiency of the 802.11n radio allowing more end user data to be sent in a given time.

### 5.34 What is Guard Intervals (GI)

A GI is a period of time between symbol transmission that allows reflections (from multipath) from the previous data transmission to settle before transmitting a new symbol. The 802.11n draft specifies two guard intervals: 400ns (short) and 800ns (long). Support of the 400ns GI is optional for transmit and receive. The purpose of a guard interval is to introduce immunity to propagation delays, echoes, and reflections to which digital data is normally very sensitive.

## **Federal Communications Commission (FCC) Statement**

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:**

- 1) this device may not cause harmful interference, and
- 2) this device must accept any interference received, including interference that may cause undesired operation of the device.

### **FCC RF Radiation Exposure Statement:**

1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.