



# **WAP-3101**

## **Ceiling Mount PoE Wireless AP**



### **User's Manual**

## Table of Contents

---

<b>1</b>	<b>INTRODUCTION .....</b>	<b>3</b>
1.1	FEATURES & BENEFITS .....	3
1.2	PACKAGE CONTENTS .....	4
1.3	ACCESS POINT DESCRIPTION.....	5
1.4	SYSTEM REQUIREMENTS .....	5
1.5	APPLICATIONS .....	5
1.6	NETWORK CONFIGURATION.....	6
<b>2</b>	<b>UNDERSTANDING THE HARDWARE .....</b>	<b>8</b>
2.1	HARDWARE INSTALLATION .....	8
2.2	IP ADDRESS CONFIGURATION.....	9
<b>3</b>	<b>WEB CONFIGURATION .....</b>	<b>11</b>
3.1	LOGGING IN.....	11
3.2	STATUS .....	12
3.2.1	MAIN – SYSTEM STATUS .....	12
3.2.2	CLIENT LIST .....	13
3.2.3	SYSTEM LOG.....	14
3.3	SYSTEM .....	14
3.3.1	SYSTEM PROPERTIES .....	14
3.3.2	IP SETTINGS .....	15
3.4	WIRELESS.....	15
3.4.1	WIRELESS NETWORK.....	16
3.4.1.1	WIRELESS SECURITY - WEP.....	17
3.4.1.2	WIRELESS SECURITY – WPA-PSK, WPA2-PSK, WPA-MIXED .....	19
3.4.1.3	WIRELESS SECURITY – WPA, WPA2 .....	19
3.4.2	WIRELESS MAC FILTER .....	20
3.4.3	WDS LINK SETTINGS.....	21
3.4.4	WIRELESS ADVANCED SETTINGS .....	23
3.5	MANAGEMENT .....	24
3.5.1	ADMINISTRATION .....	24
3.5.2	MANAGEMENT VLAN .....	25
3.5.3	SNMP SETTINGS .....	25
3.5.4	BACKUP/RESTORE SETTINGS, RESET TO FACTORY DEFAULT SETTINGS .....	26
3.5.5	FIRMWARE UPGRADE.....	27
3.5.6	TIME SETTINGS .....	27
3.5.7	LOG .....	28
	<b>APPENDIX A – SPECIFICATIONS .....</b>	<b>29</b>
	<b>APPENDIX B – FCC INTERFERENCE STATEMENT.....</b>	<b>32</b>
	<b>APPENDIX C – IC STATEMENT.....</b>	<b>33</b>

## Introduction

This is a smoke detector looking Wireless Access Point / Repeater / WDS that operates seamlessly in the 2.4 GHz frequency spectrum supporting the 802.11b (2.4GHz, 11Mbps) and faster 802.11g super G (2.4GHz, 108Mbps) wireless standards. It's the best way to add wireless capability to your existing wired network, or to add bandwidth to your wireless installation.

This device features high transmitted output power and high receivable sensitivity along with antenna diversity. High output power and high sensitivity can extend range and coverage to reduce the roaming between Access Points to get more stable wireless connection. It also reduces the expense of equipment in the same environment.

To protect your wireless connectivity, it can encrypt all wireless transmissions through 64/128-bit WEP data encryption and also supports WPA/WPA2. The MAC address filter lets you select exactly which stations should have access to your network. In addition, the User Isolation function can protect the private network between client users.

The attractive design, high performance, and array of features makes this a suitable wireless solution for your residence or office.

This chapter describes the features & benefits, package contents, applications, and network configuration.

## Features & Benefits

Features	Benefits
High Speed Data Rate Up to 108Mbps	<b>Capable of handling heavy data payloads such as MPEG video streaming</b>
High Output Power	<b>Extended excellent Range and Coverage (fewer APs)</b>
IEEE 802.11b/g Compliant	<b>Fully Interoperable with IEEE 802.11b/IEEE802.11g compliant devices</b>
Embedded Antenna	<b>Users won't see antenna in your building environment</b>
WDS (Wireless Distributed System)	<b>Make wireless AP and Bridge mode simultaneously as a wireless repeater</b>
Repeater	<b>The easiest way to expand your wireless network's coverage.</b>
Support Multi-SSID function (4 SSID) in AP mode	<b>Allow clients to access different networks through a single access point and assign different policies and functions for each SSID by manager</b>
Diversity support	<b>Enhance the traffic signal</b>

WPA2/WPA/ IEEE 802.1x support	<b>Powerful data security</b>
MAC address filtering in AP mode(up to 50)	<b>Ensures secure network connection</b>
User isolation support (AP mode)	<b>Protect the private network between client users.</b>
Power-over-Ethernet (IEEE802.3af)	<b>Flexible Access Point locations and cost savings</b>
Keep personal setting	<b>Keep the latest setting when firmware upgrade</b>
SNMP Remote Configuration Management	<b>Help administrators to remotely configure or manage the Access Point easily.</b>
<b>QoS (WMM) support</b>	<b>Enhance user performance and density</b>

## Package Contents

Open the package carefully, and make sure that none of the items listed below are missing. Do not discard the packing materials, in case of return; the unit must be shipped in its original package.

- One Wireless Access Point Unit(WAP-3101)
- One Power Adapter (12V/ 1A)
- One CAT5 UTP Cable
- One Quick Installation Guide
- One CD-ROM with User's Manual
- One Mounting Bracket
- Two Screws

## Access Point Description



Front Panel



Rear Panel

## System Requirements

The following are the minimum system requirements in order to configure the device.

- PC/AT compatible computer with a Ethernet interface.
- Operating system that supports HTTP web-browser

## Applications

The wireless LAN products are easy to install and highly efficient. The following list describes some of the many applications made possible through the power and flexibility of wireless LANs:

- a) **Difficult-to-wire environments**  
There are many situations where wires cannot be laid easily. Historic buildings, older buildings, open areas and across busy streets make the installation of LANs either impossible or very expensive.
- b) **Temporary workgroups**  
Consider situations in parks, athletic arenas, exhibition centers, disaster-recovery, temporary offices and construction sites where one wants a temporary WLAN established and removed.
- c) **The ability to access real-time information**  
Doctors/nurses, point-of-sale employees, and warehouse workers can access real-time information while dealing with patients, serving customers and processing information.
- d) **Frequently changed environments**  
Show rooms, meeting rooms, retail stores, and manufacturing sites where frequently rearrange the workplace.
- e) **Small Office and Home Office (SOHO) networks**

SOHO users need a cost-effective, easy and quick installation of a small network.

**f) Wireless extensions to Ethernet networks**

Network managers in dynamic environments can minimize the overhead caused by moves, extensions to networks, and other changes with wireless LANs.

**g) Wired LAN backup**

Network managers implement wireless LANs to provide backup for mission-critical applications running on wired networks.

**h) Training/Educational facilities**

Training sites at corporations and students at universities use wireless connectivity to ease access to information, information exchanges, and learning.


## Network Configuration

To better understand how the wireless LAN products work together to create a wireless network, it might be helpful to depict a few of the possible wireless LAN PC card network configurations. The wireless LAN products can be configured as:

- a) Ad-hoc (or peer-to-peer) for departmental or SOHO LANs.
- b) Infrastructure for enterprise LANs.


**a) Ad-hoc (peer-to-peer) Mode**

This is the simplest network configuration with several computers equipped with the PC Cards that form a wireless network whenever they are within range of one another. In ad-hoc mode, each client is peer-to-peer, would only have access to the resources of the other client and does not require an access point. This is the easiest and least expensive way for the SOHO to set up a wireless network. The image below depicts a network in ad-hoc mode.

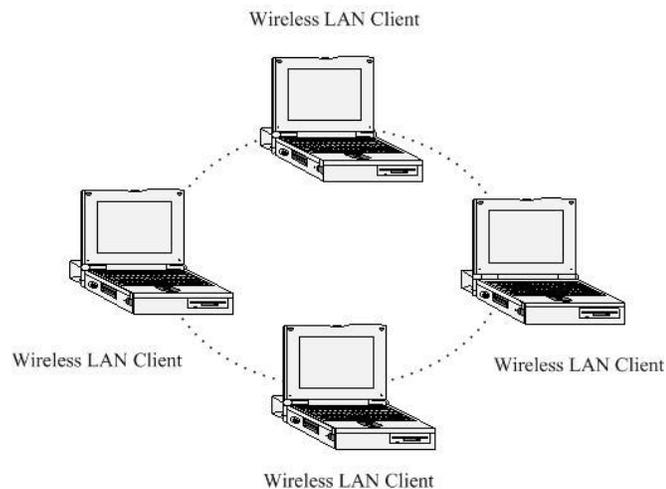

## b) Infrastructure Mode

The infrastructure mode requires the use of an access point (AP). In this mode, all wireless communication between two computers has to be via the AP. It doesn't matter if the AP is stand-alone or wired to an Ethernet network. If used in stand-alone, the AP can extend the range of independent wireless LANs by acting as a repeater, which effectively doubles the distance between wireless stations. The image below depicts a network in infrastructure mode.

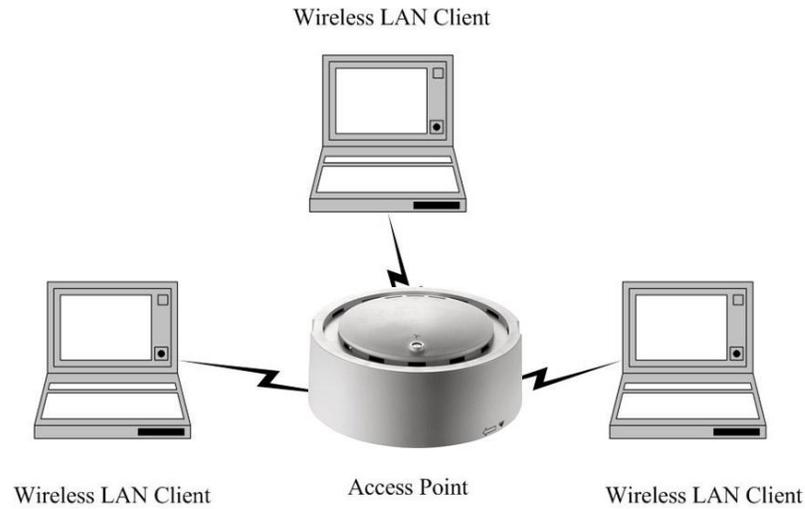



# Understanding the Hardware

---

## Hardware Installation

- 1 Place the unit in an appropriate place after conducting a site survey.
- 2 Plug one end of the Ethernet cable into the RJ-45 port on the rear panel of the device and another end into your PC/Notebook.
- 3 Insert the DC-inlet of the power adapter into the port labeled “DC-IN” and the other end into the power socket on the wall.


This diagram depicts the hardware configuration

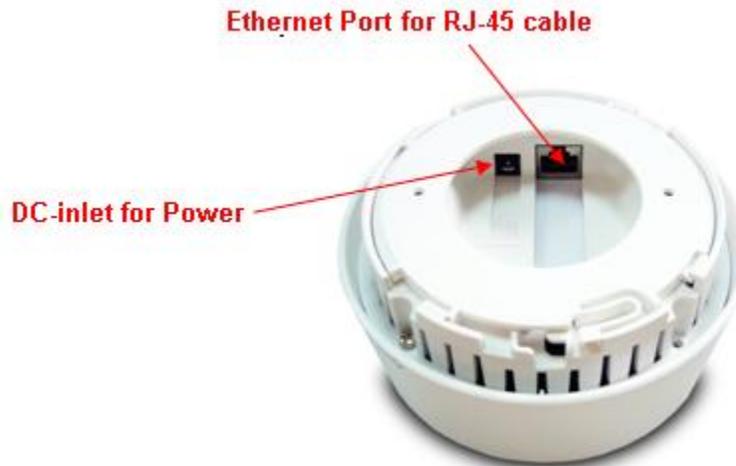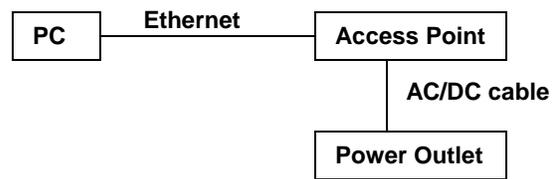


## IP Address Configuration

The default IP address of the device is **192.168.1.1**. In order to log into this device, you must first configure the TCP/IP settings of your PC/Notebook.

1. In the control panel, double click Network Connections and then double click on the connection of your Network Interface Card (NIC). You will then see the following screen.

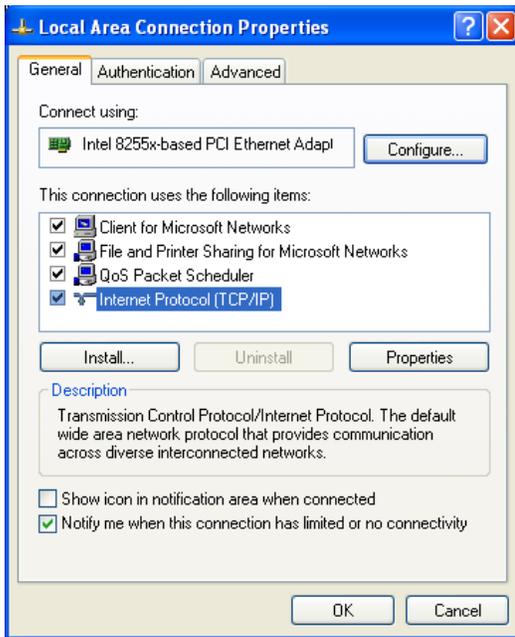

2. Select **Internet Protocol (TCP/IP)** and then click on the **Properties** button. This will allow you to configure the TCP/IP settings of your PC/Notebook.

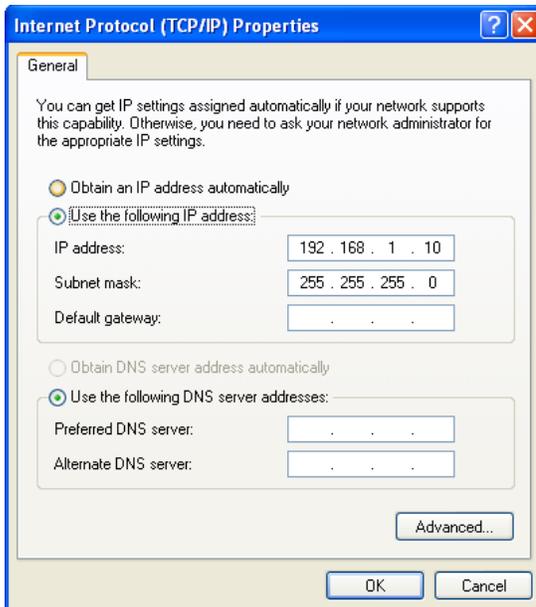

3. Select **Use the following IP Address** radio button and then enter the IP address and subnet mask. Ensure that the IP address and subnet mask are on the same subnet as the device.

For Example:

Device IP address: 192.168.1.1

PC IP address: 192.168.1.10

PC subnet mask: 255.255.255.0

4. Click on the **OK** button to close this window, and once again to close LAN properties window.

# Web Configuration

## Logging In


- To configure the device through the web-browser, enter the IP address of the Bridge (default: **192.168.1.1**) into the address bar of the web-browser and press **Enter**.



- Make sure that the Bridge and your computers are on the same subnet. Refer to **Chapter 2** in order to configure the IP address of your computer.



- Username : **admin**; Password : **admin**

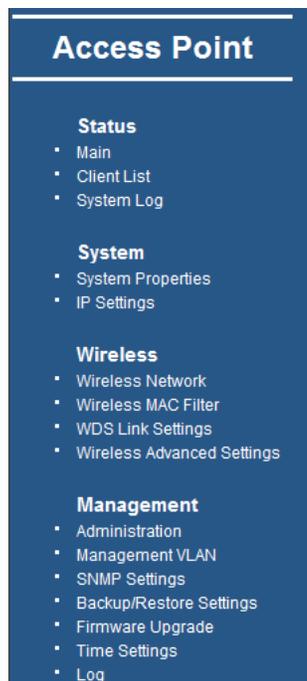

- After logging in you will see the graphical user interface (GUI) of the device. The navigation drop-down menu on left is divided into four main sections:
  - Status:** This includes the main status page, DHCP client list, and system log.
  - System:** This includes the system properties and IP settings.
  - Wireless:** This includes the basic, advanced, security, WDS, and MAC filter for the wireless interface.
  - Management:** This includes the administrator password settings, VLAN and SNMP settings, backup/restore configuration, firmware upgrade, time settings, and the system log.
- The status page is also displayed once you have logged in. This includes details about the system, wireless, and TCP/IP configuration.

**LevelOne**

## Ceiling Mount PoE Wireless Access Point

Home Reset

### Main

**System Information**

Device Name	Access Point
Ethernet MAC Address	00:02:6f:54:39:37
Wireless MAC Address	00:02:6f:54:39:37
Country	N/A
Current Time	Sat Jan 1 00:00:31 UTC 2000
Firmware Version	1.0.30(ETSI)
Management VLAN ID	Untagged

**Current IP Settings**

IP Address	192.168.1.1
Subnet Mask	255.255.255.0
Default Gateway	0.0.0.0
DHCP Client	Disabled

**Current Wireless Settings**

Operation Mode	Access Point
Wireless Mode	IEEE 802.11b/g Mixed
Channel/Frequency	2.412GHz (channel 01)
Profile Isolation	No
Profile Settings (SSID/Security/VID)	1 LevelOne_1/Open System/No Encryption/1
	2 N/A
	3 N/A
	4 N/A

## Status

**Status**

- Main
- Client List
- System Log

- Click on the **Status** link on the navigation drop-down menu. You will then see three options: main, client list, and system log. Each option is described below.

## Main – System Status

- The **Main** page is the first page that is displayed once you have logged in. The following information is included on this page:
  - System Information** – device name, Ethernet MAC address, Wireless MAC address, country, current time, firmware version, and VLAN management tag.
  - Current IP Settings:** IP address, subnet mask, default gateway, and DHCP client status.
  - Current Wireless Settings:** Operation mode, wireless mode, channel frequency, profile isolation, profile settings such as SSID, and security settings.

**Main**

Home

Reset

**System Information**

Device Name	Access Point
Ethernet MAC Address	00:11:6B:12:10:11
Wireless MAC Address	00:11:6B:12:10:11
Country	N/A
Current Time	Sat Jan 1 00:12:54 UTC 2000
Firmware Version	1.0.30(ETSI)
Management VLAN ID	Untagged

**Current IP Settings**

IP Address	192.168.1.1
Subnet Mask	255.255.255.0
Default Gateway	0.0.0.0
DHCP Client	Disabled

**Current Wireless Settings**

Operation Mode	Access Point
Wireless Mode	IEEE 802.11b/g Mixed
Channel/Frequency	2.412GHz (channel 01)
Profile Isolation	No
Profile Settings (SSID/Security/VID)	1 LevelOne_1/Open System/No Encryption/1
	2 N/A
	3 N/A
	4 N/A

Refresh

**Client List**

- Click on the **Client List** link to view a list of devices that are associated with the Access Point.

**Client List**

Home

Reset

#	MAC Addr
1	00:11:6B:12:10:11

Refresh

- Click on the Refresh button to view an updated list of devices that are associated with the Access Point.

## System Log

- The **System Log** page displays a list of events that are triggered on the Ethernet and Wireless interface. This log can be referred to when an unknown error occurs on the system or when a report needs to be sent to the technical support department for debugging purposes.

**System Log** Home Reset

---

Show log type: All Local Log i

Local Log i

All  
Debug  
Information  
Notice  
Warning  
Error  
Critical  
Alert  
Emergency

## System

**System**

- System Properties
- IP Settings

- Click on the **System** link on the navigation drop-down menu. You will then see two options: system properties and IP settings. Each option is described below.

## System Properties

- The **System Properties** allows you to configure a name for the device (this is not the SSID), select and country and the operational mode.

**System Properties** Home Reset

---

Device Name	Access Point ( 1 to 32 characters )
Country/Region	Please Select a Country Code
Operation Mode	<input checked="" type="radio"/> Access Point <input type="radio"/> Repeater

Apply Cancel

- **Device Name:** Specify a name for the device – this is not the SSID.
- **Country/Region:** Select the region from the drop-down list.

- **Operation Mode:** Select **Access Point** or **Repeater** radio button. In order to configure the **Repeater**, click on the **WDS Link Settings** under the **Wireless** drop-down menu.
- Click on the **Apply** button to save the changes.

## IP Settings

- The **IP Settings** page allows you to configure the device with a static IP address or a DHCP client.

**IP Settings**
Home    Reset

---

<b>IP Network Setting</b>	<input type="radio"/> Obtain an IP address automatically (DHCP) <input checked="" type="radio"/> Specify an IP address
<b>IP Address</b>	<input type="text" value="192"/> . <input type="text" value="168"/> . <input type="text" value="1"/> . <input type="text" value="1"/>
<b>IP Subnet Mask</b>	<input type="text" value="255"/> . <input type="text" value="255"/> . <input type="text" value="255"/> . <input type="text" value="0"/>
<b>Default Gateway</b>	<input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/>

Apply
Cancel

- **IP Network Setting:** Select **Obtain an IP address automatically (DHCP)** radio button if the Access Point is connected to a DHCP server. This will allow the Access Point to pass IP addresses to the clients associated with it. You may select **Specify an IP Address** radio button if you would like the device to use a static IP address. In this case, you would be required to specify an IP address, subnet mask, and default gateway IP address.
- **IP Address:** Specify an IP address
- **IP Subnet Mask:** Specify the subnet mask for the IP address
- **Default Gateway:** Specify the IP address of the default gateway.
- Click on the **Apply** button to save the changes.

## Wireless



- Click on the **Wireless** link on the navigation drop-down menu. You will then see four options: wireless network, wireless MAC filter, WDS link settings, and wireless advanced settings. Each option is described below.

## Wireless Network

- The **Wireless Network** page allows you to configure the wireless mode, channel, SSID, and security settings.

**Wireless Network**
Home    Reset

---

Wireless Mode

802.11b/g Mixed (2.4GHz/54Mbps) ▾

Channel / Frequency

Ch1-2.412GHz ▾

Current Profiles

SSID	Security	VID	Enable	Edit
LevelOne_1	Open System/No Encryption	1	<input checked="" type="checkbox"/>	Edit
LevelOne_2	Open System/No Encryption	2	<input checked="" type="checkbox"/>	Edit
LevelOne_3	Open System/No Encryption	3	<input type="checkbox"/>	Edit
LevelOne_4	Open System/No Encryption	4	<input type="checkbox"/>	Edit

Profile (SSID) Isolation

No Isolation  
 Isolate all Profiles (SSIDs) from each other using VLAN (802.1Q) standard

Apply
Cancel

- Wireless Mode:** Depending on the type of wireless clients that are connected to the network, you may select **B**, **G**, or **B/G-mixed**. If you are not sure about which clients will be accessing the wireless networks, it is recommended that you select **B/G-mixed** for the best performance.
- Channel:** Select a channel from the drop-down list. The channels available are based on the country's regulation. When selecting Infrastructure mode, a channel is not required, however, when selecting AdHoc mode, you must select the same channel on all points.
- Channel:** You may configure up to four different wireless profiles. Click on the **Edit** button to modify the profile and place a check in the **Enable** box to activate the profile.

## SSID Profile

Wireless Setting	
SSID	LevelOne_1 (1 to 32 characters)
VLAN ID	1 (1-4095)
Suppressed SSID	<input type="checkbox"/>
Station Separation	<input type="radio"/> Enable <input checked="" type="radio"/> Disable

Wireless Security	
Security Mode	Disabled <ul style="list-style-type: none"> <li>Disabled</li> <li>WEP</li> <li>WPA-PSK</li> <li>WPA2-PSK</li> <li>WPA-PSK Mixed</li> <li>WPA</li> <li>WPA2</li> <li>WPA Mixed</li> </ul>

- **SSID:** The SSID is a unique named shared amongst all the points of the wireless network. The SSID must be identical on all points of the wireless network and cannot exceed 32 characters.
- **VLAN ID:** If you have enabled VLAN tagging on your network, specify the VLAN tag ID.
- **Suppressed SSID:** Place a check in this box if you would like to hide the SSID. By enabling this feature, wireless clients will not be able to scan this access point in a site survey.
- **Station Separator:** This is also known as layer 2 isolation. Clients connected to this Access Point will not be able to directly communicate with each other.
- **Security Mode:** By default, the security is disabled. Refer to the next section to configure the security features such as WEP, WPA, WPA-PSK, WPA2, WPA2-PSK and WPA-Mixed
- Click on the **Apply** button to save the changes.

## Wireless Security - WEP

- **Security Mode:** Select **WEP** from the drop-down list if your wireless network uses WEP encryption. WEP is an acronym for Wired Equivalent Privacy, and is a security protocol that provides the same level of security for wireless networks as for a wired network.

## SSID Profile

### Wireless Setting

SSID	<input type="text" value="LevelOne_1"/> (1 to 32 characters)
VLAN ID	<input type="text" value="1"/> (1-4095)
Suppressed SSID	<input type="checkbox"/>
Station Separation	<input type="radio"/> Enable <input checked="" type="radio"/> Disable

### Wireless Security

Security Mode	WEP
Auth Type	Open System
Input Type	Hex
Key Length	40/64-bit (10 hex digits or 5 ASCII char) <ul style="list-style-type: none"> <li>40/64-bit (10 hex digits or 5 ASCII char)</li> <li>104/128-bit (26 hex digits or 13 ASCII char)</li> <li>128/152-bit (32 hex digits or 16 ASCII char)</li> </ul>
Default Key	
Key1	<input type="text"/>
Key2	<input type="text"/>
Key3	<input type="text"/>
Key4	<input type="text"/>

- **Authentication Type:** Select an authentication method. Options available are **Open Key**, **Shared Key** or **Auto (Auto : AP mode only)**. An open system allows any client to authenticate as long as it conforms to any MAC address filter policies that may have been set. All authentication packets are transmitted without encryption. Shared Key sends an unencrypted challenge text string to any device attempting to communicate with the Access Point. The device requesting authentication encrypts the challenge text and sends it back to the Access Point. If the challenge text is encrypted correctly, the Access Point allows the requesting device to authenticate. It is recommended to select Auto if you are not sure which authentication type is used.
- **Input Type:** Select He or ASCII from the drop-down list
- **Key Length:** Select a key format from the drop-down list. 64bit-hex keys require 10 characters, where as 128-bit keys require 26 characters. 128bit keys require 32 characters. A hex key is defined as a number between 0 through 9 and letter between A through F.
- **Default Key:** You may use up to four different keys for four different networks. Select the current key that will be used.
- **Key 1-4:** You may enter four different WEP keys.
- Click on the **Apply** button to save the changes.

## Wireless Security – WPA-PSK, WPA2-PSK, WPA-Mixed

- **Security Mode:** Select **WPA-PSK**, **WPA2-PSK**, or **WPA-Mixed** from the drop-down list if your wireless network uses WPA pre-shared key. (**WPA, WPA2 and WPA-Mixed : AP mode only**)

### SSID Profile

Wireless Setting	
SSID	LevelOne_1 (1 to 32 characters)
VLAN ID	1 (1-4095)
Suppressed SSID	<input type="checkbox"/>
Station Separation	<input type="radio"/> Enable <input checked="" type="radio"/> Disable

Wireless Security	
Security Mode	WPA-PSK
Encryption	Auto
Passphrase	passphrase1 (8 to 63 characters) or (64 Hexadecimal characters)
Group Key Update Interval	3600 seconds(30-3600, 0: disabled)

Save Cancel

- **Encryption:** Select **TKIP** or **AES** from the drop-down list if your wireless network uses this encryption. WPA (Wi-Fi Protected Access) was designed to improve upon the security features of WEP (Wired Equivalent Privacy). The technology is designed to work with existing Wi-Fi products that have been enabled with WEP. WPA provides improved data encryption through the Temporal Integrity Protocol (TKIP), which scrambles the keys using a hashing algorithm and by adding an integrity checking feature which makes sure that keys haven't been tampered with.
- **Passphrase:** Specify a passphrase that is shared amongst the Access Points and clients.
- **Group Key Update Interval:** Specify the number of seconds after which the Access Point will probe the client for the passphrase.
- Click on the **Apply** button to save the changes.

## Wireless Security – WPA, WPA2 (AP mode only)

- **Security Mode:** Select **WPA** or **WPA2** from the drop-down list if your wireless network uses WPA. WPA (Wi-Fi Protected Access) was designed to improve upon the security features of WEP (Wired Equivalent Privacy). The technology is designed to work with existing Wi-Fi products that have been enabled with WEP. WPA provides improved data encryption through the Temporal Integrity Protocol (TKIP), which scrambles the keys using a hashing algorithm and by adding an integrity checking feature which makes sure that keys haven't been tampered with.

### SSID Profile

**Wireless Setting**

SSID	LevelOne_1	(1 to 32 characters)
VLAN ID	1	(1-4095)
Suppressed SSID	<input type="checkbox"/>	
Station Separation	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	

**Wireless Security**

Security Mode	WPA
Encryption	Auto
Radius Server	0 . 0 . 0 . 0
Radius Port	1812
Radius Secret	secret1
Group Key Update Interval	3600 seconds(30-3600, 0: disabled)

Save Cancel

- **Encryption:** Select **TKIP** or **AES** from the drop-down list if your wireless network uses this encryption.
- **RADIUS IP Address:** Enter the IP address of the RADIUS server.
- **RADIUS Port:** Enter the port number of the RADIUS server. The default is usually 1812.
- **RADIUS Secret:** Enter the shared password of the RADIUS server.
- **Group Key Update Interval:** Specify the number of seconds after which the Access Point will probe the client for the secret.
- Click on the **Apply** button to save the changes.

### Wireless MAC Filter

- Click on the **Wireless MAC Filter** link under the **Wireless** menu. On this page you can filter the MAC address by allowing or blocking access the network.

**Wireless MAC Filter** Home Reset

---

ACL Mode Disabled

#	MAC Address	
1	00:11:22:33:22:33	Delete
2	22:33:55:66:00:11	Delete

- **ACL (Access Control) Mode:** You may choose to **Disable**, **Allow Listed**, or **Deny Listed** MAC addresses from associating with the network. By selecting **Allow MAC in the List**, only the address listed in the table will have access to the network; all

other clients will be blocked. On the other hand, selected **Deny MAC in the List**, only the listed MAC addresses will be blocked from accessing the network; all other clients will have access to the network.

- **MAC Address:** Enter the MAC address.
- This table lists the blocked or allowed MAC addresses; you may delete selected MAC address or delete all the addresses from the table by clicking on the **Delete** button.
- Click on the **Apply** button to save the changes.

## WDS Link Settings

- Click on the **WDS Link Settings** On this page you can configure the WDS (Wireless Distribution System) which allows the Access Point to function as a repeater.

Home
Reset

**WDS Link Settings**

**Notice:** When using this WDS Link Settings feature, please disable isolation feature first in Wireless Network page.

ID	MAC Address	Mode
1	11 : 22 : 33 : 44 : 55 : 66	Enable ▾
2	22 : 33 : 33 : 22 : 11 : 00	Enable ▾
3	:  :  :  :  :  :	Disable ▾
4	:  :  :  :  :  :	Disable ▾
5	:  :  :  :  :  :	Disable ▾
6	:  :  :  :  :  :	Disable ▾
7	:  :  :  :  :  :	Disable ▾
8	:  :  :  :  :  :	Disable ▾

Apply
Cancel

- **WDS MAC Address:** Specify the MAC address of the Access Points that will join the WDS network and then select Enable or Disable from the drop-down list.
- Click on the **Apply** button to save the changes.

WDS : Enable, VLAN : Disable

**Wireless Network** Home Reset

Wireless Mode: 802.11b/g Mixed (2.4GHz/54Mbps)  
 Channel / Frequency: Ch1-2.412GHz

SSID	Security	VID	Enable	Edit
LevelOne_1	Open System No Encryption	1	<input checked="" type="checkbox"/>	Edit
LevelOne_2	Open System No Encryption	2	<input type="checkbox"/>	Edit
LevelOne_3	Open System No Encryption	3	<input type="checkbox"/>	Edit
LevelOne_4	Open System No Encryption	4	<input type="checkbox"/>	Edit

Profile (SSID) isolation:  
 No Isolation  
 Isolate all Profiles (SSIDs) from each other using VLAN (802.1Q) standard

Apply Cancel

VLAN : Disable

**Wireless Network** Home Reset

Wireless Mode: 802.11b/g Mixed (2.4GHz/54Mbps)  
 Channel / Frequency: Ch1-2.412GHz

Microsoft Internet Explorer

Are you sure you want to enable isolation function?  
 This will cause WDS function to be disabled automatically.

确定 取消

SSID	Security	VID	Enable	Edit
LevelOne_1	Open System No Encryption	1	<input checked="" type="checkbox"/>	Edit
LevelOne_2	Open System No Encryption	2	<input type="checkbox"/>	Edit
LevelOne_3	Open System No Encryption	3	<input type="checkbox"/>	Edit
LevelOne_4	Open System No Encryption	4	<input type="checkbox"/>	Edit

Profile (SSID) isolation:  
 No Isolation  
 Isolate all Profiles (SSIDs) from each other using VLAN (802.1Q) standard

Apply Cancel

**WDS Link Settings** Home Reset

**Notice:** When using this WDS Link Settings feature, please disable isolation feature first in Wireless Network page.

ID	MAC Address	Mode
1	00 : 11 : 22 : 33 : 44 : 55	Disable
2	00 : 22 : 33 : 44 : 55 : 66	Disable
3	: : : : : :	Disable
4	: : : : : :	Disable
5	: : : : : :	Disable
6	: : : : : :	Disable
7	: : : : : :	Disable
8	: : : : : :	Disable

Apply Cancel

## Wireless Advanced Settings

- Click on the **Wireless Advanced Settings** link. On this page you can configure the advanced settings to tweak the performance of your wireless network. Options available are: data rate, transmit power, antenna diversity, fragmentation threshold, RTS threshold, and 802.11g protection.

---

Data Rate	Auto
Transmit Power	12 dBm
Fragment Length (256 - 2346)	2346 bytes
RTS/CTS Threshold (1 - 2346)	2346 bytes
Protection Mode	Disable
WMM	Disable

- Data Rate:** If you would like to force a data rate, you may select one from the drop-down list. However, for best performance it is recommended to use the **Auto** setting.
- Transmit Power:** You may have the different application distance of the device by selecting a value from the drop-down list. This feature can be helpful in restricting the coverage area of the wireless network.
- You can arrange the different data rate in distance in Access Point mode. Please refer below table. The table only for 11g and 11b/g mix mode

	6M-24M	36M	48M	54M
High	√	√	√	Great
Ultra High	√	√	Great	N/A
Super	√	Great	NA	N/A
Extreme	Great	N/A	N/A	N/A

- Fragment:** Packets over the specified size will be fragmented in order to improve performance on noisy networks.
- RTS Threshold:** Packets over the specified size will use the RTS/CTS mechanism to maintain performance in noisy networks and preventing hidden nodes from degrading the performance.
- Protection Mode:** If your wireless network is using both 802.11b and 802.g devices then it is recommended to enable this feature so that the 802.11b devices will not degrade the performance of 802.11g devices.
- Click on the **Apply** button to save the changes.

## Management



- Click on the **Management** link on the navigation drop-down menu. You will then see seven options: administration, management VLAN, SNMP settings, backup/restore settings, firmware upgrade, time settings, and log. Each option is described below.

## Administration

- Click on the **Administration** link under the **Management** menu. This option allows you to create a user name and password for the device. By default, this device is configured without a user name and password **Admin**. For security reasons it is highly recommended that you create a new user name and password.

- Name:** Specify a user name into the first field.
- Password:** Specify a password into this field and then re-type the password into the **Confirm Password** field. Then click on the **Apply** button.
- Click on the **Apply** button to save the changes.

## Management VLAN

- Click on the **SNMP** link under the **Management** menu. This option allows you to assign a VLAN tag to the packets. A VLAN is a group of computers on a network whose software has been configured so that they behave as if they were on a separate Local Area Network (LAN). Computers on VLAN do not have to be physically located next to one another on the LAN

### Management VLAN Settings

Home

Reset

**Caution:** If you reconfigure the Management VLAN ID, you may lose connectivity to the access point. Verify that the switch and DHCP server can support the reconfigured VLAN ID, and then re-connect to the new IP address.

Management VLAN ID

No VLAN tag  
 Specified VLAN ID   
 (must be in the range 1 ~ 4095. )

Apply

Cancel

- Management VLAN ID:** If your network includes VLANs and if tagged packets need to pass through the Access Point, specify the VLAN ID into this field. If not, select the **No VLAN tag** radio button.
- Note:** If you reconfigure the Management VLAN ID, you may lose connectivity to the Access Point. Verify that the switch and DHCP server can support the reconfigured VLAN ID, and then re-connect to the new IP address.
- Click on the **Apply** button to save the changes.

## SNMP Settings

- Click on the **SNMP Settings** link under the **Management** menu. This option allows you to assign the contact details, location, community name and trap settings for SNMP. This is a networking management protocol used to monitor network-attached devices. SNMP allows messages (called protocol data units) to be sent to various parts of a network. Upon receiving these messages, SNMP-compatible devices (called agents) return data stored in their Management Information Bases. .

### SNMP Settings

Home

Reset

SNMP Enable/Disable	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Contact	<input type="text" value="admin"/>
Location	<input type="text" value="US"/>
Community Name (Read Only)	<input type="text" value="public"/>
Community Name (Read/Write)	<input type="text" value="private"/>
Trap Destination IP Address	<input type="text" value="192"/> <input type="text" value="168"/> <input type="text" value="1"/> <input type="text" value="78"/>
Trap Destination Community Name	<input type="text" value="public"/>

Apply

Cancel

- **SNMP Enable/Disable:** Choose to **enable** or **disable** the SNMP feature.
- **Contact:** Specify the contact details of the device.
- **Location:** Specify the location of the device.
- **Read-Only Community Name:** Specify the password for access the SNMP community for read only access.
- **Read-Write Community Name:** Specify the password for access to the SNMP community with read/write access.
- **Send SNMP Trap:** Specify the IP address of the computer that will receive the SNMP traps.
- **Trap Community Name:** Specify the password for the SNMP trap community.
- Click on the **Apply** button to save the changes.

## Backup/Restore settings, Reset to factory default settings

- Click on the **Backup/Restore Setting** link under the **Management** menu. This option is used to save the current settings of the device in a file on your local disk or load settings on to the device from a local disk. This feature is very handy for administrators who have several devices that need to be configured with the same settings.

**Backup/Restore Settings**
Home
Reset

---

Save A Copy of Current Settings

Backup

Restore Saved Settings from A File

Browse...
Restore

Revert to Factory Default Settings

Factory Default

- **Save a copy of the current settings:** Click on the Backup button to save the current configuration.
- **Restore saved settings from a file:** Once a file has been backed up, you may restore it by clicking on the Browse button to select the file, and then the **Restore** button.
- **Revert to factory default settings:** Click on the Factory Default Settings button to reset the device to the default settings. Please wait while the device restart and then access the device using the default IP address: 192.168.1.1

## System Rebooting...

**Rebooting, Please wait...** 

[Click here when AP is ready](#)

## Firmware Upgrade

- Click on the **Upgrade Firmware** link under the **Management** menu. This page is used to upgrade the firmware on the device. Make sure that downloaded the appropriate firmware from your vendor.

- Click on the **Browse** button and then select the appropriate firmware and then click on the **Upgrade** button.  
**Note:** The upgrade process may take about 1 minute to complete. Do not power off the device during this process as it may crash the device and make it unusable. The device will restart automatically once the upgrade is complete.

## Time Settings

- Click on the **Time Settings** link under the **Management** menu. This page allows you to configure the time on the device. You may do this manually or by connecting to a NTP server.

- Manually Set Date and Time:** Specify the date and time
- Automatically Get Date and Time:** Select the time zone from the drop down list and then specify the IP address of the NTP server.
- Click on the **Apply** button to save the changes.

## Log

- Click on the **Log** link under the **Management** menu. The **Log** page displays a list of events that are triggered on the Ethernet and Wireless interface. This log can be referred when an unknown error occurs on the system or when a report needs to be sent to the technical support department for debugging purposes.

The screenshot shows the 'Log' configuration page. At the top right, there are 'Home' and 'Reset' buttons. The page is divided into two sections: 'Syslog' and 'Local log'. In the 'Syslog' section, there is a 'Syslog' dropdown menu set to 'Enable' and a 'Log Server IP Address' field with four input boxes containing '0', '0', '0', and '0'. In the 'Local log' section, there is a 'Local Log' dropdown menu set to 'Enable'. At the bottom, there are 'Apply' and 'Cancel' buttons.

- Syslog:** Choose to enable or disable the system log.
- Log Server IP Address:** Specify the IP address of the server that will receive the system log.
- Local Log:** Choose to enable or disable the local log.
- Click on the **Apply** button to save the changes.

## Appendix A – Specifications

Hardware	
Physical Interface	<ul style="list-style-type: none"> <li>● LAN: One 10/100 Fast Ethernet RJ-45</li> <li>● Reset Button</li> <li>● Power Jack</li> </ul>
LEDs Status	<ul style="list-style-type: none"> <li>● Power/ Status</li> <li>● LAN (10/100Mbps)</li> <li>● WLAN (Wireless Connection)</li> </ul>
Power Requirements	<ul style="list-style-type: none"> <li>● Power Supply: 90 to 240 VDC <math>\pm</math> 10%, 50/60 Hz (depends on different countries)</li> <li>● Active Ethernet (Power over Ethernet, IEEE802.3af)- 48 VDC/0.375A</li> <li>● Device: 12V/1A</li> </ul>
Regulation Certifications	<ul style="list-style-type: none"> <li>● FCC Part 15/UL, ETSI 300/328/CE</li> </ul>

RF Specification	
Frequency Band	2.400~2.484 GHz
Media Access Protocol	Carrier sense multiple access with collision avoidance (CSMA/CA)
Modulation Technology	<ul style="list-style-type: none"> <li>● OFDM: BPSK, QPSK, 16-QAM, 64-QAM</li> <li>● DBPSK, DQPSK, CCK</li> </ul>
Operating Channels	11 for North America, 14 for Japan, 13 for Europe
Receive Sensitivity (Typical)	<ul style="list-style-type: none"> <li>● IEEE802.11g 6Mbps@ -95dBm 54Mbps@ -75dBm</li> <li>● IEEE802.11b 1Mbps@ -98dBm 11Mbps@ -93dBm</li> </ul>
Available transmit power	<ul style="list-style-type: none"> <li>● IEEE802.11g 26dBm@6~24 Mbps 25dBm@36 Mbps 23dBm@48 Mbps 22dBm@54Mbps</li> <li>● IEEE802.11b 27dBm@1 ~ 11Mbps</li> </ul>

Antenna	Embedded MIMO antenna Peak Gain = 4 dBi
---------	--

<b>Software Features</b>	
Topology	Infrastructure/Ad-Hoc
Operation Mode	Access Point/Repeater/WDS
LAN	<ul style="list-style-type: none"> <li>• DHCP Client</li> </ul>
VPN	VPN pass-through (PPTP, L2TP, IPSEC)
Wireless	<ul style="list-style-type: none"> <li>• Wireless Mode – 11b / 11g / Disable</li> <li>• Channel Selection (Setting varies by Country)</li> <li>• Transmission Rate <ul style="list-style-type: none"> <li>➤ 11 b/g: 54, 48, 36, 24, 18, 12, 11, 9, 6, 5.5, 2, 1 in Mbps</li> </ul> </li> <li>• Transmit power (4 levels)</li> <li>• Antenna Diversity</li> <li>• Super-G(AP mode only)</li> </ul>
Security	<ul style="list-style-type: none"> <li>• WEP Encryption-64/128/152 bit</li> <li>• WPA Personal (WPA-PSK using TKIP or AES)</li> <li>• WPA Enterprise (WPA-EAP using TKIP)</li> <li>• 802.1x Authenticator</li> <li>• Hide SSID in beacons</li> <li>• Multiple SSID with 802.1q VLAN tagging (up to 4 SSIDs)</li> <li>• MAC Filter</li> <li>• L2 isolation</li> <li>• Wireless STA (Client) connected list</li> </ul>
QoS	<ul style="list-style-type: none"> <li>• WMM</li> </ul>

<b>Management</b>	
Configuration	Web-based configuration (HTTP)/Telnet
Firmware Upgrade	<ul style="list-style-type: none"> <li>• Upgrade firmware via web-browser</li> <li>• Keep latest setting when F/W update</li> </ul>
Administrator Setting	Administrator password change
Reset Setting	<ul style="list-style-type: none"> <li>• Reboot</li> <li>• Reset to Factory Default</li> </ul>
System monitoring	Status, Statistics and Event Log
SNMP	V1, V2c

MIB	MIB I, MIB II (RFC1213) and Private MIB
Bandwidth Measurement	Port / IP
Backup & Restore	Settings through Web

<b>Environment &amp; Physical</b>	
Temperature Range	<ul style="list-style-type: none"><li>• Operating: 0°C to 45°C (32°F to 113°F)</li><li>• Storage: -20°C to 70°C (-4°F to 158°F)</li></ul>
Humidity (non-condensing)	5%~95% typical
Dimensions	Diameter:120mm Height: 50mm
Weight	280g

---

# Appendix B – FCC Interference Statement

---

## Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### **IMPORTANT NOTE:**

#### **FCC Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device complies with FCC RF Exposure limits set forth for an uncontrolled environment, under 47 CFR 2.1093 paragraph (d)(2). This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## Appendix C – IC Statement

---

### IC statement

Operation is subject to the following two conditions:

This device may not cause interference and

This device must accept any interference, including interference that may cause undesired operation of the device.

This device has been designed to operate with an antenna having a maximum gain of 9 dBi. Antenna having a higher gain is strictly prohibited per regulations of Industry Canada. The required antenna impedance is 50 ohms.

### IMPORTANT NOTE:

#### IC Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

### Règlement d'Industry Canada

Les conditions de fonctionnement sont sujettes à deux conditions:

Ce périphérique ne doit pas causer d'interférence et.

Ce périphérique doit accepter toute interférence, y compris les interférences pouvant perturber le bon fonctionnement de ce périphérique.