



DIR-866L



**Wireless AC1750
Dual Band Gigabit Cloud Router
Quick Install Guide**

D-Link®

Package Contents



DIR-866L Dual Band Gigabit Cloud Router



Power Adapter



Ethernet Cable



Wi-Fi Configuration Card



Quick Install Guide

If any of the above items are missing, please contact your reseller.

Minimum Requirements

Network Requirements:

- An Ethernet-based broadband modem

Web-based Configuration Requirements

Computer with the following:

- Windows® or Mac OS® X operating system
- An installed Ethernet adapter or wireless adapter

Supported Browsers:

- Internet Explorer® 7 or higher, Safari® 5 or higher, Firefox® or Chrome™

Make sure you have the latest version of Java installed. Visit www.java.com to download the latest version.

mydlink Requirements

- For mydlink and mydlink app requirements refer to:
<http://www.mydlink.com>

Hardware Overview




1	Power LED	A solid green light indicates a proper connection to the power supply. The light will be solid orange during boot-up and will blink green during the WPS process.
2	Internet LED	A solid green light indicates a connection to the Internet port. If the LED is orange, the connection is good but the router cannot connect to the Internet. If this LED is blinking orange, this indicates that the “on demand” connection type is set and the Internet connection is idle.
3	USB Port	Connect a USB flash drive to share content throughout your network.
4	WPS Button	Press to start the WPS process. The Power LED will start to blink green.
5	LAN Ports (1-4)	Connect Ethernet devices such as computers, switches, and game consoles.
6	Internet Port	Connect your broadband modem to this port using an Ethernet cable.
7	Power Button	Press to power the router on and off.
8	Power Port	Connect the supplied power adapter.
9	Reset Button	Press and hold the reset button with a paper clip for six seconds to reset the router to the factory default settings.

Before you Start


- **Users with DSL providers** - If you are using a PPPoE connection, you will need your PPPoE user name and password. If you do not have this information, contact your Internet provider. Do not proceed until you have this information.
- **Users with Cable providers** - Make sure you unplug the power to your modem. In some cases, you may need to turn it off for up to five minutes.
- **Advanced Users** - If your ISP provided you with a modem/router combo, you will need to set it to "bridge" mode so the DIR-866L router can work properly. Please contact your ISP or refer to the user manual for your modem/router device.

Connect your Router


- 1 Unplug the power to your DSL or Cable modem.

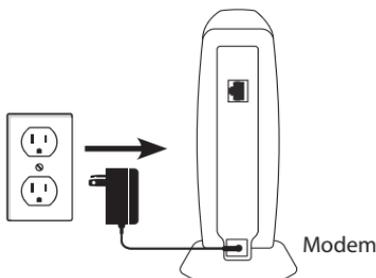


- 2 Connect an Ethernet cable from the Internet port of the router to the Ethernet port on your DSL or Cable modem.

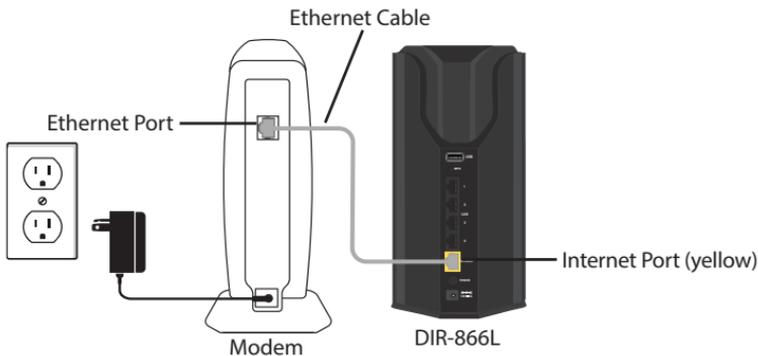


- 3** Connect another Ethernet cable from the Ethernet port on your computer to one of the LAN ports on the router.

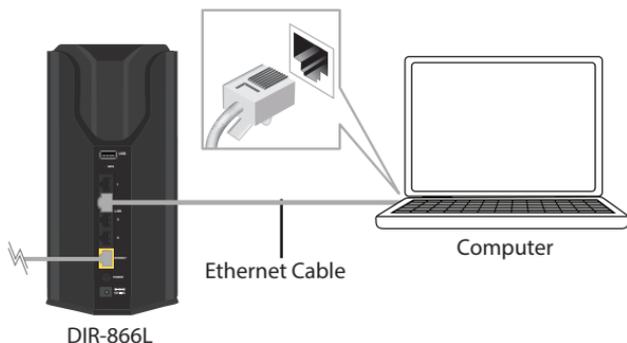

- 4** Plug the power back into your DSL or cable modem. Please wait about one minute before continuing.

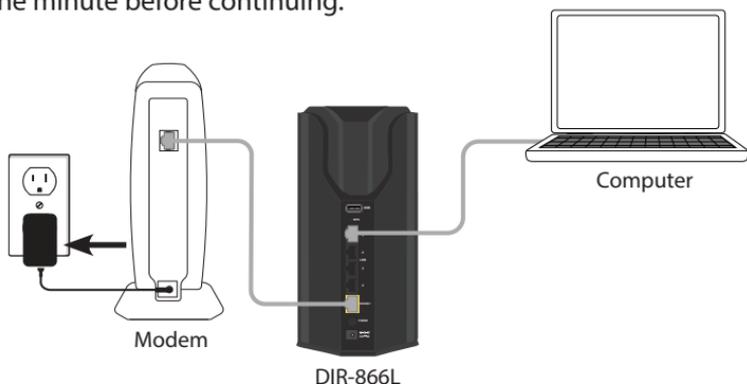

- 5** Plug the power adapter into your router and connect to an available power outlet or surge protector. If the Power LED does not light up, press the Power button on the back of the router.

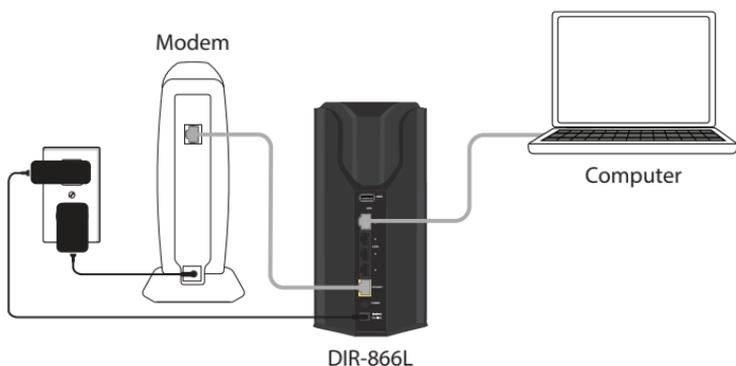

- 6** After the router has powered up, verify that the Power (green) and Internet (orange or green) LEDs are both lit. Proceed with router configuration.


Configuration

There are two ways to configure your router:

- Web Browser** - Use a web browser from your computer.
- QRS Mobile app** - Use a mobile device with the D-Link QRS Mobile app. Refer to the *QRS Mobile Setup* section for more information.

A. Web Browser Configuration

- 1** Open a web browser (e.g., Internet Explorer, Chrome, Firefox, or Safari) and enter **http://dlinkrouter.local/** or enter the IP address of the router (**192.168.0.1**).



- 2** When the Welcome screen appears, click **Next** to continue.



- 3** The router may automatically detect your Internet connection type. If this happens, skip to step 8. If not, then select your Internet connection type and click **Next** to continue.



- 4 DSL (PPPoE) users enter your PPPoE user name and password supplied by your ISP (Internet Service Provider). Click **Next** and skip to step 8.

SET USERNAME AND PASSWORD CONNECTION (PPPOE)

To set up this connection you will need to have a Username and Password from your Internet Service Provider. If you do not have this information, please contact your ISP.

User Name :

Password :

- 5 If you have a PPTP connection, enter the user name, password, IP information, and DNS settings supplied by your ISP. Click **Next** and skip to step 8.

SET USERNAME AND PASSWORD CONNECTION (PPTP)

To set up this connection you will need to have a Username and Password from your Internet Service Provider. You also need PPTP IP address. If you do not have this information, please contact your ISP.

Address Mode : Dynamic IP Static IP

PPTP IP Address :

PPTP Subnet Mask :

PPTP Gateway IP Address :

PPTP Server IP Address
(may be same as gateway) :

User Name :

Password :

Verify Password :

DNS SETTINGS

Primary DNS Address :

Secondary DNS Address :

- 6 If you have a L2TP connection, enter the user name, password, IP information, and DNS settings supplied by your ISP. Click **Next** and skip to step 8.

SET USERNAME AND PASSWORD CONNECTION (L2TP)

To set up this connection you will need to have a Username and Password from your Internet Service Provider. You also need L2TP IP address. If you do not have this information, please contact your ISP.

Address Mode : Dynamic IP Static IP

L2TP IP Address :

L2TP Subnet Mask :

L2TP Gateway IP Address :

L2TP Server IP Address
(may be same as gateway) :

User Name :

Password :

Verify Password :

DNS SETTINGS

Primary DNS Address :

Secondary DNS Address :

- 7 If you have a Static IP connection, enter the IP information and DNS settings supplied by your ISP. Click **Next** to continue.

SET STATIC IP ADDRESS CONNECTION

To set up this connection you will need to have a complete list of IP information provided by your Internet Service Provider. If you have a Static IP connection and do not have this information, please contact your ISP.

IP Address : 0.0.0.0
Subnet Mask : 0.0.0.0
Gateway Address : 0.0.0.0

DNS SETTINGS

Primary DNS Address :
Secondary DNS Address :

Cancel Prev Next

- 8 For both the 2.4GHz and 5GHz bands, create a name for your Wi-Fi Network and a password. Your wireless devices (i.e., tablets, smartphones, and laptops) will need to have this information entered to be able to connect to your wireless network. Click **Next** to continue.

STEP 2: CONFIGURE YOUR WI-FI SECURITY

Give your Wi-Fi network a name and a password. (2.4GHz Band)

Wi-Fi Network Name (SSID) :
drink8345 (Using up to 32 characters)

Wi-Fi Password :
ruext16379 (Between 8 and 63 characters)

Give your Wi-Fi network a name and a password. (5GHz Band)

Wi-Fi Network Name (SSID) :
drink8345-5GHz (Using up to 32 characters)

Wi-Fi Password :
ruext16379 (Between 8 and 63 characters)

Cancel Prev Next

- 9 Continue with the Setup Wizard to finish configuring your DIR-866L router. When you see the summary screen, make a note of your settings.

Note: Setting up “mydlink” is optional and not required for the router to function.

Congratulations! You have completed the router installation.

After you complete the configuration process, the Internet LED will turn green indicating that your router is connected to the Internet.

B. QRS Mobile Setup

- 1 Scan the code below or search "QRS Mobile" (App Store or Google Play) to download the QRS Mobile App to your iPhone, iPad, or Android device.



iOS



Android



QRS Mobile App

- 2 Once your app is installed, you may now configure your router. Connect to the router wirelessly by going to your wireless utility on your device. Scan for the wireless network name as listed on the supplied Wi-Fi Configuration card/sticker. Select the network and then enter the Wi-Fi Password.



D-Link Wi-Fi Configuration Card	
Default Configuration	Wi-Fi Name(SSID) 2.4Ghz: <input type="text"/>
<input type="checkbox"/> Wi-Fi Name(SSID) 2.4Ghz: dlink-xxxx	Wi-Fi Password: <input type="text"/>
Wi-Fi Name(SSID) 5GHz: dlink-xxxx-5GHz	Wi-Fi Name(SSID) 5GHz *: <input type="text"/>
Password: xxxxxxxx	Wi-Fi Password *: <input type="text"/>
To configure your router, go to: http://dlinkrouter.local. Or http://192.168.0.1	Your configuration Username: "Admin" Password: <input type="text"/>
Username: "Admin" Password: "" (leave the field blank)	<input type="text"/>
*For applicable models	

- 3 Once you connect to the router, tap on the **QRS Mobile** icon from your mobile device, then tap **Start** to continue. Follow the on-screen instructions to complete the setup.

- 4 After the *Setup Complete* screen appears, click **Save** and write down the new Wi-Fi Network name and password on your companion card for future reference.

Note: To reconnect to your router, launch your wireless utility, select the new Wi-Fi Network you created, and then enter your new Wi-Fi password.

Troubleshooting

How do I connect my wireless devices to the DIR-866L router?

1. Open your wireless network utility that displays available wireless networks.
2. Select the Wi-Fi Network name you assigned in the wizard and connect.

Note: If you did not run the setup wizard or you reset the router to its default settings, refer to the Wi-Fi Configuration Card included for the default Wi-Fi Network Name and Wi-Fi Password.

You can also connect wireless devices to the DIR-866L router using WPS:

1. Press the WPS button on the DIR-866L for a minimum of three seconds.
2. Within one minute press the WPS button on your wireless device.
3. Allow up to two minutes to connect.

Note: Some devices may require you to log in to a utility to start the WPS process. Refer to the user manual of the device you want to connect to the router if you do not know how to start the WPS process.

How do I change the wireless settings on the DIR-866L router?

1. Open a web browser (e.g., Internet Explorer, Chrome, Firefox, or Safari) and enter **http://dlinkrouter.local/**. You can also enter the IP address of the router (**192.168.0.1**).
2. At the login screen, type in **admin** for the user name and enter the router password you created in the wizard (no password by default).
3. Go to **Setup > Wireless Settings > Manual Wireless Network Setup** to create a new Wi-Fi network name (SSID) and Wi-Fi password.

What can I do if I forget my password?

If you forget your password, you must reset your router. Unfortunately, this process will change all your settings back to factory default.

To reset the router, locate the reset button (hole) on the bottom of the unit. With the router powered on, use an unfolded paper clip to press and hold the button down for about 10 seconds. Release the button and the router will go through its reboot process. Wait about 30 seconds to access the router.



Reset Button

Documentation available at <http://www.dlink.com/DIR-866L>.

GPL Code Statement

This D-Link product includes software code developed by third parties, including software code subject to the GNU General Public License ("GPL") or GNU Lesser General Public License ("LGPL"). As applicable, the terms of the GPL and LGPL, and information on obtaining access to the GPL code and LGPL code used in this product, are available to you at:

<http://tsd.dlink.com.tw/GPL.asp>

The GPL code and LGPL code used in this product is distributed WITHOUT ANY WARRANTY and is subject to the copyrights of one or more authors. For details, see the GPL code and the LGPL code for this product and the terms of the GPL and LGPL.

Written Offer for GPL and LGPL Source Code

Where such specific license terms entitle you to the source code of such software, D-Link will provide upon written request via email and/or traditional paper mail the applicable GPL and LGPL source code files via CD-ROM for a nominal cost to cover shipping and media charges as allowed under the GPL and LGPL.

Please direct all inquiries to:

Email:

GPLCODE@dlink.com

Snail Mail:

Attn: GPLSOURCE REQUEST
D-Link Systems, Inc.
17595 Mt. Herrmann Street
Fountain Valley, CA 92708

GNU GENERAL PUBLIC LICENSE

Version 3, 29 June 2007

Copyright (C) 2007 Free Software Foundation, Inc. <<http://fsf.org/>>

View the full GPL Code Statement at **<http://www.gnu.org/licenses/gpl.html>**

Notes

Notes

Notes

Notes

Technical Support

Having trouble installing your new product? D-Link's website contains the latest user documentation and software updates for D-Link products. U.S. and Canadian customers can contact D-Link Technical Support through our website.

United States

Internet: <http://support.dlink.com>

Canada

Internet: <http://support.dlink.ca>

D-Link®

Version 1.0(US)
June 30, 2014
29072600866LA10

©2014 D-Link. All rights reserved. D-Link and the D-Link logo are trademarks or registered trademarks of D-Link Corporation or its subsidiaries. iPhone, iPad, and iPod touch are registered trademarks of Apple Inc. Android is a trademark of Google, Inc. All other third-party marks mentioned herein may be trademarks of their respective owners. Maximum wireless signal rate derived from IEEE Standard 802.11ac, 802.11g, and 802.11n specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental conditions will adversely affect wireless signal range. Product specifications, size and shape are subject to change without notice, and actual product appearance may differ from that depicted on the packaging. This publication may not be reproduced, in whole or in part, without prior express written permission from D-Link Systems, Inc. Visit www.dlink.com for details.