

Connecting the Cables

INTERNET



2

ETHERNET

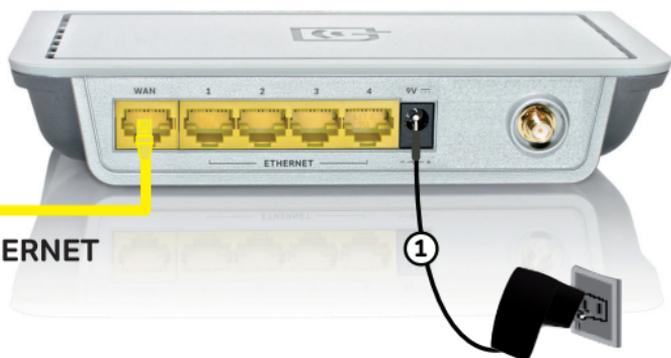

1

www.airties.com



Easy setup CD



3 year warranty



7/24 people support
+90 212 444 0 239

YM.AP.4240.UM.END.D00 REV.04.11.2009





Quick installation guide

54 Mbps Wireless 4 Port Access Point / Router

Air 4240

After you take the device out of its box, remember to remove the clear plastic from around it so that the ventilation holes are not blocked.

Step 1 Connecting the cables

Follow the steps below for the cabling of your device.

1. Connect the 9V power adapter included in the box to the power port of your router and plug it into the wall outlet.
маршрутизатора и включите его в розетку питания.
2. Using Ethernet cable which comes together with the device, connect WAN port of Air 4240 to the cable modem or Internet gateway..

RESET: Button to reset your device to default factory settings (at the bottom of the device).




To reset the Air 4240 to the default factory settings, While the device is on, press and hold the reset button at the bottom of the device with the tip of a pencil or similar pointed object for 5 seconds

*Please see the next page for the installation diagram.

Step 2 Connecting to the Air 4240

The Air 4240 cable connections must be complete before you can establish a wireless connection to it.


1. First, check to make sure the wireless network client (802.11b/g) of your computer is enabled.
2. Find the “**AirTies_Air4240**” network (SSID) on the wireless network search page of your wireless network client and connect to it.

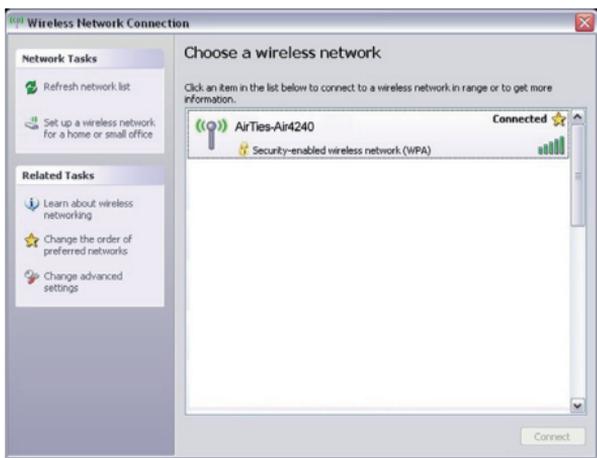

Step 3 Advanced Settings with the AirTies Access Program

Important: To be able to use the AirTies Access Program, your device must be connected to an ADSL modem or a wired network and must have an IP address assigned to it.


1. By using the AirTies Access Program you can access the Web interface of your device to configure the encryption settings and other advanced settings of your wireless network.
2. Insert the Air 4240 Easy setup CD into your computer.
3. The AirTies Access Program installation wizard will start automatically. Click Next> to start the installation.

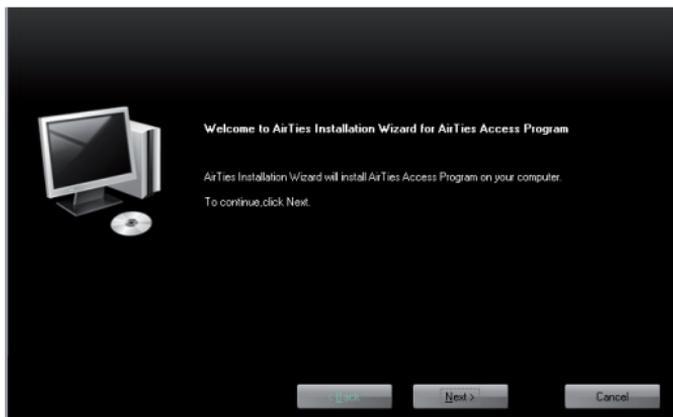


4. To complete the installation process, click **Finish** in the installation wizard.




5. Once the installation is complete, the AirTies Access Program will start looking for AirTies products that are connected to your computer.

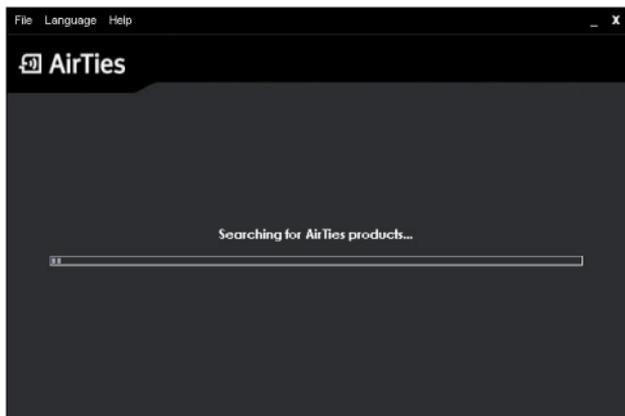

6. At the end of the search, a list of all AirTies products connected to your computer will be displayed.

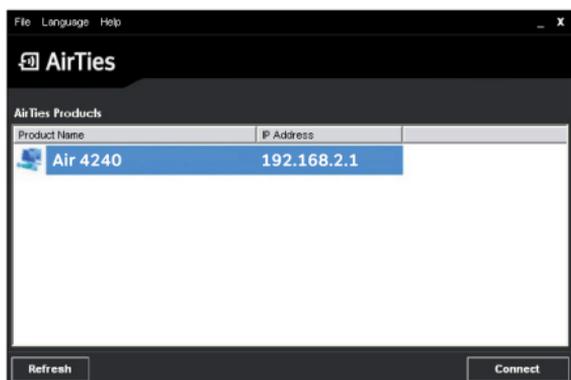

7. Select the AirTies product whose Web interface you'd like to access and click "**Connect**". The Web interface login screen will come up. You do not need a password to access the Web interface. Click "**OK**" to enter. Once you enter, you can configure the advanced settings.

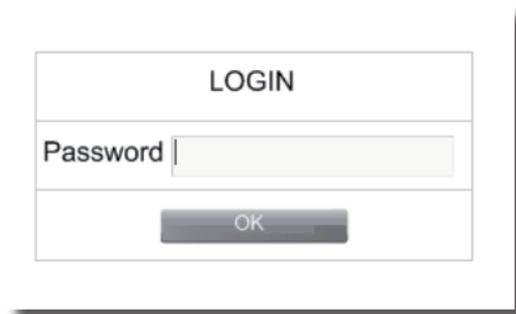

For detailed information about setting up your device as a **Access Point** and other advanced settings, please refer to the User Manual (**Air4240.pdf**) included on the Easy Setup CD.

