
Hello

Look inside to see how to set up your new Sky Hub

Set Up Guide

SR101 Set Up Guide.indd 1

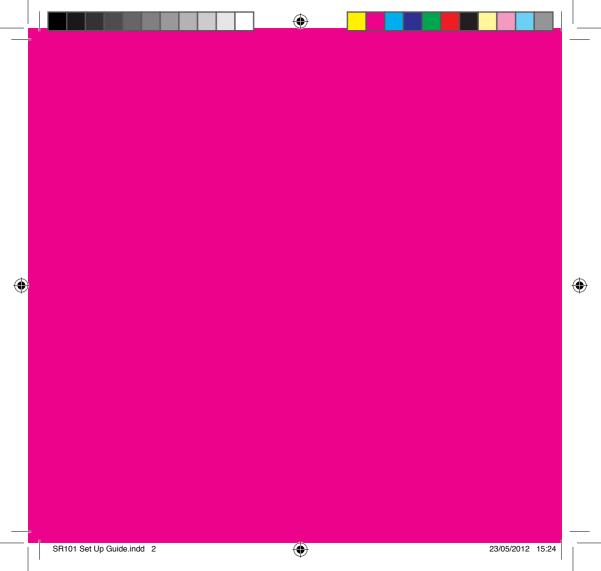

Contents

Get connected Check

۲

your activation date	5
your contents	6
Find your master phone socket	8
Unplug everything from your master phone socket	10
Plug in your Sky Hub	12
Fit microfilters around your home	14
·	14
Connect	
PC (Windows 7)	16
PC (Windows Vista)	18
PC (Windows XP)	20
Mac OSX	22
Wired set up	24

Get extras

Get protected	27
Enjoy fantastic Sky services	28
Help	30
Advanced users	31

Other stuff

Using your equipment safely	33
Recycling	34

Get connected

۲

Check
 Find
 Unplug
 Plug in
 Fit microfilters
 Connect

۲

1 Check your activation date

You'll find this on the top of your Sky Hub packaging. Your Sky Broadband will not be up and running until then.

When to set up your Sky Hub?

- If you are transferring from another broadband provider, on the activation date your previous broadband service will stop. When this happens you can start to set up your Sky Hub
- If you are coming from Virgin or getting a new broadband service, you can set up your Sky Hub on your activation date and then wait for your broadband to go live

Please note, your Sky Broadband can go live anytime up to 8pm on your activation date.

Store A DY JAN 2020 ON OT JAN 2020 Store Contraction of Contractio

۲

1 Check your contents




Sky Hub



Grey ADSL Cable and Microfilter



Black Power Cable

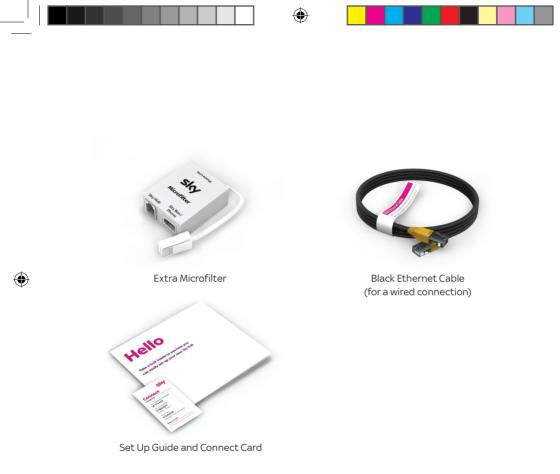

If you're missing any of these items please give us a call on **08442 410 515**

2 Find your master phone socket

For your best speeds and stability you should connect your Sky Hub to your master phone socket. This is where your broadband signal is strongest.

To find it look around your home for a larger phone socket with a line in the middle and possibly a BT or Openreach logo. You can also try tracing where your phone line enters your house from the street and looking on the wall near there.





OR



Alternative master phone socket

If you can't find a master socket with a line through it, look for a socket that is thicker or with a BT logo in the top or bottom corner.

(i) Master phone socket

If you can't find your master phone socket simply connect your Sky Hub to a convenient phone socket. Your broadband should still work but may not perform as well as in the master socket.

Pre-filtered sockets

You may find you have a pre-filtered master phone socket. If you do, plug in the grey end of the ADSL cable into the back of the Sky Hub.


Remove the microfilter from the other end of the grey ADSL cable, and plug the grey ADSL cable directly into the ADSL port on the master phone socket.

Then jump to step 4 on page 13 of this Set Up Guide.

3 Unplug everything from your master phone socket

If you have a **splitter** already inserted (it may look like either of these):



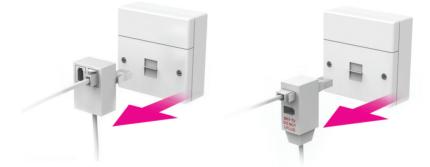

Take it out of your master phone socket and continue to the **next page**.

If you have a phone cable already inserted:

OR If you have any existing broadband equipment inserted:



Take it out of your master phone socket and continue to the **next page**.

Take out everything from your master phone socket. Remove the old microfilter from the cables and discard it. Continue to the **next page**.







- Plug the white end of the microfilter with the grey ADSL cable attached directly into your master phone socket.
- Plug in the phone cable OR splitter that you previously removed to the microfilter port marked 'Sky Box/Phone'.





- **3.** Plug the grey end of the ADSL cable into the back of your Sky Hub.
- 4. Now plug the blue connector of the black power cable into the back of your Sky Hub. Then plug it in at the mains and switch on.

Double filtering

Never plug microfilters into other microfilters. This will prevent your Sky Broadband connection from working.

13

(i)

5 Fit microfilters

around your home



Why should I fit microfilters to all my other phone sockets that are in use? Without correctly installed microfilters around your home, your Sky Broadband connection may be slow, intermittent or may stop connecting at all.

(i)



For these set ups, this is how you should fit a microfilter to your phone socket:



23/05/2012 15:24

6 Connect your PC (Windows 7) wirelessly to the internet

Not connected Image: Connections are available Wireless Network Connection Image: Connect connection SKV65173 Image: Connect connection SKV652C Image: Connect connec



1. Find wireless networks

 Click on the icon in the system tray (near your taskbar clock) to see available wireless networks

2.Select your wireless network

- Your Sky Hub's wireless details should appear in the list of networks. You can find the name of your wireless network on the inside lid of your Sky Hub packaging or on the 'Connect' card. This is also on the back of your Sky Hub
- Click on your Sky Hub's network name and click (Connect)

Type the networ	rk security key
Security key:	
	Hide characters
(0)	You can also connect by pushing the
ester act	button on the router.
Somet Somet Service	OK Cancel



PC (Windows 7)

PC (Windows Vista) PC (Windows XP) Mac OSX Wired set up

3. Enter your wireless password

- The Security Key is your password. This can be found on the inside lid of your Sky Hub packaging or on the 'Connect' card. This is also on the back of your Sky Hub
- Always enter your password in CAPITAL letters
- If you are asked for a PIN then insert this instead of the password and click \overline{OK}

OR WPS (Wi-Fi Protected Setup)

• Push the WPS button 🕼 and hold it in for two seconds. The wireless icon 🔊 will flash amber

4.Open browser

• Click on an internet browser to complete your set up


i) Can't get connected

- Have you turned on the wireless switch or button on your computer?
 - Have you selected the correct network?
 - Try entering your Password or PIN again



6 Connect

your PC (Windows Vista) wirelessly to the internet

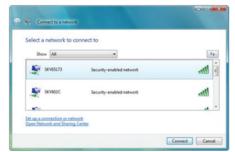



1. Find wireless networks

- Click the window icon
- Select 'Connect To'

2. Select your wireless network

- Your Sky Hub's wireless details should appear in the list
 of networks
- You can find the name of your wireless network on the inside lid of your Sky Hub packaging or on the 'Connect' card. This is also on the back of your Sky Hub
- If you don't see your network name, click the Refresh network button
- Select your network and click (Connect)



PC (Windows 7) PC (Windows Vista)

PC (Windows XP) Mac OSX Wired set up

3. Enter your wireless password

- You'll then be prompted to push the WPS button on your Sky Hub (right) or click the link to enter the password
- The Network Key is your password, this can be found on the inside lid of your Sky Hub packaging or on the 'Connect' card. This is also on the back of your Sky Hub
- Always enter your password in CAPITAL letters
- If you are asked for a PIN then insert this instead of the password

OR WPS (Wi-Fi Protected Setup)

0

• Push the WPS button 🕼 and hold it in for two seconds. The wireless icon 🔊 will flash amber

4.Open browser

• Click on an internet browser to complete your set up

Can't get connected

- Have you turned on the wireless switch or button on your computer?
 - Have you selected the correct network?
 - Try entering your Password or PIN again

6 Connect your PC (Windows XP) wirelessly to the internet





1. Find wireless networks

- Right click the wireless icon
- Click View Available
 Wireless Networks

2.Select your wireless network

- Highlight your Sky Hub's wireless details from the list
- You can find the name of your wireless network on the inside lid of your Sky Hub packaging or on the 'Connect' card. This is also on the back of your Sky Hub
- If you can't find your network name, click Refresh network list
- Select your network and click (Connect)

	73' requires a network key (also called a WEP key or WPA key). A went unknown intruders from connecting to this network.
Type the key, and the	en dick Connect.
Network key:	1
Confirm network key:	
SICI	Connect Cancel
ect man day	
Contract dest the second	
and an and and	
	all and a second and a second and a second a s
	36 oth
	and the second s

PC (Windows 7) PC (Windows Vista) PC (Windows XP) Mac OSX

Wired set up

3.Enter your wireless password

- The Network Key is your password. This can be found on the inside lid of your Sky Hub packaging or on the 'Connect' card. This is also on the back of your Sky Hub
- Always enter your password in CAPITAL letters and click Connect

4.Open browser

• Click on an internet browser to complete your set up



Can't get connected

- Have you turned on the wireless switch or button on your computer?
- Have you selected the correct network?
- Try entering your password again using CAPITAL letters

6 Connect

your MAC OSX wirelessly to the internet

Edit	View
es	
	•
	•
	•
	୯ଜଞ
Bluetooth	Sharing
	es

1. Find wireless networks

• Click on the Apple icon, select System Preferences and click on Network

AirPort: On	
Turn AirPort Off	•
No network selected	
SKY06825	**
SKY07495	
SKY23985	
SKY34583	
SKY39609	
SKY50001	
SKY52939	
SKY56688	
SKY602C	
SKY65173	

2. Turn Airport On

- Select Airport and click On
- Highlight your wireless network in the drop down bar. You can find the name of your wireless network on the inside lid of your Sky Hub packaging or on the 'Connect' card. This is also on the back of your Sky Hub
- Select your network

The network password.	"SKY65173" requires a WPA
Password:	
~	☐ Show password ☑ Remember this network
SKA	Cancel OK
Contract	
SK wroth OFE	
Propose	

PC (Windows 7) PC (Windows Vista) PC (Windows XP) Mac OSX

Wired set up

3.Enter your wireless password

- Enter your password. This can be found on the inside lid of your Sky Hub packaging or on the 'Connect' card. This is also on the back of your Sky Hub
- Always enter your password in CAPITAL letters
- Click OK

4.Open browser

 Click on an internet browser to complete your set up



Can't get connected

- Have you turned on the wireless switch or button on your computer?
- Have you selected the correct network?
- Try entering your password again using CAPITAL letters

6 Connect with a wired set up

Why a wired connection?

If your computer will always be next to your Sky Hub, then you may want to set up a wired Sky Broadband connection.

Ease of set up – a wired connection is much easier to set up. All you need to do is simply plug one end of the black Ethernet cable into the back of your Sky Hub and the other end into your computer.

Reliability and speed – your computer will always be connected, without interference from other electrical devices which will give you a faster speed than with a wireless connection, so ideal if you are downloading large files.



1. Connect to your computer

• Plug one end of the black Ethernet cable into the Ethernet port on the side of your computer. It usually has a symbol next to it that looks like this:



PC (Windows 7) PC (Windows Vista) PC (Windows XP) Mac OSX **Wired set up**



2. Connect to your Sky Hub

 Plug the other end of the black Ethernet cable into one of the yellow ports on the back of your Sky Hub. Your computer should automatically connect.

3.Open browser

• Click on an internet browser to complete your set up

Get extras

۲

Get protected
 Enjoy fantastic Sky services
 Help
 Advanced users

۲

1 Get protected with security software

When using the internet you must protect yourself and your family against online threats by making sure up-to-date anti-virus and parental control software is installed on your computer.

With Sky Broadband you can install a free trial of McAfee Security Suite, which **includes parental controls for PCs.**

WMcAfee Security Suite

- Automatically blocks, cleans and removes viruses
- Protects and conceals your computer from hackers
- · Blocks spyware and removes existing spyware
- Adds helpful safety ratings to sites and search engines
- Filters offensive content and limits child internet access

W McAfee[.] Parental Controls

McAfee Internet Security Suite already comes with Parental Controls as standard. Or you can get Parental Controls on their own as a separate download, free for as long as you need them, on up to three PCs.

McAfee Parental Controls are an important part of keeping your family safer online. They help you control when your children can be online, monitor/control what websites they can visit, and keep an eye on their online activities.

VirusScan

If you have a Mac you can download our free VirusScan software.

You can install any of these services from sky.com/broadband

•

2 Enjoy fantastic Sky services

Connect your Sky+HD box and get TV On Demand

Now you've completed your Sky Hub set up, you can connect your Sky Hub to your compatible Sky+HD box to access TV On Demand, our library of TV on demand for no extra monthly cost.

Once a wired or wireless connection is made to your Sky+HD box, the Sky+HD icon () will turn white. To find out more about setting up your connection for TV On Demand, go to **sky.com/tvondemand**



Sky.com, our official site, is an ideal home page and offers you an exciting number of options:

My Sky

Here you can manage your Sky account and see bills, make payments, track orders and more, whenever and wherever you want.

Sky Go

Enjoy TV from Sky on your iPad, iPhone or laptop with Sky Go, available at no extra cost to Sky TV customers.

Catch the latest movies, live sports and entertainment in line with your subscription anywhere in the UK or Ireland with a WiFi or 3G connection.





8 Help

Experiencing difficulties? This checklist covers the most common solutions should you be having problems connecting.

1. Check your broadband activation date

You can find this on the top of your Sky Hub packaging – you won't be able go online before this date.

2. Check your broadband connection is set up correctly

Make sure that you've plugged in microfilters between the master phone socket and any other connections – refer back to the 'unplug' and 'plug in' sections of this 'Set Up Guide' for step by step instructions.

3. Check your power ① light is white

The power light ① should be white, if not check the power supply is plugged in and switched on at the mains.

4. Check your wireless (Wi-Fi) is turned on

If you are connecting wirelessly make sure your computer (device) has wireless switched on. If you're unsure where to find this refer to the manufacturers guide.

5. Check you've entered your wireless details correctly

Make sure you've selected the correct wireless network from the list and entered your password in **CAPITAL letters** – no numbers. If you are asked for a PIN, this will be eight numbers. You can find your wireless details on the inside of your Sky Hub packaging, the 'Connect' card or on the back of your Sky Hub.

6. For best performance leave your Sky Hub switched on

It's important to leave your Sky Hub permanently switched on so we can continue to provide the best speeds supported with a reliable connection.

Still not working?

If you've followed all the steps in this guide and are still experiencing difficulties, try a wired connection using your Ethernet cable (page 24) and go online **sky.com/help** where you can find more detailed steps, videos and additional help like connecting game consoles and smart phones. Or call Sky Technical Support on **08442 410 515**.



4 Advanced users

Sky Hub login

If you're an expert user, who wants to update your preferences or firewall, you can access your Sky Hub control panel by doing the following:

- Open up the Internet Explorer window or any other internet browser that you use
- In the address bar of the web browser, type in http://192.168.0.1/ which will take you to the Sky Broadband set up page

- In the username field, type in your username and password
- The default login is (lowercase): Username: **admin**
 - Password: **sky**



Other stuff

Other things you need to know about your new Sky Hub:

Using your equipment safely
 Recycling

()

۲

Using your equipment safely

Your Sky Hub has been manufactured to meet international safety standards, but you must take care if you want it to perform properly and safely. **It's important that you read this section completely, especially the 'Warnings and Cautions' instructions.** You should follow the instructions set out in your Set Up Guide. If you've any doubts about the set up process, operation or safety of your Sky Hub, please contact Sky.

Warnings and cautions

Remember that contact with 230V AC mains can be lethal or can cause a severe electric shock. To avoid this risk:

- Never remove the cover of your Sky Hub. There are no user-serviceable parts inside, but there are some high-voltage live parts
- Don't attempt to repair your Sky Hub. Instead, please contact Sky Customer Services

- If you move your Sky Hub between locations at different temperatures, allow it to reach room temperature before you apply power to it
- Make sure that all electrical connections are properly made
- Don't try to connect any of your Sky Hub to the mains supply until you've properly connected all the other leads
- Disconnect your Sky Hub from the mains supply before you disconnect any other equipment from its rear panel
- Never push anything into holes, slots or other openings in the casing of your Sky Hub
- Your Sky Hub is intended for use in moderate climates. Don't use or store your Sky Hub in hot, cold, damp or dusty places
- In order to ensure a free flow of air around your Sky Hub, allow at least 10cm of space above and on all sides. Don't cover any ventilation holes and slots

- Ensure the ventilation holes and slots don't become impeded with items such as newspapers, tablecloths and curtains or similar items
- Don't place your Sky Hub close to sources of heat such as a heater or direct sunlight. The maximum temperature should not exceed 45°C
- Don't place your Sky Hub in an enclosed cabinet with other pieces of tv equipment e.g. Sky Box, VCR or DVD
- Don't put anything on your Sky Hub which might drip or spill into it. Never stand objects filled with liquids, such as vases, on top
- Never place naked flame sources, such as lighted candles, on or adjacent to your Sky Hub

Mains plug and its fuse



The supplied mains plug may be a non-rewireable type or a rewireable type. Both types

contain an approved 3A fuse. If you need to replace the fuse, use an ASTA or BSI approved BS 1362 fuse, rated at 3A and marked with either of these symbols. Non-rewireable plugs have the fuse beneath a fuse cover on the plug face. Use a screwdriver to lever off the fuse cover, replace the fuse with a new one and refit its cover. Never use a plug if its fuse cover is missing. Rewireable plugs have the fuse inside. Use a screwdriver to remove the plug's back cover, then lever out the fuse and replace it with a new one. Replace the plug's back cover.

If the supplied mains plug is not suitable for your mains socket outlet, remove its fuse and then cut the plug off the lead. Destroy the severed plug immediately to avoid the shock hazard which would exist if this were to be plugged into a mains socket. Don't attempt to repair or modify the mains lead or plug. Fit an appropriate mains plug on the lead. If this plug contains a fuse, it should be as described above. If you're using a non-fused plug, an external fuse must not exceed 5A.

Connecting to the mains supply

Your Sky Hub operates with 230V AC, 50 Hz mains supply. Don't connect it to a DC power supply. On some models, the supplied mains lead has a 2-way connector at one end and a mains plug at the other. Insert the 2-way connector into your Sky Hub before you insert the plug into the mains supply. The only way to disconnect your Sky Hub from the mains is to take the plug out of the socket. Your Sky Hub must therefore be installed near the mains socket outlet, which should be easily accessible. **If you're in any doubt about anything relating to the mains supply, consult a competent electrician.**

2 Recycling

Make a difference with Sky



Give your old Sky product a new life. We can reuse most parts of your old Sky product and any parts we can't, we recycle. The crossed out wheeled bin symbol is used to mark products that should not be disposed of with general household waste, but collected separately for reuse or recycling. The product contains materials that when processed correctly can be recovered, reused or recycled.

Old Sky equipment can be reused or recycled, and the good news is that it's really easy to do. We have three options for you:

- Send it to us, for free, and we'll make sure it. gets reused or recycled. Package it carefully, remove any batteries and include a note to say that it is for reuse or recycling, then send it to: Sky Accessories, FREEPOST RLUT-GCLR-LBXK. Unipart Technology Logistics, Unit G Swift Park, Old Leicester Road, Rugby, CV21 1DZ.
- 2. You can also take it to your local Designated Collection Facility (DCF) - find one at www.recycle-more.co.uk
- 3. Or give it to your Sky engineer next time they visit.

For more information on reuse and recycling your old Sky products, and to find more about what we do, go to sky.com/environment

(€⊕

© Copyright British Sky Broadcasting Limited 2012.

۲

۲

Sky, Sky+HD, Sky Box, My Sky, Sky Go and Believe in Better are trade marks owned by the British Sky Broadcasting group of companies.

This product is intended for use in the UK only.



(1