## USER MANUAL WBR-1310

VERSION 4.0

**D-Link** 



#### WIRELESS

# Preface

D-Link reserves the right to revise this publication and to make changes in the content hereof without obligation to notify any person or organization of such revisions or changes.

#### **Manual Revisions**

Revision	Date	Description	
4.0	February 25, 2009	WBR-1310 Revision D1 with firmware version 4.13	

### Trademarks

D-Link and the D-Link logo are trademarks or registered trademarks of D-Link Corporation or its subsidiaries in the United States or other countries. All other company or product names mentioned herein are trademarks or registered trademarks of their respective companies.

Copyright © 2009 by D-Link Systems, Inc.

All rights reserved. This publication may not be reproduced, in whole or in part, without prior expressed written permission from D-Link Systems, Inc.

# **Table of Contents**

Prefacei
Manual Revisionsi
Trademarksi
Product Overview1
Package Contents1
System Requirements2
Introduction3
Features4
Hardware Overview5
Connections5
LEDs6
Installation7
Before you Begin7
Wireless Installation Considerations8
Connect to Cable/DSL/Satellite Modem9
Connect to Another Router10
Getting Started12
Configuration13
Web-based Configuration Utility13
Setup Wizard14
Internet Setup18
Dynamic (Cable)18
PPPoE (DSL)19
PPTP20
L2TP21

Big Pond	.22
Static (assigned by ISP)	.23
Wireless Settings	
Manual Wireless Settings	.25
Network Settings	.26
DHCP Server Settings	.27
Port Forwarding Rules	.28
Application Rules	.29
Network Filter	.30
Website Filter	.31
Firewall Settings	.32
Advanced Wireless Settings	.33
Advanced Network Settings	.34
Administrator Login Name:	.35
Administrator Password:	.35
Remote Management:	.35
Administrator Settings	.35
Time Settings	.36
System Settings	.37
Firmware Upgrade	.38
System Check	.39
Device Information	.40
Log	.41
Stats	.42
Wireless Stats	.42
Support	.43

Wireless Security What is WEP? What is WPA? Configure WEP Configure WPA/WPA2 Personal Configure WPA/WPA2 (RADIUS)	44 45 46 47
Connect to a Wireless Network Using Windows Vista <sup>®</sup> Configure Wireless Security Using Windows <sup>®</sup> XP Configure WEP Configure WPA/WPA2	49 50 52 53
Troubleshooting	57
Wireless Basics What is Wireless? Tips Wireless Modes	62 64
What is Wireless? Tips	62 64 65 66
What is Wireless? Tips Wireless Modes Networking Basics Check your IP address	62 64 65 66 66 67
What is Wireless? Tips Wireless Modes <b>Networking Basics</b> Check your IP address Statically Assign an IP address	62 64 65 66 67 68
What is Wireless? Tips Wireless Modes <b>Networking Basics</b> Check your IP address Statically Assign an IP address <b>Technical Specifications</b>	62 64 65 66 67 68 68

## **Package Contents**



Note: Using a power supply with a different voltage rating than the one included with the WBR-1310 will cause damage and void the warranty for this product.

# **System Requirements**

Network Requirements	<ul> <li>An Ethernet-based Cable or DSL modem</li> <li>IEEE 802.11b/g wireless clients</li> <li>10/100 Ethernet</li> </ul>
Web-based Configuration Utility Requirements	<ul> <li>Computer with the following: <ul> <li>Windows<sup>®</sup>, Macintosh<sup>®</sup>, or Linux-based operating system</li> <li>An installed Ethernet adapter</li> </ul> </li> <li>Browser Requirements: <ul> <li>Internet Explorer 6.0 or higher</li> <li>Mozilla 1.7.12 or higher</li> <li>Firefox 2.0 or higher</li> <li>Safari 1.0 or higher (with Java 1.3.1 or higher)</li> <li>Chrome 1.0 or higher</li> <li>Opera 6.0 or higher</li> </ul> </li> <li>Windows<sup>®</sup> Users: Make sure you have the latest version of Java installed. Visit www.java.com to download the latest version.</li> </ul>
CD Installation Wizard Requirements	Computer with the following: • Windows <sup>®</sup> XP with Service Pack 2 or Windows Vista <sup>®</sup> • An installed Ethernet adapter • CD-ROM drive

# Introduction

D-Link, the industry leader in wireless networking, introduces another breakthrough in wireless connectivity. The D-Link Wireless G WBR-1310 Router which is capable of transferring data with a maximum wireless signal rate of up to 54Mbps\* in the 2.4GHz frequency — the same wireless frequency as 802.11b. The D-Link WBR-1310 Wireless Router also offers four Ethernet ports to support multiple computers.

The advanced wireless technology built into the WBR-1310 Wireless Router offers data transfer speeds with a maximum wireless signal rate of up to 54Mbps\* through its wireless channels allowing streaming videos and other high bandwidth applications, such as online gaming events, to operate without the hassle of Ethernet cables. The ability to use high bandwidth applications also makes streaming real-time programs more enjoyable and more efficient.

With the WBR-1310 Wireless Router's built-in advanced firewall, threats of hackers penetrating your network are minimized. Some firewall features include functions that allow or disallow certain ports to be open for certain applications. Features like content filtering, MAC filtering, URL blocking, and domain blocking are useful tools to prevent other unwanted intruders from connecting to your network or browsing restricted sites.

The easy-to-use configuration wizard takes only minutes to setup and guides users step-by-step through configuring the WBR-1310. With all the versatile features and an user-friendly utility, the WBR-1310 Wireless Router provides an enhanced networking experience.


\* Maximum wireless signal rate derived from IEEE Standard 802.11g specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental conditions will adversely affect wireless signal range.


# **Features**

- Faster Wireless Networking The WBR-1310 provides up to 54Mbps\* wireless connection with other 802.11g wireless clients. This capability allows users to participate in real-time activities online, such as video streaming, online gaming, and real-time audio. The performance of this 802.11g wireless router gives you the freedom of wireless networking at speeds 5x faster than 802.11b.
- **Compatible with 802.11b and 802.11g Devices** The WBR-1310 is still fully compatible with the IEEE 802.11b standard, so it can connect with existing 802.11b PCI, USB and Cardbus adapters.
- Advanced Firewall Features The Web-based user interface displays a number of advanced network management features including:
  - **Content Filtering** Easily applied content filtering based on MAC Address, URL, and/or Domain Name.
  - Secure Multiple/Concurrent Sessions The WBR-1310 can pass through VPN sessions. It supports multiple and concurrent IPSec and PPTP sessions, so users behind the WBR-1310 can securely access corporate networks.
- User-friendly Setup Wizard Through its easy-to-use Web-based user interface, the WBR-1310 lets you control what information is accessible to those on the wireless network, whether from the Internet or from your company's server. Configure your router to your specific settings within minutes.

<sup>\*</sup> Maximum wireless signal rate derived from IEEE Standard 802.11g specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental conditions will adversely affect wireless signal range.

## Hardware Overview Connections

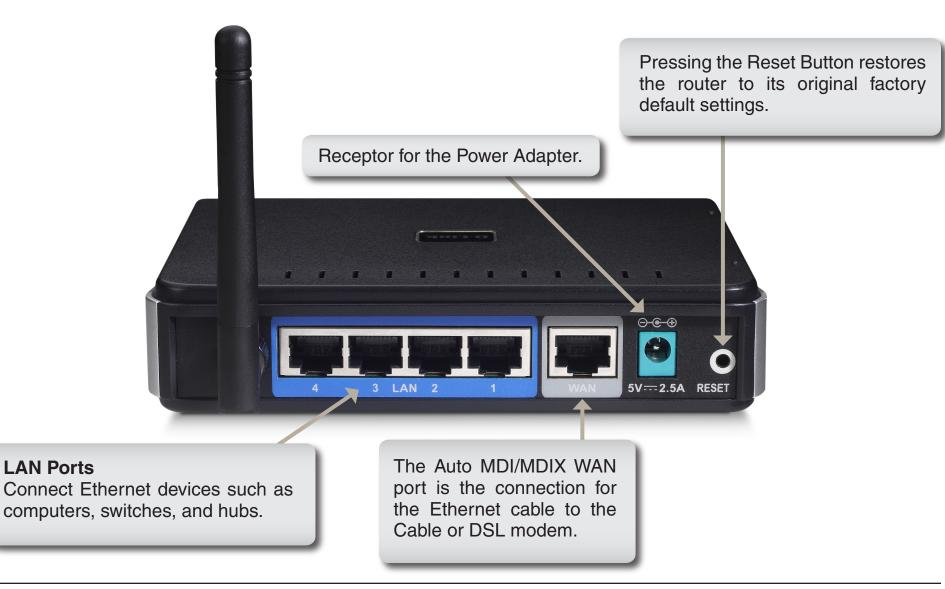

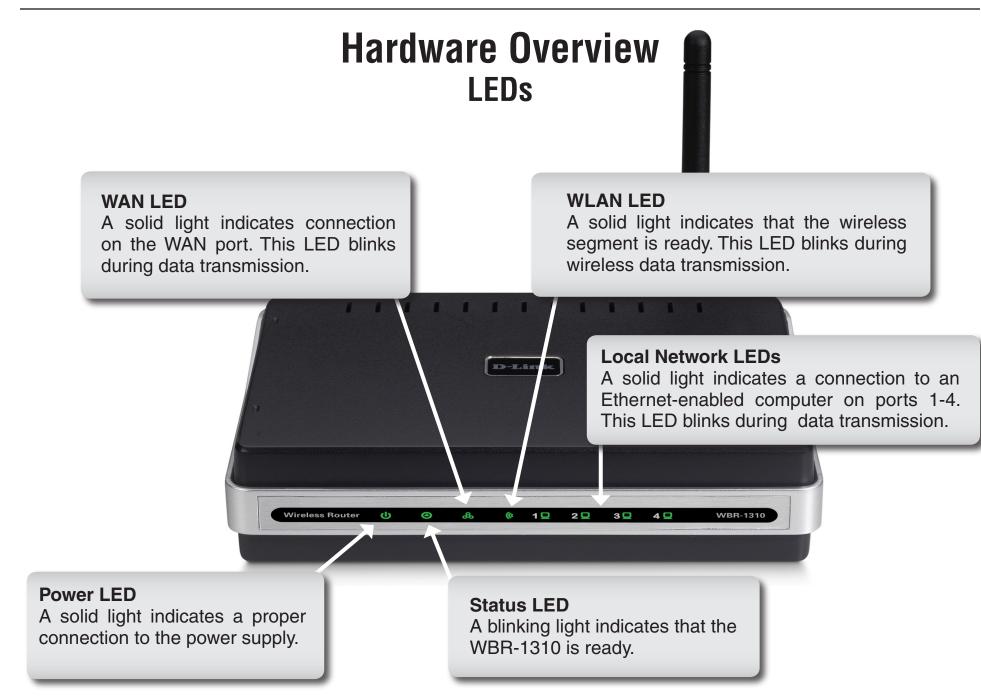

# Installation

This section will walk you through the installation process. Placement of the router is very important. Do not place the router in an enclosed area such as a closet, cabinet, or in the attic or garage.

# **Before you Begin**

- Please configure the router with the computer that was last connected directly to your modem.
- You can only use the Ethernet port on your modem. If you were using the USB connection before using the router, then you must turn off your modem, disconnect the USB cable and connect an Ethernet cable to the Internet port on the router, and then turn the modem back on. In some cases, you may need to call your ISP to change connection types (USB to Ethernet).
- If you have DSL and are connecting via PPPoE, make sure you disable or uninstall any PPPoE software such as WinPoet, Broadjump, or Enternet 300 from your computer or you will not be able to connect to the Internet.
- When running the Setup Wizard from the D-Link CD, make sure the computer you are running the CD from is connected to the Internet and online or the wizard will not work. If you have disconnected any hardware, re-connect your computer back to the modem and make sure you are online.

# **Wireless Installation Considerations**

The D-Link wireless router lets you access your network using a wireless connection from virtually anywhere within the operating range of your wireless network. Keep in mind, however, that the number, thickness and location of walls, ceilings, or other objects that the wireless signals must pass through, may limit the range. Typical ranges vary depending on the types of materials and background RF (radio frequency) noise in your home or business. The key to maximizing wireless range is to follow these basic guidelines:

- Keep the number of walls and ceilings between the D-Link router and other network devices to a minimum
   - each wall or ceiling can reduce your adapter's range from 3-90 feet (1-30 meters.) Position your devices
   so that the number of walls or ceilings is minimized.
- 2. Be aware of the direct line between network devices. A wall that is 1.5 feet thick (.5 meters), at a 45-degree angle appears to be almost 3 feet (1 meter) thick. At a 2-degree angle it looks over 42 feet (14 meters) thick! Position devices so that the signal will travel straight through a wall or ceiling (instead of at an angle) for better reception.
- **3**. Building Materials make a difference. A solid metal door or aluminum studs may have a negative effect on range. Try to position access points, wireless routers, and computers so that the signal passes through drywall or open doorways. Materials and objects such as glass, steel, metal, walls with insulation, water (fish tanks), mirrors, file cabinets, brick, and concrete will degrade your wireless signal.
- **4**. Keep your product away (at least 3-6 feet or 1-2 meters) from electrical devices or appliances that generate RF noise.
- **5**. If you are using 2.4GHz cordless phones or X-10 (wireless products such as ceiling fans, lights, and home security systems), your wireless connection may degrade dramatically or drop completely. Make sure your 2.4GHz phone base is as far away from your wireless devices as possible. The base transmits a signal even if the phone in not in use.

# **Connect to Cable/DSL/Satellite Modem**

If you are connecting the router to a cable/DSL/satellite modem, please follow the steps below:

- 1. Place the router in an open and central location. Do not plug the power adapter into the router.
- 2. Turn the power off on your modem. If there is no on/off switch, then unplug the modem's power adapter. Shut down your computer.
- 3. Unplug the Ethernet cable (that connects your computer to your modem) from your computer and place it into the WAN port on the router.
- 4. Plug an Ethernet cable into one of the four LAN ports on the router. Plug the other end into the Ethernet port on your computer.
- 5. Turn on or plug in your modem. Wait for the modem to boot (about 30 seconds).
- 6. Plug the power adapter to the router and connect to an outlet or power strip. Wait about 30 seconds for the router to boot.
- 7. Turn on your computer.
- 8. Verify the link lights on the router. The power light, WAN light, and the LAN light (the port that your computer is plugged into) should be lit. If not, make sure your computer, modem, and router are powered on and verify the cable connections are correct.
- 9. Skip two pages to the **Getting Started** section to configure your router.

# **Connect to Another Router**

If you are connecting the D-Link router to another router to use as a wireless access point and/or switch, you will have to do the following before connecting the router to your network:

- Disable UPnP<sup>™</sup>
- Disable DHCP
- Change the LAN IP address to an available address on your network. The LAN ports on the router cannot accept a DHCP address from your other router.

To connect to another router, please follow the steps below:

- Plug the power into the router. Connect one of your computers to the router (LAN port) using an Ethernet cable. Make sure your IP address on the computer is 192.168.0.xxx (where xxx is between 2 and 254). Please see the Networking Basics section for more information. If you need to change the settings, write down your existing settings before making any changes. In most cases, your computer should be set to receive an IP address automatically in which case you will not have to do anything to your computer.
- 2. Open a web browser and enter http://192.168.0.1 and press Enter. When the login window appears, set the user name to admin and leave the password box empty. Click OK to continue.
- 3. Click on **Advanced** and then click **Advanced Network**. Uncheck the Enable UPnP checkbox. Click **Save Settings** to continue.
- 4. Click **Setup** and then click **Network Settings**. Uncheck the Enable DHCP Server server checkbox. Click **Save Settings** to continue.
- 5. Under Router Settings, enter an available IP address and the subnet mask of your network. Click **Save Settings** to save your settings. Use this new IP address to access the configuration utility of the router in the future. Close the browser and change your computer's IP settings back to the original values as in Step 1.

- 6. Disconnect the Ethernet cable from the router and reconnect your computer to your network.
- 7. Connect an Ethernet cable in one of the LAN ports of the router and connect it to your other router. Do not plug anything into the WAN port of the D-Link router.
- 8. You may now use the other 3 LAN ports to connect other Ethernet devices and computers. To configure your wireless network, open a web browser and enter the IP address you assigned to the router. Refer to the **Configuration** and **Wireless Security** sections for more information on setting up your wireless network.

# **Getting Started**

The WBR-1310 includes a Quick Router Setup Wizard CD. Follow the simple steps below to run the Setup Wizard to guide you quickly through the installation process.

Insert the **Quick Router Setup Wizard CD** in the CD-ROM drive. The step-by-step instructions that follow are shown in Windows<sup>®</sup> XP. The steps and screens are similar to those found in other Windows operating systems.

If the CD Autorun function does not automatically start on your computer, go to **Start** > **Run**. In the run box, type "**D:\wbr1310.exe**" (where **D:** represents the drive letter of your CD-ROM drive).



When the autorun screen appears, click **INSTALL ROUTER**.

*Note*: It is recommended to write down the login password on the provided CD holder.

# Configuration

This section will show you how to configure your new D-Link wireless router using the web-based configuration utility.

# **Web-based Configuration Utility**

To access the configuration utility, open a web-browser such as Internet Explorer and enter the IP address of the router (192.168.0.1). 

 D-Link - Microsoft Internet Explorer

 File
 Edit
 View
 Favorites
 Tools
 Help

 Back
 >
 >
 >
 Search

 Address
 192.168.0.1
 >
 So
 \_

Enter the user name (admin) and your password. Leave the password blank by default.

If you get a **Page Cannot be Displayed** error, please refer to the **Troubleshooting** section for assistance.



## **Setup Wizard**

You may run the setup wizard to quickly setup your router. Click **Setup Wizard** to launch the wizard.



Click Launch Internet Connection Setup Wizard to begin.

///	SETUP	ADVANCED	TOOLS	STATUS	SUPPORT
	WIZARD				Helpful Hints
IETTINGS	The D-Link Wireless Ga of individuals who dema experience.				
	INTERNET CONNEC	TION SETUP WIZARD	)		
	The following Web-bas Router to the Internet how to get your Intern				
	Launch Internet	Connection Setup Wizard			
		these wizards, please m uide included in the pack	ake sure you have followe age.	d all steps outlined in	
	WIRELESS SECURI	TY SETUP WIZARD			
	setup. This Setup Wiza		ned to assist you in your v step-by-step instructions 18.		
	Launch Wireless	Security Setup Wizard			
	Note: Some changes n on your wireless client	hade using this Setup Wi	ard may require you to ch	nance some settinos	

#### Click Next to continue.

Create a new password and then click **Next** to continue.

Select your time zone from the drop-down menu and then click **Next** to continue.

Select the type of Internet connection you use and then click **Next** to continue.

D-Li	
	nk
WELCOME T	D THE D-LINK SETUP WIZARD
This wizard will	guide you through a step-by-step process to configure your new D-Link router and connect to the Internet.
STEP 1: SET	YOUR PASSWORD  Step 1: Set your Password
	<ul> <li>Step 2: Select your Time Zone</li> <li>Step 3: Configure your Internet Connection</li> </ul>
	Step 4: Save Settings and Connect
	Next Cancel
D-Li	e le'
WELCOME T	O THE D-LINK SETUP WIZARD
This wizard will	guide you through a step-by-step process to configure your new D-Link router and connect to the Internet.
	STEP 1: SET YOUR PASSWORD
By default, you secure your ne	r new D-Link Router does not have a password configured for administrator access to the Web-based configuration p w networking device, please set and verify a password below:
	Password :
	Varify Password :
	Prev Next Cancel
D-L1	D THE D-LINK SETUP WIZARD
This wizard will	guide you through a step-by-step process to configure your new D-Link router and connect to the Internet.
STEP 2: SEL	ECT YOUR TIME ZONE
Select	the appropriate time zone for your location. This information is required to configure the time-based options for the (GMT-08:00) Pacific Time (US & Canada)
	Prev Next Cancel
DJA	alr
D-Liı	nk
WELCOME TO	THE D-LINK SETUP WIZARD
WELCOME TO	
WELCOME TO This wizard will g STEP 3: CON	THE D-LINK SETUP WIZARD jude you through a step-by-step process to configure your new D-Link router and connect to the Internet. FIGURE YOUR INTERNET CONNECTION
WELCOME TO This wizard will o STEP 3: CONI Your Internet G	THE D-LINK SETUP WIZARD jude you through a step-by-step process to configure your new D-Link router and connect to the Internet. FIGURE YOUR INTERNET CONNECTION
WELCOME TO This wizard will o STEP 3: CONI Your Internet G	THE D-LINK SETUP WIZARD Jude you through a step-by-step process to configure your new D-Link router and connect to the Internet. EIGURE YOUR INTERNET CONVECTION Denrection could not be detected, please select your Internet Service Provider (ISP) from the list below. If your ISP is not il Listed or Don't Know' option to manually configure your connection.
WELCOME TO This wizard will g STEP 3: CONI Your Internet C select the "Not [Not Listed or Don STEP 3: CONI	THE D-LINK SETUP WIZARD Jude you through a step-by-step process to configure your new D-Link router and connect to the Internet. FIGURE YOUR INTERNET CONNECTION Denoction could not be detected, please select your Internet Service Provider (ISP) from the list below. If your ISP is not it Listed to Con't Know' option to manually configure your connection. Listed or Con't Know' option to manually configure your connection.
WELCOME TO This witard will g STEP 3: CONI Your Internet G select the "Not Not Listed or Don STEP 3: CONI If your Internet	THE D-LINK SETUP WIZARD Jude you through a step-by-step process to configure your new D-Link router and connect to the Internet. FIGURE YOUR INTERNET CONNECTION Denoction could not be detected, please select your Internet Service Provider (ISP) from the list below. If your ISP is not it Listed or forth from " option to manually configure your connection. Throw = EIGURE YOUR INTERNET CONNECTION Service Provider was not listed or you don't know who it is, please select the Internet connection type below:
WELCOME TO This witard will g STEP 3: CONI Your Internet O select the "Not Not Listed or Don STEP 3: CONI If your Internet © DHCP Co Choose this if	THE D-LINK SETUP WIZARD pade you through a step-by-step process to configure your new D-Link router and connect to the Internet.  EIGURE YOUR INTERNET CONNECTION  promotion could not be detected, please select your internet Service Provider (ISP) from the list below. If your ISP is not i Listed or bort from option to manually configure your connection.  Throw  EIGURE YOUR INTERNET CONNECTION Service Provider was not listed or you don't know who it is, please select the Internet connection type below:  menction (Optionic IP Address) por Internet Connection automatically provides you with an IP Address. Most Cable Moders use this type of connection.
WELCOME TO This weard will ge STEP 3: CONI Your Internet Co STEP 3: CONI If your Internet © DHCP Co Choose this if C Usernam	THE D-LINK SETUP WIZARD Jude you through a step-by-step process to configure your new D-Link router and connect to the Internet. EIGURE YOUR INTERNET CONNECTION Derrection could not be detected, please select your internet Service Provider (ISP) from the list below. If your ISP is not is Listed or Don't Know' option to manually configure your connection. Throw EIGURE YOUR INTERNET CONNECTION Service Provider was not listed or you don't know who it is, please select the Internet connection type below: EIGURE YOUR INTERNET CONNECTION Service Provider was not listed or you don't know who it is, please select the Internet connection type below: EIGURE YOUR INTERNET CONNECTION Service Provider was not listed or you don't know who it is, please select the Internet connection type below: EIGURE YOUR INTERNET CONNECTION Service Provider was not listed or you don't know who it is, please select the Internet connection type below: EIGURE YOUR INTERNET CONNECTION Service Provider Work Provides you with an IP Address, Most Cable Moderns use this type of connection, P Password Connection (PPDE)
WELCOME TO This weard will or STEP 3: CONI Your Internet C select the "Not STEP 3: CONI If your Internet Groups this of C Usernam choose this or C Usernam choose this or	THE D-LINK SETUP WIZARD uide you through a step-by-step process to configure your new D-Link router and connect to the Internet.  EIGURE YOUR INTERNET CONNECTION  Sense throw 'option to manually configure your connection.  Throw  EIGURE YOUR INTERNET CONNECTION  Service Provider was not listed or you don't know who it is, please select the Internet connection type below:  meetion (Dynamic IP Address) por Internet Connection automatically provides you with an IP Address. Most Cable Moderns use this type of connection.
WELCOME TO This ward will or STEP 3: CONI Your Internet C select the Not STEP 3: CONI If your Internet Groups this if Our Sternam Choose this or Custornam Choose this or Commetton.	THE D-LINK SETUP WIZARD  Jude you through a step-by-step process to configure your new D-Link router and connect to the Internet.  FIGURE YOUR INTERNET CONNECTION  Service Provider was not listed or you don't know who it is, please select the Internet connection type below:  Provider Provider was not listed or you don't know who it is, please select the Internet connection type below:  Internet Convection Judomatically provides you with an IP Address. Most Cable Moders use this type of connection.  P Password Connection (PPDPE)  P Assword Connection (PPDPE)

Prev Next Cancel

D-Link WBR-1310 User Manual

Section 3 - Configuration

If you selected Dynamic, you may need to enter the MAC address of the computer that was last connected directly to your modem. If you are currently using that computer, click **Clone Your PC's MAC Address** and then click **Next** to continue.

The Host Name is optional but may be required by some ISPs. The default host name is the device name of the Router and may be changed.

If you selected PPPoE, enter your PPPoE username and password. Click **Next** to continue.

Select **Static** if your ISP assigned you the IP address, subnet mask, gateway, and DNS server addresses.

*Note:* Make sure to remove your PPPoE software from your computer. The software is no longer needed and will not work through a router.

If you selected PPTP, enter your PPTP username and password. Click **Next** to continue.



D-Link
WELCOME TO THE D-LINK SETUP WIZARD
This wizard will guide you through a step-by-step process to configure your new D-Link router and connect to the Internet.
SET USERNAME AND PASSWORD CONNECTION (PPPOE)
To set up this connection you will need to have a Username and Password from your Internet Service Provider. If you do not have this Information, please contact your ISP.
Address Mode: C Dynamic IP C Static IP
IP Address : 0.0.0.0
User Name : pppoeusername
Password :
Verify Password :
Service Name : (optional)
Note: Youmay also need to provide a Service Name. If you do not have or know this information, please contact your ISP, Prev Next: Cancel



If you selected L2TP, enter your L2TP username and password. Click **Next** to continue.

# If you selected Static, enter your network settings supplied by your Internet provider. Click **Next** to continue.

Click Connect to save your settings. Once the router is finished rebooting, click Continue. Please allow 1-2 minutes to connect.


Close your browser window and reopen it to test your Internet connection. It may take a few tries to initially connect to the Internet.

his wizard will guide you through a step-by-step process to configure your new D-Link router and connect to the Internet.				
ET USERNAME AND PASSWORD CONNECTION (L2TP)				
o set up this connection you will need to have a Username and Password from your Internet Service Provider. You also need L2TP IP adness. If ou do not have this information, please contact your ISP,				
Address Mode : C Dynamic IP C Static IP				
L2TP IP Address : 0.0.0.0				
L2TP Subnet Mask : 0.0.0.0				
L2TP Gateway IP Address : 0.0.0.0				
L2TP Server IP Address (may be same as (0.0.0.0 gateway) :				
User Name :				
Password :				
Verify Password :				
Prev Next Cancel				

**D-Link** 


FLOOME TO THE D-LINE

D-Link	
	and the second
WELCOME TO THE D-LINK SETUP WIZARD	
This wizard will guide you through a step-by-step process to configure your new D-Link router	and connect to the Internet.
SET STATIC IP ADDRESS CONNECTION	
To set up this connection you will need to have a complete list of IP information provided by y IP connection and do not have this information, please contact your ISP.	your Internet Service Provider. If you have a Static
IP Address : 0.0.0.0	
Subnet Mask : 0.0.0.0	
Gateway Address : 0.0.0.0	
Primary DNS Address : 0.0.0.0	
Secondary DNS Address : 0.0.0.0	
Prev Next Cancel	

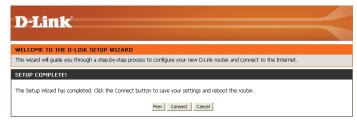

#### **Internet Setup** Dynamic (Cable)

- Dynamic IP Choose Dynamic IP Address to obtain IP Address Address: information automatically from your ISP. Select this option if your ISP does not give you any IP numbers to use. This option is commonly used for Cable modem services.
- Host Name: The Host Name is optional but may be required by some ISPs. The default host name is the device name of the Router and may be changed.
- MAC Address: The default MAC Address is set to the WAN's physical interface MAC address on the Broadband Router. It is not recommended that you change the default MAC address unless required by your ISP.
  - **Clone MAC** Address: The default MAC address is set to the WAN's physical interface MAC address on the Broadband Router. You can use the "Clone MAC Address" button to copy the MAC address of the Ethernet Card installed by your ISP

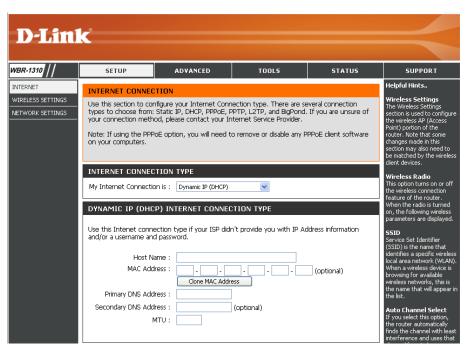

and replace the WAN MAC address with the MAC address of the router. It is not recommended that you change the default MAC address unless required by your ISP.

**Primary DNS** Enter the Primary DNS (Domain Name Server) server IP address assigned by your ISP. Addresses:

Secondary DNS This is optional. Address:


MTU: Maximum Transmission Unit - you may need to change the MTU for optimal performance with your specific ISP. 1500 is the default MTU.

#### Internet Setup PPPoE (DSL)

Choose PPPoE (Point to Point Protocol over Ethernet) if your ISP uses a PPPoE connection. Your ISP will provide you with a username and password. This option is typically used for DSL services. Make sure to remove your PPPoE software from your computer. The software is no longer needed and will not work through a router.

- **PPPoE:** Select **Dynamic** (most common) or **Static**. Select **Static** if your ISP assigned you the IP address, subnet mask, gateway, and DNS server addresses.
- User Name: Enter your PPPoE user name.
- **Password:** Enter your PPPoE password and then retype the password in the next box.
- Service Name: Enter the ISP Service Name (optional).
  - **IP Address:** Enter the IP address (Static PPPoE only).
- **DNS Addresses:** Enter the Primary and Secondary DNS Server Addresses (Static PPPoE only).
- Maximum Idle Enter a maximum idle time during which the Time: Internet connection is maintained during inactivity. To disable this feature, enable Auto-reconnect.
  - MTU: Maximum Transmission Unit you may need to change the MTU for optimal performance with your specific ISP. 1492 is the default MTU.

Connection Mode Select either Always-on, Manual, or Connect-on demand. Select:

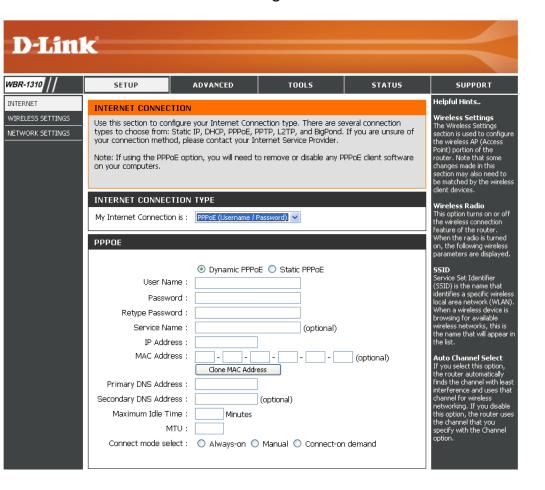

#### Internet Setup PPTP

Choose PPTP (Point-to-Point-Tunneling Protocol) if your ISP uses a PPTP connection. Your ISP will provide you with a username and password. This option is typically used for DSL services.

- **PPTP:** Select **Dynamic** (most common) or **Static**. Select **Static** if your ISP assigned you the IP address, subnet mask, gateway, and DNS server addresses.
- IP Address: Enter the IP address (Static PPTP only).
- Subnet Mask: Enter the Primary and Secondary DNS Server Addresses (Static PPTP only).
  - Gateway: Enter the Gateway IP Address provided by your ISP (Static PPTP only).
    - DNS:

The DNS server information will be supplied by your ISP (Static PPTP only).

- Server IP: Enter the Server IP provided by your ISP.
- **PPTP Account:** Enter your PPTP account name.
- **PPTP Password:** Enter your PPTP password and then retype the password in the next box.



- Maximum Idle Enter a maximum idle time during which the Internet connection is maintained during inactivity. To disable this feature, enable Time: Auto-reconnect.
  - MTU: Maximum Transmission Unit you may need to change the MTU for optimal performance with your specific ISP. 1492 is the default MTU.

Connect Mode: Select either Always-on, Manual, or Connect-on demand.

#### Internet Setup L2TP

Choose L2TP (Layer 2 Tunneling Protocol) if your ISP uses a L2TP connection. Your ISP will provide you with a username and password. This option is typically used for DSL services.

- L2TP: Select Dynamic (most common) or Static. Select Static if your ISP assigned you the IP address, subnet mask, gateway, and DNS server addresses.
- **IP Address:** Enter the IP address (Static L2TP only).
- Subnet Mask: Enter the Primary and Secondary DNS Server Addresses (Static L2TP only).
  - **Gateway:** Enter the Gateway IP Address provided by your ISP (Static L2TP only).
    - **DNS:** The DNS server information will be supplied by your ISP (Static L2TP only).
  - Server IP: Enter the Server IP provided by your ISP.
- L2TP Account: Enter your L2TP account name.
- L2TP Password: Enter your L2TP password and then retype the password in the next box.

<b>D-Lin</b> l	K				
WBR-1310	SETUP	ADVANCED	TOOLS	STATUS	SUPPORT
NBR-1310 Internet Wirrless Settings Network Settings	INTERNET CONNEC Use this section to con types to choose from: your connection metho Note: If using the PPPc on your computers. INTERNET CONNEC My Internet Connectio L2TP IP Addri Subnet Mi Gatew D Server IP,Na L2TP Account L2TP Retype passwor Maximum Idle Ti	TION  Angure your Internet Configure your Internet Configure your Internet Configure your State IP, OHCP, PPDEC, Figure Angular and the second state in the second state in the second state is and t	ection type. There are se PPTP, L2TP, and BigPond Iternet Service Provider. to remove or disable any P or disable any P	everal connection .If you are unsure of PPOE client software	SUPPORT  Helpful Hints  Wireless Settings The Wireless Settings The Wireless Settings Section is used to configure the wireless AP (Access Point) portion of the router. Note that some changes made in this section may also need to be matched by the wireless client devices.  Wireless Radio This option turnes on or off the wireless connection feature of the router. Wireless Radio This option turnes on or off the wireless connection feature of the router. SSID Service Set Identifier (SSID) is the name that identifies a specific wireless local area network (WLAW). When a wireless network, this is the name that will appear in the router usealishe wireless networks, this is the name that will appear in the router uses the channel for wireless networking. If you deable this option, the router uses the channel that you specify with the Channel option.

- Maximum Idle Enter a maximum idle time during which the Internet connection is maintained during inactivity. To disable this feature, enable Time: Auto-reconnect.
  - MTU: Maximum Transmission Unit you may need to change the MTU for optimal performance with your specific ISP. 1400 is the default MTU.

Connect Mode: Select either Always-on, Manual, or Connect-on demand.

#### Internet Setup Big Pond

User Name: Enter your Big Pond user name.

- **Password:** Enter your Big Pond password and then retype the password in the next box.
- Auth Server: Enter the IP address of the login server.
- Login Server IP: Enter the IP address of the login server.
  - MAC Address: The default MAC Address is set to the WAN's physical interface MAC address on the Broadband Router. It is not recommended that you change the default MAC address unless required by your ISP.
    - **Clone MAC** The default MAC address is set to the WAN's **Address:** physical interface MAC address on the Broadband Router. You can use the "Clone MAC Address" button to copy the MAC address of the Ethernet Card installed by your ISP and replace the WAN MAC address with the MAC address of the router. It is not recommended that you change the default MAC address unless required by your ISP.

_						
<b>D-Lini</b>	K					
WBR-1310	SETUP	ADVANCED	TOOLS	STATUS	SUPPORT	
INTERNET	INTERNET CONNEC	TION			Helpful Hints	
WIRELESS SETTINGS	Use this section to configure your Internet Connection type. There are several connection					
	Note: If using the PPPo on your computers.	PPoE client software	Point) portion of the router. Note that some changes made in this section may also need to be matched by the wireless client devices.			
	INTERNET CONNEC		Wireless Radio			
	My Internet Connectio	This option turns on or off the wireless connection feature of the router.				
	BIGPOND				When the radio is turned on, the following wireless	
	User Na	me :			parameters are displayed.	
	Passwi	ord :			Service Set Identifier (SSID) is the name that	
	Retype Passwi	ord :			identifies a specific wireless local area network (WLAN).	
	Auth Ser				When a wireless device is browsing for available wireless networks, this is	
	Login Server IP/Na MAC Addro		(optional)	(optional)	the name that will appear in the list.	
		Clone MAC Addr			Auto Channel Select If you select this option, the router automatically finds the channel with least	

#### Internet Setup Static (assigned by ISP)

Select Static IP Address if all WAN IP information is provided to you by your ISP. You will need to enter in the IP address, subnet mask, gateway address, and DNS address(es) provided to you by your ISP. Each IP address entered in the fields must be in the appropriate IP form, which are four octets separated by a dot (x.x.x.x). The Router will not accept the IP address if it is not in this format.

**IP Address:** Enter the IP address assigned by your ISP.

Subnet Mask: Enter the Subnet Mask assigned by your ISP.

- **ISP Gateway:** Enter the Gateway assigned by your ISP.
- MAC Address: The default MAC Address is set to the WAN's physical interface MAC address on the Broadband Router. It is not recommended that you change the default MAC address unless required by your ISP.
  - **Clone MAC** The default MAC address is set to the WAN's **Address:** physical interface MAC address on the Broadband Router. You can use the **Clone MAC Address** button to copy the MAC address of the Ethernet Card installed by your ISP and replace the WAN MAC address with the MAC address of the router. It is not recommended that you change the default MAC address unless required by your ISP.
- **Primary DNS** Enter the Primary DNS server IP address Address: assigned by your ISP.

D-Lin	K				
R-1310	SETUP	ADVANCED	TOOLS	STATUS	SUPPORT
					Helpful Hints
ERNET	INTERNET CONNEC	TION			
RELESS SETTINGS		nfigure your Internet Conr			Wireless Settings The Wireless Settings
WORK SETTINGS		Static IP, DHCP, PPPoE, P od, please contact your In		If you are unsure of	section is used to configure the wireless AP (Access
	· ·			DDoE client coffuere	Point) portion of the
	on your computers.	oE option, you will need t	o remove or usable any P	PPOE CIIENT SUTTWARE	router. Note that some changes made in this
					section may also need to be matched by the wireless
	INTERNET CONNEC				client devices.
					Wireless Radio This option turns on or off
	My Internet Connectio	on is : Static IP	<b>~</b>		the wireless connection feature of the router.
	STATIC ID ADDRE	SS INTERNET CONNE			When the radio is turned
		SS INTERNET CONNER			on, the following wireless parameters are displayed.
	Enter the static addres	s information provided by	your Internet Service Pro	ivider (ISP).	SSID
					Service Set Identifier (SSID) is the name that
	IP Addr		(assigned by your ISP)		identifies a specific wireless
	Subnet M				local area network (WLAN). When a wireless device is
	ISP Gateway Addr				browsing for available wireless networks, this is
	MAC Addr		<u></u> LLL	(optional)	the name that will appear in the list.
		Clone MAC Addr	855		Auto Channel Select
	Primary DNS Addr				If you select this option,
	Secondary DNS Addr		(optional)		the router automatically finds the channel with least
	M	ITU :			interference and uses that channel for wireless
					networking. If you disable this option, the router uses
					this option, the router uses

Secondary DNS This is optional. Address:

MTU: Maximum Transmission Unit - you may need to change the MTU for optimal performance with your specific ISP. 1500 is the default MTU.

#### Wireless Settings

If you want to configure the wireless settings on your router using the wizard, click on the **Setup** tab and then click **Internet** on the left side. Click the **Setup Wizard** button and then click the **Launch Wireless Security Setup Wizard** button. Skip to page 44.

If you want to manually configure the wireless settings on your router, click the **Setup** tab and then click **Wireless Settings** on the left side. Refer to the next page.

#### INTERNET CONNECTION SETUP WIZARD

The following Web-based Setup Wizard is designed to assist you in connecting your new D-Link Router to the Internet. This Setup Wizard will guide you through step-by-step instructions on how to get your Internet connection up and running. Click the button below to begin.

Launch Internet Connection Setup Wizard

**Note:** Before launching these wizards, please make sure you have followed all steps outlined in the Quick Installation Guide included in the package.

#### WIRELESS SECURITY SETUP WIZARD


The following Web-based Setup Wizard is designed to assist you in your wireless network setup. This Setup Wizard will guide you through step-by-step instructions on how to set up your wireless network and how to make it secure.

Launch Wireless Security Setup Wizard

**Note:** Some changes made using this Setup Wizard may require you to change some settings on your wireless client adapters so they can still connect to the D-Link Router.

#### **Manual Wireless Settings**

- Enable Wireless: Check the box to enable the wireless function. If you do not want to use wireless, uncheck the box to disable all the wireless functions.
- Wireless Network Service Set Identifier (SSID) is the name of your Name: wireless network. Create a name using up to 32 characters. The SSID is case-sensitive.
- Wireless Channel: Indicates the channel setting for the WBR-1310. By default the channel is set to Auto. The Channel can be changed to fit the channel setting for an existing wireless network or to customize the wireless network. The Auto Channel Scan setting can be selected to allow the WBR-1310 to choose the channel with the least amount of interference.
  - 802.11g Only Enable this mode if your network is made up Mode: of purely 802.11g devices. If you have both 802.11b and 802.11g wireless clients, uncheck the box.
  - Enable Hidden Wireless: Check this option if you would not like the SSID of your wireless network to be broadcasted by the WBR-1310. If this option is checked, the SSID of the WBR-1310 will not be seen by Site Survey utilities so your wireless clients will have to know the SSID of your WBR-1310 in order to connect to it.

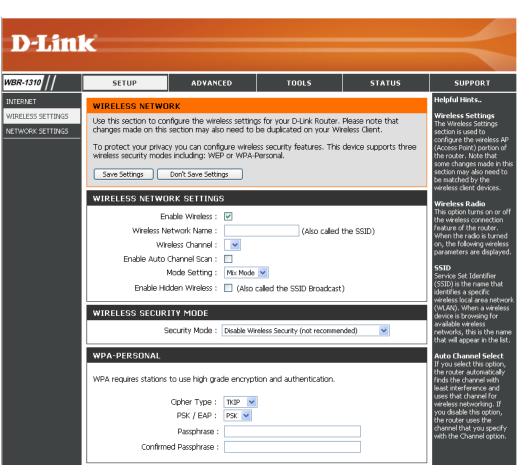

## **Network Settings**

This section will allow you to change the local network settings of the router and to configure the DHCP settings.

WВ

**IP Address:** Enter the IP address of the router. The default IP address is 192.168.0.1.

If you change the IP address, once you click Apply, you will need to enter the new IP address in your browser to get back into the configuration utility.

Subnet Mask: Enter the Subnet Mask. The default subnet mask is 255.255.255.0.

Local Domain: Enter the Domain name (Optional).

Enable DNS Relay: Check the box to transfer the DNS server information from your ISP to your computers. If unchecked, your computers will use the router for a DNS server.

Refer to the next page for DHCP information.

	SETUP	ADVANCED	TOOLS	STATUS	SUPPORT
SETTINGS	To protect your priva wireless security mod Save Settings Use this section to co is configured here is i interface. If you char settings to access th Rou Defaul Local Enc	et your router network sett cy you can configure wirek es including: WEP or WPA- Don't Save Settings S S Donfigure the internal network the IP Address there, you e network again. ter IP Address : ter IP Address : t Subnet Mask : Domain Name : able DNS Relay :	ess security features. This Personal. rk settings of your router. a to access the Web-base	device supports three The IP Address that d management	Helpful Hints
	on your network. Enabl DHCP IP ,	onfigure the built-in DHCP S e DHCP Server : Address Range :t CP Lease Time :		es to the computers n the LAN subnet)	

### **DHCP Server Settings**

DHCP stands for Dynamic Host Control Protocol. The WBR-1310 has a built-in DHCP server. The DHCP Server will automatically assign an IP address to the computers on the LAN/private network. Be sure to set your computers to be DHCP clients by setting their TCP/IP settings to "Obtain an IP Address Automatically." When you turn your computers on, they will automatically load the proper TCP/IP settings provided by the WBR-1310. The DHCP Server will automatically allocate an unused IP address from the IP address pool to the requesting computer. You must specify the starting and ending address of the IP address pool.

- **Enable DHCP** Check the box to enable the DHCP server on **Server:** your router. Uncheck to disable this function.
- DHCP IP Address Enter the starting and ending IP addresses for Range: the DHCP server's IP assignment.
  - Lease Time: The length of time for the IP address lease. Enter the Lease time in minutes.

DHCP SERVER SETTINGS :
Use this section to configure the built-in DHCP Server to assign IP addresses to the computers on your network.
Enable DHCP Server : 🔽
DHCP IP Address Range : 100 to 199 (addresses within the LAN subnet)
DHCP Lease Time : 180 (minutes)

## **Port Forwarding Rules**

This will allow you to open a single port or a range of ports.

Rule: Check the box to enabled the rule.

Name: Enter a name for the rule.

- **IP Address:** Enter the IP address of the computer on your local network that you want to allow the incoming service to.
- Start Port/ Enter the port or ports that you want to open.End Port: If you want to open 1 port, enter the same port in both boxes.

Traffic Type: Select TCP, UDP, or ANY.

<b>D</b> -Lin					
WBR-1310	SETUP	ADVANCED	TOOLS	STATUS	SUPPORT
PORT FORWARDING		ARDING RULES			Helpful Hints
APPLICATION RULES		arding option is used to open a sir	ngle port or a range of po	orts through your	Port Ranges Example: Starting Port is 50 and
NETWORK FILTER		direct data through those ports to enter ports in various formats. Exa		vork. This feature	Ending Port is 100, this will open ports 50-100 in your
WEBSITE FILTER					firewall.
FIREWALL SETTINGS	Save Setting:	s Don't Save Settings			Single Port Example:
ADVANCED WIRELESS	10- PORT F	ORWARDING RULES			Starting Port 80 and Ending Port is also 80, this will
ADVANCED NETWORK			Port	Traffic Type	open up ONLY port 80 in your firewall.
	Name		Start		
		Application Name	✓	TCP 💙	
	IP Addre	ess Computer Name	End		
	Name		Start		-
		Application Name			
	IP Addre		End	TCP 💌	
		Computer Name 💌			-
	Name	< Application Name	Start		
	IP Addre		End	TCP 💌	
		Computer Name 💌			

## **Application Rules**

Some applications require multiple connections, such as Internet gaming, video conferencing, Internet telephony and others. These applications have difficulties working through NAT (Network Address Translation). Special Applications makes some of these applications work with the WBR-1310.

Rule: Check the box to enabled the rule.

Name: Enter a name for the rule.

- **Trigger Port:** This is the port used to trigger the application. It can be either a single port or a range of ports.
- Firewall Port: This is the port number on the WAN side that will be used to access the application. You may define a single port or a range of ports. You can use a comma to add multiple ports or port ranges.

Traffic Type: Select TCP, UDP, or ANY.

D-Lin1	<b>_</b>				
WBR-1310	SETUP	ADVANCED	TOOLS	STATUS	SUPPORT
PORT FORWARDING APPLICATION RULES NETWORK FILTER WEBSITE FILTER FIREWALL SETTINGS	APPLICATION RUL The Application Rules or router senses data sen Applications rules apply Save Settings	Helpful Hints Applications Rules : Some applications require multiple connections, such as Internet gaming, video conferencing, Internet telephony and others. These applications have difficulties working through			
ADVANCED WIRELESS	10 -APPLICATION	RULES	Port	Traffic Type	NAT (Network Address Translation). If you need to run applications that require multiple
	Name	<< Applica	ion Name 💌 Firewall		connections, specify the port normally associated with an application in the "TriggerPort" field, select the protocol type as TCP
	Name	<< Applicat	ion Name 💌 Firewall		(Transmission Control Protocol) or UDP (User Datagram Protocol), then enter the public ports associated with the trigger
	Name	< Application	ion Name 🗸 Trigger Firewall		port to open them for inbound traffic. At the bottom of the screen, there are already defined
	Name	<< Applicat	ion Name 🗸 Trigger Firewall		well-known applications. To use them, click on the edit icon enable the service and click Apply.
	Name	<< Applicat	ion Name 🗸 Trigger Firewall		Name ?This is the name referencing the application. TriggerPort ?This is the port used to trigger the
	Name	<< Application	ion Name 🗸 Trigger Firewall		application. It can be either a single port or a range of ports. Trigger Type ?This is the
	Name	< Applicat	ion Name 💌 Trigger Firewall		protocol used to trigger the application. PublicPort ?This is the port number on the WAN side
	Name	<< Application	ion Name 💌 Trigger		that will be used to access the application. You may define a single port or a range of ports. You can
	Name	<< Application	ion Name 💌 Trigger Firewall		use a comma to add multiple ports or port ranges. Public Type ?This is the protocol used for the
			Trigger	ТСР 💌	application.

#### **Network Filter**

Use MAC (Media Access Control) Filters to allow or deny LAN (Local Area Network) computers by their MAC addresses from accessing the Network. You can either manually add a MAC address or select the MAC address from the list of clients that are currently connected to the Broadband Router.

Configure MAC Select Disable MAC filters, Turn MAC filtering Filter: on and ALLOW computers listed to access the network, or Turn MAC filtering on and DENY computers listed to access the network.

- MAC Address: Enter the MAC address you would like to filter. To find the MAC address on a computer, please refer to the Networking Basics section in this manual.
- **DHCP Client:** Select a DHCP client from the drop-down menu and click the arrow to copy that MAC Address.

	1_8				
<b>D-Lin</b>					
WBR-1310	SETUP	ADVANCED	TOOLS	STATUS	SUPPORT
PORT FORWARDING	MAC FILTERING				Helpful Hints
APPLICATION RULES NETWORK FILTER WEBSITE FILTER	on the MAC Address o	f the network adapter. A etwork adapter. This feat	r option is used to control MAC address is a unique II ure can be configured to /	D assigned by the	<ul> <li>Create a list of MAC addresses that you would either like to allow or deny access to your network.</li> </ul>
FIREWALL SETTINGS	Save Settings	Don't Save Settings			<ul> <li>Computers that have obtained an IP address from</li> </ul>
ADVANCED WIRELESS		, and the second se			the router's DHCP server will be in the DHCP Client List.
ADVANCED NETWORK	10 - MAC FILTERI Configure MAC Filtering Turn MAC Filtering OFF				Select a device from the drop down menu and click the arrow to add that device's MAC to the list. • Click the <b>CLEAR</b> button
	MAC Address	DHCP Client	List		to remove the MAC address from the MAC Filtering list.
		< Computer Na	ame 💌	CLEAR	
		<	ame 💌	CLEAR	
		<	ame 💌	CLEAR	
		<	ame 💌	CLEAR	
		< Computer Na	ame 💌	CLEAR	

## Website Filter

URL and domain blocking are used to deny LAN computers from accessing specific web sites by the URL or domain. A URL is a specially formatted text string that defines a location on the Internet. If any part of the URL contains the blocked word, the site will not be accessible and the web page will not display. To use this feature, enter the text string to be blocked and click **Apply**. The text to be blocked will appear in the list. To delete the text, just highlight it and click **Delete**.

Configure Website Select Turn Website Filtering OFF, Turn Filter: Website Filtering ON and ALLOW computers access to ONLY these sites, or Turn Website Filtering ON and DENY computers access to ONLY these sites.

Website URL/ Enter the keywords or URLs that you want to Domain: block (or allow). Any URL with the keyword in it will be blocked.

<b>D-Lin</b> i	k				
WBR-1310	SETUP	ADVANCED	TOOLS	STATUS	SUPPORT
WBR-1310 PORT FORWARDING APPLICATION RULES NETWORK FILTER WEBSITE FILTER FIREWALL SETTINGS ADVANCED WIRELESS ADVANCED NETWORK	WEBSITE FILTERIN The Web Filter options multiple users. When V blocked.	IG RULES is allows you to set-up a lis Veb Filter is enabled, all o Don't Save Settings IERING RULES g below: FF	TOOLS         It of allowed Web sites that ther Web sites not listed of the Web sites not listed of the Website URL/Domain         Website URL/Domain         Image: I	at can be used by	SUPPORT Helpful Hints Website filter : It is used to deny computers on your netw from accessing specific v is the specially formatted string that defines a location on the Internet any part of the URI contains the blocked wo the site will not be page will not be displaye Example: If you wanted to block I users from any website containing a URL pertain to shopping, you would need to enter "shopping into the URI. Blocking list Sites like they contain the keyword in the URI. http://www.msn.com /searchispopping- spree.html

## **Firewall Settings**

This section will allow you to setup a DMZ host and to enable VPN passthrough.

If you have a client PC that cannot run Internet applications properly from behind the WBR-1310, then you can set the client up for unrestricted Internet access. It allows a computer to be exposed to the Internet. This feature is useful for gaming purposes. Enter the IP address of the internal computer that will be the DMZ host. Adding a client to the DMZ (Demilitarized Zone) may expose your local network to a variety of security risks, so only use this option as a last resort.

Enable DMZ Host: Check this box to enable DMZ.

**DMZ IP Address:** Enter the IP address of the computer you would like to open all ports to.

**Enable PPTP** Check this box to allow PPTP VPN traffic to pass **Passthrough:** through the router to your VPN client.


**Enable L2TP** Check this box to allow L2TP VPN traffic to pass **Passthrough:** through the router to your VPN client.

**Enable IPSec** Check this box to allow IPSec VPN traffic to pass **Passthrough:** through the router to your VPN client.



### **Advanced Wireless Settings**

- **TX Rate:** Select the basic transfer rates based on the speed of wireless adapters on your wireless network. It is strongly recommended to keep this setting to **Auto**.
- Transmit Power: Set the transmit power of the antennas.
- **Beacon Interval:** Beacons are packets sent by an Access Point to synchronize a wireless network. Specify a value. 100 is the default setting and is recommended.
- **RTS Threshold:** This value should remain at its default setting of 2346. If inconsistent data flow is a problem, only a minor modification should be made.

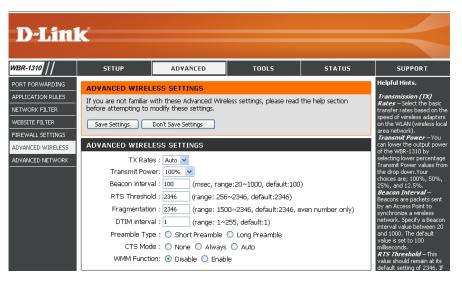


- Fragmentation: The fragmentation threshold, which is specified in bytes, determines whether packets will be fragmented. Packets exceeding the 2346 byte setting will be fragmented before transmission. 2346 is the default setting.
- **DTIM Interval:** A DTIM (Delivery Traffic Indication Message) is a countdown informing clients of the next window for listening to broadcast and multicast messages. The default setting is 1.
- Preamble Type: Select Short or Long Preamble. The Preamble defines the length of the CRC block (Cyclic Redundancy Check is a common technique for detecting data transmission errors) for communication between the wireless router and the roaming wireless network adapters. Short is the default setting. Note: High network traffic areas should use the shorter preamble type.
  - CTS Mode: CTS (Clear To Send) is a function used to minimize collisions among wireless devices on a wireless local area network (LAN). CTS will make sure the wireless network is clear before a wireless client attempts to send wireless data. Enabling CTS will add overhead and may lower wireless through put. None: CTS is typically used in a pure 802.11g environment. If CTS is set to "None" in a mixed mode environment populated by 802.11b clients, wireless collisions may occur frequently. Always: CTS will always be used to make sure the wireless LAN is clear before sending data. Auto: CTS will monitor the wireless network and automatically decide whether to implement CTS based on the amount of traffic and collisions that occurs on the wireless network.
- WMM Function: WMM is QoS for your wireless network. Enable this option to improve the quality of video and voice applications for your wireless clients.

## **Advanced Network Settings**

- **UPnP Settings:** To use the Universal Plug and Play (UPnP<sup>™</sup>) feature click on **Enabled**. UPNP provides compatibility with networking equipment, software and peripherals.
  - WAN Ping: Unchecking the box will not allow the WBR-1310 to respond to pings. Blocking the Ping may provide some extra security from hackers. Check the box to allow the WAN port to be "pinged".
- WAN select to You may set the port speed of the WAN port to 10/100 Mbps: 10Mbps, 100Mbps, or auto. Some older cable or DSL modems may require you to set the port speed to 10Mbps.
- **Gaming Mode:** Gaming mode allows a form of pass-through for certain Internet Games. If you are using Xbox, Playstation2 or a PC, make sure you are using the latest firmware and Gaming Mode is enabled. To utilize Gaming Mode, click the box. If you are not using a Gaming application, it is recommended that you Disable Gaming Mode.

**Multicast** Check the box to allow multicast traffic to pass **streams:** through the router from the Internet.

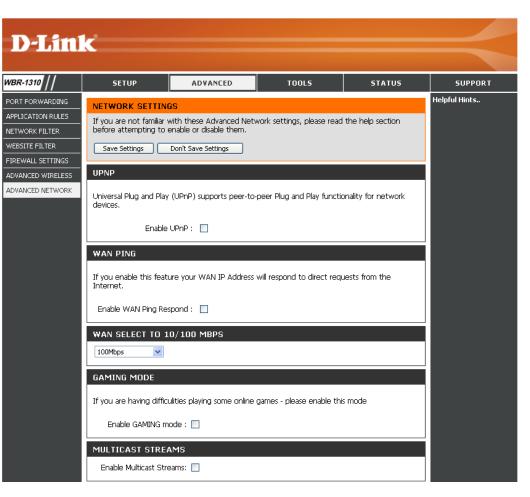

## Administrator Settings


This page will allow you to change the Administrator and User passwords. You can also enable Remote Management. There are two accounts that can access the management interface through the web browser. The accounts are admin and user. Admin has read/write access while user has read-only access. User can only view the settings but cannot make any changes. Only the admin account has the ability to change both admin and user account passwords.


Administrator Enter a new Login Name for the Administrator account. Login Name:

Administrator Enter a new password for the Administrator Login **Password:** Name. The administrator can make changes to the settings.

User Login Name: Enter a new Login Name for the user account.

- User Password: Enter the new password for the User login. If you login as the User, you can only see the settings, but cannot change them.
  - **Remote** Remote management allows the WBR-1310 Management: to be configured from the Internet by a web browser. A username and password is still required to access the Web-Management interface. In general, only a member of your network can browse the built-in web pages to perform Administrator tasks. This feature enables you to perform Administrator tasks from the remote (Internet) host.
    - **IP Address:** The Internet IP address of the computer that has access to the Broadband Router. If you input an asterisk (\*) into this field, then any computer will

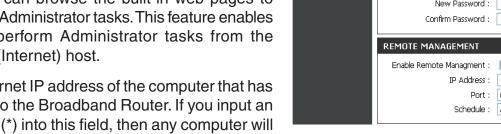

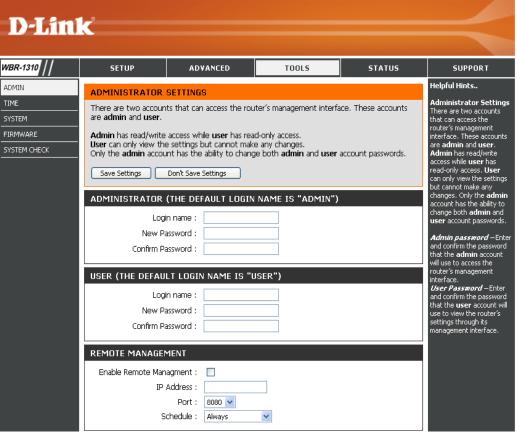

be able to access the Router. Putting an asterisk (\*) into this field would present a security risk and is not recommended.

Port: The port number used to access the WBR-1310.

Example: http://x.x.x.x8080 whereas x.x.x.x is the WAN IP address of the WBR-1310 and 8080 is the port used for the Web-Management interface.

## **Time Settings**

- Time Zone: Select the Time Zone from the drop-down menu.
- Daylight Saving: To select Daylight Saving time manually, select enabled or disabled, and enter a start date and an end date for daylight saving time.
  - Automatic: NTP is short for Network Time Protocol. NTP synchronizes computer clock times in a network of computers. This field is optional.
    - Manual: To manually input the time, enter the values in these fields for the Year, Month, Day, Hour, Minute, and Second. Click Set Time. You can also click Copy Your Computer's Time Settings.

D-Lin	<b>1</b> ¢				
WBR-1310 //	SETUP	ADVANCED	TOOLS	STATUS	SUPPORT
WBR-1310 ADMIN TIME SYSTEM FIRMWARE SYSTEM CHECK	TIME Time Configuration The Time Configuratio on the internal system set the NTP (Network automatically adjust th Save Settings TIME CONFIGURAT	n option allows you to cor clock. From this section y Time Protocol) Server. D, e time when needed Don't Save Settings TION TION "ime : one : (GMT-12:00) Eniwetol Enable Daylight Sav	ingure, update, and main ou can set the time zone sylight Saving can also be , Kwajalein	tain the correct time that you are in and configured to	Helpful Hints System Time The "system time" setting is used by the unit for synchronizing scheduling services and system logging activities. You will need to set the time zone corresponding to your location. The time can be set manually or the device can connect to a NTP (Network Time Protocol) server to retrieve the time. You may also set Daylight Saving dates and the system time will automatically adjust on those dates. Automatic—Enter the NTP server which you would like the WBR-1310 to synchronize its time with.Also, select the interval at which the WBR- 1310 will communicate with the specified NTP server. Manual - Select this option if you would like to specify the time manually.You must specify the Year, Month, Day,
	Current Gateway Time Year 2002 V Hour 00 V	ver :	Select NTP Server       Day     01 v       Second     00 v		Hour, Minute, and Second, or you can click the Computer Clock button to copy the system time from the computer being used to access the management interface. <b>Time Zone</b> –Select the Time Zone for the region you are in. <b>Daylight Saving</b> – If the region you are in observes Daylight Savings Time, enable this option and specify the Starting and Ending Month and Week for this time of the year.

### **System Settings**

Save Settings to Use this option to save the current router Local Hard Drive: configuration settings to a file on the hard disk of the computer you are using. First, click the Save button. You will then see a file dialog, where you can select a location and file name for the settings.

Load Settings Use this option to load previously saved from Local Hard router configuration settings. First, use the Drive: Browse control to find a previously save file of configuration settings. Then, click the Load button to transfer those settings to the router.

**Restore to Factory** This option will restore all configuration settings **Default Settings:** back to the settings that were in effect at the time the router was shipped from the factory. Any settings that have not been saved will be lost, including any rules that you have created. If you want to save the current router configuration settings, use the Save button above.

D-Lin	k				$\prec$
WBR-1310	SETUP	ADVANCED	TOOLS	STATUS	SUPPORT
ADMIN TIME SYSTEM FIRMWARE SYSTEM CHECK		ttings can be saved as a fi g file created by device ca Don't Save Settings			Helpful Hints System Settings The current system settings can be saved as a file onto the local hard drive. The saved file or any other saved setting file created by device can be uploaded into the unit. To reload a system settings
	Load Settings From Restore To Factory	Local Hard Drive : Save	Browse ad Settings tore Device		file, click on Browse to search the local hard drive for the file to be used. The device can also be reset back to factory default settings by clicking on <b>Restore</b> . Use the restore feature only if necessary. This will erase previously save settings for the unit. Make sure to save your system settings before doing a factory restore.

## **Firmware Upgrade**

You can upgrade the firmware of the Router here. Make sure the firmware you want to use is on the local hard drive of the computer. Click on **Browse** to locate the firmware file to be used for the update. Please check the D-Link support site for firmware updates at http://support.dlink.com. You can download firmware upgrades to your hard drive from the D-Link support site.

- Firmware Click on the link in this screen to find out if there Upgrade: is an updated firmware; if so, download the new firmware to your hard drive.
- Browse: After you have downloaded the new firmware, click Browse in this window to locate the firmware update on your hard drive. Click **Save Settings** to complete the firmware upgrade.

D-Lin	1								
WBR-1310	SETUP	ADVANCED	TOOLS	STATUS	SUPPORT				
ADMIN	FIRMWARE UPGRA	DE			Helpful Hints				
TIME		There may be new firmware for your WBR-1310 to improve functionality and performance. • Firmware updates are released periodically to							
SYSTEM	Click here to check for an upgrade on our support site.								
FIRMWARE			e on the local hard drive w d, click the Save Settings l		features. If you run into a problem with a specific				
SYSTEM CHECK	firmware upgrade.		.,		feature of the router, check our support site by clicking				
	Save Settings	Don't Save Settings			on the Click here to check for an upgrade on our support site link and				
	CURRENT FIRMWA	RE INFO			see if an updated firmware is available for your router.				
	Currect Firmware Ve	rsion 4.13							
	Firmware	Date Tue 07 Aug 2007	Browse						

### **System Check**

Virtual Cable VCT is an advanced feature that integrates a Tester (VCT) Info: LAN cable tester on every Ethernet port on the router. Through the graphical user interface (GUI), VCT can be used to remotely diagnose and report cable faults such as opens, shorts, swaps, and impedance mismatch. This feature significantly reduces service calls and returns by allowing users to easily troubleshoot their cable connections.

**Ping Test:** The Ping Test is used to send Ping packets to test if a computer is on the Internet. Enter the IP Address that you wish to Ping, and click **Ping**.

<b>D-Lin</b> i	2				
WBR-1310	SETUP	ADVANCED	TOOLS	STATUS	SUPPORT
	FAST ETHERNET	IRTUAL CABLE TESTER	R(VCT)		
TIME SYSTEM	Cable Test is advance the router.	d feature that integrates a l	AN cable tester on every.	Ethernet port on	
FIRMWARE	VCT INFO				
SYSTEM CHECK	Ports	Link Status			
	WAN		Disconnected	More Info	
	LAN1		Disconnected	More Info	
	LAN2		Disconnected	More Info	
	LAN3		100Mbps FULL Duple	ex More Info	
	LAN4		Disconnected	More Info	
	PING TEST				
	Ping Test is used to s	end "Ping" packets to test if	f a computer is on the Inf	ternet.	
	Host Nam	e or IP Address :	1	Ping	
	PING RESULT				

## **Device Information**

This page displays the current information for the WBR-1310. It will display the LAN, WAN, and Wireless information.

If your WAN connection is set up for a Dynamic IP address then a **Release** button and a **Renew** button will be displayed. Use **Release** to disconnect from your ISP and use **Renew** to connect to your ISP.

If your WAN connection is set up for PPPoE, a **Connect** button and a **Disconnect** button will be displayed. Use **Disconnect** to drop the PPPoE connection and use **Connect** to establish the PPPoE connection.

- LAN: Displays the MAC address and the private (local) IP settings for the router.
- **WAN:** Displays the MAC address and the public IP settings for the router.
- Wireless: Displays wireless settings such as SSID, Channel, and Encryption level.

<b>D-Lin</b>	<b>1</b> - <sup>8</sup>				
WBR-1310	SETUP	ADVANCED	TOOLS	STATUS	SUPPORT
DEVICE INFO	DEVICE INFORMAT				
LOG STATS	All of your Internet and version is also displayed	d network connection det I here.	ails are displayed on this p	age. The firmware	
WIRELESS		Firmware Version : 4.1	3 , Tue 07 Aug 2007		
	LAN				
		MAC Address : 00:1b:11:c IP Address : 192.168.0 Subnet Mask : 255.255.2 DHCP Server : Enabled	.1		
	WAN				
		MAC Address : 00:1b:11:c Connection : DHCP clier DHCP Ren IP Address : 0.0.0.0 Subnet Mask : 0.0.0.0 ult Gateway : 0.0.0.0 DNS : 0.0.0.0	it Disconnected		
	WIRELESS 802.11	G			
		SSID : dlink Channel : 6 Encryption : Disabled			

First Page: View the first page of the log.

Last Page: View the last page of the log.

**Previous:** View the previous page.

**Next:** View the next page.

**Clear:** Clear the log.

### Log

view LOY displays the activ	ities occurring on the WBR-2310.			
.OG FILES :				
First Page Last Page	Previous Next Clear			
Page 1 of 20				
Time	Message	Source	Destination	Note
Apr/01/2002 01:04:49	DHCP Discover no response			
Apr/01/2002 01:04:49	DHCP Discover			
Apr/01/2002 01:04:33	DHCP Discover			
Apr/01/2002 01:04:24	DHCP Discover			
Apr/01/2002 01:04:19	DHCP Discover			
Apr/01/2002 01:04:17	DHCP Discover			
Apr/01/2002 01:04:15	DHCP Discover no response			
Apr/01/2002 01:04:15	DHCP Discover			
Apr/01/2002 01:03:58	DHCP Discover			

### **Stats**

The screen below displays the Traffic Statistics. Here you can view the amount of packets that pass through the WBR-1310 on both the WAN and the LAN ports. The traffic counter will reset if the device is rebooted.

TRAFFIC STATISTICS :					
Traffic Statistics display Receive and Transmit packets passing through the WBR-2310.					
Refresh Reset					
	Receive	Transmit			
WAN	0 Packets	594 Packets			
LAN	3502 Packets	4510 Packets			
WIRELESS 11g	0 Packets	2813 Packets			

## Wireless Stats

The wireless client table displays a list of current connected wireless clients. This table also displays the connection time and MAC address of the connected wireless client.

CONNECTED WIRELESS CLIENT LIST :					
The Wireless Client table below displays Wireless clients Connected to the AP (Access Point), to the AP (Access Point).					
Connected Time	MAC Address	Mode			

## Support

D-Lin	k				$\prec$
WBR-1310	SETUP	ADVANCED	TOOLS	STATUS	SUPPORT
MENU	SUPPORT MENU Setup Internet Wireless Settinc Network settinc Advanced Port Forwardinc Application Rule Network Filter Website Filter Website Filter Advanced Wirel Advanced Wirel Advanced Netw Tools Advanced Netw Tools Advanced Netw System Firmware Upgra System Check Status Device Info Log Stats Wireless	as s s ess cork			Helpful Hints

# **Wireless Security**

This section will show you the different levels of security you can use to protect your data from intruders. The WBR-1310 offers the following types of security:

- WPA2 (Wi-Fi Protected Access 2)
- WPA (Wi-Fi Protected Access)
- WEP (Wired Equivalent Privacy)

- WPA2-PSK (Pre-Shared Key)
- WPA-PSK (Pre-Shared Key)

## What is WEP?

WEP stands for Wired Equivalent Privacy. It is based on the IEEE 802.11 standard and uses the RC4 encryption algorithm. WEP provides security by encrypting data over your wireless network so that it is protected as it is transmitted from one wireless device to another.

To gain access to a WEP network, you must know the key. The key is a string of characters that you create. When using WEP, you must determine the level of encryption. The type of encryption determines the key length. 128-bit encryption requires a longer key than 64-bit encryption. Keys are defined by entering in a string in HEX (hexadecimal - using characters 0-9, A-F) or ASCII (American Standard Code for Information Interchange – alphanumeric characters) format. ASCII format is provided so you can enter a string that is easier to remember. The ASCII string is converted to HEX for use over the network. Four keys can be defined so that you can change keys easily.

## What is WPA?

WPA, or Wi-Fi Protected Access, is a Wi-Fi standard that was designed to improve the security features of WEP (Wired Equivalent Privacy).

The 2 major improvements over WEP:

- Improved data encryption through the Temporal Key Integrity Protocol (TKIP). TKIP scrambles the keys using a hashing algorithm and, by adding an integrity-checking feature, ensures that the keys haven't been tampered with. WPA2 is based on 802.11i and uses Advanced Encryption Standard (AES) instead of TKIP.
- User authentication, which is generally missing in WEP, through the extensible authentication protocol (EAP). WEP regulates access to a wireless network based on a computer's hardware-specific MAC address, which is relatively simple to be sniffed out and stolen. EAP is built on a more secure public-key encryption system to ensure that only authorized network users can access the network.

WPA-PSK/WPA2-PSK uses a passphrase or key to authenticate your wireless connection. The key is an alpha-numeric password between 8 and 63 characters long. The password can include symbols (!?\*&\_) and spaces. This key must be the exact same key entered on your wireless router or access point.

WPA/WPA2 incorporates user authentication through the Extensible Authentication Protocol (EAP). EAP is built on a more secure public key encryption system to ensure that only authorized network users can access the network.

## **Configure WEP**

It is recommended to enable encryption on your wireless router before your wireless network adapters. Please establish wireless connectivity before enabling encryption. Your wireless signal may degrade when enabling encryption due to the added overhead.

- 1. Log into the web-based configuration by opening a web browser and entering the IP address of the router (192.168.0.1). Click on **Wireless Settings** on the left side.
- 2. Next to Security Mode, select Enable WEP Security.
- 3. Next to Authentication, select Shared Key.
- 4. Select either **64-bit** or **128-bit** encryption from the drop-down menu next to *WEP Encryption*.
- Next to Key Type, select either Hex or ASCII.
   Hex (recommended) Letters A-F and numbers 0-9 are valid.
   ASCII All numbers and letters are valid.
- 6. Next to *Key 1*, enter a WEP key that you create. Make sure you enter this key exactly on all your wireless devices. You may enter up to 4 different keys.

WIRELESS SECURITY MODE :	
Security Mode : Enable WEP Wireless Security (basic)	
WEP :	
WEP is the wireless encryption standard. To use it you must enter the same key(s) into the router and the wireless stations. For 64 bit keys you must enter 10 hex digits into each key box. For 128 bit keys you must enter 26 hex digits into each key box. A hex digit is either a number from 0 to 9 or a letter from A to F. For the most secure use of WEP set the authentication type to "Shared Key" when WEP is enabled. You may also enter any text string into a WEP key box, in which case it will be converted into a hexadecimal key using the ASCII values of the characters. A maximum of 5 text characters can be entered for 64 bit keys, and a maximum of 13 characters for 128 bit keys.	
Authentication : Shared Key  WEP Encryption : 64Bit	
Default WEP Key : WEP Key 1 💌	
WEP Key 1:	
WEP Key 2 :	
WEP Key 3 :	
WEP Key 4 :	

7. Click **Save Settings** to save your settings. If you are configuring the router with a wireless adapter, you will lose connectivity until you enable WEP on your adapter and enter the same WEP key as you did on the router.

## **Configure WPA/WPA2 Personal**

It is recommended to enable encryption on your wireless router before your wireless network adapters. Please establish wireless connectivity before enabling encryption. Your wireless signal may degrade when enabling encryption due to the added overhead.

- 1. Log into the web-based configuration by opening a web browser and entering the IP address of the router (192.168.0.1). Click on **Wireless Settings** on the left side.
- 2. Next to *Security Mode*, select **Enable WPA-Personal Security** or **Enable WPA2-Personal Security**.
- 3. Next to *Cipher Mode*, select **TKIP**, **AES**, or **Auto**.
- 4. Next to *PSK/EAP*, select **PSK**.

WIRELESS SECURITY MODE :	
Security Mode :	Enable WPA-Personal Wireless Security (enhanced) 💌
WPA-PERSONAL :	
WPA-Personal requires stations to use	high grade encryption and authentication.
Cipher Type :	AUTO -
PSK / EAP :	PSK -
Passphrase :	
Confirmed Passphrase :	
Passphrase :	

5. Next to *Passphrase*, enter a key (passphrase). The key is an

alpha-numeric password between 8 and 63 characters long. The password can include symbols (!?\*&\_) and spaces. Make sure you enter this key exactly the same on all other wireless clients.

- 6. Enter the passphrase again next to *Confirmed Passphrase*.
- 7. Click **Save Settings** to save your settings. If you are configuring the router with a wireless adapter, you will lose connectivity until you enable WPA-PSK (or WPA2-PSK) on your adapter and enter the same passphrase as you did on the router.

# **Configure WPA/WPA2 (RADIUS)**

It is recommended to enable encryption on your wireless router before your wireless network adapters. Please establish wireless connectivity before enabling encryption. Your wireless signal may degrade when enabling encryption due to the added overhead.

- 1. Log into the web-based configuration by opening a web browser and entering the IP address of the router (192.168.0.1). Click on **Wireless Settings** on the left side.
- 2. Next to *Security Mode*, select **Enable WPA-Personal Security** or **Enable WPA2-Personal Security**.
- 3. Next to *Cipher Mode*, select **TKIP**, **AES**, or **Auto**.
- 4. Next to *PSK/EAP*, select **EAP**.
- 5. Next to *RADIUS Server 1* enter the IP Address of your RADIUS server.
- 6. Next to *Port*, enter the port you are using with your RADIUS server. 1812 is the default port.
- 7. Next to Shared Secret, enter the security key.
- 8. If you have a secondary RADIUS server, enter its IP address, port, and secret key.
- 9. Click Apply Settings to save your settings.

	Security Mode :	Enable WPA-Person	al Wireless Security (enhanced) 🔽
₩PA-PERS	ONAL :		
WPA-Persona	I requires stations to use	high grade encryp	tion and authentication.
	Cipher Type : PSK / EAP :	AUTO - EAP -	
802.1X	RADIUS Server 1 :	IP	0.0.0.0
		Port	1812
	RADIUS Server 2 :	Shared Secret	
	KADIUS SERVER 2 ;	IP Port	0.0.0.0
			-

## **Connect to a Wireless Network** Using Windows Vista®

Windows Vista<sup>®</sup> users may use the built-in wireless utility. If you are using another company's utility or Windows<sup>®</sup> 2000, please refer to the user manual of your wireless adapter for help with connecting to a wireless network. Most utilities will have a "site survey" option similar to the Windows Vista<sup>®</sup> utility as seen below.

If you receive the **Wireless Networks Detected** bubble, click on the center of the bubble to access the utility.

or

Right-click on the wireless computer icon in your system tray (lower-right corner next to the time). Select **Connect to a network**.

The utility will display any available wireless networks in your area. Click on a network (displayed using the SSID) and click the **Connect** button.

If you get a good signal but cannot access the Internet, check your TCP/IP settings for your wireless adapter. Refer to the **Networking Basics** section in this manual for more information.





## **Configure Wireless Security**

It is recommended to enable wireless security (WPA/WPA2) on your wireless router or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the security key or passphrase being used.

1. Open the Windows Vista<sup>®</sup> Wireless Utility by right-clicking on the wireless computer icon in your system tray (lower right corner of screen). Select **Connect to a network**.

2. Highlight the wireless network (SSID) you would like to connect to and click **Connect**.



) 💱 Connect to a netwo Disconnect or conne Show All	rk ect to another network	
VOIPtest	Unsecured network	littee
dlink	Unsecured network	ille.
tuesday	Security-enabled network	j Ulte
Set up a connection or net Open Network and Sharing		

**3.** Enter the same security key or passphrase that is on your router and click **Connect**.

It may take 20-30 seconds to connect to the wireless network. If the connection fails, please verify that the security settings are correct. The key or passphrase must be exactly the same as on the wireless router.

Туре	the network security key or passphrase for Candy
The pe	erson who setup the network can give you the key or passphrase.
Securi	ty key or passphrase:
🔳 Dis	play characters
	If you have a <u>USB flash drive</u> with network settings for Candy, insert it now.

## Connect to a Wireless Network Using Windows® XP

Windows<sup>®</sup> XP users may use the built-in wireless utility (Zero Configuration Utility). The following instructions are for Service Pack 2 users. If you are using another company's utility or Windows<sup>®</sup> 2000, please refer to the user manual of your wireless adapter for help with connecting to a wireless network. Most utilities will have a "site survey" option similar to the Windows<sup>®</sup> XP utility as seen below.

If you receive the **Wireless Networks Detected** bubble, click on the center of the bubble to access the utility.


or

Right-click on the wireless computer icon in your system tray (lower-right corner next to the time). Select **View Available Wireless Networks**.

The utility will display any available wireless networks in your area. Click on a network (displayed using the SSID) and click the **Connect** button.

If you get a good signal but cannot access the Internet, check you TCP/IP settings for your wireless adapter. Refer to the **Networking Basics** section in this manual for more information.



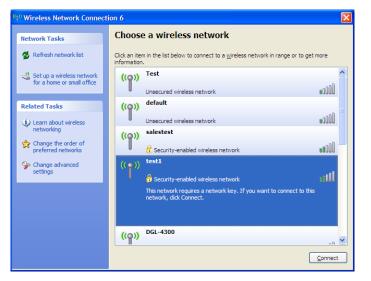

## **Configure WEP**

It is recommended to enable WEP on your wireless router or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the WEP key being used.

1. Open the Windows<sup>®</sup> XP Wireless Utility by right-clicking on the wireless computer icon in your system tray (lower-right corner of screen). Select View Available Wireless Networks.

2. Highlight the wireless network (SSID) you would like to connect to and click **Connect**.



( <sup>(</sup> )) Wireless Network Connect	ion 6	×
Network Tasks	Choose a wireless network	
🛃 Refresh network list	Click an item in the list below to connect to a wireless network in range or to get more information.	
Set up a wireless network for a home or small office	((o)) Test	^
Related Tasks	Unsecured wireless network	
<ul> <li>Learn about wireless</li> </ul>	Unsecured wireless network	
<ul> <li>networking</li> <li>Change the order of preferred networks</li> </ul>	((p)) salestest	
Change advanced settings	((o)) test1	
setungs	Security-enabled wireless network	
	This network requires a network key. If you want to connect to this network, click Connect.	
	((°)) DGL-4300	~
	<u>C</u> onnect	

**3.** The **Wireless Network Connection** box will appear. Enter the same WEP key that is on your router and click **Connect**.

It may take 20-30 seconds to connect to the wireless network. If the connection fails, please verify that the WEP settings are correct. The WEP key must be exactly the same as on the wireless router.


Wireless Network Conn	nection
	a network key (also called a WEP key or WPA key). A network intruders from connecting to this network.
Type the key, and then click	Connect.
Network <u>k</u> ey:	I
Confirm network key;	
	<u>C</u> onnect Cancel

## **Configure WPA/WPA2**

It is recommended to enable WEP on your wireless router or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the WEP key being used.

- Open the Windows<sup>®</sup> XP Wireless Utility by right-clicking on the wireless computer icon in your system tray (lower-right corner of screen). Select View Available Wireless Networks.
- 2. Highlight the wireless network (SSID) you would like to connect to and click **Connect**.



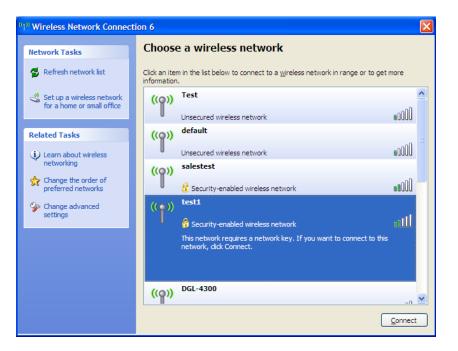

**3.** The **Wireless Network Connection** box will appear. Enter the WPA-PSK passphrase and click **Connect**.

It may take 20-30 seconds to connect to the wireless network. If the connection fails, please verify that the WPA-PSK settings are correct. The WPA-PSK passphrase must be exactly the same as on the wireless router.

Wireless Network Con	nection
	es a network key (also called a WEP key or WPA key). A network n intruders from connecting to this network.
Type the key, and then cli	ck Connect.
Network <u>k</u> ey:	I
Confirm network key:	
	<u>C</u> onnect Cancel

# Troubleshooting

This chapter provides solutions to problems that can occur during the installation and operation of the WBR-1310. Read the following descriptions if you are having problems. (The examples below are illustrated in Windows<sup>®</sup> XP. If you have a different operating system, the screenshots on your computer will look similar to the following examples.)

#### 1. Why can't I access the web-based configuration utility?

When entering the IP address of the D-Link router (192.168.0.1 for example), you are not connecting to a website on the Internet or have to be connected to the Internet. The device has the utility built-in to a ROM chip in the device itself. Your computer must be on the same IP subnet to connect to the web-based utility.

• Make sure you have an updated Java-enabled web browser. We recommend the following:

- Internet Explorer 6.0 or higher
- Netscape 8 or higher
- Mozilla 1.7.12 (5.0) or higher
- Opera 8.5 or higher
- Safari 1.2 or higher (with Java 1.3.1 or higher)
- Camino 0.8.4 or higher
- Firefox 1.5 or higher
- Verify physical connectivity by checking for solid link lights on the device. If you do not get a solid link light, try using a different cable or connect to a different port on the device if possible. If the computer is turned off, the link light may not be on.
- Disable any internet security software running on the computer. Software firewalls such as Zone Alarm, Black Ice, Sygate, Norton Personal Firewall, and Windows<sup>®</sup> XP firewall may block access to the configuration pages. Check the help files included with your firewall software for more information on disabling or configuring it.

- Configure your Internet settings:
  - Go to Start > Settings > Control Panel. Double-click the Internet Options Icon. From the Security tab, click the button to restore the settings to their defaults.
  - Click the **Connection** tab and set the dial-up option to Never Dial a Connection. Click the LAN Settings button. Make sure nothing is checked. Click **OK**.
  - Go to the **Advanced** tab and click the button to restore these settings to their defaults. Click **OK** three times.
  - Close your web browser (if open) and open it.
- Access the web management. Open your web browser and enter the IP address of your D-Link router in the address bar. This should open the login page for your the web management.
- If you still cannot access the configuration, unplug the power to the router for 10 seconds and plug back in. Wait about 30 seconds and try accessing the configuration. If you have multiple computers, try connecting using a different computer.

#### 2. What can I do if I forgot my password?

If you forgot your password, you must reset your router. Unfortunately this process will change all your settings back to the factory defaults.

To reset the router, locate the reset button (hole) on the rear panel of the unit. With the router powered on, use a paperclip to hold the button down for 10 seconds. Release the button and the router will go through its reboot process. Wait about 30 seconds to access the router. The default IP address is 192.168.0.1. When logging in, the username is **admin** and leave the password box empty.

#### 3. Why can't I connect to certain sites or send and receive emails when connecting through my router?

If you are having a problem sending or receiving email, or connecting to secure sites such as eBay, banking sites, and Hotmail, we suggest lowering the MTU in increments of ten (Ex. 1492, 1482, 1472, etc).

#### Note: AOL DSL+ users must use MTU of 1400.

To find the proper MTU Size, you'll have to do a special ping of the destination you're trying to go to. A destination could be another computer, or a URL.

- Click on Start and then click Run.
- Windows<sup>®</sup> 95, 98, and Me users type in **command** (Windows<sup>®</sup> NT, 2000, and XP users type in **cmd**) and press **Enter** (or click **OK**).
- Once the window opens, you'll need to do a special ping. Use the following syntax:

ping [url] [-f] [-l] [MTU value]

Example: ping yahoo.com -f -l 1472

```
C:\>ping yahoo.com -f -l 1482
Pinging yahoo.com [66.94.234.13] with 1482 bytes of data:
Packet needs to be fragmented but DF set.
Ping statistics for 66.94.234.13:
Packets: Sent = 4, Received = 0, Lost = 4 (100% loss),
Approximate round trip times in milli-seconds:_
     Minimum = Oms, Maximum = Oms, Average =
                                                            Øms
C:\>ping yahoo.com -f -l 1472
Pinging yahoo.com [66.94.234.13] with 1472 bytes of data:
Reply from 66.94.234.13: bytes=1472 time=93ms TTL=52
Reply from 66.94.234.13: bytes=1472 time=109ms TTL=52
Reply from 66.94.234.13: bytes=1472 time=125ms TTL=52
Reply from 66.94.234.13: bytes=1472 time=203ms TTL=52
Ping statistics for 66.94.234.13:
Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
Approximate round trip times in milli-seconds:
     Minimum = 93ms, Maximum = 203ms, Average =
                                                                132ms
C:∖>
```

You should start at 1472 and work your way down by 10 each time. Once you get a reply, go up by 2 until you get a fragmented packet. Take that value and add 28 to the value to account for the various TCP/IP headers. For example, lets say that 1452 was the proper value, the actual MTU size would be 1480, which is the optimum for the network we're working with (1452+28=1480).

Once you find your MTU, you can now configure your router with the proper MTU size.

To change the MTU rate on your router follow the steps below:

- Open your browser, enter the IP address of your router (192.168.0.1) and click **OK**.
- Enter your username (admin) and password (blank by default). Click **OK** to enter the web configuration page for the device.
- Click on Setup and then click Manual Configure.
- To change the MTU enter the number in the MTU field and click the **Save Settings** button to save your settings.
- Test your email. If changing the MTU does not resolve the problem, continue changing the MTU in increments of ten.

# Wireless Basics

D-Link wireless products are based on industry standards to provide easy-to-use and compatible high-speed wireless connectivity within your home, business or public access wireless networks. Strictly adhering to the IEEE standard, the D-Link wireless family of products will allow you to securely access the data you want, when and where you want it. You will be able to enjoy the freedom that wireless networking delivers.

A wireless local area network (WLAN) is a cellular computer network that transmits and receives data with radio signals instead of wires. Wireless LANs are used increasingly in both home and office environments, and public areas such as airports, coffee shops and universities. Innovative ways to utilize WLAN technology are helping people to work and communicate more efficiently. Increased mobility and the absence of cabling and other fixed infrastructure have proven to be beneficial for many users.

Wireless users can use the same applications they use on a wired network. Wireless adapter cards used on laptop and desktop systems support the same protocols as Ethernet adapter cards.

Under many circumstances, it may be desirable for mobile network devices to link to a conventional Ethernet LAN in order to use servers, printers or an Internet connection supplied through the wired LAN. A Wireless Router is a device used to provide this link.

### What is Wireless?

Wireless or Wi-Fi technology is another way of connecting your computer to the network without using wires. Wi-Fi uses radio frequency to connect wirelessly, so you have the freedom to connect computers anywhere in your home or office network.

### Why D-Link Wireless?

D-Link is the worldwide leader and award winning designer, developer, and manufacturer of networking products. D-Link delivers the performance you need at a price you can afford. D-Link has all the products you need to build your network.

### How does wireless work?

Wireless works similar to how cordless phone work, through radio signals to transmit data from one point A to point B. But wireless technology has restrictions as to how you can access the network. You must be within the wireless network range area to be able to connect your computer. There are two different types of wireless networks Wireless Local Area Network (WLAN), and Wireless Personal Area Network (WPAN).

#### Wireless Local Area Network (WLAN)

In a wireless local area network, a device called an Access Point (AP) connects computers to the network. The access point has a small antenna attached to it, which allows it to transmit data back and forth over radio signals. With an indoor access point as seen in the picture, the signal can travel up to 300 feet. With an outdoor access point the signal can reach out up to 30 miles to serve places like manufacturing plants, industrial locations, college and high school campuses, airports, golf courses, and many other outdoor venues.

#### Wireless Personal Area Network (WPAN)

Bluetooth is the industry standard wireless technology used for WPAN. Bluetooth devices in WPAN operate in a range up to 30 feet away.

Compared to WLAN the speed and wireless operation range are both less than WLAN, but in return it doesn't use nearly as much power which makes it ideal for personal devices, such as mobile phones, PDAs, headphones, laptops, speakers, and other devices that operate on batteries.

### Who uses wireless?

Wireless technology as become so popular in recent years that almost everyone is using it, whether it's for home, office, business, D-Link has a wireless solution for it.

#### Home

- Gives everyone at home broadband access
- Surf the web, check email, instant message, and etc
- Gets rid of the cables around the house
- Simple and easy to use

#### **Small Office and Home Office**

- Stay on top of everything at home as you would at office
- Remotely access your office network from home
- Share Internet connection and printer with multiple computers
- No need to dedicate office space

### Where is wireless used?

Wireless technology is expanding everywhere not just at home or office. People like the freedom of mobility and it's becoming so popular that more and more public facilities now provide wireless access to attract people. The wireless connection in public places is usually called "hotspots".

Using a D-Link Cardbus Adapter with your laptop, you can access the hotspot to connect to Internet from remote locations like Airports, Hotels, Coffee Shops, Libraries, Restaurants, and Convention Centers.

Wireless network is easy to setup, but if you're installing it for the first time it could be quite a task not knowing where to start. That's why we've put together a few setup steps and tips to help you through the process of setting up a wireless network.

### Tips

Here are a few things to keep in mind, when you install a wireless network.

#### **Centralize your router or Access Point**

Make sure you place the router/access point in a centralized location within your network for the best performance. Try to place the router/access point as high as possible in the room, so the signal gets dispersed throughout your home. If you have a two-story home, you may need a repeater to boost the signal to extend the range.

#### **Eliminate Interference**

Place home appliances such as cordless telephones, microwaves, and televisions as far away as possible from the router/access point. This would significantly reduce any interference that the appliances might cause since they operate on same frequency.

### Security

Don't let you next-door neighbors or intruders connect to your wireless network. Secure your wireless network by turning on the WPA or WEP security feature on the router. Refer to product manual for detail information on how to set it up.

## Wireless Modes

There are basically two modes of networking:

- Infrastructure All wireless clients will connect to an access point or wireless router.
- Ad-Hoc Directly connecting to another computer, for peer-to-peer communication, using wireless network adapters on each computer, such as two or more WNA-2330 wireless network Cardbus adapters.

An Infrastructure network contains an Access Point or wireless router. All the wireless devices, or clients, will connect to the wireless router or access point.

An Ad-Hoc network contains only clients, such as laptops with wireless cardbus adapters. All the adapters must be in Ad-Hoc mode to communicate.

# **Networking Basics**

### **Check your IP address**

After you install your new D-Link adapter, by default, the TCP/IP settings should be set to obtain an IP address from a DHCP server (i.e. wireless router) automatically. To verify your IP address, please follow the steps below.


Click on **Start** > **Run**. In the run box type *cmd* and click **OK**. (Windows Vista<sup>®</sup> users type *cmd* in the **Start Search** box.)

At the prompt, type *ipconfig* and press Enter.

This will display the IP address, subnet mask, and the default gateway of your adapter.

If the address is 0.0.0.0, check your adapter installation, security settings, and the settings on your router. Some firewall software programs may block a DHCP request on newly installed adapters.

If you are connecting to a wireless network at a

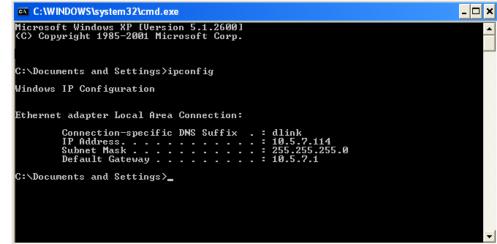

hotspot (e.g. hotel, coffee shop, airport), please contact an employee or administrator to verify their wireless network settings.

### Statically Assign an IP address

If you are not using a DHCP capable gateway/router, or you need to assign a static IP address, please follow the steps below:

#### Step 1

Windows Vista<sup>®</sup> - Click on Start > Control Panel > Network and Internet > Network and Sharing Center > Manage Network Connections.

Windows<sup>®</sup> XP - Click on **Start > Control Panel > Network Connections**.

Windows<sup>®</sup> 2000 - From the desktop, right-click **My Network Places** > **Properties**.

#### Step 2

Right-click on the Local Area Connection which represents your D-Link network adapter and select Properties.

#### Step 3

Highlight Internet Protocol (TCP/IP) and click Properties.

#### Step 4

Click **Use the following IP address** and enter an IP address that is on the same subnet as your network or the LAN IP address on your router.

**Example:** If the router's LAN IP address is 192.168.0.1, make your IP address 192.168.0.X where X is a number between 2 and 99. Make sure that the number you choose is not in use on the network. Set Default Gateway the same as the LAN IP address of your router (192.168.0.1).

Set Primary DNS the same as the LAN IP address of your router (192.168.0.1). The Secondary DNS is not needed or you may enter a DNS server from your ISP.

#### Step 5 Click OK twice to save your settings.

eneral	
	d automatically if your network supports ed to ask your network administrator fo
Obtain an IP address auton	natically
Use the following IP addres	s:
IP address:	192.168.0.52
Subnet mask:	255 . 255 . 255 . 0
Default gateway:	192.168.0.1
Obtain DNS server address	automatically
O Use the following DNS server	ver addresses:
Preferred DNS server:	192.168.0.1
Alternate DNS server:	<u> </u>
	Advanced

# **Technical Specifications**

#### Standards

- IEEE 802.11g
- IEEE 802.11b
- IEEE 802.3
- IEEE 802.3u

#### Wireless Signal Rates\*

- 54Mbps 48Mbps
- 36Mbps 24Mbps
- 18Mbps 12Mbps
- 11Mbps 9Mbps
- 6Mbps 5.5Mbps
- 2Mbps 1Mbps

#### Security

- WPA Wi-Fi Protected Access (TKIP, MIC, IV Expansion, Shared Key Authentication)
- 802.1x
- 64/128-bit WEP

#### **Modulation Technology**

• Orthogonal Frequency Division Multiplexing (OFDM)

#### **Receiver Sensitivity**

- 54Mbps OFDM, 10% PER,-68dBm)
- 48Mbps OFDM, 10% PER,-68dBm)
- 36Mbps OFDM, 10% PER,-75dBm)
- 24Mbps OFDM, 10% PER,-79dBm)
- 18Mbps OFDM, 10% PER,-82dBm)
- 12Mbps OFDM, 10% PER,-84dBm)

- 11Mbps CCK, 8% PER,-82dBm)
- 9Mbps OFDM, 10% PER,-87dBm)
- 6Mbps OFDM, 10% PER,-88dBm)
- 5.5Mbps CCK, 8% PER,-85dBm)
- 2Mbps QPSK, 8% PER,-86dBm)
- 1Mbps BPSK, 8% PER,-89dBm)

#### **VPN Pass Through/ Multi-Sessions**

- PPTP
- L2TP
- IPSec

#### **Device Management**

- Web-based Internet Explorer v6 or later; Netscape Navigator v6 or later; or other Java-enabled browsers
- DHCP Server and Client

#### Wireless Frequency Range

• 2.4GHz to 2.462GHz

#### Wireless Operating Range2

- Indoors up to 328 ft. (100 meters)
- Outdoors- up to 1312 ft. (400 meters)

#### Wireless Transmit Power

• 15dBm ± 2dBm

#### **External Antenna Type**

• Single detachable reverse SMA

#### **Advanced Firewall Features**

- NAT with VPN Pass-through (Network Address Translation)
- MAC Filtering
- IP Filtering
- URL Filtering
- Domain Blocking

#### **Operating Temperature**

• 32°F to 131°F ( 0°C to 55°C)

#### Humidity

• 95% maximum (non-condensing)

#### Safety and Emissions

• FCC

#### LEDs

- Power
- Status
- WAN
- WLAN (Wireless Connection)
- LAN (10/100)

#### Dimensions

- L = 5.6 (142mm)
- W = 4.3 (109mm)
- H = 1.2 inches (31mm)

\* Maximum wireless signal rate derived from IEEE Standard 802.11g specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental factors will adversely affect wireless signal range.

#### Weight

• 7.8 oz (0.22kg)

#### Warranty

• 1 Year

# **Contacting Technical Support**

D-Link provides free technical support for customers within the United States and within Canada for the duration of the warranty period on this product. U.S. and Canadian customers can contact D-Link technical support through our web site or by phone.

Before you contact technical support, please have the following ready:

- Model number of the product (e.g. WBR-1310)
- Hardware Revision (located on the label on the bottom of the router (e.g. rev D1))
- Serial Number (s/n number located on the label on the bottom of the router).

You can find software updates and user documentation on the D-Link website as well as frequently asked questions and answers to technical issues.

For customers within the United States:

Phone Support: (877) 453-5465

Internet Support: http://support.dlink.com For customers within Canada:

Phone Support: (800) 361-5265

Internet Support: http://support.dlink.com

# Warranty

Subject to the terms and conditions set forth herein, D-Link Systems, Inc. ("D-Link") provides this Limited Warranty:

- Only to the person or entity that originally purchased the product from D-Link or its authorized reseller or distributor, and
- Only for products purchased and delivered within the fifty states of the United States, the District of Columbia, U.S. Possessions or Protectorates, U.S. Military Installations, or addresses with an APO or FPO.

#### **Limited Warranty:**

D-Link warrants that the hardware portion of the D-Link product described below ("Hardware") will be free from material defects in workmanship and materials under normal use from the date of original retail purchase of the product, for the period set forth below ("Warranty Period"), except as otherwise stated herein.

- Hardware (excluding power supplies and fans): One (1) year
- Power supplies and fans: One (1) year
- Spare parts and spare kits: Ninety (90) days

The customer's sole and exclusive remedy and the entire liability of D-Link and its suppliers under this Limited Warranty will be, at D-Link's option, to repair or replace the defective Hardware during the Warranty Period at no charge to the original owner or to refund the actual purchase price paid. Any repair or replacement will be rendered by D-Link at an Authorized D-Link Service Office. The replacement hardware need not be new or have an identical make, model or part. D-Link may, at its option, replace the defective Hardware or any part thereof with any reconditioned product that D-Link reasonably determines is substantially equivalent (or superior) in all material respects to the defective Hardware. Repaired or replacement hardware will be warranted for the remainder of the original Warranty Period or ninety (90) days, whichever is longer, and is subject to the same limitations and exclusions. If a material defect is incapable of correction, or if D-Link determines that it is not practical to repair or replace the defective Hardware, the actual price paid by the original purchaser for the defective Hardware will be refunded by D-Link upon return to D-Link of the defective Hardware. All Hardware or part thereof that is replaced by D-Link, or for which the purchase price is refunded, shall become the property of D-Link upon replacement or refund.

### Limited Software Warranty:

D-Link warrants that the software portion of the product ("Software") will substantially conform to D-Link's then current functional specifications for the Software, as set forth in the applicable documentation, from the date of original retail purchase of the Software for a period of ninety (90) days ("Software Warranty Period"), provided that the Software is properly installed on approved hardware and operated as contemplated in its documentation. D-Link further warrants that, during the Software Warranty Period, the magnetic media on which D-Link delivers the Software will be free of physical defects. The customer's sole and exclusive remedy and the entire liability of D-Link and its suppliers under this Limited Warranty will be, at D-Link's option, to replace the non-conforming Software (or defective media) with software that substantially conforms to D-Link's functional specifications for the Software or to refund the portion of the actual purchase price paid that is attributable to the Software. Except as otherwise agreed by DLink in writing, the replacement Software is provided only to the original licensee, and is subject to the terms and conditions of the license granted by D-Link for the Software. Replacement Software will be warranted for the remainder of the original Warranty Period and is subject to the same limitations and exclusions. If a material non-conformance is incapable of correction, or if D-Link determines in its sole discretion that it is not practical to replace the non-conforming Software (and all copies the original licensee for the non-conforming Software will be refunded by D-Link; provided that the non-conforming Software (and all copies thereof) is first returned to D-Link. The license granted respecting any Software for which a refund is given automatically terminates.

#### Non-Applicability of Warranty:

The Limited Warranty provided hereunder for Hardware and Software portions of D-Link's products will not be applied to and does not cover any refurbished product and any product purchased through the inventory clearance or liquidation sale or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product and in that case, the product is being sold "As-Is" without any warranty whatsoever including, without limitation, the Limited Warranty as described herein, notwithstanding anything stated herein to the contrary.

#### Submitting A Claim:

The customer shall return the product to the original purchase point based on its return policy. In case the return policy period has expired and the product is within warranty, the customer shall submit a claim to D-Link as outlined below:

- The customer must submit with the product as part of the claim a written description of the Hardware defect or Software nonconformance in sufficient detail to allow DLink to confirm the same, along with proof of purchase of the product (such as a copy of the dated purchase invoice for the product) if the product is not registered.
- The customer must obtain a Case ID Number from D-Link Technical Support at 1-877-453-5465, who will attempt to assist the customer in resolving any suspected defects with the product. If the product is considered defective, the customer must obtain a Return Material Authorization ("RMA") number by completing the RMA form and entering the assigned Case ID Number at https://rma.dlink.com/.

- After an RMA number is issued, the defective product must be packaged securely in the original or other suitable shipping
  package to ensure that it will not be damaged in transit, and the RMA number must be prominently marked on the outside
  of the package. Do not include any manuals or accessories in the shipping package. DLink will only replace the defective
  portion of the product and will not ship back any accessories.
- The customer is responsible for all in-bound shipping charges to D-Link. No Cash on Delivery ("COD") is allowed. Products sent COD will either be rejected by D-Link or become the property of D-Link. Products shall be fully insured by the customer and shipped to D-Link Systems, Inc., 17595 Mt. Herrmann, Fountain Valley, CA 92708. D-Link will not be held responsible for any packages that are lost in transit to D-Link. The repaired or replaced packages will be shipped to the customer via UPS Ground or any common carrier selected by D-Link. Return shipping charges shall be prepaid by D-Link if you use an address in the United States, otherwise we will ship the product to you freight collect. Expedited shipping is available upon request and provided shipping charges are prepaid by the customer. D-Link may reject or return any product that is not packaged and shipped in strict compliance with the foregoing requirements, or for which an RMA number is not visible from the outside of the package. The product owner agrees to pay D-Link's reasonable handling and return shipping charges for any product that is not packaged and shipped in accordance with the foregoing requirements, or that is determined by D-Link not to be defective or non-conforming.

#### What Is Not Covered:

The Limited Warranty provided herein by D-Link does not cover:

Products that, in D-Link's judgment, have been subjected to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, repair or service in any way that is not contemplated in the documentation for the product, or if the model or serial number has been altered, tampered with, defaced or removed; Initial installation, installation and removal of the product for repair, and shipping costs; Operational adjustments covered in the operating manual for the product, and normal maintenance; Damage that occurs in shipment, due to act of God, failures due to power surge, and cosmetic damage; Any hardware, software, firmware or other products or services provided by anyone other than D-Link; and Products that have been purchased from inventory clearance or liquidation sales or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product.

While necessary maintenance or repairs on your Product can be performed by any company, we recommend that you use only an Authorized D-Link Service Office. Improper or incorrectly performed maintenance or repair voids this Limited Warranty.

#### **Disclaimer of Other Warranties:**

EXCEPT FOR THE LIMITED WARRANTY SPECIFIED HEREIN, THE PRODUCT IS PROVIDED "AS-IS" WITHOUT ANY WARRANTY OF ANY KIND WHATSOEVER INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT.

IF ANY IMPLIED WARRANTY CANNOT BE DISCLAIMED IN ANY TERRITORY WHERE A PRODUCT IS SOLD, THE DURATION OF SUCH IMPLIED WARRANTY SHALL BE LIMITED TO THE DURATION OF THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE. EXCEPT AS EXPRESSLY COVERED UNDER THE LIMITED WARRANTY PROVIDED HEREIN, THE ENTIRE RISK AS TO THE QUALITY, SELECTION AND PERFORMANCE OF THE PRODUCT IS WITH THE PURCHASER OF THE PRODUCT.

#### Limitation of Liability:

TO THE MAXIMUM EXTENT PERMITTED BY LAW, D-LINK IS NOT LIABLE UNDER ANY CONTRACT, NEGLIGENCE, STRICT LIABILITY OR OTHER LEGAL OR EQUITABLE THEORY FOR ANY LOSS OF USE OF THE PRODUCT, INCONVENIENCE OR DAMAGES OF ANY CHARACTER, WHETHER DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF GOODWILL, LOSS OF REVENUE OR PROFIT, WORK STOPPAGE, COMPUTER FAILURE OR MALFUNCTION, FAILURE OF OTHER EQUIPMENT OR COMPUTER PROGRAMS TO WHICH D-LINK'S PRODUCT IS CONNECTED WITH, LOSS OF INFORMATION OR DATA CONTAINED IN, STORED ON, OR INTEGRATED WITH ANY PRODUCT RETURNED TO D-LINK FOR WARRANTY SERVICE) RESULTING FROM THE USE OF THE PRODUCT, RELATING TO WARRANTY SERVICE, OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY, EVEN IF D-LINK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE SOLE REMEDY FOR A BREACH OF THE FOREGOING LIMITED WARRANTY IS REPAIR, REPLACEMENT OR REFUND OF THE DEFECTIVE OR NONCONFORMING PRODUCT. THE MAXIMUM LIABILITY OF D-LINK UNDER THIS WARRANTY IS LIMITED TO THE PURCHASE PRICE OF THE PRODUCT COVERED BY THE WARRANTY. THE FOREGOING EXPRESS WRITTEN WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ANY OTHER WARRANTIES OR REMEDIES, EXPRESS, IMPLIED OR STATUTORY.

#### **Governing Law:**

This Limited Warranty shall be governed by the laws of the State of California. Some states do not allow exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the foregoing limitations and exclusions may not apply. This Limited Warranty provides specific legal rights and you may also have other rights which vary from state to state.

#### **Trademarks:**

D-Link is a registered trademark of D-Link Systems, Inc. Other trademarks or registered trademarks are the property of their respective owners.

#### **Copyright Statement:**

No part of this publication or documentation accompanying this product may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from D-Link Corporation/D-Link Systems, Inc., as stipulated by the United States Copyright Act of 1976 and any amendments thereto. Contents are subject to change without prior notice.

Copyright ©2009 by D-Link Corporation/D-Link Systems, Inc. All rights reserved.

#### **CE Mark Warning:**

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

#### **Federal Communication Commission Interference Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### **FCC Caution:**

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

#### **IMPORTANT NOTE:**

#### FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

IEEE 802.11b or 802.11g operation of this product in the U.S.A. is firmware-limited to channels 1 through 11.

#### **Industry Canada Statement**

Operation is subject to the following two conditions:

1) this device may not cause interference and

2) this device must accept any interference, including interference that may cause undesired operation of the device

This device has been designed to operate with an antenna having a maximum gain of 2dBi. Antenna having a higher gain is strictly prohibited per regulations of Industry Canada. The required antenna impedance is 50 ohms.

To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the EIRP is not more than required for successful communication.

# Registration



Product registration is entirely voluntary and failure to complete or return this form will not diminish your warranty rights.