

## Quick Installation Guide

AC1200 Mini Dual Band Wireless Router


Model No.: A3

V1.1701

Copyrights © TOTOLINK All rights reserved. Website: <http://www.totolink.net>  
Information in this document is subject to change without prior notice.

# 1 Hardware Installation

If you access Internet by ADSL, please comply with step 1, 2, 3 and 4 in below diagram in correct order; if you access Internet by residential broadband, please comply with step 2, 3 and 4 to connect the WAN port of your router with the residential broadband directly.

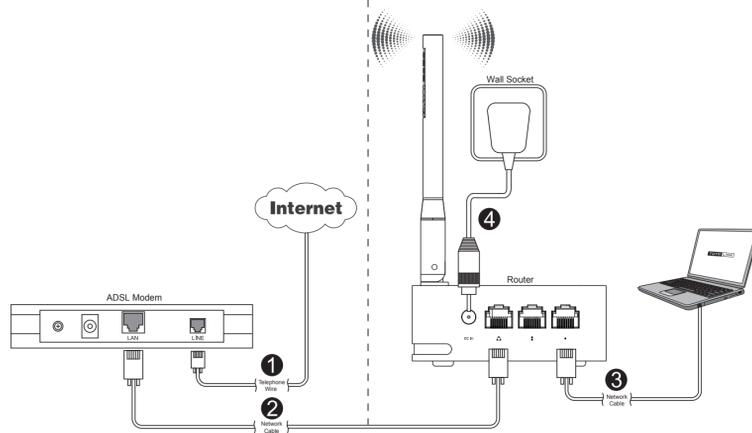

### LED Indicators

POWER	Light on when router is power on.
CPU	Light is on when systems is working.
WiFi	The indicator light is on when Wi-Fi is enabled.
WAN	Light on when WAN port connected successfully.
1/2LAN	Light on when the LAN port successful connected.
1/2LAN	Light blinking while transmitting or receiving data.

### Ports and Buttons Description

DC IN	Used for connecting the power adapter.
1/2LAN	Used for connecting the router to local PC.
WAN	Used for connecting the router to the Internet.
WPS	Press the button for about 2 seconds, the WPS function enabled.
RST	Use a pin to press and hold the RST button until all LEDs turn off, the router will restore to factory default settings.


### NOTE:

1. Please disconnect the power adapter and all cables during thunderstorm weather;
2. Keep away from heat source and keep well ventilated;
3. Please pay attention to the waterproofing and moisture-proof when storing, transporting and running.
4. The power adapter must be original or approved by TOTOLINK.
5. Put the router in flat places.

# 2 Set Up PC


**Windows Vista/7** For Windows Vista or Windows 7 Operating System, please comply with following steps to set up.

1. Click **Start—Control Panel—Network and Internet—Network Connection**, right-click **Local Area Connection**, and choose **Properties**.
2. Double-click **Internet Protocol Version 4 (TCP/IPv4)**.
3. Choose **Obtain an IP address automatically** and **Obtain DNS server address automatically**, click **OK**, and then click **OK**.

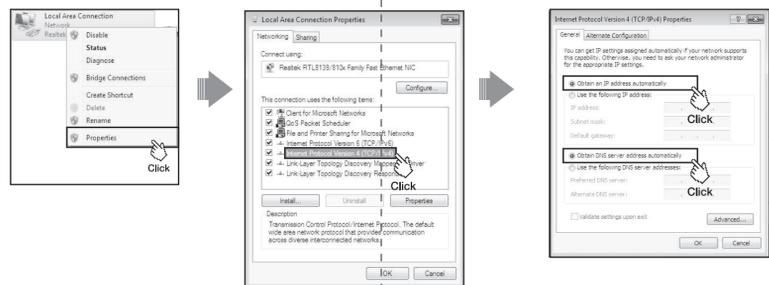

**Windows 10** For Windows 10 Operating System, please comply with following steps to set up.

1. Click **Start—All apps—Windows System—Control Panel—Network and Sharing Center—Change adapter setting**, right-click **Local Area Connection**, and choose **Properties**.
2. Double-click **Internet Protocol Version 4 (TCP/IPv4)**.
3. Choose **Obtain an IP address automatically** and **Obtain DNS server address automatically**, click **OK**, and then click **OK**.

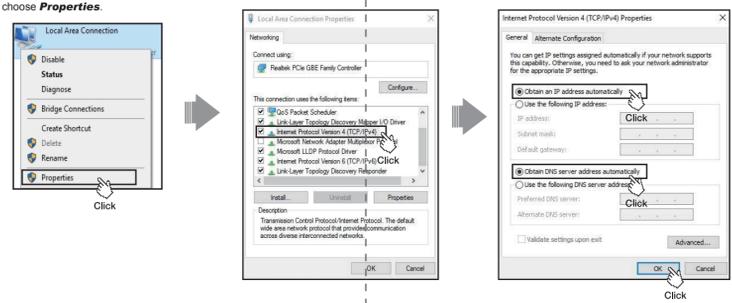

# 3 Set Up Router

Please set up the router following below steps.

1. Run the Web browser.



2. Type 192.168.0.1 in the Web Browser address bar, then press Enter key.

3. Enter correct ID, Password (both are admin in lower case) and verification code. Click LOGIN.



4. Below window shows up, first we click Internet Wizard to setup Internet information.



5. Two options provided, "Automatic Internet configuration" is recommended, click Next.




6. The router will detect whether the physical connection of internet (WAN) port is OK. Click Next.



7. Wait for a while, PPPoE is detected, type in your User ID and Password. Then click Next.




8. Click Save and Close to make settings work.

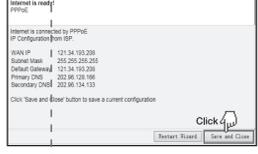


9. After Internet wizard, please click the Wireless Wizard icon to start wireless settings. Click Next.




10. Choose your country region and click Next.

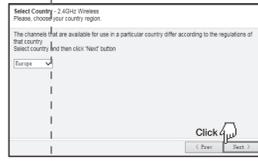

11. Click Check SSID to avoid SSID conflict, then click Next when it shows "This SSID is available."

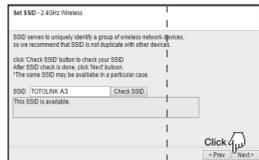

12. Choose the best channel, and click Next.

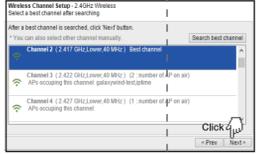

13. Click Next to go on to the settings.



14. Setup the encryption for your WiFi network, keep the default option. Click Next.



15. Select TKIP or AES cryptography, and then click Next.



16. Input the password (more than 8 characters).



17. Click "Apply and Set 5GHz Wireless Network" button to confirm the settings.



18. 5GHz wireless network wizard is similar with the settings of 2.4GHz, please refer to the process of 2.4GHz wireless settings.



# 4 FAQ

1. How to reset the router to default settings?

1. Please make sure your router's power is on regularly, then use a pin to press the RST button for about 5-8s.

2. Forget the password?

Please reset your router to default settings firstly, and set a new password.  
The default IP: **192.168.0.1**  
The default ID: **admin**  
The default Password: **admin**

### FCC warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.  
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
-- Reorient or relocate the receiving antenna.  
-- Increase the separation between the equipment and receiver.  
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
-- Consult the dealer or an experienced radio/TV technician for help.

### RF Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.  
This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.  
This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.