### Touchstone<sup>®</sup> DG860P2 Data Gateway User's Guide



Get ready to experience the Internet's express lane! Whether you're checking out streaming media, downloading new software, or checking your email, the Touchstone DG860P2 Data Gateway brings it all to you faster and more reliably with both wired and wireless connectivity.

The Touchstone Data Gateway provides four Ethernet connections for use as the hub of your home/office Local Area Network (LAN). The Touchstone Data Gateway also provides 802.11b/g/n wireless connectivity for enhanced mobility and versa-tility.

Installation is simple and your cable company will provide assistance to you for any special requirements. The links below provide more detailed instructions.

Safety Requirements

**Getting Started** 

Installing and Connecting Your Data Gateway

**Configuring Your Ethernet Connection** 

Using the Data Gateway

<u>Troubleshooting</u>

<u>Glossary</u>

### **Export Regulations**

This product may not be exported outside the U.S. and Canada without U.S. Department of Commerce, Bureau of Export Administration authorization. Any export or re-export by the purchaser, directly or indirectly, in contravention of U.S. Export Administration Regulation is prohibited.

Copyright © 2012 ARRIS. All rights reserved.

The information in this document is subject to change without notice. The statements, configurations, technical data, and recommendations in this document are believed to be accurate and reliable, but are presented without express or implied warranty. Users must take full responsibility for their applications of any products specified in this document. The information in this document is proprietary to ARRIS.

ARRIS, Touchstone, and the ARRIS logo are trademarks or registered trademarks of ARRIS Group. All other trademarks and registered trademarks are the property of their respective holders.

Protected under one or more of the following U.S. patents: 7,031,435; 7,100,011. Other patents pending.

ARSVD01480 Release 8 Draft 1.1 June 2012

Safety	Getting Started	Installation	Ethernet Configuration	Usage	Troubleshooting	Glossary

### **Safety Requirements**

ARRIS Data Gateways comply with the applicable requirements for performance, construction, labeling, and information when used as outlined below:



### CAUTION

**Risk of shock** 

Mains voltages inside this unit. No user serviceable parts inside. Refer service to qualified personnel only!

- Do not use product near water (i.e. wet basement, bathtub, sink or near a swimming pool, etc.), to avoid risk of electrocution.
- Do not use spray cleaners or aerosols on the gateway.
- The product shall be cleaned using only a damp, lint-free, cloth. No solvents or cleaning agents shall be used.
- Avoid using and/or connecting the equipment during an electrical storm, to avoid risk of electrocution.
- Do not locate the equipment within 6 feet (1.9 m) of a flame or ignition source (i.e. heat registers, space heaters, fireplaces, etc.).
- Use only power supply and power cord included with the equipment.
- Equipment should be installed near the power outlet and should be easily accessible.
- The shield of the coaxial cable must be connected to earth (grounded) at the entrance to the building in accordance with applicable national electrical installation codes. In the U.S., this is required by NFPA 70 (National Electrical Code) Article 820. In the European Union and in certain other countries, CATV installation equipotential bonding requirements are specified in IEC 60728-11, *Cable networks for television signals, sound signals and interactive services*, Part 11: Safety. This equipment is intended to be installed in accordance with the requirements of IEC 60728-11 for safe operation.

Safety	Getting Started	Installation	Ethernet Configuration	Usage	Troubleshooting	Glossary
			network, as is f	ound in many nstallation is in	alled in an area serviced l areas of Norway, special accordance with IEC 607	attention should be
			to lightning st	rikes, addition	or poor grounding situatio al surge protection may ver Conversion) on the AG	be required (i.e.
			cables, the com AC ground netw	puter must be ork. All plug-in	nected to a local compute properly grounded to the cards within the compute computer frame per the m	building/residence er must be properly
					ition the Data Gateway so noles on the unit are not b	
				nay be damage	way on surfaces that are d by the heat generated pries.	

Safety	Getting Started	Installation	Ethernet Configuration	Usage	Troubleshooting	Glossary

### FCC Part 15

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Warning:** Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### **RF Exposure**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 7.9 inches (20cm) between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Safety	Getting Started	Installation	Ethernet Configuration	Usage	Troubleshooting	Glossary
			Industry Cana	da Compli	ance	
			Under Industry Canad	la rogulations t	his radio transmittor may	only operate using

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

### **For Mexico**

The operation of this equipment is subject to the following two conditions: (1) This equipment or device cannot cause harmful interference and (2) this equipment or device must accept any interference, including interference that may cause some unwanted operation of the equipment.

Safety	Getting Started	Installation	Ethernet Configuration	Usage	Troubleshooting	Glossary

### **European Compliance**

This product complies with the provisions of the Electromagnetic Compatibility (EMC) Directive (89/336/EEC), the Amending Directive (92/31/EEC), the Low Voltage Directive (73/23/EEC), and the CE Marking Directive (93/68/EEC). As such, this product bears the CE marking in accordance with the above applicable Directive(s).

A copy of the Declaration of Conformity may be obtained from: ARRIS International, Inc., 3871 Lakefield Drive, Suite 300, Suwanee, GA 30024.




As indicated by this symbol, disposal of this product is governed by Directive 2002/96/EC of the European Parliament and of the Council on waste electrical and electronic equipment (WEEE). WEEE could potentially prove harmful to the environment; as such, upon disposal of the Data Gateway the Directive requires that this product must not be disposed as unsorted municipal waste, but rather collected separately and disposed of in accordance with local WEEE ordinances.



This product complies with directive 2002/95/EC of the European Parliament and of the Council of 27 January 2003 on the restriction of the use of certain hazardous substances (RoHS) in electrical and electronic equipment.

Safety	Getting Started	Installation	Ethernet Configuration	Usage	Troubleshooting	Glossary
			Getting Sta	rted		
			About Your Ne	ew Data G	ateway	
			The Touchstone DG86 features:	0P2 Data Gate	way is DOCSIS complian	t with the following
				faster than dial 2.0 cable moder	up or ISDN service; up to ns.	o eight times faster
			<ul> <li>Convenience: s</li> <li>can be used sin</li> </ul>		et and 802.11b/g/n wireles	ss connections; both
					mpliant and backward-co red data services (if offe	
			The DG860P2 provide	s:		
			• Wireless 802.1	1b/g/n connect	ivity	
			Four Ethernet	ports for connec	ctions to non-wireless dev	vices
			What's in the	Box?		
			Make sure you have th for assistance if anyth		ns before proceeding. Call	your cable company
			Data Gateway			
			Power Cord			
			Wall-Mounting	Template and I	nstructions	
			Quick Installat	ion Guide		
			Ethernet Cable			
			End User Licen	se Agreement		

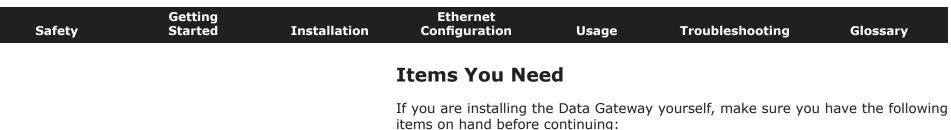


- **Data Gateway package**: see <u>What's in the Box?</u> for a list of items in the package.
- **Coaxial cable (coax)**: as shown in the image to the left, this is a round cable with a connector on each end. It is the same kind of wire used to connect to your television for cable TV. You can buy coax from any electronics retailer and many discount stores; make sure it has connectors on both ends. There are two types of connectors, slip-on and screw-on; the screw-on connectors are best for use with your Data Gateway. The coax should be long enough to reach from your Data Gateway to the nearest cable outlet.

**Note:** For best performance, use high-quality RG-6 type coax cable and minimize or eliminate splitters between the cable jack and the Data Gateway.

• **Splitter (optional)**: provides an extra cable connection by splitting a single outlet into two. You may need a splitter if you have a TV already connected to the cable outlet that you want to use. You can buy a splitter from any electronics retailer and most discount stores; you may also need a short piece of coax cable (with connectors); use it to connect the splitter to the cable outlet and then connect the Data Gateway and TV to the splitter.

**Note**: A splitter effectively cuts the signal in half and sends each half to its two outputs. Using several splitters in a line may deteriorate the quality of your television, telephone, and/or internet connection.

- **Wall-mount hardware (optional)**: if you want to wall-mount your Data Gateway, you need to obtain two drywall anchors or wood screws. See the Wall-Mount Template and Instructions for more details.
- **Information packet**: your cable company should furnish you with a packet containing information about your service and how to set it up. Read this information carefully and contact your cable company if you have any questions.

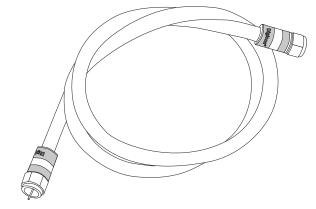

Coax Cable

Safety	Getting Started	Installation	Ethernet Configuration	Usage	Troubleshooting	Glossary
			Getting Servio	e		
			, , ,		Gateway, contact your location of the second seco	. ,
				,	nber and cable MAC add ottom of the Data Gatewa	
			<ul> <li>the model num</li> </ul>	ber of the Data	Gateway	
			If the Data Gateway required information.	was provided by	your cable company, the	ey already have the
			In addition, you shoul	d ask your cabl	e company the following o	questions:
			<ul> <li>Do you have a load after I am</li> </ul>		m requirements or files tl	hat I need to down-

- When can I start using my Data Gateway?
- Do I need a user ID or password to access the Internet or my e-mail?

Safety	Getting Started	Installation	Ethernet Configuration	Usage	Troubleshooting	Glossary
			System Requi	rements		
				for each operat	tes with most computers ing system; see the docu nfiguring networking.	
			To use the Data Gatew cable company.	vay, you need D	OCSIS high-speed Interne	et service from you
			Recommended Hard	lware		
				work with the D	s recommended. Comput OG860P2, but may not be	
			• CPU: P4, 3GHz	or faster		
			RAM: 1GB or g	reater		
			Hard drive: 72	00 RPM or faste	r	
			• Ethernet: Gig-I	E (1000BaseT)		
			Windows			
			Windows XP, Windows connection must be av		ows 7. A supported Ether	net or wireless LAN


#### MacOS

System 7.5 to MacOS 9.2 (Open Transport recommended) or MacOS X. A supported Ethernet or wireless LAN connection must be available.


#### Linux/other Unix

Hardware drivers, TCP/IP, and DHCP must be enabled in the kernel. A supported Ethernet or wireless LAN connection must be available.



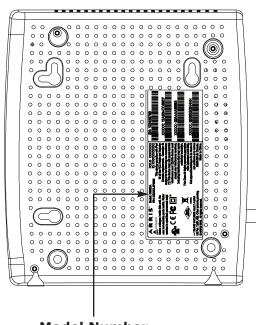

#### **Model Number**

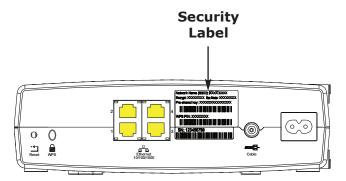


### **About this Manual**

This manual covers all of the different DG860P2 models. Your model may not have all of the capabilities outlined in this manual. To determine which model you have, check the model number. The model number is on the label affixed to the Data Gateway. See the illustration at the left.

### What About Security?

Having a high-speed, always-on connection to the Internet requires a certain amount of responsibility to other Internet users—including the need to maintain a reasonably secure system. While no system is 100% secure, you can use the following tips to enhance your system's security:

- Keep your operating system updated with the latest security patches. Run the system update utility at least weekly.
- Keep your email program updated with the latest security patches. In addition, avoid opening email containing attachments, or opening files sent through chat rooms, whenever possible.
- Install a virus checker and keep it updated.
- Avoid providing web or file-sharing services over your Data Gateway. Besides certain vulnerability problems, most cable companies prohibit running servers on consumer-level accounts and may suspend your account for violating your terms of service.
- Use the cable company's mail servers for sending email.
- Avoid using proxy software unless you are certain that it is not open for abuse by other Internet users (some are shipped open by default). Criminals can take advantage of open proxies to hide their identity when breaking into other computers or sending spam. If you have an open proxy, your cable company may suspend your account to protect the rest of the network.
- The DG860P2 ships with wireless LAN security set by default (for the same reasons that you should run only secured proxies). See the security label on your product (shown on image at the left) for the factory security settings. If you need to modify the default wireless security settings, see <u>Configuring</u> <u>Your Wireless Connection</u>.

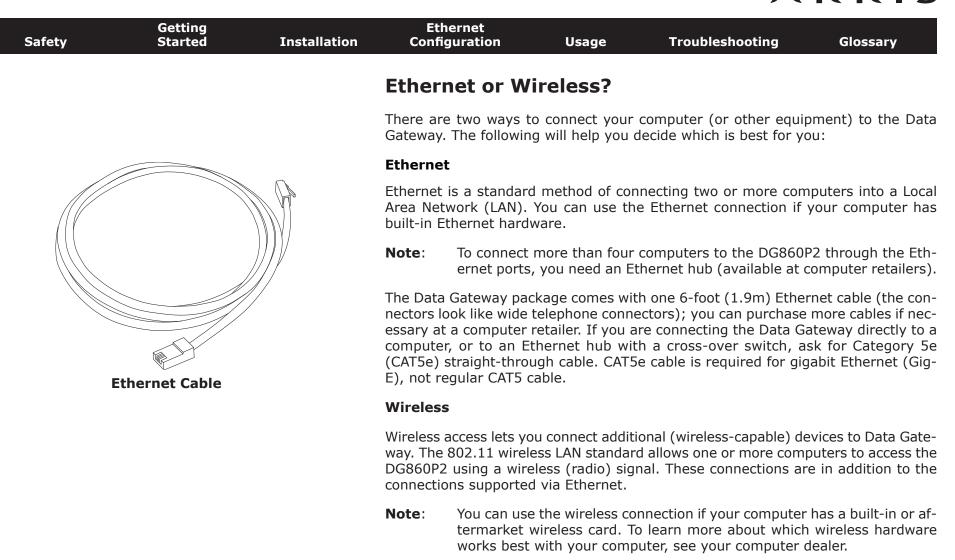


#### Both


If you have two or more computers, you can use Ethernet for up to four devices and wireless for the others. To connect five or more computers to the Ethernet ports, you will need an Ethernet hub (available at computer retailers.)

Safety	Getting Started	Installation	Ethernet Configuration	Usage	Troubleshooting	Glossary
			Installing a Gateway	and Con	necting Your	Data
			Before you start, mak	e sure that:		

- You have contacted your cable company and verified that they provide data service using standard DOCSIS technology.
- You have all the <u>items you need</u>.
- Cable and power outlets are available near the computer. If a cable outlet is not conveniently located, your cable company can install a new one.

If you have ordered service, your cable company should configure the Data Gateway automatically. You need only follow the instructions in this section to install and connect the Data Gateway.

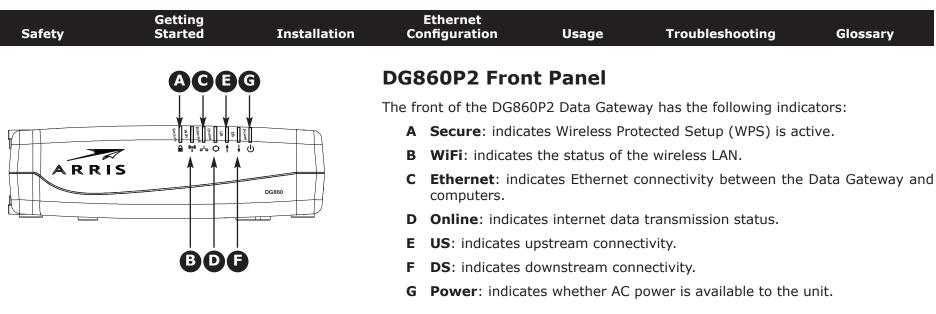

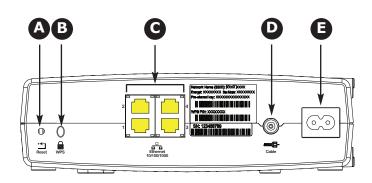

### DG860P2 Rear Panel

The DG860P2 rear panel has the following connectors and controls:

- **A Reset** button: resets the Data Gateway as if you power cycled the unit. Use a pointed non-metallic object to press this button.
- **B WPS** button: begins associating the Data Gateway with a wireless device.
- **C Ethernet (1 4)**: connectors for use with a computer LAN port.
- **D Cable**: connector for the coaxial cable.
- **E Power**: connector for the power cord.

	Installation	Configuration	Usage	Troubleshooting	Glossary
		Selecting an I	nstallatior	Location	
		There are a number o Data Gateway:	f factors to cons	sider when choosing a loc	ation to install yc
			should be close	by? For best results, the c enough to the Data Gate	
		ters between th (reduces) the s	ne jack and cable	best performance, keep t e drop to a minimum. Eacl to the Data Gateway. A lan et connection.	h splitter attenual
				to the Ethernet ports, car ay's location and those de	
		a solid surface Data Gateway screws are fas	for secure atta on drywall, pos	Gateway on a wall, does chment? For best results ition the Data Gateway so I. This may prevent the I uture.	when mounting at least one of
				Gateway on a desktop, is ts clear? Blocking the ven	
		range is typica		vices? The Data Gateway t (30m–65m). A number o d below.	

Safety	Getting Started	Installation	Ethernet Configuration	Usage	Troubleshooting	Glossary


#### **Factors Affecting Wireless Range**

A number of factors can affect the usable range for wireless connections.

Increases range:	<ul> <li>Raising the unit above the devices (for example, in- stalling the Data Gateway in the upper floor of a multi- story dwelling)</li> </ul>
Decreases range:	<ul> <li>Lowering the unit below the devices (for example, in- stalling the Data Gateway in a basement)</li> </ul>
	<ul> <li>Metal or concrete walls between the Data Gateway and other devices</li> </ul>
	<ul> <li>Large metal appliances, aquariums, or metal cabinets between the Data Gateway and other devices</li> </ul>
	<ul> <li>Interference and RF noise (2.4 GHz wireless phones, microwave ovens, or other wireless networks)</li> </ul>

**Note:** Note that decreasing the range of your wireless network may be beneficial, as long as the decreased range is sufficient for your needs. By limiting your network's range, you reduce interference with other networks and make it harder for unwanted users to find and connect to your network.

**Note:** Setting the trasmit power level to High increases the range. Setting it to Medium or Low decreases the range proportionately.

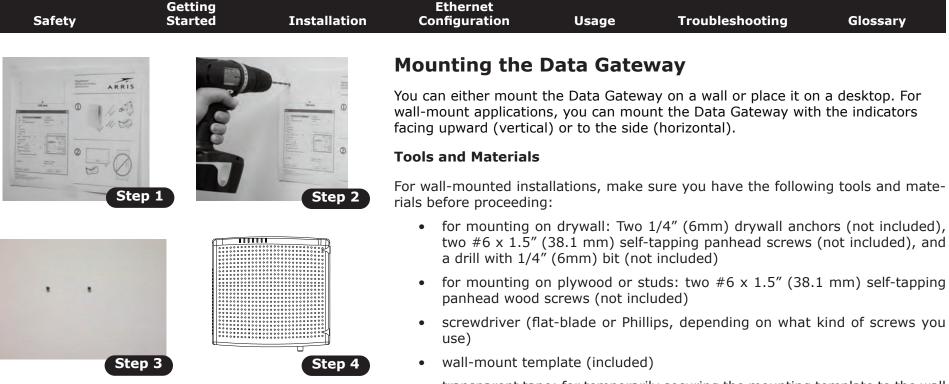

 transparent tape: for temporarily securing the mounting template to the wall (not included)

#### Location

Always position the Data Gateway:

- within reach of an AC outlet. The power cord must reach the outlet without stretching and without adding extension cords.
- near a cable outlet (to avoid long cable runs).

### Instructions

#### Wall-mounting instructions

**Note**: When mounting the Data Gateway on drywall, try to position the Data Gateway so at least one of the screws is fastened to a stud. This may prevent the Data Gateway from pulling out of the wall in the future. To prevent overheating of the Data Gateway, do not block the ventilation holes on the sides of the unit.

Safety	Getting Started	Installation	Ethernet Configuration	Usage	Troubleshooting	Glossary
					e on the surface where y in place with transparent	
					te in the specified locatio nove the template from temp	
			the wall leaving	a gap of abou	nem into the wall. Then, c it 1/8" (3 mm) between just drive the screws.	
			sired. Slip both	mounting slots de the case do	the indicator lights facing (in the back of the Data own until the narrow end	Gateway) over the
			5 Proceed to Con	necting the Dat	a Gateway.	
			Desktop mounting in	structions		
			<b>1</b> Position the Dat	a Gateway so t	that:	
			<ul> <li>air flows fre</li> </ul>	ely around it		
			the back fac	es the nearest	wall	
			<ul> <li>it will not fa</li> </ul>	ll to the floor if	bumped or moved	
			<ul> <li>the ventilati</li> </ul>	on holes on the	e side of the unit are not	blocked.
			2 Proceed to Con	necting the Dat	<u>a Gateway</u> .	

Safety	Getting Started	Installation		Ethernet nfiguration	Usage	Troubleshooting	Glossary
			Con	necting th	e Data Gat	teway	
<b>AB</b> 			1	other end to th	e Data Gatewa	cable to the cable outlet y's Cable connector ( <b>D</b> ). additional 1/8 turn with	Fighten the connec-
	Network News (\$507,5007)0000 Negy: 200000000 Set Network 200000000 Particular Interview Interv					use high-quality coax cat e cable jack and the Data	
			2			er cord into the Power cor insert the power cord in	
						of the Data Gateway ligh hown in Using the Data G	


bleshooting if the Power light does not turn on.

puter, hub, or broadband router.

in the Data Gateway package.

**3** Connect one end of the Ethernet cable to any Ethernet port on the back of the Data Gateway, (**C**) and the other end to the Ethernet port on a com-

Note: If you are connecting to a computer, use the Ethernet cable included

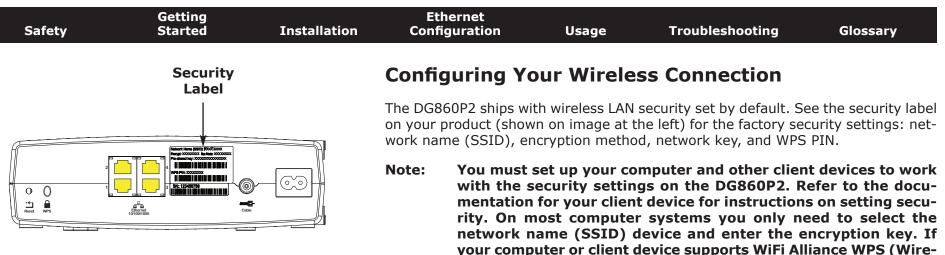

If you need to modify the Data Gateway's default wireless security settings, or if you want to configure any other wireless LAN settings, refer to the following instructions.

less Protected Setup), activate WPS on your computer or client device and the DG860P2 simultaneously to easily set up your

#### Accessing the Configuration Interface

system security.

Follow these steps to access the configuration interface. You should have already set up the DG860P2 as described in <u>Installing and Connecting Your Data Gateway</u>.

**1 a)** If security has been properly set up on your computer to access the wireless LAN on the DG860P2, use the connection utility for your operating system to connect to the wireless LAN using its network name (SSID), as shown on the security label.

**b)** If you cannot access the wireless LAN, you must first establish a wired Ethernet connection between your computer and the DG860P2.

2 In your web browser, open the page http://192.168.0.1/ to access the wireless router setup.

The Login screen displays.

**Note**: The default user name is "admin". The default password is "password", in lower case letters.

3 Enter the user name and password and click the **Apply** button to log in.

The System Basic Setup screen displays.

Safety	Getting Started	Installation	Ethernet Configuration	Usage	Troubleshooting	Glossary

- **4** Use the online help information to set configuration parameters as required.
- **Note:** Most configuration parameters that you may want to set can be accessed on the System Basic Setup screen, including the security mode and setting a system password.

### **Setting Parental Controls**

The Parental Control feature allows you to block specified keywords and web sites from being accessed and also to specify trusted computers in the network. Trusted computers are not affected by the parental control settings.

Follow these steps to set up your Parental Controls:

- **1** Access and log into the wireless configuration interface as explained in <u>Accessing the Configuration Interface</u>.
- 2 Click the **Firewall** tab and then click **Parental Controls** in the side menu to display the Parental Controls screen.
- **3** Check the **Enable Parental Controls** checkbox and click the **Apply** button.

Basic Setup WAN Setup	LAN Setup Wiretess Setup	Firewall	llites	
HIGHWALL	Parental Controls			
FIREWALL SETTINGS	To enable Parental Controls on your n	etwork, check the Enable	Parental Controls checkbox an	d then click the Apply button. Paren
VIITUAL SERVERS	Controls consist of Trustea MAC Addr			
PORTTRIODERS	The Apply button. To add a Keyword or list, first click its check box and then cl		ne respective Add button. To de	nete a Keyword or web site hom th
CLIENT IP FILTERS				
ma				
PARENTAL CONTROLS	Parental Controls			
	Emicin Panneal Commons	<b></b>		
	Trusted Mac			
	Trusted Mac Addresses		and	7
	Apply			
	Keyword Filtering			
	Keyweiid	()-ay	Tin	an f
	Add Delete			
	Web Site Filtering			
	Website	Day	Tin	10
	Add Delete			

Safety	Getting Started	Installation	Ethernet Configuration	Usage	Troubleshooting	Glossary

#### Finding the MAC Address of a Computer

Use the operating system of your computer to find its MAC address, as follows:

**Windows:** from the Start menu, find and select the **Control Panel**. Double-click **Network Connections** (Windows XP), or **Network & Sharing Center** (Windows Vista or Windows 7). Then double-click either "Wireless Network Connection" for a wireless connection, or "Local Area Connection" for an Ethernet connection. Next click the **Details** button (Windows Vista or Windows 7), or click the Support tab and then the **Details** button (Windows XP). The "Physical Address" line shows the MAC address.

**MacOS X**: open System Preferences and click the Network icon. To find the Ethernet MAC address, select **Built-in Ethernet** from the Show drop-down, then click the Ethernet tab. The "Ethernet ID" field shows the MAC address. To find the wireless MAC address, select **Air-port** from the Show drop-down, then click the Airport tab. The "Airport ID" field shows the MAC address.

**Linux**: open a shell window and type **/sbin/ifconfig** (and press Enter). The wireless interface is eth1 (unless there is no Ethernet adapter, in which case the interface is eth0).

**4** Configure any or all of the following parental controls:

#### **Trusted MAC Addresses:**

Enter the MAC addresses of any "trusted" computers on the network and click the **Apply** button. You can add two trusted computers. Once added, these trusted computers will not be affected by the parental control settings. For example, you may want the computers of the father and mother to be trusted, while the childrens' computers have parental controls in effect.

**Note:** Refer to the "Finding the MAC Address of a Computer" sidebar for information on determining the MAC address of your computer.

#### Keyword and Web Site Filtering:

You can add a list of keywords and web sites that you want to block. To add a keyword or web site to the list, click the respective **Add** button. To delete a keyword or web site from the list, first click its check box and then click the **Delete** button.

Ado	d Keyword Filter	Add	Web Site Filter
AddKeywordFilter	*	AddWebSiteFilter	*
Keyword	3	Web Site	3
Day	Sun 👻 until Sun 💌 🤋	Day	Sun 👻 until Sun 😴
Time	□ ALL DAY 00:00 ₩ until 00:00 ₩ 2	Time	ALLDAY
	Cancel AddKeywordFilter		Cancel AddWebSiteFilter

#### Adding a Keyword or Web Site Filter

- a) Enter the keyword in the Keyword field or web site URL address in the Web Site field.
- **b)** Set the start day and end day for the blocked access. (Sun until Sun indicates all week, or just click the All Week checkbox.)
- c) Set the start time and end time during the specified days (24-hour clock). (0:00 until 0:00 indicates all day, or just click the All Day checkbox.)
- d) Click the Add Keyword Filter or Add Web Site Filter button respectively. Then click the Apply button.

Safety	Getting Started	Installation	Ethernet Configuration	Usage	Troubleshooting	Glossary

### **Configuring Your Ethernet Connection**

If your computer is equipped with a LAN card providing an Ethernet connection, you may have to configure your computer's TCP/IP settings. The steps that follow will guide you through setting your computer's TCP/IP settings to work with the Data Gateway.

### Requirements

Make sure you have the following before attempting to configure your Ethernet connection:

- Computer with Ethernet interface
- Ethernet cable (supplied)
- IP address, subnet, gateway, and DNS information for installations not using DHCP

### How to use this chapter

The following list shows the procedures for modifying the TCP/IP settings on the computer. The procedure is slightly different depending on the operating system that you are using. Please ensure you are using the correct steps for the operating system on your computer. Follow the links below for instructions to configure your Ethernet connection on your operating system.

- TCP/IP Configuration for Windows XP
- TCP/IP Configuration for Windows 7
- <u>TCP/IP Configuration for MacOS X</u>
- **Note:** For Windows Vista, use the Windows 7 procedure. They are very similar.

Safety	Getting Started	Installation		hernet iguration	Usage	Troublesho	oting	Glossary
			TCP/	IP Configura	ation for W	lindows	s XP	
			Follow tl system.	hese steps to conf	gure the Ethern	et interface	e on a Windo	ows XP operating
			TCP/IP	provider require Windows XP sys XP for installation	or enabled by es TCP/IPv6 you stem. Refer to I on instructions.	default in must first Microsoft su Once insta	Windows XI install and e upport mate alled and ena	P/IPv4. TCP/IPv6 P. If your cable enable it on your rials on Windows abled, follow this the appropriate
			Note:	Dialog boxes sł shown in this pr		omputer m	ay differ slig	ghtly from those
				rom the computer, lick <b>Network Con</b>	select Start >			anel and double-
				he Network Conne ociated network a		splays a lis	t of LAN con	nections and as-
				> Network Connections File Edit View Favorites	Tools Advanced Help	105-16-1	KA	
				C Back • D J Address S Network Connection	Course Press	19 3 1	(4) ⊞+	💌 🄁 Go
				Name LAN or High-Speed Interne	Туре	Status	Device Name	*
				<sup>(6)(2)</sup> Wireless Network Connection Local Area Connection 4 Local Area Connection 2 Local Area Connection 2 ( intel(R) 82567LM Gigabit Network	2 LAN or High-Speed Intern LAN or High-Speed Intern LAN or High-Speed Intern LAN or High-Speed Intern	et Disabled et Connected	Cisco Systems VPN 4	Adapter gabit Network Connection

Safety	Getting Started	Installation	Ethernet Configuration	Usage	Troubleshooting	Glossary

**2** Double-click the local area connection to be used for your device's network connection.

The Local Area Connection Status widow displays.



- 3 Click Properties.
- **4** Select **TCP/IP** by clicking it one time. Then click **Properties**.

eneral	Authentication	Advanced	
onneci	t using:		
<b>1</b> A	RRIS TOUCHST	TONE DEVICE	
his cor	nnection uses the	e following items:	Configure
	Client for Micro:		
	QoS Packet So Internet Protoc	ol (TCP/IP)	
	QoS Packet Sc Internet Protoco ostall	cheduler	works Pjoperties
La Constantina de la Constanti	QoS Packet So Internet Protoco Install iption smission Control I area network pro	sheduler of (TCP/IP)	Properties I. The default
In Description	QoS Packet So Internet Protoco ostall iption smission Control I area network pro- ss diverse interco	cheduler ol (TCP/IP) Unimitial Protocol/Internet Protoco otocol that provides comm	Properties I. The default nunication

Safety	Getting Started	Installation	Ethernet Configuration	Usage	Troubleshooting	Glossary
			5 Click the and click		lick <b>Obtain an IP addr</b>	ess automatically
			Internet Protocol (1 General Alternate Cor You can get IP setting this capability. Utherw the appropriate IP sett	guration assigned automatically if your network supports e, you need to ask your network administrator for		

- Internet Protocol (TCP/IP) Properties
- 6 Click **OK** to accept the new settings, and **OK** again to close the Properties window.
- **7** You may have to restart your computer in order for your computer to obtain a new IP address from the network.

Safety	Getting Started	Installation	Ethernet Configuration	Usage	Troubleshooting	Glossary


### **TCP/IP Configuration for Windows 7**

Follow these steps to configure the Ethernet interface on a Windows 7 operating system.

**1** Open the Windows 7 Control Panel.




2 Click Network and Internet.

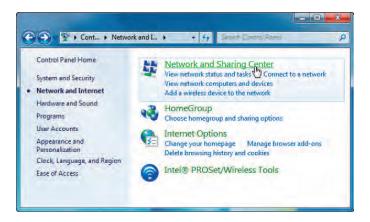


Safety	Getting Started	Installation	Ethernet Configuration	Usage	Troubleshooting	Glossary

#### 3 Click Network and Sharing Center.

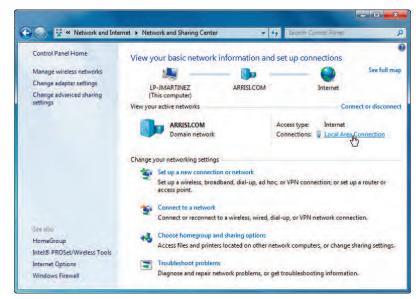


4 Click Local Area Connection to open the Status window.

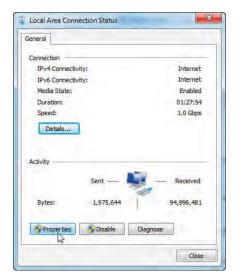

Safety	Getting Started	Installation	Ethernet Configuration	Usage	Troubleshooting	Glossary

5 Click **Properties** to open the Properties window.

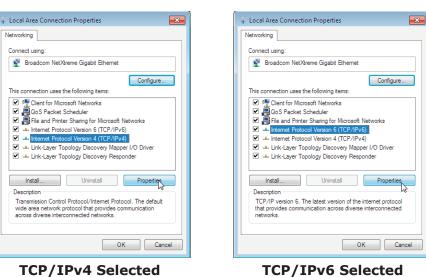

Safety	Getting Started	Installation	Ethernet Configuration	Usage	Troubleshooting	Glossary
			6 Select Interne configure TCP/2		rsion 4 (TCP/IPv4) and	click <b>Properties</b> to
					quires TCP/IP version 6, se and click <b>Properties</b> to a	
					for the version you selec	
			Internet Protocol Version 4 (TCP/IPv4) Prop	perties	Internet Protocol Version 6 (TCP/IPv6) Properties	? 💌
			General Alternate Configuration		General	
			You can get IP settings assigned automatica this capability. Otherwise, you need to ask for the appropriate IP settings.	ally if your network supports your network administrator	You can get IPv6 settings assigned automatically if your n Otherwise, you need to ask your network administrator fo	
			Obtain an IP address automatically		<ul> <li>Obtain an IPv6 address automatically</li> </ul>	
			Use the following IP address:		Use the following IPv6 address:	
			IP address:		IPv6 address:	
			Subnet mask:		Subnet prefix length:	
			Default gateway:		Default gateway:	
			<ul> <li>Obtain DNS server address automatica</li> </ul>	aliv	Obtain DNS server address automatically	
			Use the following DNS server addresse		Use the following DNS server addresses:	
			Preferred DNS server	-	Preferred DNS server:	
			Alternate DNS server		Alternate DNS server:	
			Validāte settings upon exit	Advanced	Validate settings upon exit	Advanced
			1	OK Cancel		OK
			TCP/IPv4 Pr	operties	TCP/IPv6 P	roperties

- 7 For either TCP/IPv4 or TCP/IPv6, select **Obtain an IP address automatically** and **Obtain DNS server address automatically**, unless instructed otherwise by your cable provider.
- 8 Click **OK** to accept the new settings and close the Properties window. Then click **Close** to back out of the remaining setup screens.

Safety	Getting Started	Installation	Ethernet Configuration	Usage	Troubleshooting	Glossary

### **TCP/IP Configuration for MacOS X**

Follow these steps to configure the Ethernet interface on a MacOS X operating system.

**1** Open System Preferences, either by choosing System Preferences from the Apple menu or by clicking the System Preferences icon in the dock.



Safety	Getting Started	Installation	Ethernet Configuration	Usage	Troubleshooting	Glossary

#### 2 Click the Network icon.



Safety	Getting Started	Installation	Ethernet Configuration	Usage	Troubleshooting	Glossary
			3 Choose Auton ernet from the		ocation drop-down menu	, and <b>Built-in Eth-</b>
			Show All	tion: Automatic		
			and the second	PPPoE AppleTalk Proxies	Ethernet	

Subnet Mask:

Search Domains:

IPv6 Address:

Router: DNS Servers:

- Configure IPv6....
- **4** Choose the TCP/IP tab, if necessary.

If you are using **TCP/IPv4**, go to **step 5**. If your cable provider requires **TCP/IPv6**, go to **step 8**.

DHCP Client ID:

(If required)

(Optional)

(Optional)

- **5** Choose **Using DHCP** from the Configure IPv4 menu.
- 6 If necessary, click the **Renew DHCP Lease** button.
- **7** Close the System Properties application.

TCP/IPv4 configuration is completed.

Safety	Getting Started	Installation	Ethernet Configuration	Usage	Troubleshooting	Glossary
			8 If you are using vious window.	Network Automatically	Cancel (Optional)	e bottom of the pre

Search Domains:

ΟК.

IPv6 Address:

Click the lock to prevent further changes.

**10** Close the System Properties application.

Configure IPv6...

(Optional)

Apply Now

Assist me...

**9** Choose **Automatically** from the Configure IPv6 drop-down menu and click

?

Safety	Getting Started	Installation	Ethernet Configuration	Usage	Troubleshooting	Glossary		
	Using the Data Gateway							
			This chapter describes the controls and features available on the Touchstone Da					

Gateway, and covers basic troubleshooting procedures.

- <u>Setting up Your Computer to Use the Data Gateway</u>
- Indicator Lights for the DG860P2
- Using the Reset Button

### Setting up Your Computer to Use the Data Gateway

Follow the instructions in the information packet supplied by your cable company. Contact your cable company if you need help setting up your computer.

afety	Getting Started	Installation	Ethernet Configuration	Usage	Troubleshooting	Glossary		
			Indicator Lig	hts for the DO	5860P2			
			The Touchstone Data Gateway has nine LED indicator lights to assist in shooting.					
Power -	DG860		Patterns: Normal ( The following table s normal operation.		for the Ethernet and v	vireless LANs dur		
			Mode	Ethernet	WiFi			
				<b>On</b> = Computer Connected	<b>On</b> = WiFi Enabled			
			AC Power	Off = Computer not connected	Off = WiFi Disabled			
2601				Flash = Com- puter Activity	Flash = Computer Activity			
	<u>v</u>		No AC Power	Off	Off			
			Firmware Upgrade	(normal operation)	(normal operation)			
	<ul><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li></ul>							

	Safety	Getting Started	Installation	Ethernet Configuration	Usage	Troubleshooting	Glossary
--	--------	--------------------	--------------	---------------------------	-------	-----------------	----------

#### Patterns: Normal Operation (WAN)

The following table shows light patterns during normal operation.

Mode	Power	DS	US	Online
AC Power Good	On	Yellow <sup>1</sup> = Connected to the Internet (high speed) Green <sup>1</sup> = Connected to the Internet (ultra-high speed) Flash = Not connected to the Internet	Yellow <sup>1</sup> = Connected to the Internet (high speed) Green <sup>1</sup> = Connected to the Internet (ultra-high speed) Flash = Not connected to the Internet	<b>On</b> = Internet available Off = Internet not available
No AC Power	Off	Off	Off	Off
Firmware Upgrade	On	Flash	Flash	On

**Note 1**: Your cable company may configure the Data Gateway to always display the **DS** and **US** indicators in green regardless of the connection speed or swap the meaning (speed indication) of yellow and green.

Safety	Getting Started	Installation	Ethernet Configuration	Usage	Troubleshooting	Glossary

#### **Patterns: Startup Sequence**

The following tables show the Data Gateway light patterns during the startup sequence.

DS	US	Online	Description
Flash	Off	Off	Downstream search
On	Flash	Off	Downstream found; upstream search
On	On		Downstream and Upstream found; retrieving setup information from cable operator
On	On	On	Ready for service

**Note**: The **DS** and **US** indicators flash yellow during startup, and turn green if the Data Gateway establishes an ultra-high speed connection. For some cable companies these colors may be reversed.

Safety	Getting Started	Installation	Ethernet Configuration	Usage	Troubleshooting	Glossary
Reset Button			Using the Reset		the Data Gateway, to res	set the modem and
			perform initialization a	as if you power	cycled the unit. You may lems connecting to the I	need to reset the
O O Present WPS					press this button. The pho e <b>Reset</b> button is recesse	

The diagram on the left shows the location of the reset button.

### **Resetting the Router to Factory Defaults**

To reset the router to factory defaults, press and hold the **Reset** button on the back of the Data Gateway for more than fifteen seconds. This restores the wireless setup configuration and router configuration parameters to the factory defaults. You may need to do this if a misconfiguration has locked out all access.

Safety	Getting Started	Installation	Ethernet Configuration	Usage	Troubleshooting	Glossary
			Troublesho	oting		
			The Data Gateway i	s plugged in, l	out the Power light is o	ff.
			Check all powe ends?	er connections.	Is the power cord plugg	ed in firmly at b
			If you plugged switched on.	the power cor	d into a power strip, ma	ke sure the strij
			Avoid using an	outlet controlle	d by a wall switch, if pos	sible.
			Finally, check t	he fuse or circu	it breaker panel.	
			I'm not getting on t	he Internet (a	Ill connections).	
			power up you	<sup>-</sup> Data Gateway our Data Gatew	to establish a connection , especially when many vay plugged into AC powe	people are onl
			Check the fron	t panel lights:		
			• The <b>Po</b>	wer and Online	e lights should be on.	
				<b>ower</b> light blin y for assistance	ks for more than 30 minu e.	ites, call your ca
			should not be break or short one or more sp	pinched, kinkec in the cable (yo plitters between	. Connectors should be ti l, or bent sharply—any o u may have to replace the the Data Gateway and C Data Gateway directly to t	f these can cause cable). If you h CATV outlet, rem
			Proceed to the	Ethernet or wir	eless solutions (next page	e) if necessary.

Safety	Getting Started	Installation	Ethernet Configuration	Usage	Troubleshooting	Glossary		
			I'm not getting on t	he Internet. (	Ethernet)			
			If you are using	g a hub, is the ł	hub turned on?			
				net cable? Use the supplied cable for di- a cross-over cable for connection to a				
			Press the <b>Reset</b> button on the back of the Data Gateway.					
			A misconfiguration could lock out all access to the Data Gatev you think this has happened, see <u>Resetting the Router to Facto</u>					
			I'm not getting on the Internet. (Wireless)					
			Check the indicator lights (see <u>Using the Data Gateway</u> ) should be on.					
		Does your connection utility discover your wireless L/ "Broadcast SSID" you need to manually enter the name in the connection utility.						
			2,	,	o "WEP" or "disabled". If ty modes as soon as you			
					out all access to the Data see <u>Resetting the Router t</u>			
			My wireless Interne	t connection s	stops working sometim	es.		
			This is usually caused by interference — two common soun "remote" telephones and microwave ovens. If you cannot re fering product, try using a different channel or setting Prote					
			I can get on the Int	ernet, but eve	rything is slow.			
			ble servicing al	I the requests.	is very popular, that site r If other sites download qu luring peak hours may als	iickly, wait for a few		
			Other commur tions, may slov		LAN, or interference wit	h wireless connec-		

Safety	Getting Started	Installation	Ethernet Configuration	Usage	Troubleshooting	Glossary
			Glossary			
			The following is a list of	of common cabl	le and networking terms.	
				type of cable, us	sed for gigabit Ethernet (1 net cables, always look for	
			Coaxial cable (coax)	)		
					our television and Data G from any electronics reta	
			СРЕ			
				ise Equipment. typically a com	This is the equipment that puter or hub.	is plugged in to
			Cross-over			
			together. Also,	some Ethernet	nect two hubs (or a hub a hubs may have built-in c the need for a cross-over	ross-over on one
			DHCP			
			address and lo vice connecting	cation of service to the network	rotocol. An IP protocol us es (such as DNS and TFT . DHCP allows the cable co oftware for you.	P) needed by a
			DNS			
					er). An IP service that as com) with an IP address.	ssociates a dom
			Downstream			
					on from the head-end to th y refer to this as the forw	

Safety	Getting Started	Installation	Ethernet Configuration	Usage	Troubleshooting	Glossary
			DOCSIS	la Cuatara Inter	food Coordinations. The in	
				,	face Specification. The in ations equipment on an h	. ,
			ЕМТА			
			Embedded Mul with a cable me		al Adapter. An MTA devic	e that is integrated
			Ethernet			
			A standard me Network (LAN)		ing two or more compute	rs into a Local Area
			EuroDOCSIS			
			The European	version of DOCS	SIS.	
			Event			
			An information	al message use	d for monitoring network	status.
			F-connector			
			, ,	p-on and screw	coax cable. There are tw -on. Use coax with screw	<i>,</i> ,
			Firewall			
					e that prevents unauthori t. The DG860P2 provides	
			Gateway			
			The device, use other IP subne		nat connects devices on a	a given IP subnet to
			Headend			
			The "central of data equipmen	t. In larger cab	network. The headend ho le networks, a "master" h provide distributed servic	neadend often feeds
			НТТР			
			HyperText Tran	sfer Protocol.		

	Getting		Ethernet			
Safety	Started	Installation	Configuration	Usage	Troubleshooting	Glossary
			Hub			
			A box with sev	eral Ethernet connect	onnectors. Ethernet hubs ed devices.	provide a commo
			IP address			
					mputer by your cable com stems on the Internet.	ipany, used to idei
			LAN			
					k that allows computers inicate with one another.	in a single location
			LED			
			Light Emitting is passed throu		onductor diode that emite	s light when curre
			MAC address			
			cable company	uses your Data	fies any device connected a Gateway's MAC address ess is printed on a label or	to authorize acce
			Protocol			
				and formats tha s at a given lay	t determines the commu er.	nication behavior
			Proxy			
			site) and a clie burden from th proxy that keep pages instead o	ent (your brows e server. For ex os copies of pop	ids in between a server ( ser), providing a way to cample, your cable compa ular web pages; the proxy directly from the web site congestion.	relieve some of th ny may have a we can send you tho
			RF			
					ency. Some literature rea 'RF connectors."	ers to coax as "

Safety	Getting Started	Installation	Ethernet Configuration	Usage	Troubleshooting	Glossary
			RJ-45			
					ular connector, commonly ks like a wide RJ-11 (telep	
			Splitter			
			may need a sp	litter if you hav o use for your D	connectors: one input an e a TV already connected Data Gateway. You can buy liscount stores.	to the cable outlet
			SSID			
			Service Set ID uniquely identit		ng of text (up to 32 cha AN.	aracters long) that
			Switched outlet			
				mps. Avoid plug	urned on and off using a g gging your computer or D otions.	
			TCP/IP			
					Internet Protocol. The prone or more connected ne	
			TDMA			
					A method used by DOCS data with minimal interfe	
			Upstream			
					vice to the headend. Som the return path or revers	
			WEP			
			Wired Equivale a wireless LAN.		mmon standard for encry	oting data sent over
			WPA			
					dard for encrypting data s urity over WEP.	sent over a wireless

### **Touchstone**®

### DG860P2 Data Gateway User's Guide



Copyright © 2012 ARRIS. All rights reserved.

The information in this document is subject to change without notice. The statements, configurations, technical data, and recommendations in this document are believed to be accurate and reliable, but are presented without express or implied warranty. Users must take full responsibility for their applications of any products specified in this document. The information in this document is proprietary to ARRIS.

ARRIS, Touchstone, and the ARRIS logo are trademarks or registered trademarks of ARRIS Group. All other trademarks and registered trademarks are the property of their respective holders.

Protected under one or more of the following U.S. patents: 7,031,435; 7,100,011. Other patents pending.

ARSVD01480 Release 8 Draft1.1 June 2012