

User Manual - AirStation WHR-HP-G54

High-Power Wireless Cable/DSL Smart Router



Introduction	5
Basic Setup	6
AOSS Setup	12
Router Access Point Mode	14
AirStation Configuration Tool	17
Home	17
Port Mapping	18
Firewall	19
Windows (MSN) Messenger	20
Encryption	21
Wireless Channel	22
Firmware Update	23
Internet Connection Reset	24
Advanced Tab	25
WAN Configuration	26
WAN port	26
PPPoE.	27
LAN Configuration	28
LAN Port	28

DHCP Server	29
Manual Assignment of IP Address . . .	30
Network Configuration.	31
Route information	31
Address Translation	33
IP Filter	35
Intrusion Detector	38
UPnP	39
Wireless Configuration	40
AOSS.	40
802.11g	41
Basic	41
Security	42
Repeater	43
MAC access limit	44
Admin Configuration	45
Password	46

Date/NTP	47
Syslog Transfer	48
Save/Load Configuration	49
Initialize/Reboot	50
Firmware Update	51
Diagnostic	52
System Information	52
Log Info	53
Packets Info	54
Client Monitor	55
Ping Test	56
Connecting to an existing network	57
Antenna	58
Specifications	59
Troubleshooting	64
Glossary	72
FCC Information	79
Warranty Information	81
Contact Information	82

Work and play - further and faster! Eliminate dead spots and enjoy faster connections with vastly extended range from Buffalo Technology's amazing wireless solution, the **AirStation High Power Wireless Broadband SmartRouter**.

System Requirements

- A high-speed (Broadband) Internet connection or existing local area connection.
- A computer with a network connection (wired or wireless) and a good web browser. The screenshots in this manual were taken with Firefox, but Netscape and Internet Explorer are also supported in versions 4.5 or later, and Safari 1.0 and later are supported with Macintosh OS X 10.2 and later.

AirStation WHR-HP-G54 Package Contents

The AirStation WHR-HP-G54 package contains the following items:

- WHR-HP-G54 Base Station
- Antenna
- AC adapter and power cable
- CAT5 LAN cable
- Utility CD with Manual
- Quick Setup Guides
- Warranty Statement

Begin by finding a good place to set up your router/access point. Some things to consider:

- You'll need to be able to plug your internet connection into it, so it should go within reach of the LAN cable from your DSL or Cable modem. You'll also want a power outlet nearby.
- Keep the access point as central in your work area as possible. Signal strength and speed fall off with distance.
- Higher is often better. For instance, set it up on the top shelf of a bookcase rather than the bottom one, if possible.

Screw the antenna into the top of your AirStation.





Make note of the AirStation's *wired MAC address*. The LAN or Wired MAC address is the default SSID (wireless network name) of the AirStation. You can find it on the bottom of the AirStation.

You may also wish to contact your ISP to ask if other information, such as global IP address, subnet mask address, default gateway address, DNS server address, or PPPoE parameters, is necessary to access your internet connection. Write down any necessary information that your ISP requires for connection.

Buffalo recommends using a wired network connection, where your computer is physically connected to the AirStation with a CAT5 straight cable plugged into one of the four LAN ports, to initially set up your router. This type of setup will eliminate possible setup problems with the wireless adapter on the computer being used to configure the AirStation.

The computer used to configure the AirStation should be set to obtain an IP address automatically using a DHCP server. The WHR-HP-G54 has a default LAN IP address of 192.168.11.1 and Subnet Mask of 255.255.255.0.

1. Power down the Cable or DSL modem and the computer which will be used to configure the AirStation router.
2. Plug the Cable or DSL's LAN Ethernet cable into the AirStation's WAN port. Initially, you may need to unplug this cable from your computer, hub or other router.
3. Plug the provided Ethernet cable into a LAN port on the AirStation and plug the other end into your computer's Ethernet adapter (NIC). If you plan to initially configure the AirStation wirelessly (not recommended), you may skip this step.
4. Power on your cable or DSL modem and wait one full minute, then power on the AirStation router and wait one full minute, and finally power on the computer which will be used to configure the AirStation. If the red DIAG light on the AirStation is lit or flashing after several minutes of being powered on, please consult Buffalo Technology Technical Support.

Log in to the Configuration Tool



Launch a web browser on the computer that you're going to use to configure the AirStation.


Enter *192.168.11.1* into the URL field. Naturally, if you change your AirStation's IP address, you'll have to enter the new address instead.

A window will open, prompting you to enter a User ID and Password.

Enter *root* as the User name and leave the password field *blank*.

Detecting Your Broadband Connection

Your AirStation's SmartRouter technology will determine the type of internet connection you have automatically, and ask you for any needed information. If your ISP assigns IPs automatically (most cable providers do), their DHCP server will give your router an IP address. If additional login information is required to connect to the internet, the wizard will ask for it. Enter any required login information if asked. Contact your DSL provider for any missing login information. If your DSL provider requires that PPPoE information be entered manually, see page 25.

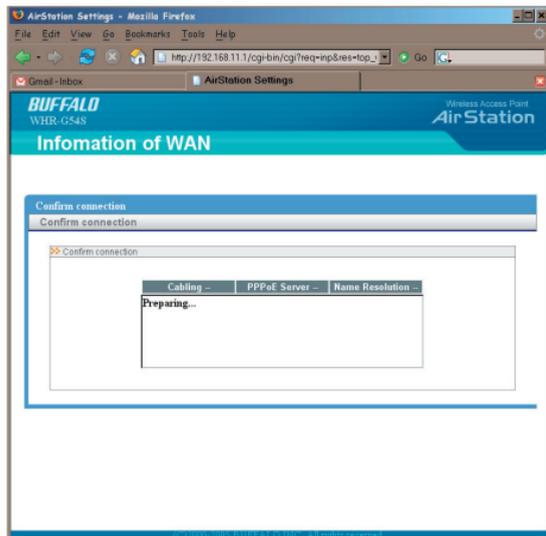



This is the opening page of your AirStation's configuration tool. You can always get to it from within the configuration screens by clicking on *Home*. From here, you can configure *port mapping* for your internet games, turn on UPnP for *Windows (MSN) Messenger*, configure your *Firewall*, setup *Encryption*, choose your *Wireless channel*, update your AirStation's firmware, and reset your Internet connection's configuration. As you explore the configuration tool, you can

usually get context sensitive help by clicking on the *Help* link at the top right of the page.

To go to Advanced Settings (page 25), click on the *Advanced* tab. To get the system information you need to set up a wireless client that doesn't support AOSS, click on the *System Info* tab. See page 17 for more on *Home*.



AOSS (AirStation One-Touch Secure System) is a simple system for configuring your wireless network securely. If your router and your client device are connected and both support AOSS, then making a secure wireless connection is very easy.

Push the AOSS button on the top of your router and hold it in for a few seconds. The AOSS light will begin to flash amber. You now have two minutes to push the AOSS button on your client device and finish the connection.

If you have a *standalone client device*, it will probably have a little red button labeled “AOSS” on it. Push the button! About 15 seconds later, you’ll have a secure network connection.

If your client device is a PC card, CardBus, or PCI adaptor, the AOSS button will probably be in its *Client Manager Software*. Check your client device’s user manual for instructions on where to push or click the AOSS button.

		
standalone client device	PC card	Client Manager Software

After you’ve pressed both buttons, it will take about 15 seconds for the connection to complete. When it’s finished, the AOSS light will glow a solid amber. You now have a secure network connection!

Some things to keep in mind

- ▶ Only one AOSS wireless client adapter can be configured with the AOSS router at a time. The buttons will need to be re-pressed to connect each additional AOSS wireless client adapter.
- ▶ It is not necessary to AOSS client devices that have already been configured via AOSS, unless significant changes have been made to the wireless network.
- ▶ Do not attempt to configure two separate AOSS networks at the same time, as it may cause undesired configurations.
- ▶ If an undesired client has connected via AOSS, it can be disconnected from within the WHR-HP-G54's advanced configuration menus.




This AirStation supports quickly changing the product from a wireless router to a conventional access point.

Put your Airstation into Access Point Mode by moving the switch on the bottom of your AirStation from AUTO to BRI. This changes the default IP address of the AirStation from 192.168.11.1 to 192.168.11.100, and DHCP, NAT, and the WAN port are disabled.

Access Point Mode might be desirable if you're adding wireless capability to an existing network with a router. It is not suitable for most home configurations. If you plan to use the AirStation as a normal wireless router, make sure that this switch is in the normal (AUTO) position!

To set up your AirStation as a bridge or repeater, turn to page 43.

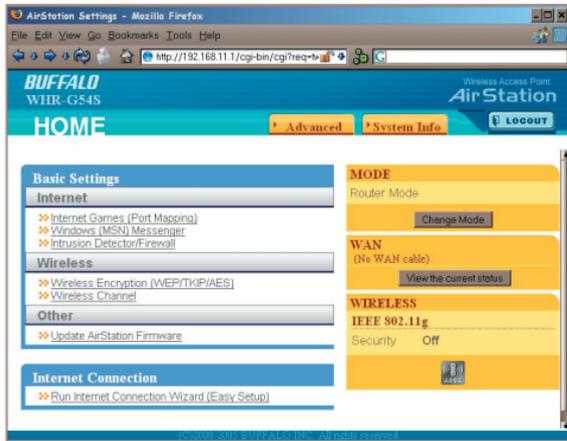

If your wireless client doesn't support AOSS, you'll have to configure it manually. From the *Home* page, click on the *System Info* tab.

The screenshot shows the Buffalo AirStation web interface. The browser title is "AirStation Settings - Mozilla Firefox" and the address bar shows "http://192.168.11.1/cgi-bin/". The page has a blue header with the Buffalo AirStation logo and "Wireless LAN Access Point". Navigation buttons include "HOME", "LOGOUT", and "WHR-G54S". A sidebar on the left contains menu items: "WAN Config", "LAN Config", "Network Config", "Wireless Config", "Admin Config", "Diagnostic", "System Info", "Log Info", "Packet Info", "Client Monitor", and "Ping Test". The main content area is titled "System Information" and contains a table of system details.


System Information	
Model	WHR-G54S Ver.1.20
AirStation Name	AP00D0B970048
Operation Mode	Router Mode
Method of Acquiring IP Address	
WAN	
Wired Link	Disconnected
IP Address	192.168.11.1
Subnet Mask	255.255.255.0
DHCP Server	Enabled
MAC Address	00:0D:0B:87:00:48
LAN	
Wireless Status	Enabled
SSID	000D0B970048
Encryption Mode	Not Configured
Wireless Channel	5Channel (Auto)
125° High Speed Mode	Enabled
MAC Address	00:0D:0B:87:00:48

At the bottom of the System Information section, there is a button labeled "Display Current Status".

This page gives you all the information you might need to configure your non-AOSS wireless client. Probably you'll just need the SSID, encryption type, and password. Consult your wireless client's documentation for more information on configuring it if necessary.


You can get here from Home by clicking the *System Info* tab.

AirStation Configuration Tool (Home)

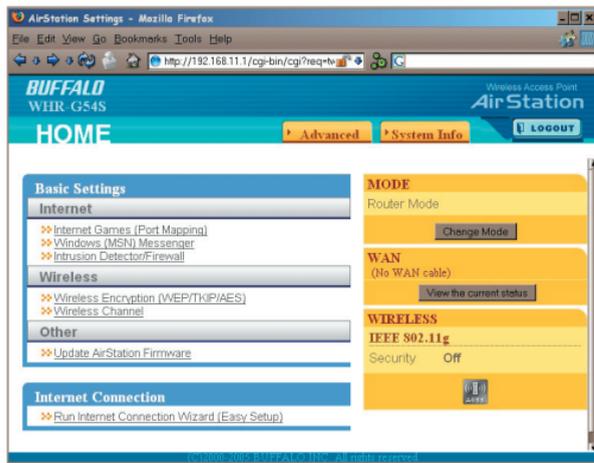


When you first open your AirStation Configuration Tool, it will take you to *Home* (see also page 11). From Home, you can configure *port mapping* for your internet games, set UPnP for *Windows (MSN) Messenger*, configure your *firewall*, setup *encryption*, choose your *wireless channel*, update your AirStation's firmware, and reset your *Internet Connection's* configuration. Clicking the *Advanced* tab gives you access to all of the AirStation's configuration tools. You can get back to Home from anywhere in the management tool by clicking on the *Home* button at the top left of the screen. Let's begin exploring advanced settings by clicking on *Internet Games (Port Mapping)*.

Internet Games (Port Mapping)

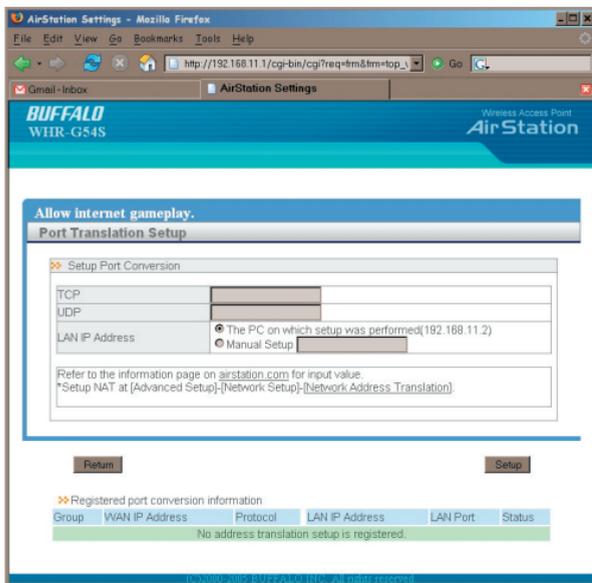


Select any ports that need to be opened for your internet games to function correctly. Consult your game's documentation for more information on what ports need to be configured.

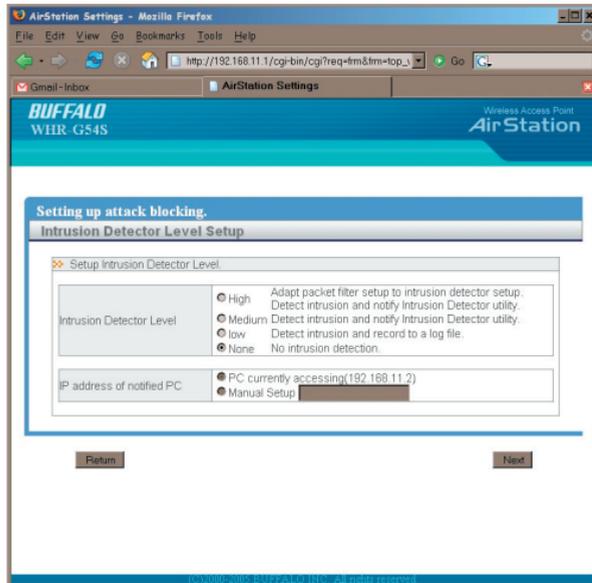

From this page, choose the level of firewall security you desire. You may also choose to have alerts sent to a different PC, if you like. Click *Next* when done to restart the router.

Get to this page from Home by clicking on *Firewall/Intrusion Detector*.

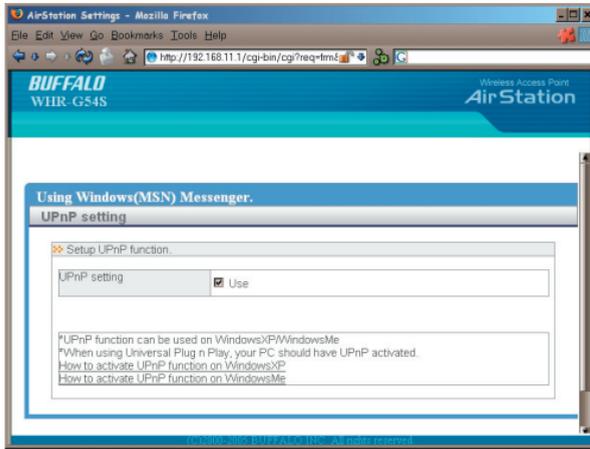

Windows (MSN) Messenger requires UPnP for proper operation. You may *Enable* UPnP here. UPnP may need to be configured on your PC as well.

If you need to configure UPnP on your PC, the links at the bottom of the page have instructions for doing so on Windows ME and XP computers.

Get to this page from Home by clicking on *Windows (MSN) Messenger*.