

Trapeze Mobility Point™

MP-Models / WSR-8001

Installation Guide

Version 3.0—Beta2 Draft

Trapeze Networks, Inc.
5753 W. Las Positas Blvd.
Pleasanton, CA 94588

Tel: ☎ 1 925-474-2200
Fax: ☎ 1 925-251-0642
Toll-Free: ☎ 877-FLY-TRPZ (877-359-8779)

www.trapezenetworks.com

© 2004 Trapeze Networks, Inc. All rights reserved.

Trademarks

Trapeze Networks, the Trapeze Networks logo, the Trapeze Networks flyer icon, Mobility System, Mobility Exchange, MX, Mobility Point, MP, Mobility System Software, MSS, RingMaster, AAA Integration and RADIUS Scaling, AIRS, FastRoaming, Granular Transmit Power Setting, GTPS, Layer 3 Path Preservation, Location Policy Rule, LPR, Mobility Domain, Mobility Profile, MultibandSweep, Passport-Free Roaming, SentrySweep, Time-of-Day Access, TDA, TAPA,

Part Number 730-9502-0042, Revision B

Trapeze Access Point Access Protocol, Virtual Private Groups, VPGs and Virtual Site Survey are trademarks of Trapeze Networks, Inc. Trapeze Networks SafetyNet is a service mark of Trapeze Networks, Inc. All other products and services are trademarks, registered trademarks, service marks or registered service marks of their respective owners.

Disclaimer

All statements, specifications, recommendations, and technical information are current or planned as of the date of the publication of this document. They are reliable as of the time of this writing and are presented without warranty of any kind, expressed or implied. In an effort to continuously improve the product and add features, Trapeze Networks reserves the right to change any specifications contained in this document without prior notice of any kind.

Comments and Feedback

Your feedback on Trapeze documentation is important to us. Send any comments and suggestions to doc-bugs@trapezenetworks.com.

For the most current version of this document, see www.trapezenetworks.com.



Customer Service

For general information about Trapeze Networks Mobility System™ products and services, visit www.trapezenetworks.com. For warranty, license, and support information, visit the following sites:

- 1 **Warranty and software licenses.** Current Trapeze Networks warranty and software licenses are available at www.trapezenetworks.com/services/warranty.asp.
- 1 **Support services.** For information about Trapeze support services, visit www.trapezenetworks.com/services/. Or call 1-866-877-9822 (in the US or Canada) or +1 925-474-2400 and select option 5.

Note. TRAPEZE NETWORKS SELLS AND SERVICES ITS PRODUCTS PRIMARILY THROUGH ITS AUTHORIZED RESELLERS AND DISTRIBUTORS. If you purchased your product from an authorized Trapeze reseller or distributor and do not have a service contract with Trapeze Networks, you must contact your local reseller or distributor for technical assistance.

1

Contacting the Technical Assistance Center

Contact the Trapeze Networks Technical Assistance Center (TAC) by telephone, email, or fax. If you have a service contract or are a Trapeze Authorized Partner, log in to www.trapezenetworks.com/services/sup_programs.asp for more help.

- 1 Within the US and Canada, call 1-866-TRPZTAC (1-866-877-9822).

- 1 Within Europe, call +31 35 64 78 193.
- 1 From locations outside the US and Canada, call +1 925-474-2400.
- 1 In non-emergencies, send email to support@trapezenetworks.com.
- 1 When your case is active, you can fax more information to +1 925-474-2423.

TAC Response Time

TAC responds to service requests as follows:

Contact method	Priority	Time of call	Probable response time
Telephone	Emergency	Monday through Friday, 8 a.m. to 6 p.m. Pacific Time (GMT-8)	Immediate
	Emergency	After hours	1-hour callback
	Non-emergency	Monday through Friday, 8 a.m. to 6 p.m. Pacific Time (GMT-8)	Same business day
	Non-emergency	After hours	Next business day
Email	Non-emergency	Monday through Friday, 8 a.m. to 6 p.m. Pacific Time (GMT-8)	Same business day
	Non-emergency	After hours	Next business day

Information to Have Available

To expedite your service request, have the following information available when you call or write to TAC for technical assistance:

- 1 Your company name and address
- 1 Your name, telephone number, cell phone or pager number, and email address
- 1 Name, model, and serial number of the product(s) requiring service
- 1 Software version and release number
- 1 Output of the **show tech-support** command
- 1 Wireless client information
- 1 License levels for RingMaster™ and Mobility Exchange™ (MX™) products
- 1 Description of the problem and status of the troubleshooting effort

Customer Service	iii
1	
Introducing the Trapeze Networks Mobility System	1
Trapeze Networks Mobility System	1
Documentation	2
Safety and Advisory Notices	3
Text and Syntax Conventions	4
2	
MP Overview	7
MP Model Numbers	8
External Hardware Features	9
Cable Ports	11
External Antenna Connector	12
MP Mounting Options	13
Status LEDs	14
LEDs on Models MP-341 and MP-352	14
LEDs on Model MP-52	16
Connection Options	17
3	
Installing and Connecting an MP	19
Unpacking an MP	20
Installation Requirements and Recommendations	23
RingMaster Network Plan and Work Orders	23
MX Switch Recommendation	23
Wall Installation Recommendations	24
MP Radio Safety Advisories	24
Radio Frequency Exposure	24
Additional Radio Safety Advisories	25

Cable Requirements	25
Installing an MP—Models MP-341 and MP-352	27
Installation Hardware and Tools	27
Suspended Ceiling Installation—Flush Ceiling Tiles	29
Suspended Ceiling Installation—Drop Ceiling Tiles	35
Junction Box Installation	41
Solid Wall or Ceiling Installation	45
Tabletop Installation	50
Connecting an MP to an External Antenna	53
Installing an MP—Model MP-52	54
Installation Hardware and Tools	54
Suspended Ceiling Installation	54
Solid Wall or Ceiling Installation	58
Tabletop Installation	59
Connecting an MP to an MX Switch	59
Verifying MP Health	61
A	
MP Troubleshooting	63
B	
MP Technical Specifications	67
C	
Translated Warning Conventions and Warnings	75
Index	83

Introducing the Trapeze Networks Mobility System

Trapeze Networks Mobility System

Documentation

This guide shows you how to install a Trapeze Networks™ Mobility Point™ (MP™) access point in a Trapeze Networks Mobility System™ wireless LAN (WLAN).

Read this guide if you are a network administrator or other person installing MP access points in a network.

Trapeze Networks Mobility System

The Trapeze Networks Mobility System is a system for planning and deploying a secure WLAN in an existing wired enterprise network. The Trapeze system provides authenticated connectivity to both wireless and wired users in large environments such as office buildings, hospitals, and university campuses.

Introducing the Trapeze Networks Mobility System

The Trapeze Mobility System fulfills the three fundamental requirements of an enterprise WLAN: It eliminates the distinction between wired and wireless networks, allows users to work safely from anywhere (*secure mobility*), and provides a comprehensive suite of intuitive tools for planning and managing the network before and after deployment.

The Trapeze Networks Mobility System consists of the following components:

- 1 **RingMaster tool suite**—A full-featured graphical user interface (GUI) client application for planning, configuring, and deploying a WLAN and its users; and a centralized service application for WLAN and user monitoring, reporting, and diagnostics
- 1 **One or more Mobility Exchange™ (MX™) switches**—Distributed, intelligent machines for managing user connectivity, connecting and powering Mobility Point (MP) access points, and connecting the WLAN to the wired network backbone
- 1 **Multiple Mobility Point™ (MP™) access points**—Wireless access points (APs) that transmit and receive radio frequency (RF) signals to and from wireless users and connect them to an MX switch
- 1 **Mobility System Software™ (MSS™)**—The operating system that runs all MX switches and MP access points in a WLAN, and is accessible through a command-line interface (CLI), the Web View interface, or the RingMaster GUI

Documentation

Consult the following documents to plan, install, configure, and manage a Trapeze Networks Mobility System.

Trapeze Mobility Point Installation Guide
Version 3.0

Planning, Configuration, and Deployment

Trapeze RingMaster User's Guide. Instructions for planning, configuring, deploying, and managing the entire WLAN with the RingMaster tool suite. Read this guide to learn how to plan wireless services, how to configure and deploy Trapeze equipment to provide those services, and how to optimize and manage your WLAN.

Trapeze RingMaster Reference Manual. Detailed instructions and information for all RingMaster planning, configuration, and management features.

Installation

- 1 *Trapeze Mobility Exchange Installation and Basic Configuration Guide.* Instructions and specifications for installing an MX switch in a Trapeze Mobility System WLAN, and basic instructions for deploying a secure IEEE 802.11 wireless service
- 1 *Trapeze Mobility Point Installation Guide.* Instructions and specifications for installing an MP access point and connecting it to an MX switch
- 1 *Trapeze Regulatory Information.* Important safety instructions and compliance information that you must read before installing Trapeze Networks products

Note. *Trapeze Regulatory Information* is updated frequently. See www.trapezenetworks.com for the most current version.

Configuration and Management

- 1 *Trapeze RingMaster Reference Manual.* Instructions for planning, configuring, deploying, and managing the entire WLAN with the RingMaster tool suite

- 1 [Trapeze Mobility System Software Configuration Guide](#). Instructions for configuring and managing the system through the MSS CLI
- 1 [Trapeze Mobility System Software Command Reference](#). Functional and alphabetic reference to all MSS commands supported on MX switches and MP access points

Safety and Advisory Notices

The following kinds of safety and advisory notices appear in this manual. (For translations of the warning conventions and of all warnings in this manual, see Appendix C, “Translated Warning Conventions and Warnings,” on page 75.)

Caution! This situation or condition can lead to data loss or damage to the product or other property.

Warning! This situation or condition can cause injury.

Warning! High voltage. This situation or condition can cause injury due to electric shock.

Warning! Radiation. This situation or condition can cause injury due to improper handling of fiber-optic equipment.

Note. This information is of special interest.

Text and Syntax Conventions

Trapeze manuals use the following text and syntax conventions:

Convention	Use
Monospace text	Sets off command syntax or sample commands and system responses.
Bold text	Highlights commands that you enter or items you select.
<i>Italic text</i>	Designates command variables that you replace with appropriate values, or highlights publication titles or words requiring special emphasis.
Menu Name > Command	Indicates a menu item that you select. For example, File > New indicates that you select New from the File menu.
[] (square brackets)	Enclose optional parameters in command syntax.
{ } (curly brackets)	Enclose mandatory parameters in command syntax.

| (vertical bar)

Separates mutually exclusive options in command syntax.

MP Overview

MP

External Hardware Features

Connection Options

A Trapeze Networks Mobility Point (MP) access point provides IEEE 802.11 wireless access to the network. MP access points are designed for use with a Trapeze Networks Mobility Exchange (MX) switch. MP access points require hardware installation only. All configuration for an MP access point takes place on the MX switch.

Warning! Installation must be performed by qualified service personnel only. Read and follow all warning notices and instructions marked on the product or included in the documentation. Before installing the product, read the [Trapeze Regulatory Information](#) document. (For translations of this warning, see “Qualified Service Personnel Warning” on page 77.)

MP Model Numbers

The MP access point models differ based on the number of 802.11 radios they contain. MP Access Point Model Numbers lists the MP access point model numbers.

Table 1. MP Access Point Model Numbers

Model	Radios and Antennas
MP-352	One 802.11a radio and one 802.11b/g radio. Both radios have internal diversity omnidirectional antennas. In addition, the 802.11b/g radio has a jack for attachment of an optional external sectorized or directional antenna. The antenna must be ordered separately.
MP-341	One radio that can be configured through software for 802.11a or 802.11b/g. The radio has internal diversity omnidirectional antennas. In addition, the 802.11b/g radio has a jack for attachment of an optional external sectorized or directional antenna. The antenna must be ordered separately.
MP-52/WSR-8001	One 802.11a radio and one 802.11b/g radio. Both radios have external attached dipole antennas that are adjustable and are installed at the factory.
MP-262 (discontinued— order MP-352)	One 802.11a radio and one 802.11b/g radio. The 802.11a radio has internal diversity omnidirectional antennas. The 802.11b/g radio uses an external sectorized or directional antenna, which must be ordered and installed separately.
MP-252 (discontinued— order MP-352)	One 802.11a radio and one 802.11b/g radio. Both radios have internal diversity omnidirectional antennas.

MP-241 (discontinued— order MP-341)	One radio that can be configured through software for 802.11a or 802.11b/g. The radio has internal diversity omnidirectional antennas.
MP-122 (discontinued— order MP-352)	One 802.11a radio and one 802.11b radio. Both radios have internal diversity omnidirectional antennas.
MP-101 (discontinued— order MP-341)	One radio that can be configured through software for 802.11a or 802.11b. The radio has internal diversity omnidirectional antennas.

The model number is listed on the product label, located to the right of the cable ports on the bottom of the device.

Note. The MP access point radios are disabled by default and can be enabled only by a system administrator using the MX switch.

External Hardware Features

MP and MP show the external hardware features of MP access point models MP-341 and MP-352. (The MP-1xx and MP-2xx models also have these features, except the external antenna connector is on model MP-262 only.)

Figure 1. MP Access Point Model MP-3xx—Top View


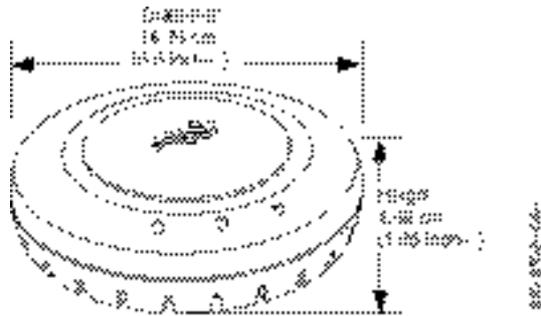


Figure 2. MP Access Point Model MP-3xx—Bottom View

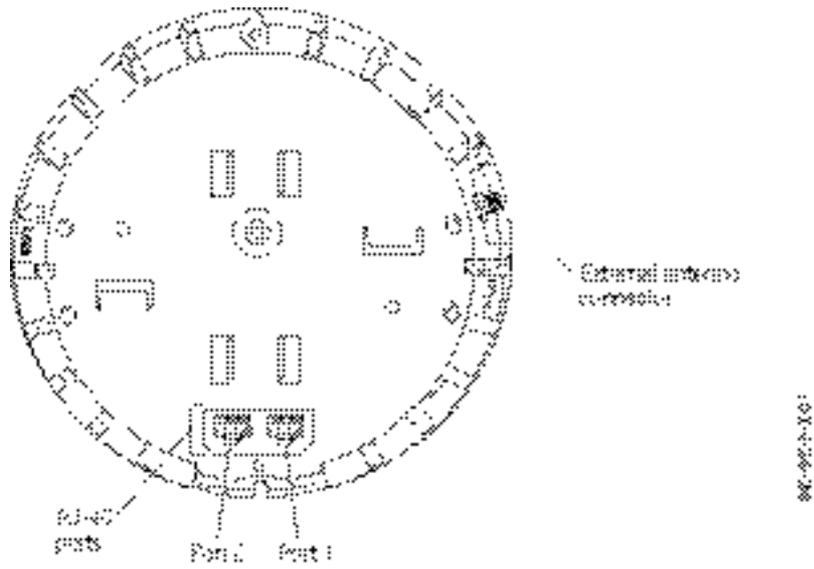

MP and MP show the external hardware features of MP access point model MP-52/WSR-8001.

Figure 3. MP Access Point Model MP-52/WSR-8001—Front View


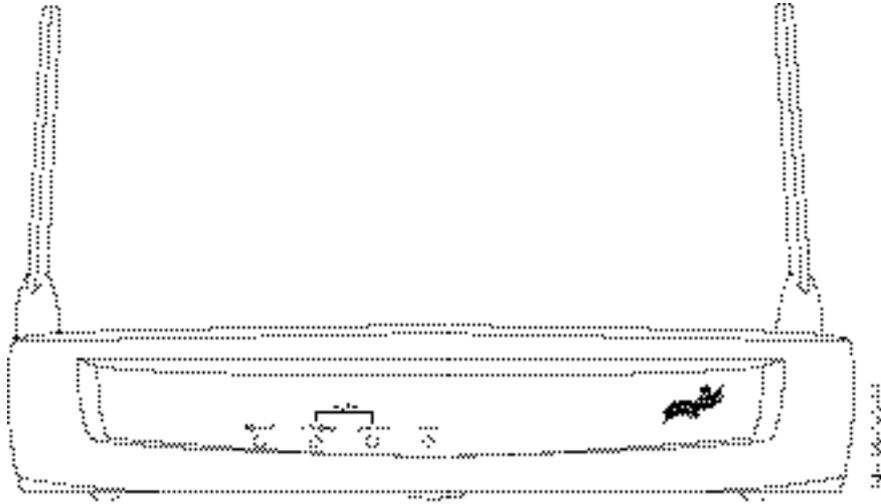


Figure 4. MP Access Point Model MP-52/WSR-8001—Rear View

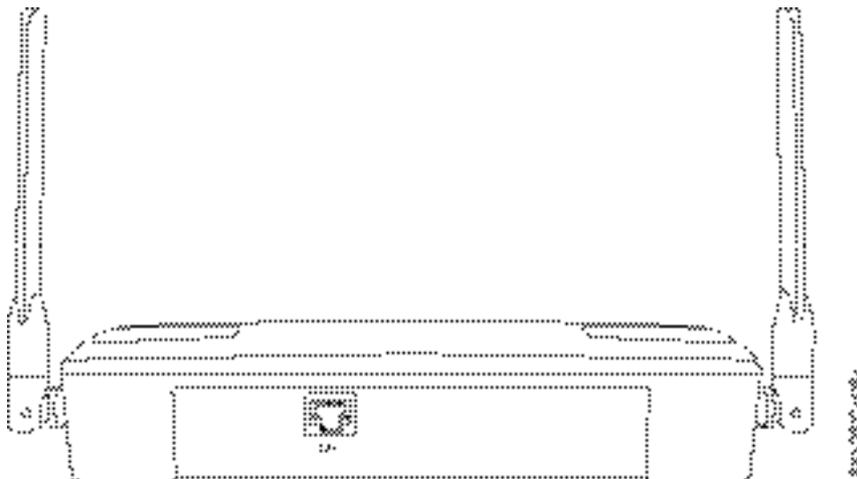

Cable Ports

All MP access point models except the MP-52/WSR-8001 have two RJ-45 ports. (See MP .) Each port provides a 10/100BASE-TX Ethernet connection to an MX switch. The connection can be direct to an MX-switch or indirect through an intermediate Layer 2 or Layer 3 network.

MP model MP-52/WSR-8001 has one RJ-45 port for direct or indirect connection to an MX switch. (See MP .)

Note. The DC input and serial console port on the MP-52/WSR-8001 are not used.

The MPs receive power and data through the RJ-45 ports. Use a Category 5 (Cat 5) cable with straight-through signaling and standard RJ-45 connectors to connect an MP to an MX switch or other device in the network.

The two RJ-45 ports support dual-homed configurations for redundancy. An MP uses only one link for booting, configuration, and data transfer. If the link becomes unavailable, the MP can reboot using the other link. The ports are identical except for logical numbering (1 or 2). You can use either port to connect an MP access point to an MX switch. However, an MP always attempts to boot on MP port 1 first. Only if the boot attempt on port 1 fails does the MP attempt to boot on port 2. If both ports are directly connected to MX switch ports supplying Power over Ethernet (PoE), the ports load-share. If one port becomes unavailable, the other port can provide full power to the MP.

Note. MP access points do not support daisy-chain configurations. Do not connect the MP access point to another MP access point.

External Antenna Connector


The MP-341 and MP-352 each have a connector for attaching an optional external sectorized or directional antenna for the 802.11b/g radio. (See MP .) External Antennas lists the external antennas. (The MP-262 also uses these antenna models. An external antenna is required for the 802.11b/g radio in an MP-262.)

Table 2. External Antennas

Model	Type	Beamwidth	
		Horizontal	Vertical
ANT-1060	Directional	60°	65°
ANT-1120	Sectorized	120°	60°
ANT-1180	Sectorized	180°	40°

External Antennas shows the antennas.

Figure 5. External Antennas

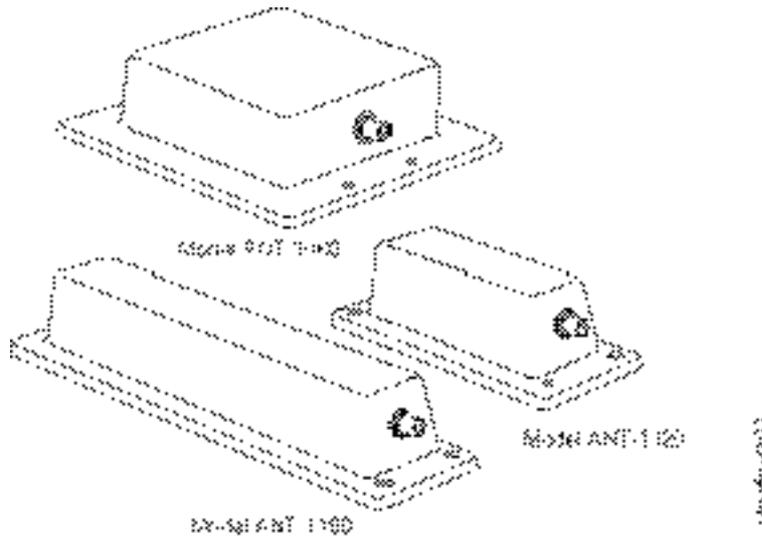

The antennas come with a connector cable, mounting hardware, and installation instructions.

Note. The MP-341, MP-352, and MP-262 802.11b/g radios are certified for use only with these external antennas.

MP Mounting Options

You can mount an MP access point on any of the following types of surfaces:

- 1 Suspended T-bar ceiling
- 1 Junction box

Trapeze Mobility Point Installation Guide
Version 3.0

- 1 Solid surface wall or ceiling
- 1 Tabletop

Note. The solid surface mounting option requires Cat 5 cable that does not have strain relief. The other mounting options can use Cat 5 cable with or without strain relief.

1


Status LEDs

MP access points have LEDs that provide status information for the device.

LEDs on Models MP-341 and MP-352

Health and Radio LEDs—MP-341 and MP-352 shows the locations of the LEDs on models MP-341 and MP-352. (These are also the LED locations for models MP-241, MP-252, MP-262, MP-101, and MP-122.) MP describes the LEDs.

Figure 6. Health and Radio LEDs—MP-341 and MP-352

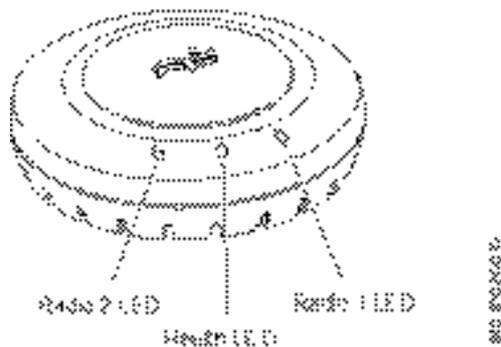

On model MP-341, radio LED 1 indicates activity for the single radio. On model MP-352, radio LED 1 indicates activity for the 802.11b/g or 802.11b radio, and radio LED 2 indicates activity for the 802.11a radio.

Table 3. MP Access Point LEDs—MP-341 and MP-352

LED	Appearance	Meaning
Health	Solid green	All the following are true: <ul style="list-style-type: none"> • Management link with an MX switch is operational. • MP access point has booted. • MP access point has received a valid configuration from an MX switch. • At least one radio is enabled or is in sentry mode.
	Solid amber	MP access point is waiting to receive boot instructions and a configuration file from an MX switch.
	Slowly alternating green and amber	MP access point is booting and receiving its configuration file from an MX switch.
Radio 1	Solid green	A client is associated with the radio.
Radio 2	Blinking green	Associated client is sending or receiving traffic.
	Blinking amber	Non-associated client is sending or receiving traffic.

Alternating green and amber Radio is unable to transmit. This state can occur due to any of the following:

- The radio is in sentry rogue detection mode.
- Excessive radio interference in the environment is preventing the radio from sending beacons.
- The radio has failed.

Solid amber Radio is disabled.

Unlit No radio is present or, if a radio is present and enabled, no clients are associated with the radio and there is no traffic activity.

LEDs on Model MP-52/WSR-8001

MP shows the locations of the LEDs on model MP-52/WSR-8001. MP describes the LEDs.

Table 4. MP Access Point LEDs—MP-52/WSR-8001

LED	Appearance	Meaning
Power	Solid green	MP is receiving power.
	Unlit	MP is not receiving power.
LINK	Solid green	All the following are true: <ul style="list-style-type: none"> • Management link with an MX switch is operational. • MP access point has booted. • MP access point has received a valid configuration from an MX switch. • At least one radio is enabled or is in sentry mode.
	Blinking green	Management link with the MX is operational, but at least one of the other conditions for a solid green has not been achieved.
	Unlit	Management link with the MX is not operational.
WLAN 5.0 GHz	Solid green	A client is associated with the radio.
	Slowly blinking green	Associated client is sending or receiving traffic.
WLAN 2.4 GHz	Rapidly blinking green	The radio is unable to transmit.

Unlit

Either of the following is true:

- Radio is disabled.
 - No clients are associated with the radio and there is no traffic activity.
-

Connection Options

You can connect an MP access port directly to an MX switch port or indirectly to MX switches through an intermediate Layer 2 or Layer 3 network. In either case, use Category 5 (CAT 5) cable with straight-through signaling for each MP connection.

For MP models with two Ethernet ports, you can provide data link redundancy by connecting both of its ports directly to MX switch ports or indirectly to MX switches through the network.

For all MP models, you can provide MX management redundancy even on a single MP Ethernet port by connecting the MP indirectly to multiple MX switches through an intermediate Layer 2 or Layer 3 network.

Note. Install the Cat 5 cables for the MP access point at the installation site before installing the access point itself. During installation, you will insert the Cat 5 cable(s) into the MP port(s) before attaching the access point to the bracket.

Installing and Connecting an MP

Unpacking an MP

Installation Requirements and Re

Installing an MP—

Installing an MP—

Connecting an MP

Verifying MP

Note. Before installing an MP access point, you might need to generate a network plan and an MP work order with RingMaster. (See RingMaster.)

Unpacking an MP


The shipping carton for an MP access point contains the following items:

- 1 One MP access point
- 1 Mounting kit (models MP-341 and MP-352):
 - 1 One universal mounting bracket (attached to the MP)
 - 1 One paper mounting template (used for marking cutting areas and screw holes)
 - 1 One two-piece 14.2mm (9/16inch) T-bar clamp
 - 1 One two-piece 15.9mm (5/8inch) Tbar clamp
 - 1 One two-piece 23.9mm (15/16inch) T-bar clamp
 - 1 Two #6 sheet metal screws and two drywall anchors
 - 1 Three adhesive rubber feet
- 1 Mounting kit (model MP-52/WSR-8001):
 - 1 One single-piece 14.2mm (9/16inch) T-bar clamp
 - 1 One single-piece 23.9mm (15/16inch) T-bar clamp
 - 1 Four 10-24 x 1/2-inch pan-head screws and four matching hexagonal nuts
- 1 One mounting template (MP-341 and MP-352).

- 1 One documentation pack that includes quick mounting instructions and a registration card (not shown).


MP- shows the contents of the shipping carton for model MP-341 and MP-352.

Figure 7. MP-341 and MP-352 Shipping Carton Contents

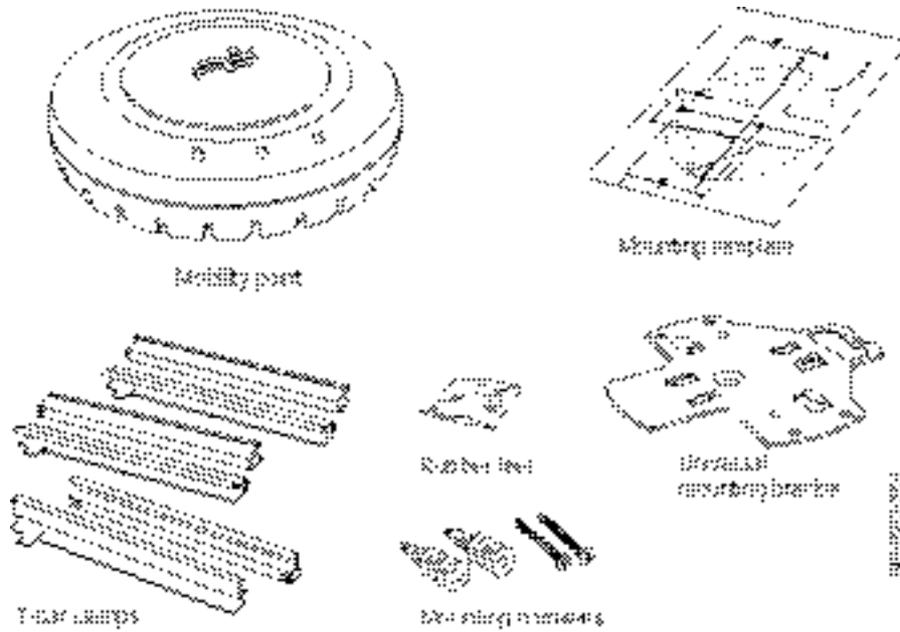

shows the contents of the shipping carton for model MP-52/WSR-8001.

Figure 8. MP-52/WSR-8001 Shipping Carton Contents

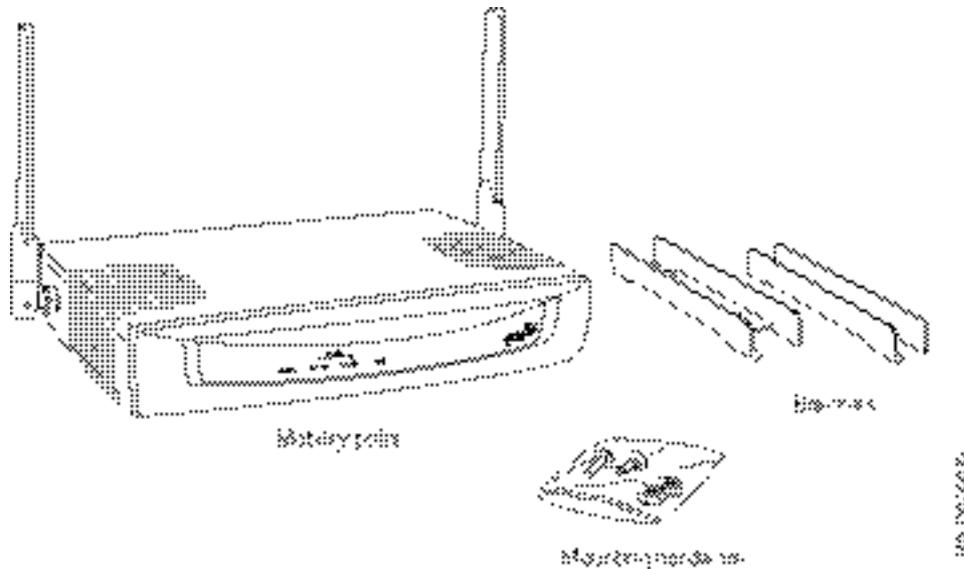

Before you begin installation:

- 1 Open the carton and carefully remove the contents, if you have not already done so.
- 2 Place the packing materials back in the carton and save the carton.
- 3 Verify that you received each item in the previous list. If any item is missing or damaged, contact Trapeze Networks.

Installation Requirements and Recommendations

For best results, follow these requirements and recommendations before installing an MP access point.

RingMaster Network Plan and Work Orders

If you are using RingMaster to plan your Trapeze Networks Mobility System installation, you might want to create and verify a network plan for the entire Trapeze network installation and generate an MP work order, before installing MP access points. A network plan and the MP work orders generated from it provide the following information about MP access point installation and configuration:

- 1 Number of MP access points required for adequate WLAN capacity in each coverage area
- 1 Detailed installation location for each MP access point
- 1 Settings for all MP access points in the WLAN

(For information about installing RingMaster, creating and verifying a network plan, and generating an MP work order, see the [Trapeze RingMaster User's Guide](#) and [Trapeze RingMaster Reference Manual](#).)

MX Switch Recommendation

Trapeze Networks recommends that you install and configure the MX switch before installing an MP access point. If the switch is already installed and configured for the MP access point(s), you can immediately verify the cable connection(s) when you plug the cable(s) into the MP access point.

Trapeze Mobility Point Installation Guide
Version 3.0

Caution! MP models MP-341, MP-352 and MP-52/WSR-8001 are designed to receive power only from an 802.11af-compliant source, a Trapeze Networks Mobility Exchange (MX) switch, or a Trapeze-approved power injector. Connecting an MP access point to a Power over Ethernet (PoE) device that is not approved by Trapeze Networks can damage the equipment. Other MP models do not support 802.11af.

(For information about connecting an MP access point to an MX switch port, see [Connecting an MP](#) .)

Wall Installation Recommendations

If you plan to install MP model MP-341 or MP-352 on a partial wall or other vertical surface, orient the top of the access point (the side with the LEDs) toward the intended coverage area. The radio antennas transmit through the top of the access point but not through the bottom (where the bracket is).

This recommendation does not apply if you plan to use only the 802.11b/g radio, with an external antenna. You can orient the antenna independently of the MP itself. Orient an external antenna to face the intended coverage area.

MP Radio Safety Advisories

When you enable the MP radio(s) as part of MX switch configuration, the radios are able to receive and transmit radio frequency energy as soon as you connect the MP access point(s) to the MX switch, either directly or through the network.

Radio Frequency Exposure

Federal Communications Commission (FCC) Docket 96-8 for Spread Spectrum Transmitters specifies a safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC-certified equipment. When used with the proper antennas (shipped in the product), Trapeze Networks MP access point products meet the uncontrolled environmental limits found in OET-65 and ANSI C95.11991. Proper installation of the MP access point according to the instructions in this manual will result in user exposure that is below the FCC recommended limits.

Additional Radio Safety Advisories

(For translations of these warnings, see “Radio Safety Warnings” on page 78.)

Warning! In the U.S., locate the MP access point a minimum of 20 cm (7.9 inches) away from people. This safety warning conforms with FCC radio frequency exposure limits for dipole antennas such as those used in the MP access point.

Warning! Do not operate the MP access point near unshielded blasting caps or in an otherwise explosive environment unless the device has been modified for such use by qualified personnel.

Warning! Do not touch or move the MP access point when the antennas are transmitting or receiving.

Warning! Do not hold any radio device so that the antenna is very close to or touching the face, eyes, or other exposed body part while the device's radio antenna is transmitting.

Warning! Before using a wireless device in a hazardous location, consult the local codes, national codes, and safety directors of the location for usage constraints.

Cable Requirements

Warning! Do not connect or disconnect cables or otherwise work with the MP access point hardware during periods of lightning activity. (For translations of this warning, see "Lightning Warning" on page 81.)

Note. The MP access point is intended for indoor use only. Do not install the device outdoors, unless you install it in a properly installed Trapeze Networks outdoor MP enclosure.

Note. To reduce the possibility of connection interference caused by dust, clean the Cat 5 connector pins before inserting a cable into an MP access point.

Cat 5 cable with straight-through signaling must be installed at the site before you install an MP access point. A single connection requires one cable. A dual-homed connection requires two cables.

10/100 Ethernet Straight-Through Pin Signals lists the pin signals for 10/100 Ethernet straight-through wiring. Pins 4, 5, 7, and 8 are used when Trapeze Power over Ethernet (PoE) is enabled on the port. *RD* means *Receive Data* and *TD* means *Transmit Data*.

Table 5. 10/100 Ethernet Straight-Through Pin Signals

MX Switch		Other Device	
Pin	Function	Pin	Function
1	RD+	1	TD+
2	RD-	2	TD-
3	TD+	3	RD+
4	PoE+	4	PoE+
5	PoE+	5	PoE+
6	TD-	6	RD-
7	PoE-	7	PoE-
8	PoE-	8	PoE-

Mounting an MP access point on a solid surface requires Cat 5 cable that does not have strain relief. For installation on all other surfaces, you can use Cat 5 cable with or without strain relief.

(For more information about cables, see “Cable Ports” on page 11.)

Installing an MP—Models MP-341 and MP-352

To install an MP access point, use one of the procedures in this section.

Installation Hardware and Tools

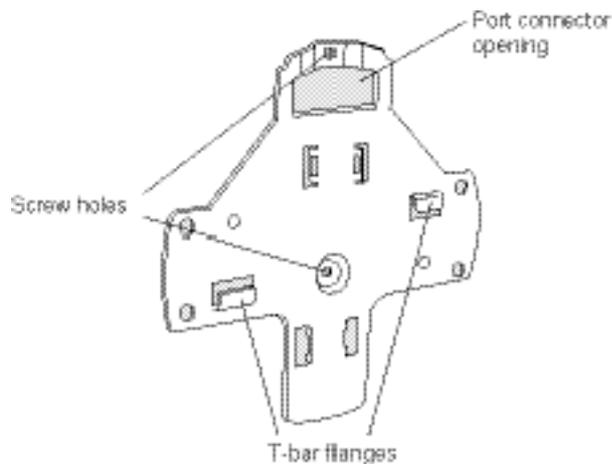
Required Mounting Hardware and Tools—Models MP-341 and MP-352 lists the mounting hardware and tools required for each type of installation.

Table 6. Required Mounting Hardware and Tools—Models MP-341 and MP-352

Mounting Option	Required Hardware and Tools	Included with the Product
Suspended ceiling—flush ceiling tiles	Mounting template	Yes
	Universal mounting bracket	Yes
	Tbar clamp	Yes
	Note: A Tbar clamp is not required for a 23.9mm (15/16inch) Tbar ceiling with flush ceiling tiles.	
	Box cutter	No
	Small screwdriver (3mm or 1/8inch)	No

Suspended ceiling—drop ceiling tiles	Mounting template	Yes
	Universal mounting bracket	Yes
	Tbar clamp	Yes
	Box cutter	No
	Small screwdriver (3mm or 1/8inch)	No
Junction box	Junction box	No
	Two #6-32 x 1-inch machine screws	Yes
	Universal mounting bracket	Yes
	Small screwdriver (3mm or 1/8inch)	No
	#2 Phillips-head screwdriver	No
Solid wall or ceiling	Two #6 sheet metal screws and two drywall anchors	Yes
	Universal mounting bracket	Yes
	Hammer	No
	Small screwdriver (3mm or 1/8inch)	No
	#2 Phillips-head screwdriver	No
Tabletop	Universal mounting bracket	Yes
	Three adhesive rubber feet	Yes
	Small screwdriver (3mm or 1/8inch)	No

Universal Mounting Bracket shows the universal mounting bracket.

Figure 9. Universal Mounting Bracket


Suspended Ceiling Installation—Flush Ceiling Tiles

(For required mounting hardware and tools, see Required Mounting Hardware and Tools—Models MP-341 an.)


- 1 Select an installation location that is centered over a Tbar in the ceiling.
- 2 Cut a hole as follows in the ceiling tile for the Cat 5 cable(s):
 - a Place the mounting template over the area where you plan to install the MP access point.
 - b Use the box cutter to cut along the line marking the opening for the port connectors.
 - c Remove the mounting template and the material you cut from the ceiling panel.

- 3 Determine whether to install a Tbar clamp onto the ceiling Tbar:
 - 1 If the T-bar width is 14.2 mm (9/16 inches), you need to install the 14.2mm (9/16-inch) Tbar clamp. Go to Install the 14.2mm (9/16-inch) Tbar clamp onto the ceiling Tbar as shown in.
 - 1 If the Tbar width is 23.9 mm (15/16 inches), the universal mounting bracket fits directly onto the Tbar. Go to Unlock the universal mounting bracket from the MP .
- 4 Install the 14.2mm (9/16-inch) Tbar clamp onto the ceiling Tbar as shown in Step 4—Installing a T-bar Clamp.
 - a Slide each half of the clamp onto the Tbar so that the clamp lip is fully on the T-bar.
 - b Slide the two halves of the clamp toward each other until the tabs are inserted completely into the holes and the clamp fits snugly on the Tbar.

Figure 10. Step 4—Installing a T-bar Clamp

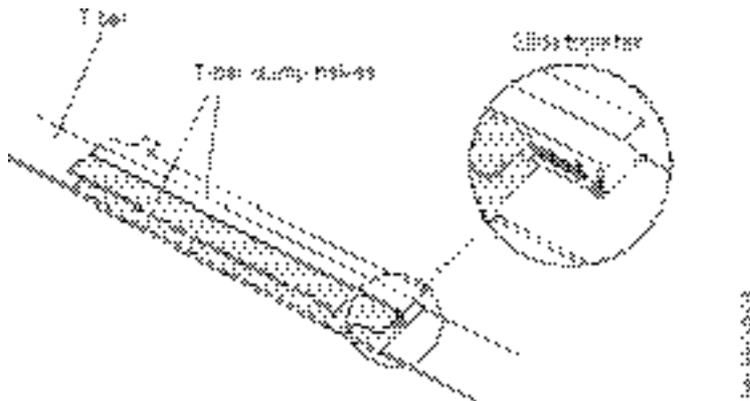

- 5 Unlock the universal mounting bracket from the MP access point by inserting the 3mm or 1/8inch screwdriver into the *Unlock* hole on the MP access point as shown in

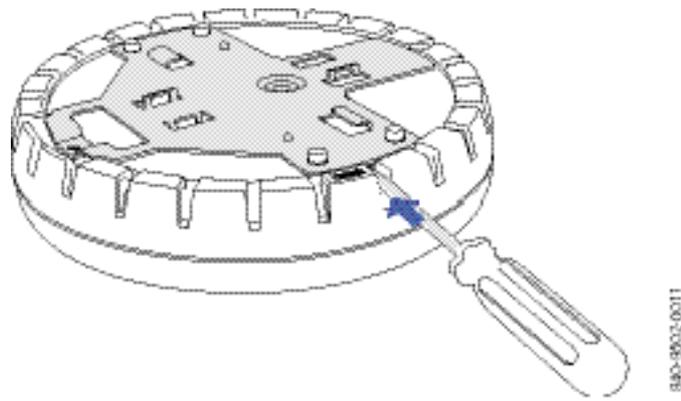

Ste.

Caution! To avoid damage to the MP access point's lock mechanism or electronic components, do not use excessive force when inserting a tool into the *Unlock* or *Lock* hole.

5


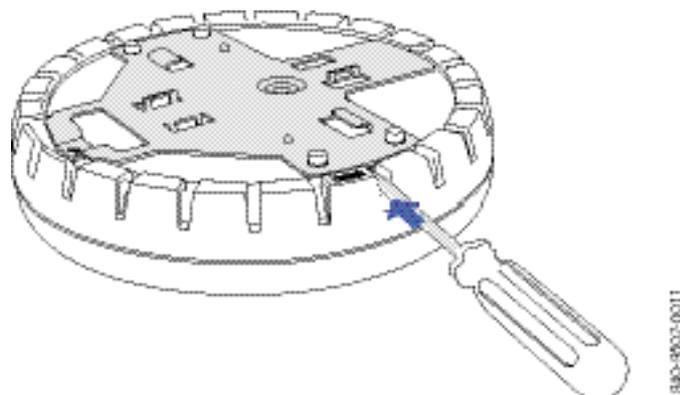


Figure 11. Step 5—Unlocking the Bracket


6 Remove the bracket as shown in Step 6—Removing the Bracket.

Figure 12. Step 6—Removing the Bracket

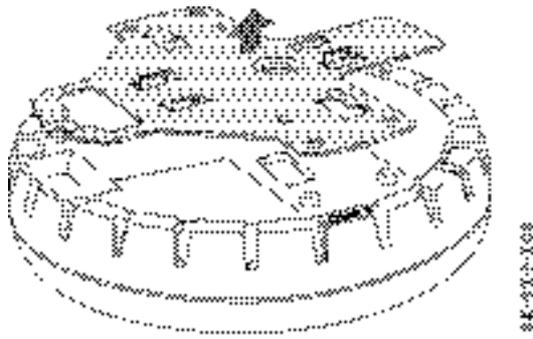


- 7 Install the universal mounting bracket as follows onto the Tbar or Tbar clamp:
 - a As shown in Step 7—Top View, place the universal mounting bracket against the Tbar or clamp so that the two screw holes face downward and the two Tbar flanges face upward and are adjacent to the Tbar edges.

Figure 13. Step 7—Top View

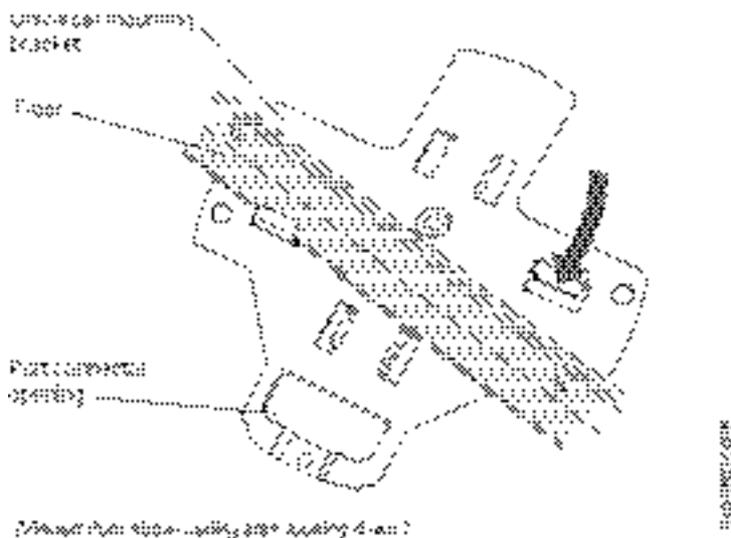

- b Properly align the bracket for mounting by placing the bracket so that its port connector opening is to the left of the hole you cut for the cables.
- c Rotate the universal mounting bracket clockwise until the flanges snap into place on the Tbar or clamp as shown in Step 7—Bottom View.


Figure 14. Step 7—Bottom View

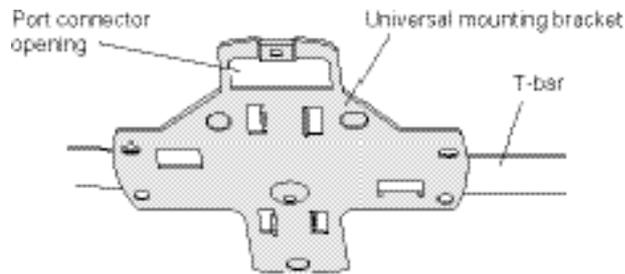

- 8 Pull the Cat 5 cable(s) about 15 cm (about 6 inches) out of the hole in the ceiling tile and through the port connector opening to create enough slack to insert the cable(s).
- 9 Insert the Cat 5 cable(s) into the connector(s):
 - 1 For a single connection, use the connector for port 1.
 - 1 For a dual-homed connection, insert one cable into each connector.
- 10 Lift the MP access point into place on the universal mounting bracket as shown in Step 10—Placing the MP .


Make sure the cable feeds properly into the ceiling as you lift the device, and does not become trapped between the access point and the bracket.

Figure 15. Step 10—Placing the MP Access Point on the Bracket

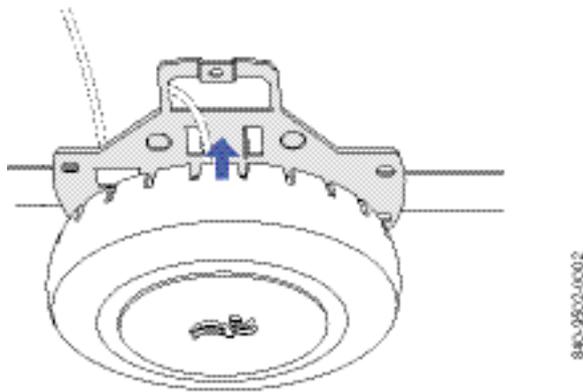

- 11** Lock the MP access point onto the bracket by inserting the 3mm or 1/8inch screwdriver into the *Lock* hole on the access point as shown in Step 11—Locking the Bracket.

Caution! To prevent possible damage to the MP access point, make sure the device is fully locked onto the bracket before letting go of it.

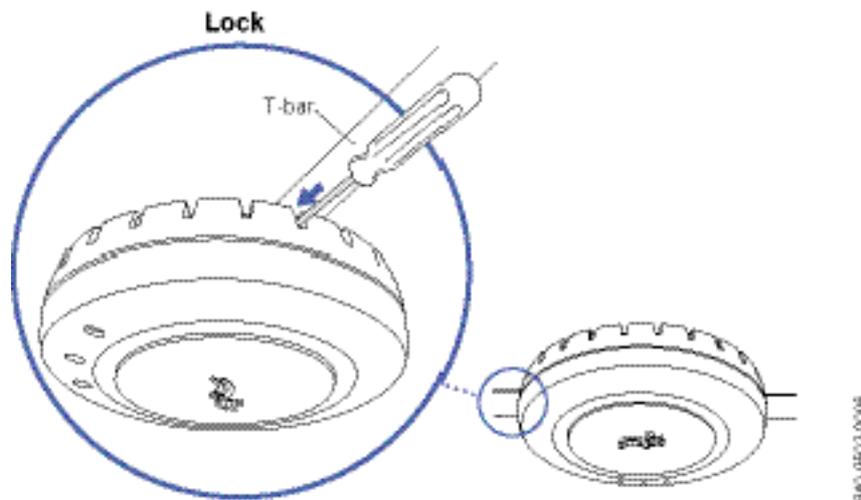Figure 16. Step 11—Locking the Bracket

- 12** To ensure that the MP access point is fully locked onto the bracket, gently pull down on the access point and attempt to rotate it from side to side.
- 13** If the access point comes off the bracket, relock the device onto the bracket as described in Lock the MP .
- 14** If the MP requires an external antenna, install and connect the antenna. (See Connecting an MP .)
- 15** If the other ends of the Cat 5 cable(s) are not already connected and the link activated, go to Connecting an MP . Otherwise, go to Verifying MP .

Suspended Ceiling Installation—Drop Ceiling Tiles

(For required mounting hardware and tools, see Required Mounting Hardware and Tools—Models MP-341 an.)

- 1 Select an installation location that is centered over a Tbar in the ceiling.
- 2 Cut a hole as follows in the ceiling tile for the Cat 5 cable(s):
 - a Place the mounting template over the area where you plan to install the MP access point.
 - b Use the box cutter to cut along the line marking the opening for the port connectors.
 - c Remove the mounting template and the material you cut from the ceiling panel.
- 3 Install the Tbar clamp that fits the Tbar:
 - a Slide each half of the clamp onto the Tbar so that the clamp lip is fully on the T-bar.
 - b Slide the two halves of the clamp toward each other until the tabs are inserted completely into the holes and the clamp fits snugly on the Tbar.

Step 3—Installing the T-bar Clamp for a 23.9mm (1 shows an example for a 23.9mm (15/16inch) Tbar. Step 3—Installing the T-bar Clamp for a 15.9mm (5 shows an example for a 15.9mm (5/8inch) Tbar.

Figure 17. Step 3—Installing the T-bar Clamp for a 23.9mm (15/16inch) Tbar


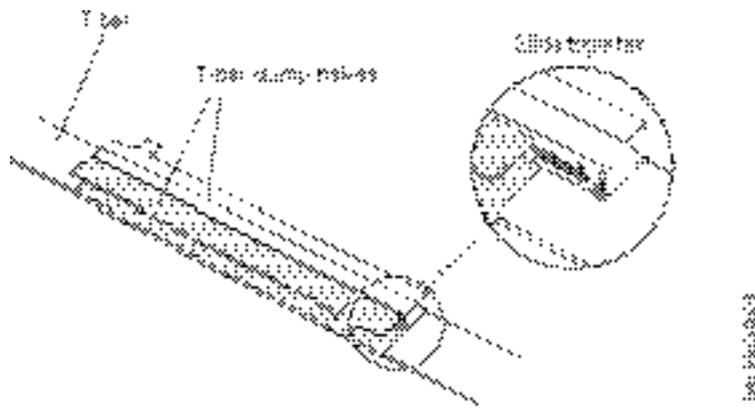


Figure 18. Step 3—Installing the T-bar Clamp for a 15.9mm (5/8inch) Tbar

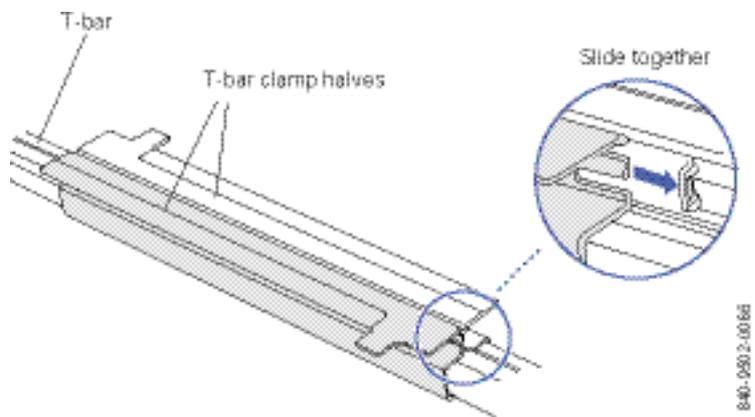


- 4 Unlock the universal mounting bracket from the MP access point by inserting the 3mm or 1/8inch screwdriver into the *Unlock* hole on the MP access point as shown in Step 4—Unlocking the Bracket.

Caution! To avoid damage to the MP access point's lock mechanism or electronic components, do not use excessive force when inserting a tool into the *Unlock* or *Lock* hole.


4

Figure 19. Step 4—Unlocking the Bracket

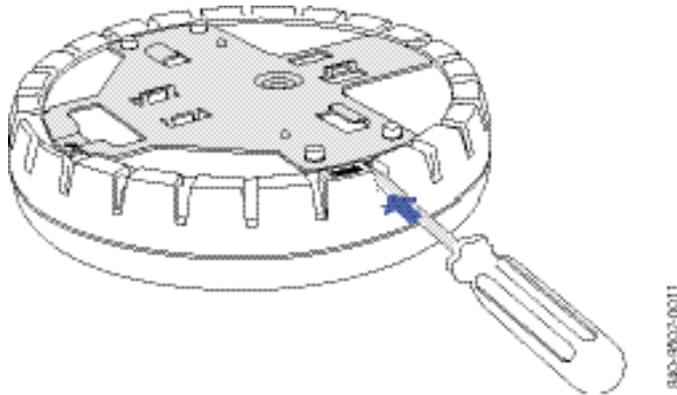

5 Remove the bracket as shown in Step 5—Removing the Bracket.

Figure 20. Step 5—Removing the Bracket

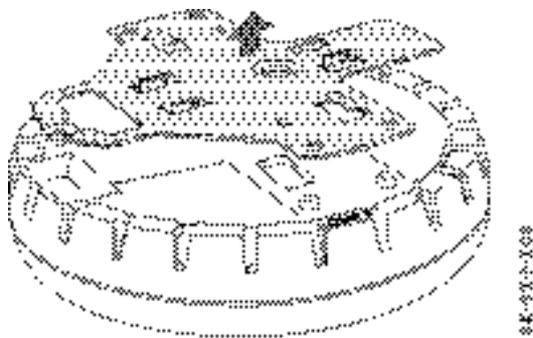

- 6 Install the universal mounting bracket as follows onto the Tbar clamp:
 - a As shown in Step 6—Top View, place the universal mounting bracket against the Tbar clamp so that the two screw holes face downward and the two Tbar flanges face upward and are adjacent to the Tbar edges.
 - b Properly align the bracket for mounting by placing the bracket so that its port connector opening is to the left of the hole you cut for the cables.
 - c Rotate the universal mounting bracket clockwise until the flanges snap into place on the Tbar clamp as shown in Step 6—Bottom View.

Figure 21. Step 6—Top View



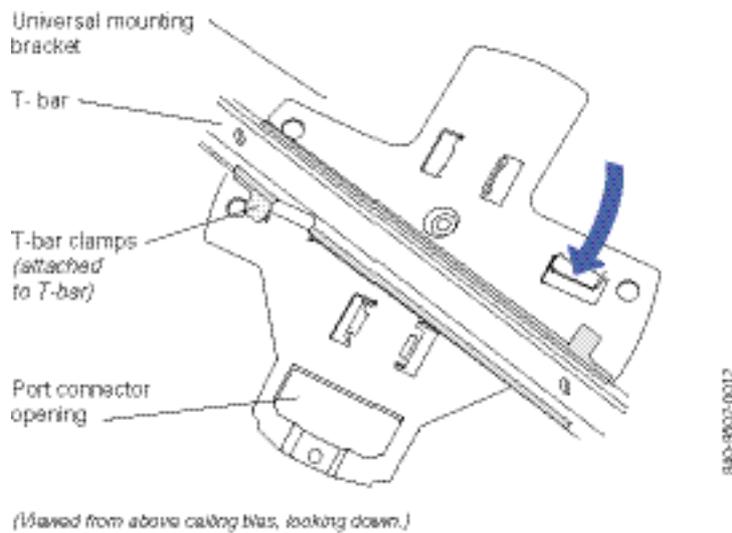


Figure 22. Step 6—Bottom View

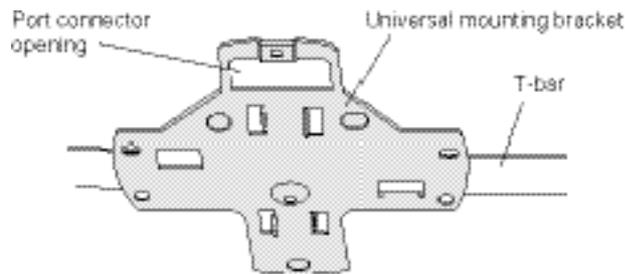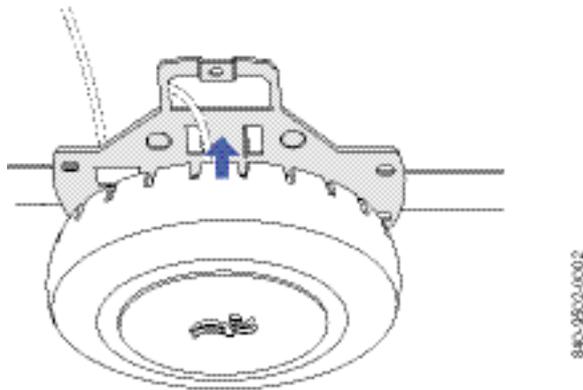

- 7 Pull the Cat 5 cable(s) about 15 cm (about 6 inches) out of the hole in the ceiling tile and through the port connector opening to create enough slack to insert the cable(s).
- 8 Insert the Cat 5 cable(s) into the connector(s):
 - 1 For a single connection, use the connector for port 1.
 - 1 For a dual-homed connection, insert one cable into each connector.
- 9 Lift the MP access point into place on the universal mounting bracket as shown in Step 9—Placing the MP .

Make sure the cable feeds properly into the ceiling as you lift the device, and does not become trapped between the access point and the bracket.


Figure 23. Step 9—Placing the MP Access Point on the Bracket

- 10** Lock the MP access point onto the bracket by inserting the 3mm or 1/8inch screwdriver into the *Lock* hole on the access point as shown in Step 10—Locking the Bracket.

Caution! To prevent possible damage to the MP access point, make sure the device is fully locked onto the bracket before letting go of it.

10

Figure 24. Step 10—Locking the Bracket

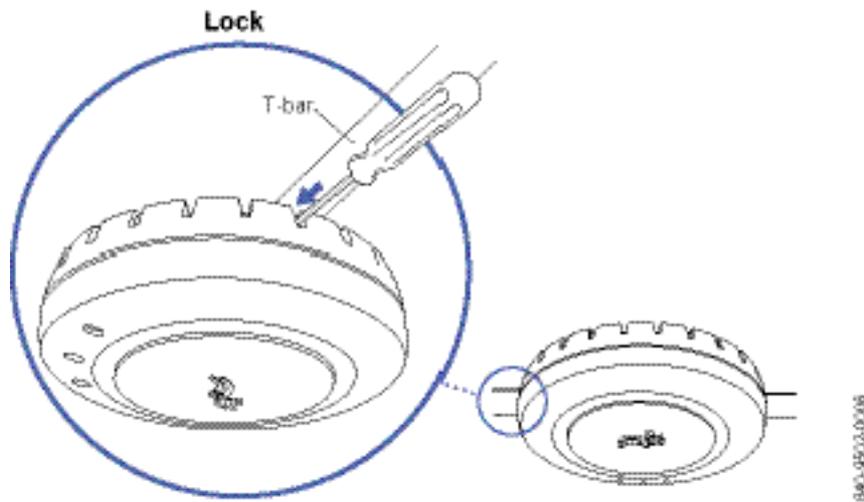

- 11** To ensure that the MP access point is fully locked onto the bracket, gently pull down on the access point and attempt to rotate it from side to side.

If the access point comes off the bracket, relock the device onto the bracket as described in **Lock the MP** .

- 12** If the MP requires an external antenna, install and connect the antenna. (See **Connecting an MP** .)
- 13** If the other ends of the Cat 5 cable(s) are not already connected and the link activated, go to **Connecting an MP** . Otherwise, go to **Verifying MP** .

Junction Box Installation


(For required mounting hardware and tools, see Required Mounting Hardware and Tools—Models MP-341 an.)

- 1 Unlock the universal mounting bracket from the MP access point by inserting the 3mm or 1/8inch screwdriver into the *Unlock* hole on the MP access point as shown in Step 1—Unlocking the Bracket.

Caution! To avoid damage to the MP access point's lock mechanism or electronic components, do not use excessive force when inserting a tool into the *Unlock* or *Lock* hole.


1

Figure 25. Step 1—Unlocking the Bracket

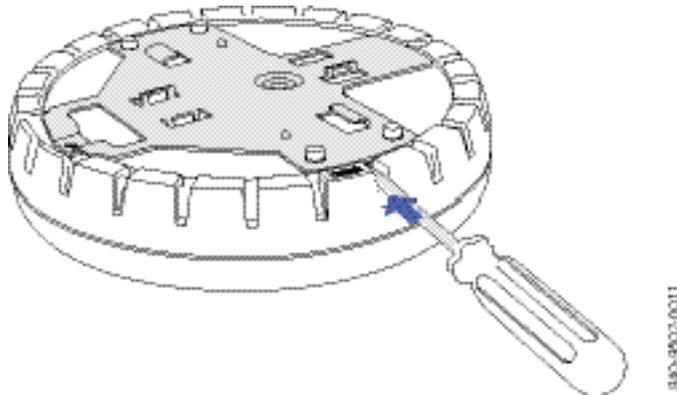


- 2 Remove the bracket as shown in Step 2—Removing the Bracket.

Figure 26. Step 2—Removing the Bracket

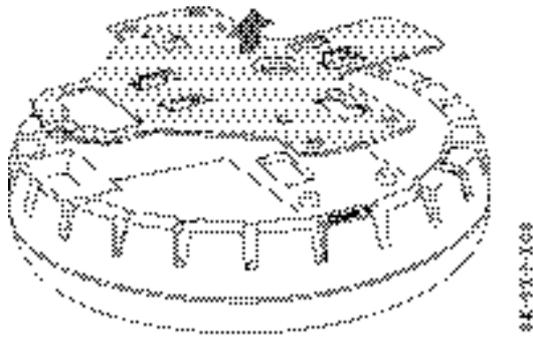

- 3** Attach the universal mounting bracket to the junction box as shown in Step 3—Placing the Bracket on the Junction Box:
 - a** Place the universal mounting bracket against the junction box so that the two screw holes face the junction box and align over the screw holes in the box.
 - b** Insert the #6-32 x 1-inch machine screws in the universal mounting bracket's screw holes, and use a #2 Phillips-head screwdriver to tighten them.

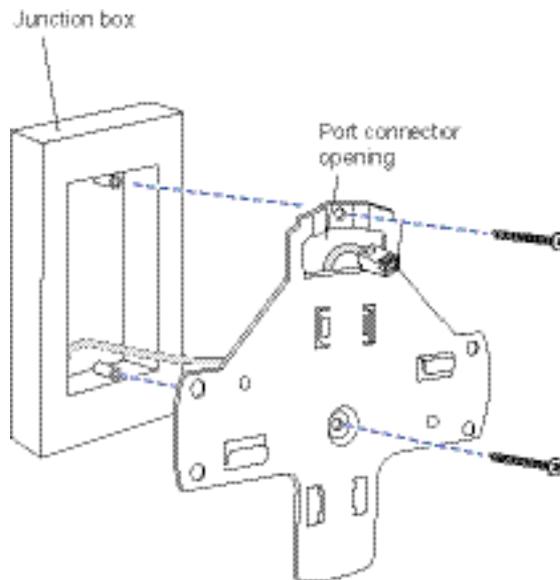Figure 27. Step 3—Placing the Bracket on the Junction Box

- 4 Pull the Cat 5 cable(s) about 15 cm (about 6 inches) out of the junction box and through the port connector opening to create enough slack to insert the cable(s) into the port connectors.
- 5 Insert the Cat 5 cable(s) into the connector(s):
 - 1 For a single connection, use the connector for port 1.
 - 1 For a dual-homed connection, insert one cable into each connector.
- 6 Lift the MP access point into place on the universal mounting bracket.


Make sure the cable feeds properly into the junction box as you lift the device, and does not become trapped between the access point and the bracket.

- 7 Lock the MP access point onto the bracket by inserting the 3mm or 1/8inch screwdriver into the *Lock* hole on the access point as shown in Step 7—Locking the Bracket.

Caution! To prevent possible damage to the MP access point, make sure the device is fully locked onto the bracket before letting go of it.

7

Figure 28. Step 7—Locking the Bracket

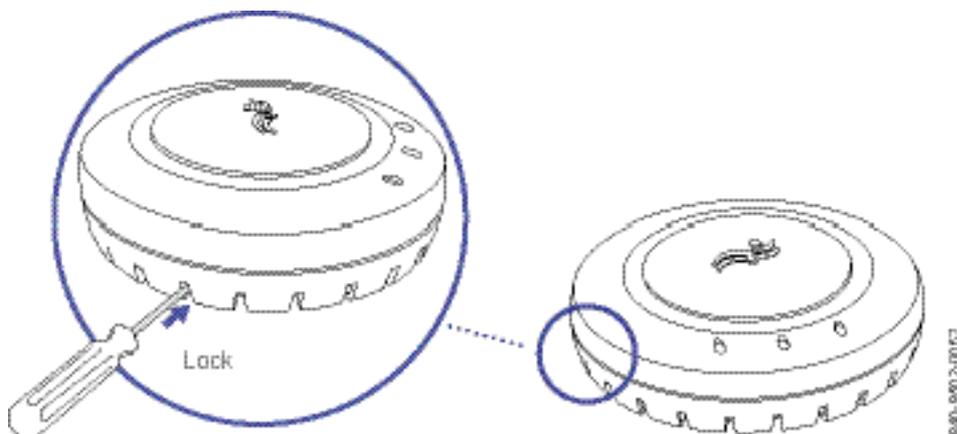

- 8 To ensure that the MP access point is fully locked onto the bracket, gently pull down on the access point and attempt to rotate it from side to side.

If the access point comes off the bracket, relock the device onto the bracket as described in Lock the MP .

- 9 If the MP requires an external antenna, install and connect the antenna. (See Connecting an MP .)
- 10 If the other ends of the Cat 5 cable(s) are not already connected and the link activated, go to Connecting an MP . Otherwise, go to Verifying MP .

Solid Wall or Ceiling Installation

Note. The solid surface mounting option requires Cat 5 cable that does not have strain relief, unless you plan to route the cable through a hole in the wall or ceiling. The other options can use Cat 5 cable with or without strain relief.

(For required mounting hardware and tools, see Required Mounting Hardware and Tools—Models MP-341 an.)

- 1 Prepare holes in the wall or ceiling for the universal mounting bracket, using the following steps:
 - a Place the paper mounting template over the location where you want to install the MP access point.
 - b Mark the screw hole location(s).
 - m If you plan to route the Cat 5 cable externally along the wall or ceiling, mark the locations of both the center screw hole and the screw hole by the port connector opening.
 - m If you plan to route the Cat 5 cable through a hole in the wall or ceiling, mark the location of the center screw hole only. You cannot use the screw hole by the port connector opening if you cut a hole for the opening.


Note. Do not mark the four holes on the edges of the bracket. (These are the holes indicated by the dashed lines in Steps 5 and 6—Bracket Placement on Solid Wall or Ceiling.) The MP access point fits into these holes. They are not screw holes.

m

- c Remove the template.
 - 2 Install the drywall anchor(s):
 - a Hammer a drywall anchor into each hole, up to the beginning of the threads on the anchor.
 - b Screw each anchor the rest of the way into its hole using a #2 Phillips-head screwdriver.
 - c Remove the screw from each anchor and save the screw(s) for Insert the #6 sheet metal screws into the screw holes, and tighten them to se.
 - 3 Unlock the universal mounting bracket from the MP access point by inserting the 3mm or 1/8inch screwdriver into the *Unlock* hole on the MP access point as shown in Step 3—Unlocking the Bracket.


Caution! To avoid damage to the MP access point's lock mechanism or electronic components, do not use excessive force when inserting a tool into the *Unlock* or *Lock* hole.

Figure 29. Step 3—Unlocking the Bracket

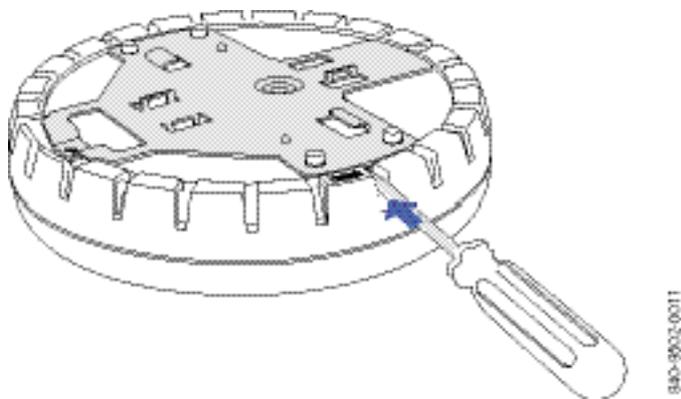

- 4 Remove the bracket as shown in Step 4—Removing the Bracket.

Figure 30. Step 4—Removing the Bracket

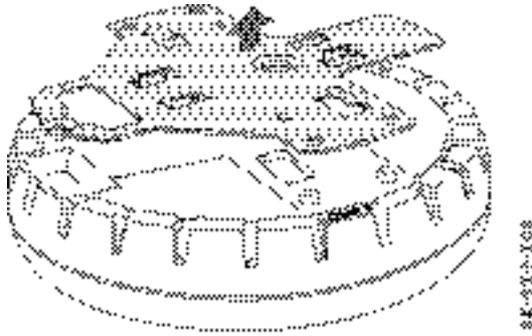


- 5 As shown in Steps 5 and 6—Bracket Placement on Solid Wall or Ceiling, feed the Cat 5 cable(s) through the port connector opening and align the universal mounting bracket over the drywall anchors so that the two screw holes in the bracket face the drywall anchors.
- 6 Insert the #6 sheet metal screws into the screw holes, and tighten them to secure the universal mounting bracket to the wall or ceiling.


(If you routed the Cat 5 cable through a hole in the wall or ceiling, insert the screw into the center screw hole only.)

Note. Do not insert screws in the four holes on the edges of the bracket. (These are the holes indicated by the dashed lines in Steps 5 and 6—Bracket Placement on Solid Wall or Ceiling.) The MP access point fits into these holes. They are not screw holes.

Figure 31. Steps 5 and 6—Bracket Placement on Solid Wall or Ceiling

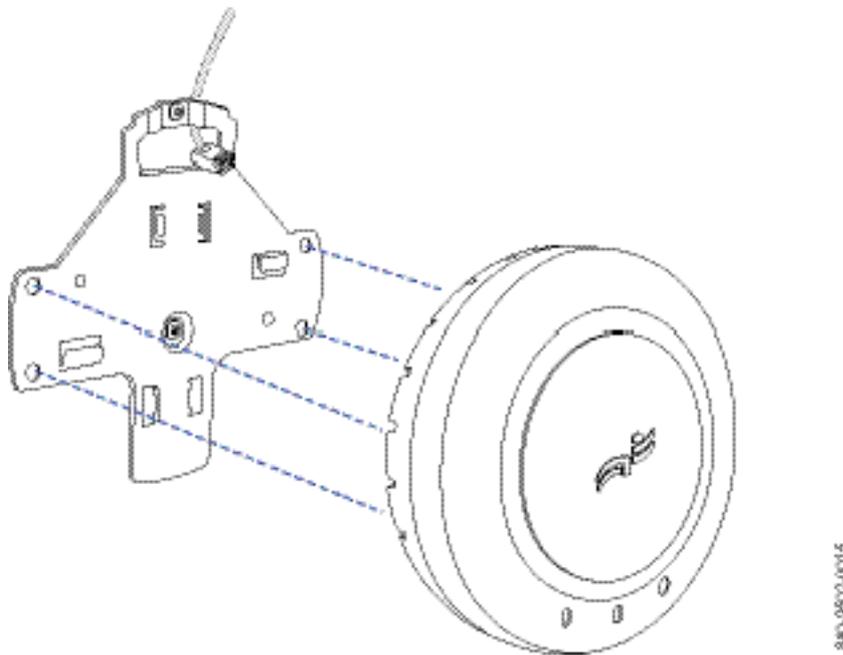

- 7** Insert the Cat 5 cable(s) into the connector(s):
 - 1 For a single connection, use the connector for port 1.
 - 1 For a dual-homed connection, insert one cable into each connector.
- 8** As shown in Step 8—Cable Placement, place the MP access point on the bracket, making sure to remove any slack that occurs in the cable between the bracket and the MP access point.

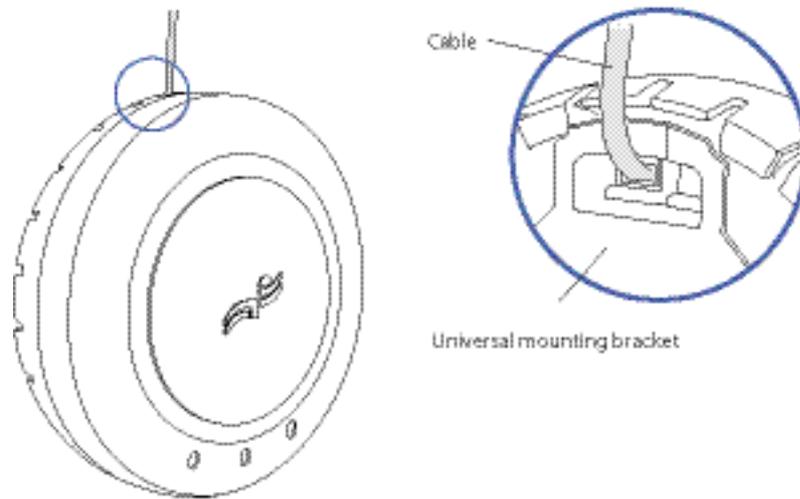
Figure 32. Step 8—Cable Placement

- 9 Lock the MP access point onto the bracket by inserting the 3mm or 1/8inch screwdriver into the *Lock* hole on the access point as shown in Step 9—Locking the Bracket.

Caution! To prevent possible damage to the MP access point, make sure the device is fully locked onto the bracket before letting go of it.

9

Figure 33. Step 9—Locking the Bracket

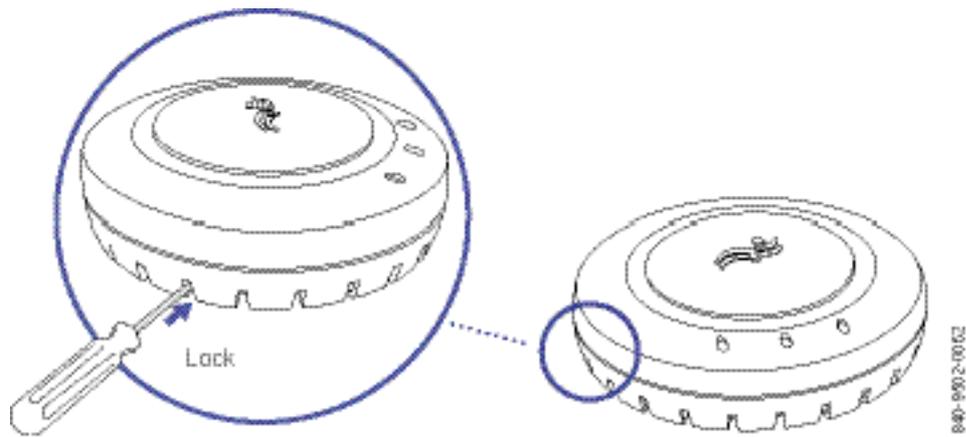

- 10** To ensure that the MP access point is fully locked onto the bracket, gently pull on the access point and attempt to rotate it from side to side.

If the access point comes off the bracket, relock the device onto the bracket as described in **Lock the MP** .

- 11** If the MP requires an external antenna, install and connect the antenna. (See **Connecting an MP** .)
- 12** If the other ends of the Cat 5 cable(s) are not already connected and the link activated, go to **Connecting an MP** . Otherwise, go to **Verifying MP** .

Tabletop Installation


(For required mounting hardware and tools, see Required Mounting Hardware and Tools—Models MP-341 an.)

- 1 Reverse the universal mounting bracket:
 - a Unlock the universal mounting bracket from the MP access point by inserting the 3mm or 1/8inch screwdriver into the *Unlock* hole on the MP access point as shown in Step 1a—Unlocking the Bracket.

Caution! To avoid damage to the MP access point's lock mechanism or electronic components, do not use excessive force when inserting a tool into the *Unlock* or *Lock* hole.


a

Figure 34. Step 1a—Unlocking the Bracket

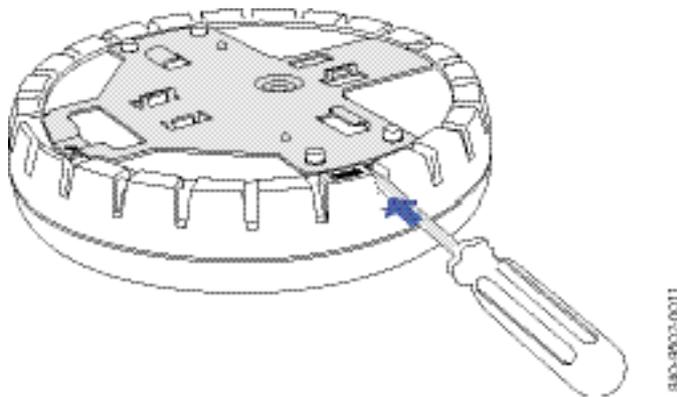


- b Remove the bracket as shown in Step 1b—Removing the Bracket.

Figure 35. Step 1b—Removing the Bracket

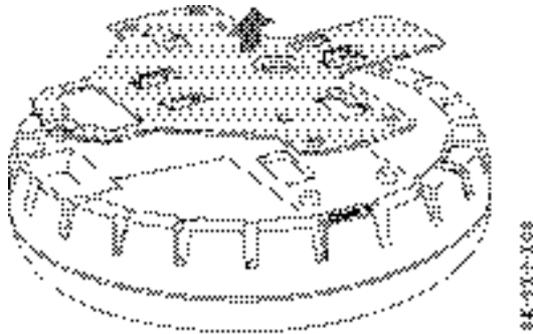


- c Turn over the universal mounting bracket, then align the bracket over the cable ports and the four mounting posts as shown in Step 1c—Turning Over the Bracket.


Figure 36. Step 1c—Turning Over the Bracket

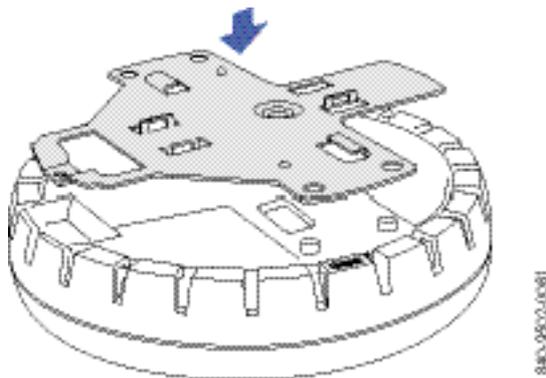

- d Once the bracket is fully seated, lock the bracket onto the MP access point by inserting the 3mm or 1/8inch screwdriver into the *Lock* hole on the access point as shown in Step 1d—Locking the Bracket.

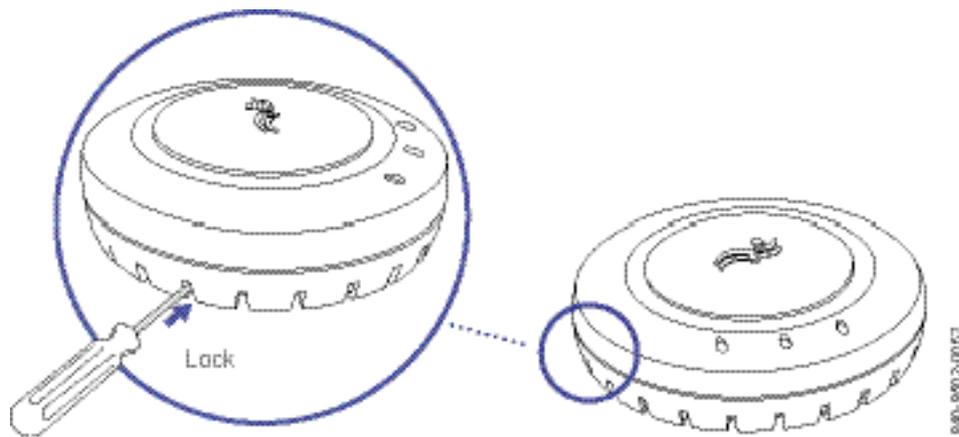Figure 37. Step 1d—Locking the Bracket

- 2 Attach the three rubber adhesive feet onto the universal mounting bracket, in the three location circles, as shown in Step 2—Installing the Rubber Feet.

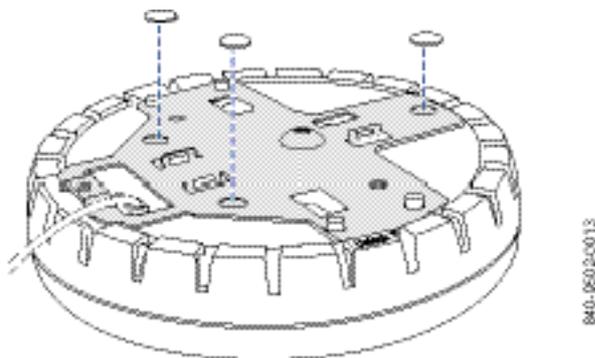Figure 38. Step 2—Installing the Rubber Feet

- 3 Insert the Cat 5 cable(s) into the connector(s):
 - 1 For a single connection, use the connector for port 1.
 - 1 For a dual-homed connection, insert one cable into each connector.

- 4 Place the MP access point in the desired location on the table.
- 5 If the MP requires an external antenna, install and connect the antenna. (See Connecting an MP .)
- 6 If the other ends of the Cat 5 cable(s) are not already connected and the link activated, go to Connecting an MP . Otherwise, go to Verifying MP .

Connecting an MP to an External Antenna

The 802.11b/g radio in models MP-341 and MP-352 can use an optional Trapeze external antenna. To install the antenna, see the instructions that come with the antenna.

Caution! The external antenna must be installed at least 20 cm from the MP access point.

To connect the installed antenna to model MP-341 or MP-352:

- 1 Attach the 3foot exterior antenna cable to the MP external antenna connector. (For the location of the external antenna connector, see Figure 2 on page 10.)

Note. If the MP is installed in a Trapeze Networks outdoor MP enclosure, attach the antenna cable to the lightning surge arrestor (if installed) or the enclosure's SMA bulkhead connector.

- 1
- 2 Attach the other end of the antenna cable to the antenna.

- 3 If the other ends of the Cat 5 cable(s) are not already connected and the link activated, go to Connecting an MP . Otherwise, go to Verifying MP .

(You also can use the procedure above for the MP-262 external antenna.)

Installing an MP—Model MP-52/WSR-8001

To install MP access point model MP-52/WSR-8001, use one of the procedures in this section.

Installation Hardware and Tools

Required Mounting Hardware and Tools—Model MP-52/WSR-8001 lists the mounting hardware and tools required for each type of installation.

Table 7. Required Mounting Hardware and Tools—Model MP-52/WSR-8001


Mounting Option	Required Hardware and Tools	Included with the Product
Suspended ceiling	One of the Tbar clamps: <ul style="list-style-type: none"> • 14.2-mm (9/16-inch) • 23.9-mm (15/16-inch) 	Yes
	Two 10-24 x 1/2-inch pan-head screws Two 10-24 hexagonal nuts (optional)	Yes

	#2 Phillips-head screwdriver 12 mm (3/8inch) deep-socket nut driver (optional)	No
	Box cutter	No
Solid wall or ceiling	Two panhead screws or wall anchors and tools to install them	No
Tabletop	None	Not Applicable

Suspended Ceiling Installation


- 1 Select an installation location that is centered under a Tbar in the ceiling.
- 2 Cut a hole for the Cat 5 cable and pull about 15 cm (about 6 inches) of the cable through the hole.
- 3 Prepare the 14.2mm (9/16-inch) or 23.9-mm (15/16-inch) mounting bracket:
 - a Place a 1024 hexagonal nut on each 1024 x 1/2inch panhead screw to act as a locking device for the screws. Turn the nut until two or three threads are visible on the end of the screw.
 - b Insert the screws into the holes of the bracket as shown in Step 3—Preparing the Mounting Bracket. Tighten the screws only until the ends of the threads are flush with the back of the bracket.
 - c If you are using the hexagonal nuts, you can use a nut driver to tighten them further. Alternatively, use the screwdriver to continue tightening the screws until the nuts lock tightly into place. (Make sure the ends of the screws do not stick out from the bracket.)

Figure 39. Step 3—Preparing the Mounting Bracket

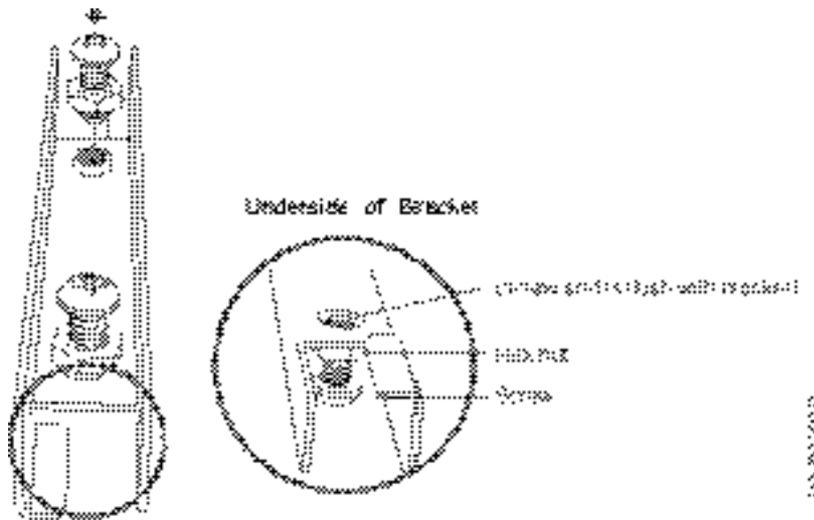

- 4 Turn the MP-52/WSR-8001 over, align the screwheads over the screw openings on the bottom of the MP-52/WSR-8001, and place the screwheads into the screw holes so that the bracket is flush with the MP-52/WSR-8001. (See Step 4—Attaching the Mounting Bracket to the MP.)

Figure 40. Step 4—Attaching the Mounting Bracket to the MP

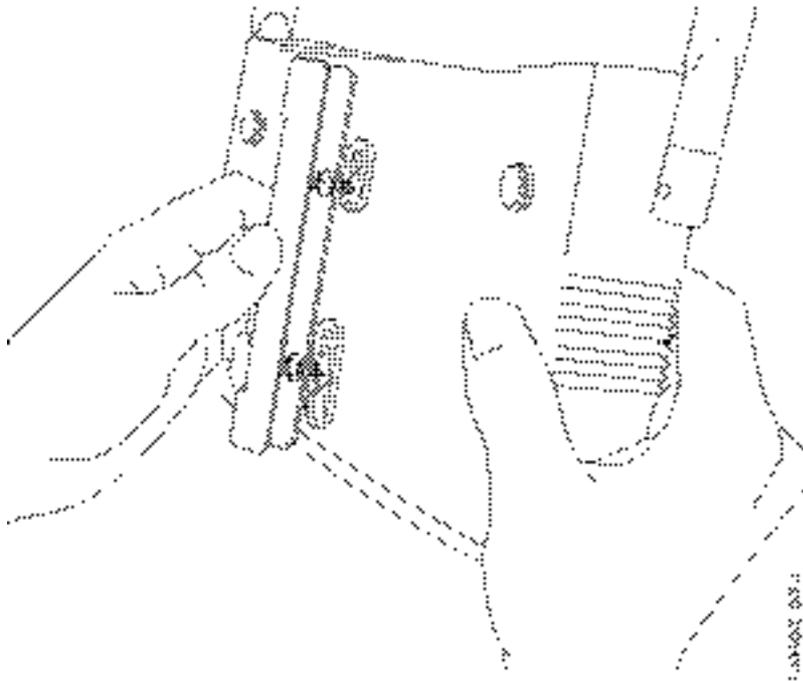


- 5 Firmly push the bracket toward the rear of the MP-52/WSR-8001 to lock the bracket into place.
- 6 Lift the MP against the T-bar and twist the MP until the bracket fits completely onto the T-bar, as shown in Step 6—Attaching the MP to the T-bar.

Caution! To prevent possible damage to the MP, make sure the device is fully locked onto the bracket before letting go of it.

6

Figure 41. Step 6—Attaching the MP to the T-bar

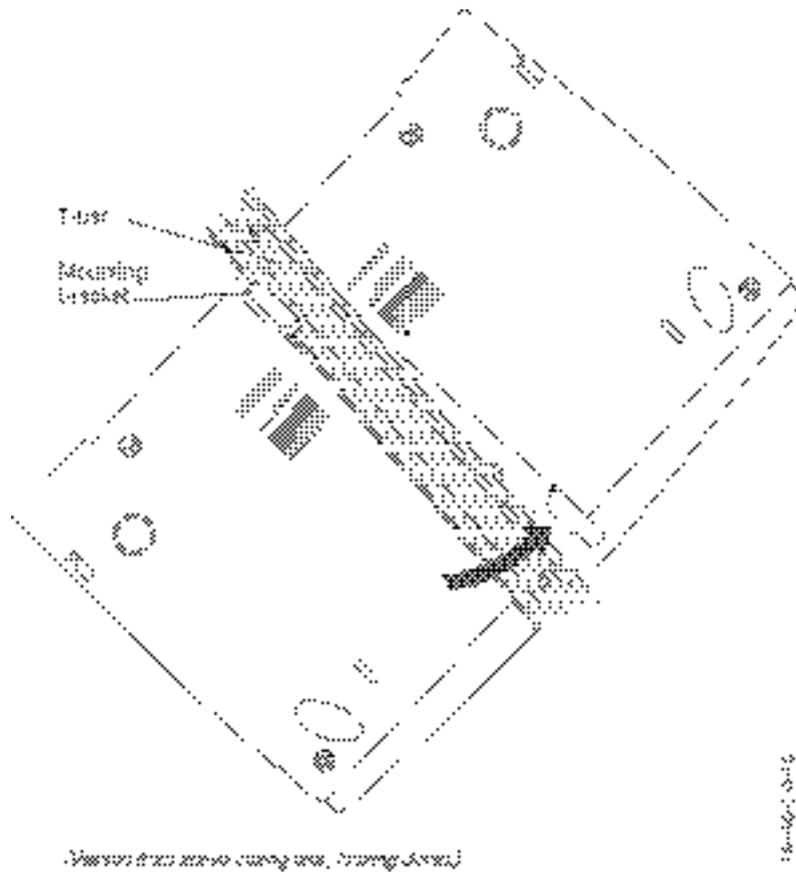


- 7 Plug the Cat 5 cable into the LAN connector on the back.
- 8 If the other end of the Cat 5 cable is not already connected and the link activated, go to [Connecting an MP](#) . Otherwise, go to [Verifying MP](#) .

Solid Wall or Ceiling Installation

- 1 Drill two pilot holes 6 cm (23/8 inches) apart. To install the MP as shown below, place the holes vertically (not side to side).
- 2 Insert a mounting screw into each hole. Leave the screws about 6 mm (about 1/4 inch) above the surface. (Do not use the screws from the MP mounting kit. Use screws appropriate for anchoring the device to the wall or ceiling.)
- 3 With the front panel of the MP facing downward, align the screw holes on the bottom of the MP-52/WSR-8001 over the screws and slide the MP downward to secure it onto the screws, as shown in Step 3—Attaching the MP to the Wall or Ceiling.

Caution! To prevent possible damage to the MP, make sure the device is fully locked onto the screws before letting go of it.

3

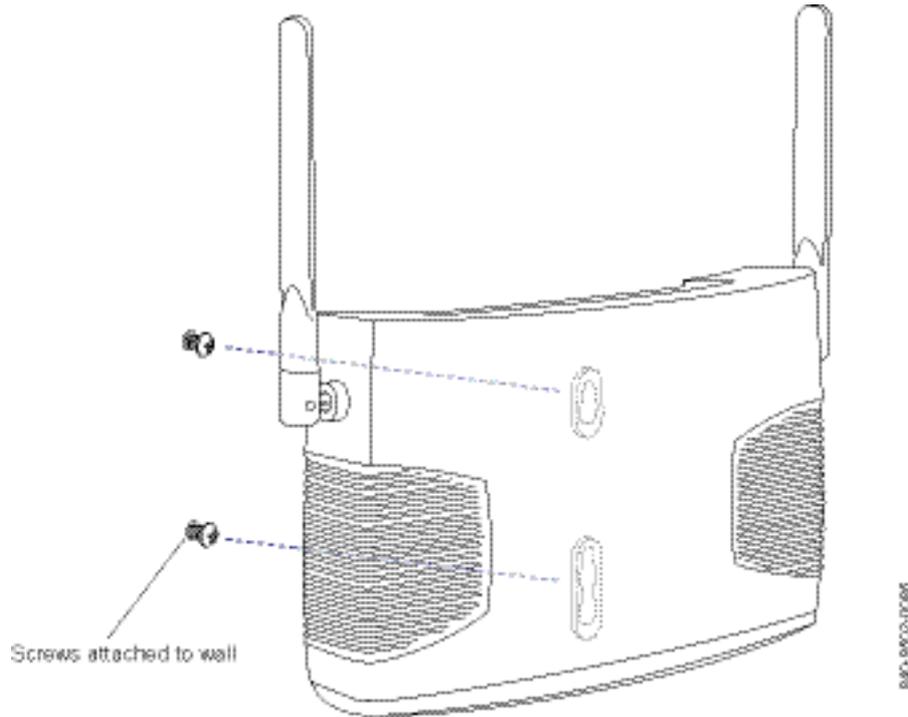Figure 42. Step 3—Attaching the MP to the Wall or Ceiling

- 4 If the other end of the Cat 5 cable is not already connected and the link activated, go to Connecting an MP . Otherwise, go to Verifying MP .

Tabletop Installation

- 1 Place the MP-52/WSR-8001 on the table.
- 2 Insert the Cat 5 cable(s) into the LAN connector on the rear of the MP.
- 3 If the other end of the Cat 5 cable is not already connected and the link activated, go to Connecting an MP . Otherwise, go to Verifying MP .

Connecting an MP to an MX Switch


You can connect an MP access point directly to an MX switch or indirectly to the switch through an intermediate Layer 2 or Layer 3 network.

- 1 To connect the MP directly to an MX switch, configure the MX switch port as an MP access port and use the following procedure to insert the cable into the MX switch and verify the link.
- 1 To connect the MP indirectly to an MX switch through the network, configure a Distributed MP connection on the MX switch.

You can use the CLI or RingMaster to configure an MP access port or Distributed MP connection. (See the *Trapeze Mobility System Software Configuration Guide* or the *Trapeze RingMaster Reference Manual*.)

10/100 Cat 5 Cable Installation shows how to insert a Cat 5 cable into 10/100 Ethernet port on an MX switch. Refer to this figure as you perform the procedure.

Figure 43. 10/100 Cat 5 Cable Installation

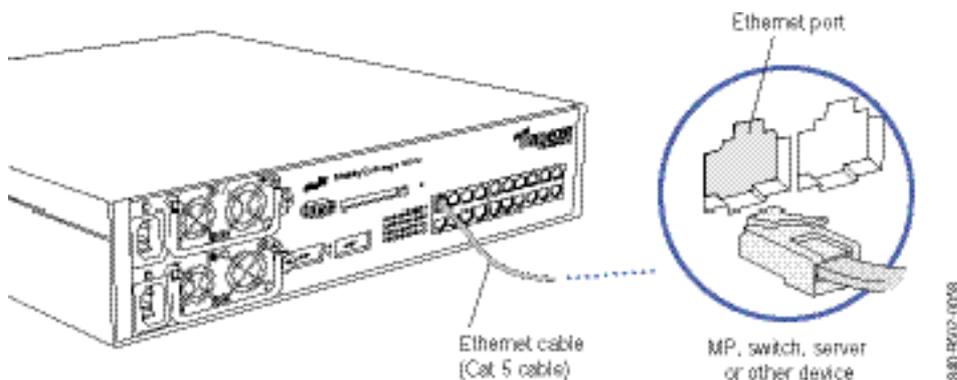

- 1 Insert a Cat 5 cable with a standard RJ-45 connector as shown in 10/100 Cat 5 Cable Installation. For connection to an MP access point, use a straight-through cable.
- 2 When the link is activated, observe the MP LED for the port on the MX switch:

MP LED Appearance	Meaning
Solid green	<p>For an MP access point's active link, all the following are true:</p> <ul style="list-style-type: none"> • MP access point has booted. • MP access point has received a valid configuration from the MX switch. • Management link with an MP access point is operational. • At least one radio is enabled or is in sentry mode. <p>For an MP access point's secondary link, the link is present.</p>
Alternating green and amber	MP access point is booting with an image received from the MX switch. After the access point boots and receives its configuration, this LED appearance persists until a radio is enabled or is placed in sentry mode.
Solid amber	PoE is on.
Blinking amber	MP is unresponsive or there is a PoE problem.
Unlit	PoE is off.

Note. An MX switch's 10/100 Ethernet ports are configured as wired network ports by default. You or the system administrator must change the port type for an MX port directly connected to an MP to activate the link. (See the [Trapeze Mobility Exchange Installation and Basic Configuration Guide](#).)

Verifying MP Health

After you install the MP access point and enable PoE on the Ethernet cable connected to the MP, you can easily verify the MP's status by observing the LEDs, particularly the health LED (MP-341 or MP-352) or the LINK LED (MP-52/WSR-8001). (See Figure 6 on page 14 or Figure 3 on page 10.)

The health or LINK LED indicates whether the MP access point is ready for operation.

- 1 If the LED is green and glowing steadily, the MP has been booted successfully by the MX switch and is ready for operation.
- 1 If the LED is not steadily glowing green, contact the system administrator for the MX switch or, if you are the system administrator, see Appendix A, "MP Troubleshooting," on page 63.

MP Troubleshooting

After you insert a Cat 5 cable into an MP access point's port connector and enable PoE on the cable, observe the device's health or LINK LED to determine the status of the connection with the MX switch.

- 1 If the LED is green and is glowing steadily, the MP has been booted successfully by the MX switch and is ready for operation.
- 1 If the LED is not steadily glowing green, see Health LED States .

(For descriptions of all the LEDs, see "Status LEDs" on page 14.)

Table 8. Health LED States

Health or LINK LED Appearance	Diagnosis	Remedy
-------------------------------	-----------	--------

Appendix A

Not solid green	MP radio needs to be enabled.	Enable at least one of the radios. If the LED is still not solid green, try the remedy listed in this table based on the LED's appearance.
Unlit	MP access point is not receiving power.	<p>Check the Cat 5 cable connection(s).</p> <p>For a direct connection to an MX switch:</p> <ul style="list-style-type: none">• Set the port type on the MX switch to an MP port.• Verify that Power over Ethernet (PoE) is enabled on the MX switch port connected to the MP access point. <p>For an indirect connection through the network:</p> <ul style="list-style-type: none">• Configure a Distributed MP connection on an MX switch.• Verify that a Trapeze-approved power injector is supplying power to the MP.
Slowly alternating green and amber (MP-341 or MP-352)	MP access point is booting with an image received from an MX switch.	Wait a few seconds for the boot process to complete. If this LED appearance persists, enable a radio or place a radio in sentry mode.

Solid amber (MP-341 or MP-352)	MP access point is waiting to receive boot instructions and a configuration file from an MX switch.	Wait a few seconds for the boot process to begin. If the LED remains amber, try the remedies for the other health LED appearances. If the LED still remains amber, make sure the MP access point is securely connected to an MX switch.
-----------------------------------	---	---

MP Technical Specifications

This appendix lists the technical specifications for the Trapeze Networks MP access point. MP lists the mechanical and compliance specifications. Unless otherwise noted, the values apply to all currently shipping MP models. (For detailed compliance information, see the [Trapeze Regulatory Information](#) document.) 802.11a Radio Specifications , 802.11b Radio Specifications , and 802.11g Radio Specifications list the radio specifications. MAC Address Allocations on MP lists the MAC address allocation schemes for MPs.

(For specifications for the MX switch, see the [Trapeze Mobility Exchange Installation and Basic Configuration Guide](#).)

Note. This Listed Accessory is designed and approved to be used only with Trapeze Networks Mobility Exchange (MX) models MX-20 and MX-8. (The MX-400 switch does not directly connect to the MP.)

Note. The MP access point radios are disabled by default and can be enabled only by the system administrator using the RingMaster management application or the MX switch's command-line interface (CLI).

Note. The radio frequency band, operating channels, and transmit power depend on the country of operation specified by the system administrator using RingMaster or the MX switch's CLI.

Table 9. MP Mechanical and Compliance Specifications

Specification	Description
Size	MP-341 and MP-352 (also applies to MP-101, MP-122, MP-241, MP-252, and MP-262): <ul style="list-style-type: none">• Diameter: 16.76 cm (6.6 inches)• Height: 4.69 cm (1.85 inches) MP-52/WSR-8001: <ul style="list-style-type: none">• Width: 22.00 cm (8.66 inches)• Depth: 14.50 cm (5.71 inches)• Height: 3.50 cm (1.38 inches)

Weight	<p>MP-341 and MP-352 (also applies to MP-101, MP-122, MP-241, MP-252, and MP-262):</p> <ul style="list-style-type: none"> • Without mounting bracket: 0.35 kg (12.5 ounces) • With mounting bracket: 0.40 kg (14 ounces) <p>MP-52/WSR-8001:</p> <ul style="list-style-type: none"> • 0.50 kg (17.6 ounces)
Operating Temperature	0° C to +50° C (32° F to 122° F)
Storage Temperature	-20° C to +70° C (-4° F to +158° F)
Humidity	10% to 95% noncondensing
Power over Ethernet (PoE)	41 VDC to 49 VDC (46 VDC nominal)
Status indicators	<p>Health/MX and radio LEDs</p> <p>(For descriptions of the LEDs, see “Status LEDs” on page 14.)</p>
Wired network ports	<p>MP-341 and MP-352 (also applies to MP-101, MP-122, MP-241, MP-252, and MP-262):</p> <ul style="list-style-type: none"> • Two RJ-45 ports for 10/100BASE-T Ethernet and Power over Ethernet (PoE) <p>MP-52/WSR-8001:</p> <ul style="list-style-type: none"> • One RJ-45 port for 10/100BASE-T Ethernet and Power over Ethernet (PoE)
Standards compliance	<p>IEEE 802.11</p> <p>IEEE 802.11a</p> <p>IEEE 802.11b</p> <p>IEEE 802.11g</p> <p>IEEE 802.11af (MP-341, MP-352, and MP-52/WSR-8001)</p>

only)

Safety and
electromagnetic
compliance

MP-341 and MP-352 (also applies to MP-101, MP-122,
MP-241, MP-252, and MP-262):

- FCC Part 15, UL 60950
- IC Part 15, CSA 22.2 N0-950, RSS-139-1 and RSS-210
- ETS 300 328 (2.4 GHz) and 301 893 (5 GHz), EN 301 489-17
- R&TTE Directive 1999/5/EC
- TELEC, ARIB T66
- GBT-15941-1995, GBT-16841-1997
- LP0002

MP-52/WSR-8001:

- FCC Part 15
- IC Part 15, RSS-139-1 and RSS-210
- ETS 300 328 (2.4 GHz) and 301 893 (5 GHz),
EN 60101-1-2 (1993)
- R&TTE Directive 1999/5/EC

Encryption

Wi-Fi Protected Access (WPA)
Advanced Encryption Standard (AES)
40-bit/104-bit Wired-Equivalent Privacy (WEP)

General

Power-save mode supported
 Transmit power control in 1 dBm increments
 Supports up to 250 clients per radio
 Wi-Fi Certified for 802.11a and 802.11b



Table 10. 802.11a Radio Specifications

Specification	Description
Antenna type	MP-341 and MP-352 (also applies to MP-101, MP-122, MP-241, MP-252, and MP-262): <ul style="list-style-type: none"> • Integrated diversity omnidirectional antennas MP-52/WSR-8001: <ul style="list-style-type: none"> • External attached dipole antennas
Antenna gain	Internal (MP-341 and MP-352; also applies to MP-101, MP-122, MP-241, MP-252, and MP-262): <ul style="list-style-type: none"> • 2 dBi External (MP-52/WSR-8001):

Appendix B

- 2 dBi

Frequency band	5.15 GHz to 5.85 GHz based on country regulations
Operating channels	Based on the country of operation specified by the system administrator
Association rates	54 Mbps, 48 Mbps, 36 Mbps, 24 Mbps, 18 Mbps, 12 Mbps, 9 Mbps, and 6 Mbps, with automatic fallback
Modulation	Orthogonal frequency division multiplexing (OFDM)
Transmit power	Based on the country of operation specified by the system administrator

Table 11. 802.11b Radio Specifications

Specification	Description
Antenna type	MP-341 and MP-352 (also applies to MP-101, MP-122, MP-241, and MP-252): <ul style="list-style-type: none">• Integrated diversity omnidirectional antennas MP-341 and MP-352 (also applies to MP-262): <ul style="list-style-type: none">• External sectorized or directional antenna MP-52/WSR-8001: <ul style="list-style-type: none">• External attached dipole antennas

Antenna gain	<p>Internal (MP-341 and MP-352; also applies to MP-101, MP-122, MP-241, and MP-252):</p> <ul style="list-style-type: none"> • 2 dBi <p>External (MP-341, MP-352, and MP-262):</p> <ul style="list-style-type: none"> • 6 dBi or more (ANT-1180); 7 dBi or more (ANT-1120); greater than 10 dBi (ANT-1060) <p>External (MP-52/WSR-8001):</p> <ul style="list-style-type: none"> • 2 dBi
Frequency band	2.4 GHz to 2.4835 GHz based on country regulations
Operating channels	Based on the country of operation specified by the system administrator
Association rates	11 Mbps, 5.5 Mbps, 2 Mbps, and 1 Mbps, with automatic fallback
Modulation	Direct-sequence spread-spectrum (DSSS)
Transmit power	Based on the country of operation specified by the system administrator

Table 12. 802.11g Radio Specifications

Specification	Description
---------------	-------------

Appendix B

Antenna type	MP-341 and MP-352 (also applies to MP-101, MP-122, MP-241, and MP-252): <ul style="list-style-type: none">• Integrated diversity omnidirectional antennas MP-341 and MP-352 (also applies to MP-262): <ul style="list-style-type: none">• External sectorized or directional antenna MP-52/WSR-8001: <ul style="list-style-type: none">• External attached dipole antennas
Antenna gain	Internal (MP-341 and MP-352; also applies to MP-101, MP-122, MP-241, and MP-252): <ul style="list-style-type: none">• 2 dBi External (MP-341, MP-352, and MP-262): <ul style="list-style-type: none">• 6 dBi or more (ANT-1180); 7 dBi or more (ANT-1120); greater than 10 dBi (ANT-1060) External (MP-52/WSR-8001): <ul style="list-style-type: none">• 2 dBi
Frequency band	2.4 GHz to 2.4835 GHz based on country regulations
Operating channels	Based on the country of operation specified by the system administrator
Association rates	54 Mbps, 48 Mbps, 36 Mbps, 24 Mbps, 18 Mbps, 12 Mbps, 9 Mbps, and 6 Mbps, with automatic fallback
Modulation	Orthogonal frequency division multiplexing (OFDM)
Transmit power	Based on the country of operation specified by the system administrator

MAC Addresses

All MP access point models except MP-101 and MP-122 are assigned blocks of 64 MAC addresses each. Each radio has 32 MAC addresses and can therefore support up to 32 SSIDs, with one MAC address assigned to each SSID as its BSSID.

Models MP-101 and MP-122 are assigned blocks of four MAC addresses each. Each radio on models MP-101 and MP-122 is assigned one MAC address, which is shared by both the clear SSID and the encrypted SSID.

An MP access point's MAC address block is listed on a label on the back of the access point. If the MP is already deployed and running on the network, you can display the MAC address assignments by using the **show {ap | dap} status** command.

All MAC addresses on an MP are assigned based on the MP's base MAC address, as described in MAC Address Allocations on MP .

Table 13. MAC Address Allocations on MP Access Points

MP access point	All models	<ul style="list-style-type: none"> The MP has a base MAC address. All the other addresses are assigned based on this address.
Ethernet Ports	All models	<ul style="list-style-type: none"> Ethernet port 1 equals the MP base MAC address. Ethernet port 2 (if the MP model has one) equals the MP base MAC address + 1.

Radios and SSIDs	MP-352	<ul style="list-style-type: none"> The 802.11b/g radio equals the MP base MAC address + 2.
	MP-262	<ul style="list-style-type: none"> The BSSIDs for the SSIDs configured on the 802.11b/g radio end in even numbers. The first BSSID is equal to the MP's base MAC address. The next BSSID is equal to the MP's base MAC address + 2, and so on.
	MP-252	<ul style="list-style-type: none"> The 802.11a radio equals the MP base MAC address + 3.
	MP-52/WS R-8001	<ul style="list-style-type: none"> The BSSIDs for the SSIDs configured on the 802.11b/g radio end in odd numbers. The first BSSID is equal to the MP's base MAC address + 1. The next BSSID is equal to the MP's base MAC address + 3, and so on.
	<hr/>	
	MP-341	<ul style="list-style-type: none"> The radio equals the MP base MAC address + 2. The BSSIDs for the SSIDs configured on the radio end in even numbers. The first BSSID is equal to the MP's base MAC address. The next BSSID is equal to the MP's base MAC address + 2, and so on.
	MP-241	<ul style="list-style-type: none"> The radio equals the MP base MAC address + 2. The BSSIDs for the SSIDs configured on the radio end in even numbers. The first BSSID is equal to the MP's base MAC address. The next BSSID is equal to the MP's base MAC address + 2, and so on.
	<hr/>	
	MP-122	<ul style="list-style-type: none"> The 802.11b radio equals the base MAC address + 2, for both the clear and encrypted SSIDs. The 802.11a radio equals the base address + 3, for both the clear and encrypted SSIDs.
	<hr/>	
MP-101	<ul style="list-style-type: none"> The radio equals the base MAC address + 2, for both the clear and encrypted SSIDs. 	

Translated Warning Conventions and Warnings

The following warning conventions and warnings apply to this manual.

Warning Conventions

Warning! This situation or condition can cause injury.

Waarschuwing! Deze situatie of omstandigheid kan letsel veroorzaken.

Warnung! Diese Situation oder dieser Zustand kann zu Verletzungen führen.

Avertissement ! Cette situation ou cette condition peuvent provoquer des blessures.

Aviso Esta situación o condición puede causar lesiones.

Warning! High voltage. This situation or condition can cause injury due to electric shock.

Waarschuwing! Hoog voltage. Deze situatie of omstandigheid kan letsel veroorzaken door elektrische schokken.

Warnung! Hochspannung. Diese Situation oder dieser Zustand kann einen Elektroschock verursachen.

Avertissement ! Haute tension. Cette situation ou cette condition peuvent provoquer des blessures dues à des décharges électriques.

Aviso Alta tensión. Esta situación o condición puede causar lesiones por descarga eléctrica.

Warning! Radiation. This situation or condition can cause injury due to improper handling of fiber-optic equipment.

Waarschuwing! Straling. Deze situatie of omstandigheid kan letsel veroorzaken door onjuist gebruik van glasvezelapparatuur.

Warnung! Strahlung. Diese Situation oder dieser Zustand kann durch falschen Umgang mit glasfaserbasierten Geräten zu Verletzungen führen.

Avertissement ! Radiation. Cette situation ou cette condition peuvent provoquer des blessures dues à une manipulation inappropriée d'appareils équipés de fibres optiques.

Aviso Radiación. Esta situación o condición puede causar lesiones debido a un manejo inadecuado del equipamiento de fibra óptica.

Qualified Service Personnel Warning

Warning! Installation must be performed by qualified service personnel only. Read and follow all warning notices and instructions marked on the product or included in the documentation. Before installing the product, read the [Trapeze Regulatory Information](#) document.

Waarschuwing! De installatie mag alleen worden uitgevoerd door bevoegd onderhoudspersoneel. Het is essentieel dat u kennis neemt van alle waarschuwingen en instructies aangebracht op het product zelf en/of opgenomen in de documentatie. Voordat u het product installeert, dient u [Trapeze Regulatory Information](#) in zijn geheel te hebben gelezen.

Warnung! Die Installation darf nur von einem qualifizierten Kundendienstmitarbeiter vorgenommen werden. Lesen Sie alle Warnhinweise und Anweisungen auf dem Produkt oder in der Dokumentation und befolgen Sie sie. Bevor Sie das Produkt installieren, sollten Sie [Trapeze Regulatory Information](#) vollständig lesen.

Avertissement ! L'installation doit être effectuée uniquement par des techniciens qualifiés. Lisez et suivez toutes les notices d'avertissement et les instructions figurant sur le produit ou comprises dans la documentation. Lisez l'[Trapeze Regulatory Information](#) avant d'installer ce produit.

Aviso Solo puede realizar la instalación personal cualificado de asistencia técnica. Lea y siga todas las notas de advertencia e instrucciones indicadas en el producto o incluidas en la documentación. Antes de instalar el producto, lea [Trapeze Regulatory Information](#).

Radio Safety Warnings

Warning! Do not operate the MP access point near unshielded blasting caps or in an otherwise explosive environment unless the device has been modified for such use by qualified personnel.

Waarschuwing! Het MP-toegangspunt mag niet worden gebruikt in de nabijheid van onafgeschermdde slaghoedjes of in een andere explosieve omgeving tenzij het apparaat voor een dergelijk gebruik is aangepast door bevoegd personeel.

Warnung! Die MP-Zugriffspunkte sollten nicht neben ungeschirmten Sprengkapseln betrieben oder in einer explosiven Umgebung eingesetzt werden. Für einen solchen Einsatz muss das GerSt von einem qualifizierten Kundendienstmitarbeiter entsprechend angepasst werden.

Avertissement ! Le point d'accès MP ne doit pas fonctionner près de détonateurs non blindés ou dans un autre environnement qui présente un risque d'explosion, à moins que cet appareil n'ait été adapté en vue d'une telle utilisation par du personnel qualifié.

Aviso No utilice el punto de acceso de MP cerca de detonadores no blindados ni en un entorno explosivo, a menos que haya sido modificado el dispositivo con ese fin por personal cualificado.

Warning! Do not touch or move the MP access point when the antennas are transmitting or receiving.

Waarschuwing! Het MP-toegangspunt mag niet worden aangeraakt of verplaatst terwijl de antennes uitzenden of ontvangen.

Warnung! Berühren oder bewegen Sie den MP-Zugriffspunkt nicht, während die Antennen senden oder empfangen.

Avertissement ! Ne touchez ni ne déplacez le point d'accès MP lorsque les antennes sont en cours de transmission ou de réception.

Aviso No toque ni mueva el punto de acceso de MP cuando las antenas están transmitiendo o recibiendo señales.

Warning! Do not hold any radio device so that the antenna is very close to or touching the face, eyes, or other exposed body part while the device's radio antenna is transmitting.

Waarschuwing! De antenne van een apparaat dat radiogolven aan het uitzenden is, mag nooit vlakbij of tegen het gezicht, de ogen of een andere onbedekt deel van het lichaam worden gehouden.

Warnung! Halten Sie die drahtlosen Geräte während der Übertragung mit der Antenne nicht nahe ans Gesicht, an die Augen oder an andere ungeschützte Körperteile und berühren Sie die Antenne nicht.

Avertissement ! Ne maintenez pas l'antenne d'un appareil radio près du visage, des yeux ou d'une autre partie du corps exposée ou en contact avec ces parties du corps, lorsqu'elle est en cours de transmission.

Aviso No coloque ningún dispositivo de radio demasiado cerca de la antena ni en contacto con la cara, los ojos u otras partes del cuerpo que estén al descubierto mientras la antena de radio del dispositivo esté transmitiendo señales.

Warning! Before using a wireless device in a hazardous location, consult the local codes, national codes, and safety directors of the location for usage constraints.

Waarschuwing! Voordat u een draadloos apparaat gebruikt op een gevaarlijke locatie, dient u de plaatselijke en landelijke voorschriften, en de veiligheidsvoorschriften voor de locatie te raadplegen over eventuele gebruiksbependingen.

Warnung! Bevor Sie drahtlose GerŠte an einem gefŠhrlichen Standort einsetzen, sollten Sie die lokalen und nationalen Regelungen und Sicherheitsbestimmungen des Standorts auf NutzungsbeschrŠnkungen ŸberprŸfen.

Avertissement ! Avant d'utiliser un appareil sans fil dans un endroit dangereux, consultez la rŽglementation locale et nationale ainsi que les responsables de la sŽcuritŠ de l'endroit concernŠ pour obtenir des informations relatives aux conditions et aux limites d'utilisation de cet appareil.

Aviso Antes de utilizar un dispositivo inalƒmbrico en una ubicaci—n peligrosa, consulte los c—digos locales y nacionales y a los responsables de seguridad de la ubicaci—n para conocer las restricciones de uso.

Lightning Warning

Warning! Do not connect or disconnect cables or otherwise work with the MP access point hardware during periods of lightning activity.

Waarschuwing! Tijdens onweer met bliksem mogen kabels nooit worden aangekoppeld aan of losgekoppeld van het MP-toegangspunt of andere werkzaamheden aan het MP-toegangspunt worden verricht.

Warnung! Verbinden und trennen Sie während eines Gewitters keine Kabel zum MP-Zugriffspunkt und arbeiten Sie nicht damit.

Avertissement ! Ne connectez pas et ne déconnectez pas de câbles et, de manière générale, ne travaillez pas sur le matériel du point d'accès MP lorsqu'il y a un risque de foudre.

Aviso No conecte ni desconecte cables, ni tampoco trabaje con el hardware del punto de acceso de MP durante una tormenta eléctrica.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

For operation within 5.15 ~ 5.25GHz frequency range, it is restricted to indoor environment, and the antenna of this device must be integral.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Senao declared that WSR-8001 is limited in CH1~11 from 2400 to 2483.5 MHz by specified firmware controlled in USA.

Industry Canada Statement

Operation is subject to the following two conditions:

- 1) this device may not cause interference and
- 2) this device must accept any interference, including interference that may cause undesired operation of the device

To prevent radio interference to the licensed service (i.e. co-channel Mobile Satellite systems) this device is intended to be operated indoors and away from windows to provide maximum shielding. Equipment (or its transmit antenna) that is installed outdoors is subject to licensing.

Because high power radars are allocated as primary users (meaning they have priority) in 5250-5350 MHz, these radars could cause interference and/or damage to license exempt LAN devices.

Index

A

- access point. See MP (Mobility Point)
- activating an MP 59
- advisory notices, explanations of 3
- ANT-1060 12
- ANT-1120 12
- ANT-1180 12
- antennas, external 12

B

- bracket 13

C

- cable ports 11
- cable requirements 25
 - solid surface 45
- Category 5 cables 11
 - strain relief 45
- ceiling installation
 - drop tiles, MP-341 and MP-352 35
 - solid, MP-341 and MP-352 45
 - solid, MP-52/WSR-8001 58
 - suspended, flush tiles, MP-341 and MP-352 29
 - suspended, flush tiles, MP-52/WSR-8001 54
- connections
 - dual-homed 11
 - external antenna 53
 - LEDs 60
 - MX (Mobility Exchange) 59
 - troubleshooting 63
- conventions, text and syntax 4
- customer service iii

D

- documentation conventions 4

Index

- documentation, product 2
- drop ceiling installation, MP-341 and MP-352 35
- dual-homed connections 11

E

Ethernet

- cable requirements 25
- connections to an MX switch, instructions 59
- connections to an MX switch, MP port locations 11
- LEDs 60
- ports 11

external antenna

- connections to an MP, instructions 53

external antennas 12

F

flush ceiling installation 29, 54

H

hardware

- bottom view 10
- features 9
- inventory 20
- mounting bracket 13
- required, list of, MP-341 and MP-352 27
- required, list of, MP-52/WSR-8001 54
- top view 9, 10, 11

health LED

- description 15
- troubleshooting with 63
- verifying MP health with 61

I

installation

- junction box, MP-341 and MP-352 41
- MP 19
- MP, model MP-341 and MP-352 27
- MP, model MP-52/WSR-8001 54

- requirements 23
- requirements, tools, MP-341 and MP-352 27
- requirements, tools, MP-52/WSR-8001 54
- solid surface, MP-341 and MP-352 45
- solid surface, MP-52/WSR-8001 58
- suspended ceilings, flush tiles, MP-341 and MP-352 29
- suspended ceilings, flush tiles, MP-52/WSR-8001 54
- suspended ceilings, MP-341 and MP-352 35
- tabletop, MP-341 and MP-352 50
- tabletop, MP-52/WSR-8001 59
- T-bar ceilings. See suspended ceilings
- warnings, cables 25
- warnings, radio 24
- warnings, service 7
- warnings, translations 75

IP addresses 73

J

- junction box installation
 - MP-341 and MP-352 41

L

- LEDs 14
 - health 15, 61, 63
 - LINK (MP-52/WSR-8001) 16
 - MP (on MX) 60
 - power (MP-52/WSR-8001) 16
 - radio 15, 16
- LINK LED (MP-52/WSR-8001)
 - description 16
- links
 - dual-homed 11
 - LEDs 60
 - MP 60
 - troubleshooting 63

M

- MAC addresses 73
- manuals, product 2

- Mobility Exchange. See MX
- Mobility Point. See MP
- model numbers
 - external antennas 12
 - MP access points 8
- mounting bracket 13
- mounting options 13
- MP (Mobility Point)
 - description of 7
 - installation 19
 - installation, model MP-341 and MP-352 27
 - installation, model MP-52/WSR-8001 54
 - specifications 67
 - troubleshooting 63
 - warnings 75
- MP-101 8
- MP-122 8
- MP-241 8
- MP-252 8
- MP-262 8
- MP-341 8
- MP-352 8
- MP-52/WSR-8001 8
- MX (Mobility Exchange)
 - connections 17, 59
 - MP LEDs 60
 - recommendation 23

N

- network plan, RingMaster 23

P

- PoE (Power over Ethernet)
 - dual-homed connections 12
 - pin signals 26
 - specifications 68
 - use with Trapeze devices only 23
- ports 11
- power LED (MP-52/WSR-8001)

- description 16
- product documentation 2

R

- radio LEDs 15, 16
- radios
 - default state 9
 - health 63
 - MP models 8
 - radio LEDs 15, 16
 - specifications 67
 - status 15, 16
 - troubleshooting 63
 - warnings 24
- redundancy 11
- requirements 23
 - cables 25
 - hardware, MP-341 and MP-352 27
 - hardware, MP-52/WSR-8001 54
 - tools, MP-341 and MP-352 27
 - tools, MP-52/WSR-8001 54
- RingMaster
 - wall installation recommendations 24
 - work order 23
- RJ-45s 11

S

- safety notices, explanations of 3
- solid surface installation
 - MP-341 and MP-352 45
 - MP-52/WSR-8001 58
- specifications 67
- status LEDs. See LEDs
- status lights. See LEDs
- suspended ceilings, installation
 - drop tiles, MP-341 and MP-352 35
 - flush tiles, MP-341 and MP-352 29
 - flush tiles, MP-52/WSR-8001 54
- switch. See MX (Mobility Exchange)
- syntax conventions 4

T

- tabletop installation
 - MP-341 and MP-352 50
 - MP-52/WSR-8001 59
- TAC (Technical Assistance Center) iii
- T-bar ceilings. See suspended ceilings
- Technical Assistance Center iii
- technical specifications 67
- technical support iii
- tools, MP-341 and MP-352 27
- tools, MP-52/WSR-8001 54
- translated warnings 75
- Trapeze customer service iii
- Trapeze Networks Mobility System 1
- troubleshooting 63

U

- universal mounting bracket 13
- unpacking an MP 20

W

- wall installation
 - junction box, MP-341 and MP-352 41
 - recommendations 24
 - solid, MP-341 and MP-352 45
 - solid, MP-52/WSR-8001 58
- warnings
 - cable 25
 - installation 7
 - radio 24
 - translations 75
- work order, RingMaster 23