

# PHICOMM

## User Manual

300Mbps Wireless N NAS Router

**FWR-714U**

## Copyright Statement

**PHICOMM** is the registered trademark of Shanghai Feixun Communication Co., Ltd. Other trademark or trade name mentioned herein are the trademark or registered trademark of the company. Copyright of the whole product as integration, including its accessories and software, belongs to Shanghai Feixun Communication Co., Ltd. Without the permission of Shanghai Feixun Communication Co., Ltd., individual or party is not allowed to copy, plagiarize, imitate or translate it into other languages.

All the photos and product specifications mentioned in this manual are for references only, as the upgrading of software and hardware, there will be changes. And if there are changes, PHICOMM is not responsible for informing in advance. If you want to know more information about our products, please visit our website at [www.phicomm.com](http://www.phicomm.com).

# CONTENTS

<b>Chapter 1: Introduction</b> .....	<b>1</b>
Product Overview .....	1
Main Features .....	5
<b>Chapter 2: Installation</b> .....	<b>6</b>
Physical Connection.....	6
Configure the Computer's IP Address .....	7
Setup Wizard.....	14
<b>Chapter 3: Router Configuration</b> .....	<b>19</b>
Network Settings .....	19
WAN.....	21
LAN.....	22
MAC Address Clone.....	23
Dynamic DNS .....	23
Wireless Settings.....	23
Wireless Basic Settings .....	24
Wireless Security Settings .....	25
Wireless MAC Address Filter.....	27
Advanced Wireless Settings.....	28
Wireless Clients List .....	30

WPS Settings .....	30
WDS Settings.....	31
<b>DHCP Server .....</b>	<b>33</b>
DHCP.....	33
DHCP Clients list .....	34
Address Reservation.....	35
<b>NAT .....</b>	<b>36</b>
Port Forwarding.....	36
Port Triggering.....	37
DMZ Host.....	39
UPnP.....	41
Multicast Forwarding Settings .....	41
<b>Security Options.....</b>	<b>42</b>
Security Settings .....	42
Advanced Security Settings.....	43
Local Web Management .....	44
Remote Web Management.....	45
<b>Access Control .....</b>	<b>45</b>
MAC/IP/Port Filter .....	46
Web URL Filter .....	48

Routing Settings .....	48
Static Routing Table .....	48
Dynamic Routing Settings .....	49
IP Bandwidth Control .....	49
Storage .....	50
UserAdmin.....	51
Disk Management .....	52
FTP Server .....	52
SAMBA Server .....	53
PRINTER Server.....	54
MINIDLNA Server .....	54
DOWNLOAD.....	55
System Tools .....	56
Network Time Settings.....	56
Diagnostics.....	58
Wake On LAN.....	59
Factory Defaults .....	60
Backup and Restore.....	61
Password .....	61
System Log.....	62
Traffic Statistics.....	63

Firmware Upgrade.....	63
Reboot.....	64
Logout.....	64
<b>Chapter 4: Download Wizard .....</b>	<b>65</b>
Before you start.....	65
Configuration .....	65
<b>Chapter 5: Specification.....</b>	<b>77</b>
<b>Appendix A: Troubleshooting .....</b>	<b>79</b>
<b>Appendix B: Certification .....</b>	<b>83</b>
FCC Statement.....	83
<b>Appendix C: Glossary .....</b>	<b>85</b>

# Chapter 1: Introduction

## Product Overview


Thank you for choosing FWR-714U Wireless N Router.

FWR-714U 300Mbps Wireless N Router is an all-in-one router, ideal for home and SOHO users to share broadband Internet connection over the wired and wireless network. With the speed of up to 300Mbps, it can provide users with extraordinary smooth internet surfing, internet phone calling and on-line gaming.

The multi-functional USB port supports SAMBA server and DLNA (Digital Living Network Alliance), which makes file sharing and HD streaming become easier. Each user can enjoy easy printing after plugging in a USB printer into this wireless router. Additionally, this FWR-714U can keep downloading HTTP, FTP and BT files to the USB disk even when your PC is turned off.

Moreover, you can quickly setup the security at a simple push of the WPS (WiFi Protected Setup) button on the fashionable designed router, preventing your device from potential internet attacks.

### Front Panel

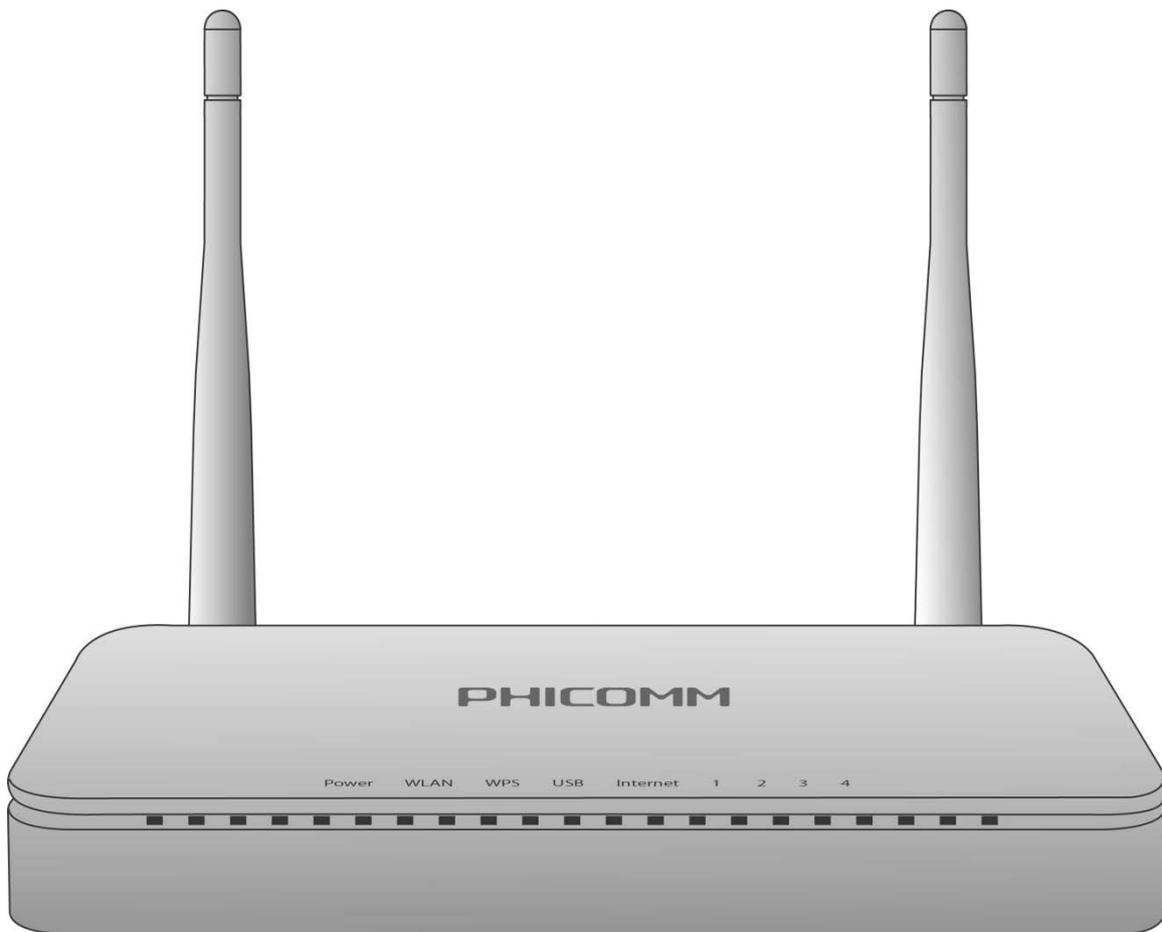

**Power LED:** The Power LED lights up when the Router is powered on. When the Router goes through its self-diagnostic mode during every boot-up, the LED flashes. When the diagnostic is complete, the LED is continuously lit.

**WLAN LED:** The Wireless LED lights up when the wireless feature is enabled. It flashes when the Router sends or receives data over the wireless network.

**WPS (Wi-Fi Protected Setup) LED:** If you have client devices (such as wireless adapters) that support Wi-Fi Protected Setup, then you can use the Wi-Fi Protected Setup button to automatically configure wireless security for your wireless network. To use Wi-Fi Protected Setup, refer to the section of **Wi-Fi Protected Setup**.


**USB LED:** The USB LED lights up when a storage device or a USB printer has connected to the USB port.

**Internet LED:** The Internet LED lights up when there is a connection made through the Internet port. It flashes to indicate network activity over the Internet port.

**LED (1~4):** These LEDs are corresponding with the LAN ports on the rear panel. The LED is continuously lit when the Router is connected to a device through that port. It flashes to indicate network activity over that port.

LED	Status	Indication
POWER	On	Power is on
	Off	Power is off
WLAN	On	The wireless function is enabled
	Off	The wireless function is disabled
	Blinking	Sending or receiving data over wireless network
WPS	On	A wireless device has been successfully connected to the network by WPS function
	Off	WPS function is disabled
	Blinking	A wireless device is connecting to the network by WPS function. This process will last in the first 2 minutes
USB	On	A storage device or printer has connected into the USB port
	Off	No storage device or printer is plugged into the USB port
	Blinking	Data is transmitting
Internet	On	Internet port is connected
	Off	Internet port is unconnected
	Blinking	Data is transmitting
LAN (Port 1-4)	On	LAN port is connected
	Off	LAN port is unconnected
	Blinking	Data is transmitting

Rear Panel

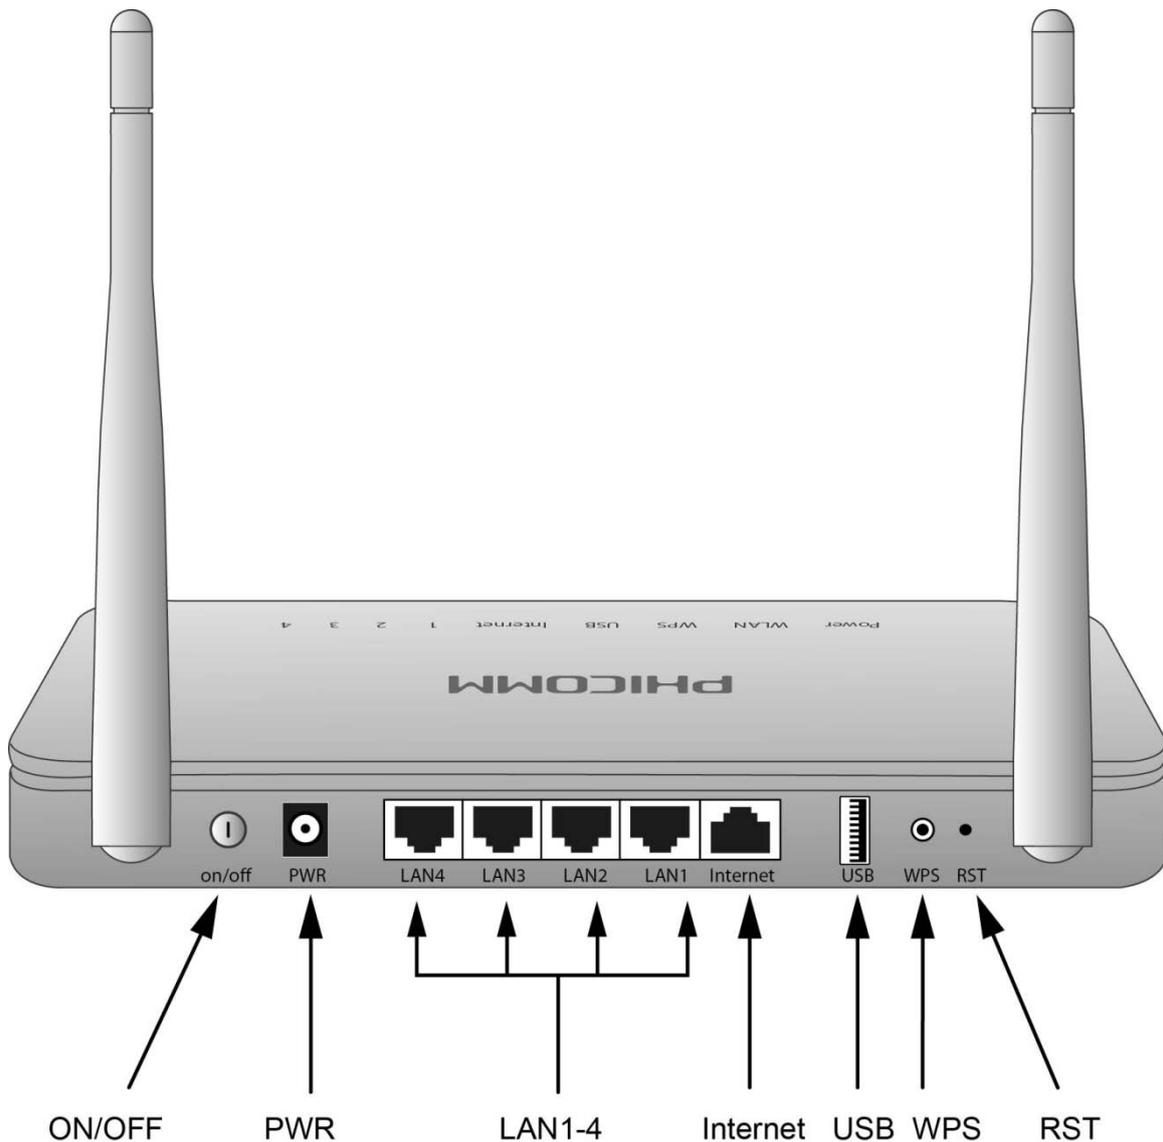

**ON/OFF:** The power on/off button.

**PWR:** The Power port connects to the included power adapter.

**LAN (1-4):** Using Ethernet cables, these Ethernet ports (4, 3, 2, 1) connect the Router to computers and other Ethernet network devices on your wired network.

**Internet:** Using an Ethernet cable (also called a network or Internet cable), the Internet port connects the Router to your Internet connection, which is typically a cable or Digital Subscriber Line (DSL) modem.

**USB:** Plug a storage device or a USB printer into this port.

**WPS:** Press the button and the WPS LED in front panel flashing, WPS function is enabled.


**RST:** Long press and hold the button for 8 seconds, the Router will restore to its factory default settings.

## Main Features

- Wireless N speed up to 300Mbps, further wireless coverage, more stable performance
- MIMO technology greatly increases the wireless range, sensitivity and stability
- File sharing, USB printing and High -definition video streaming via Multi-functional USB port
- Supports SAMBA and DLNA, stream videos, photos and music to your HDTV
- Supports offline download, 24 hours downloading even PC is turned off
- Supports IP Bandwidth Control, helps you to control the reasonable allocation of bandwidth to achieve optimum utilization, ensuring reliable Internet connection
- Quick wireless security setup by simply pressing the WPS button
- WDS wireless bridge provides seamless bridging to expand your wireless network
- Built-in firewall featured with IP, MAC, URL filtering and ARP attack prevention to protect your PC

# Chapter 2: Installation

## Physical Connection

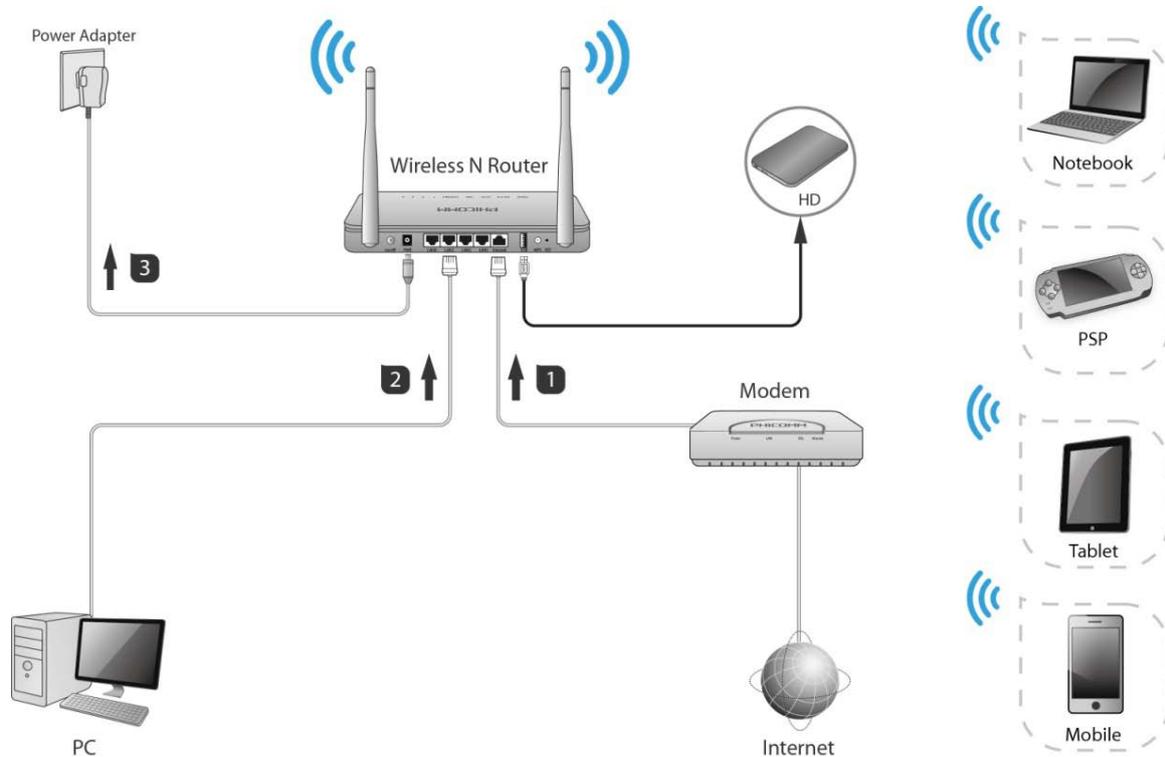

### Note:


- Actual product may be different as the picture, but the installation will be the same.
- Please use the included power adapter. Use of a different power adapter could cause damage and void the warranty for this product.
- Please ensure the **Power**, **WLAN**, **LAN** and **Internet** lights are ON when the installation finished successfully.

## Configure the Computer's IP Address


After connecting your PC to the router, please configure your PC's IP address.

For Windows XP/2000


- 1) Click **Start** > **Control Panel**.

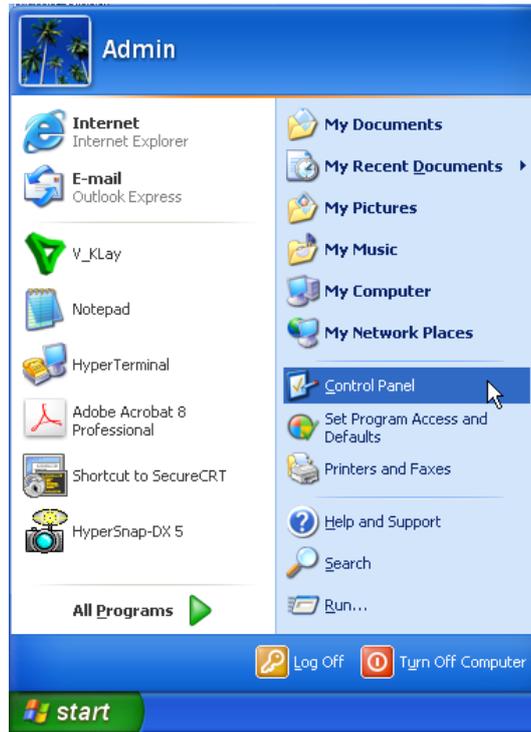


- 2) Select and double click **Network Connections**.

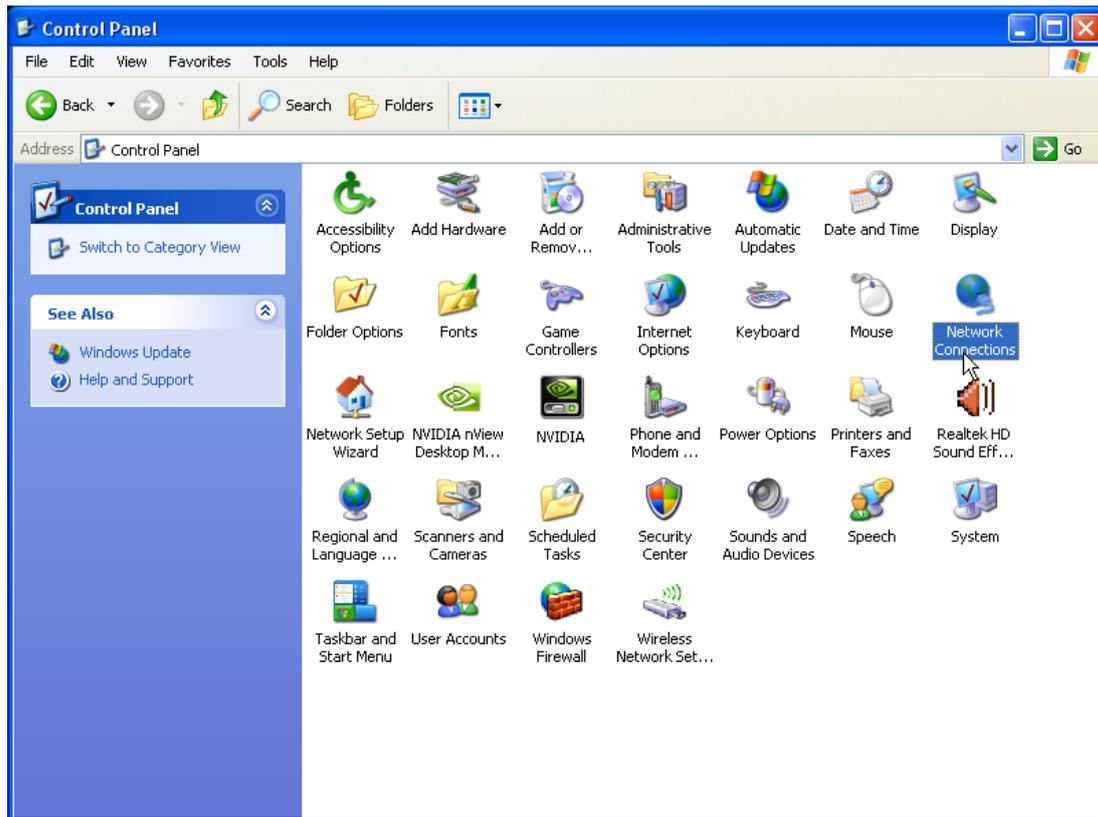


3) Right click **Local Area Connection** and then select **Properties**.

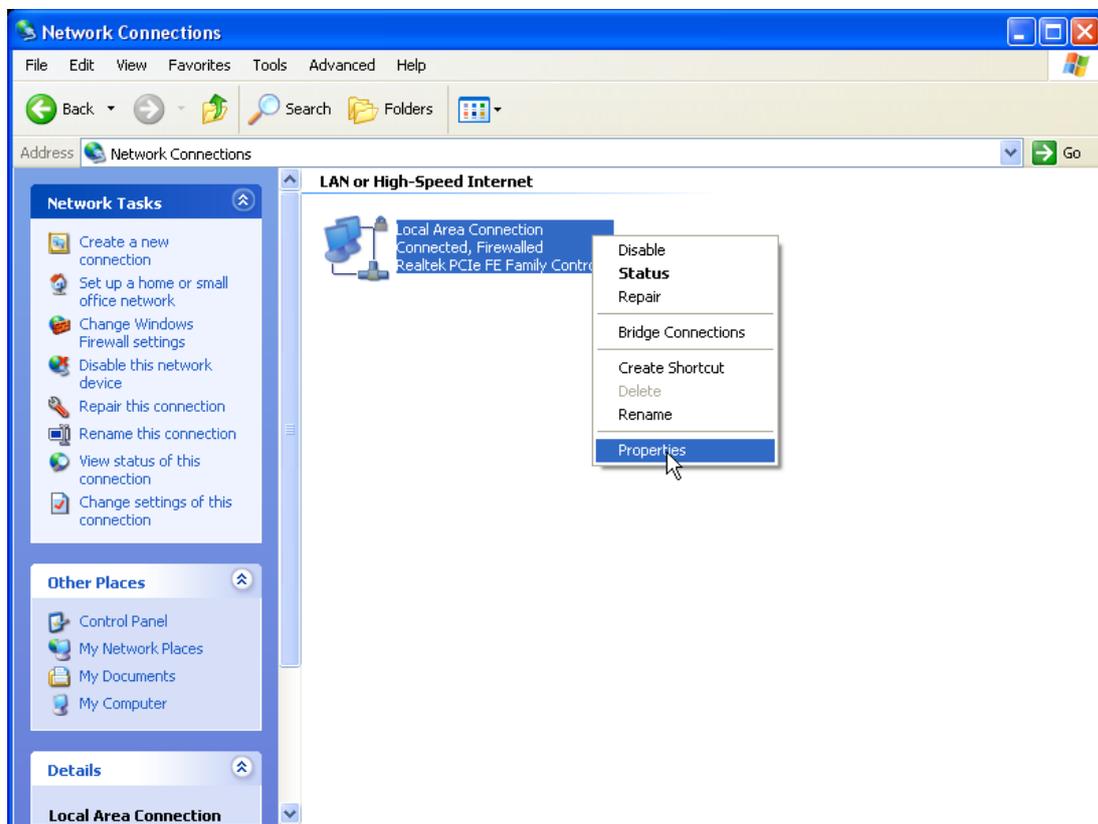

4) Select **Internet Protocol (TCP/IP)** and click **Properties**.

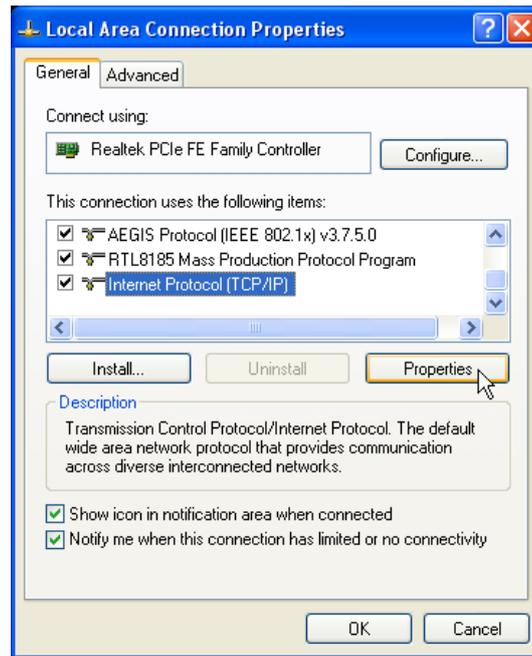


- 5) Select **Obtain an IP address automatically** and **Obtain DNS server address automatically**. Then click **OK**.

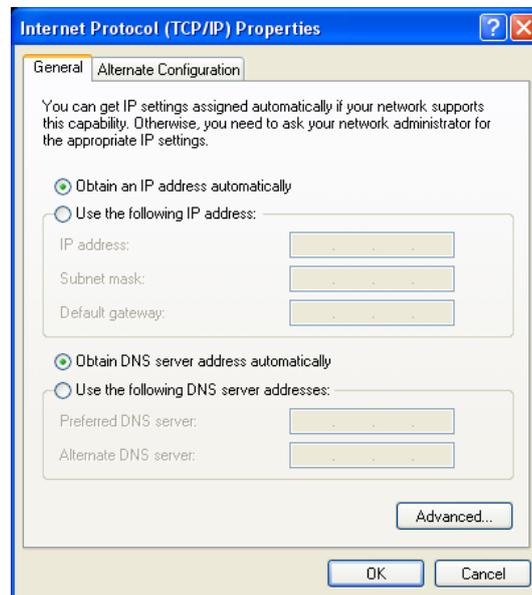


For Windows Vista/7


- 1) Click **Start>Control Panel**.

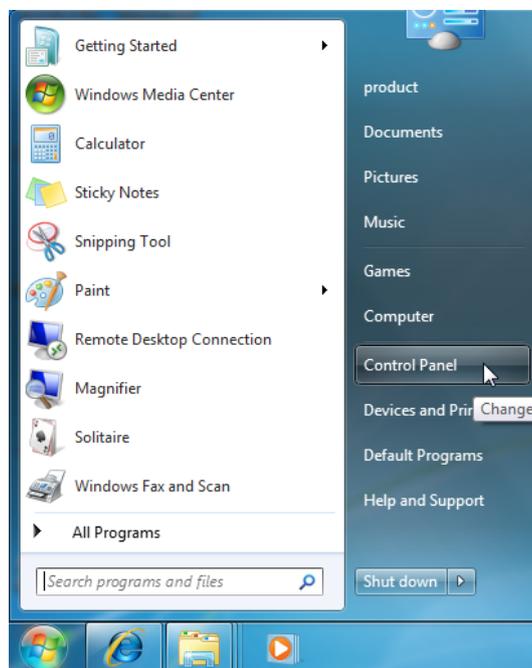


2) Click **Network and Internet**.

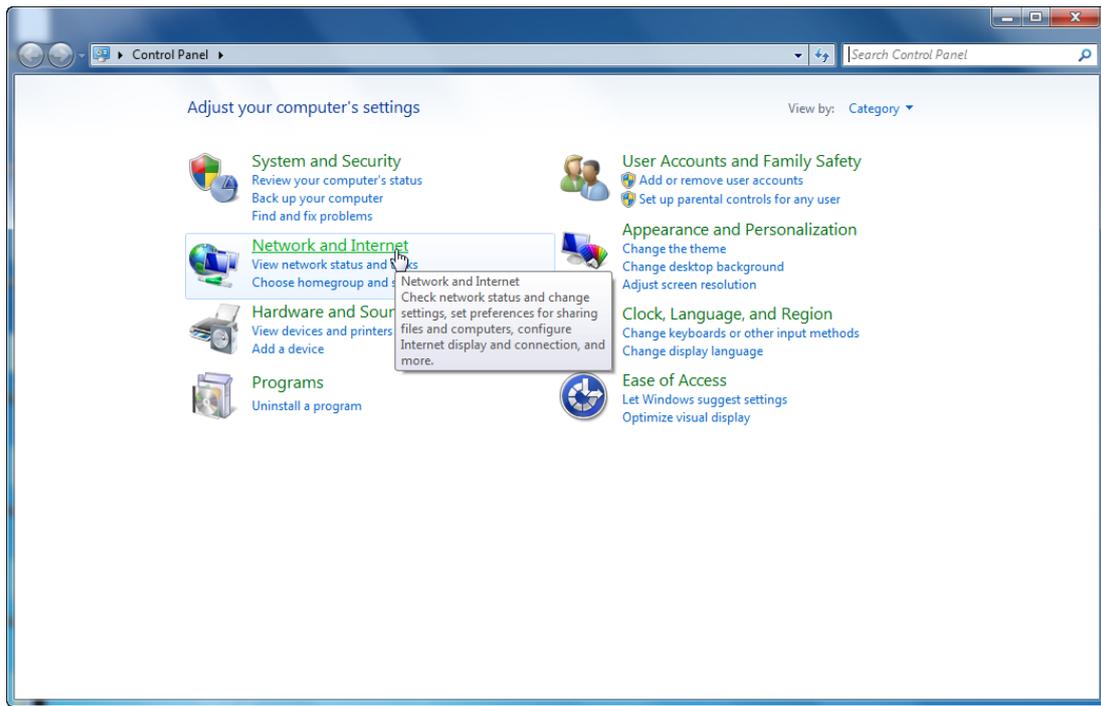


3) Click **Network and Sharing Center**.

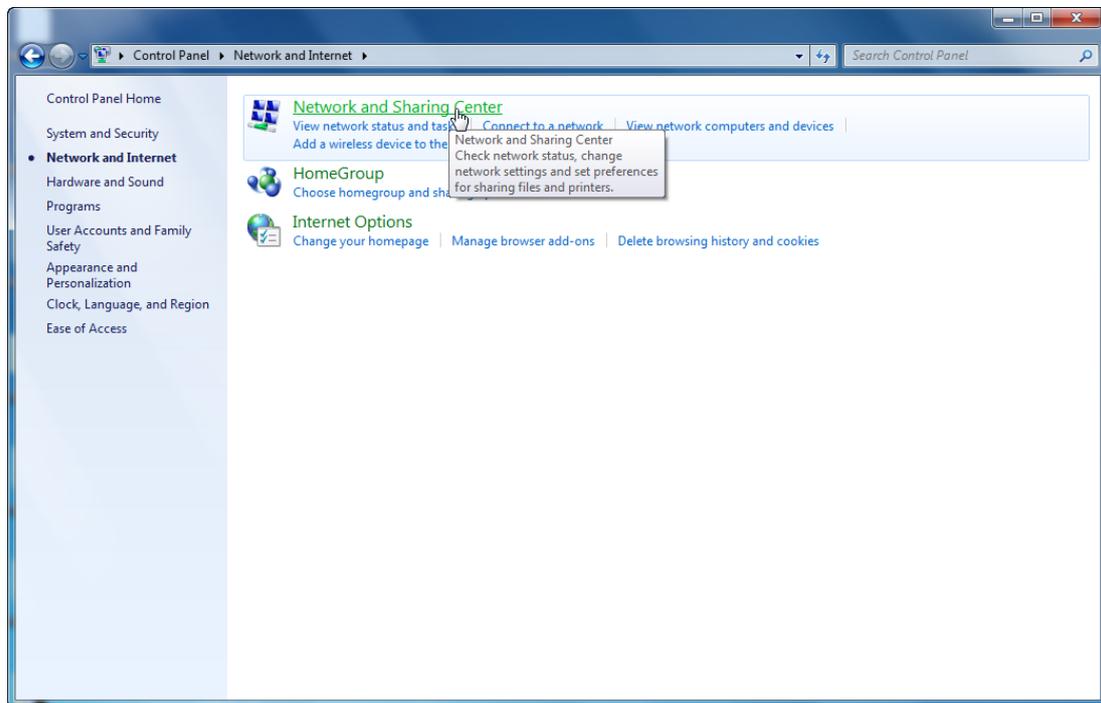


4) Go to **Change Adapter Settings (win7)/Manage Network Connections (Vista)**.

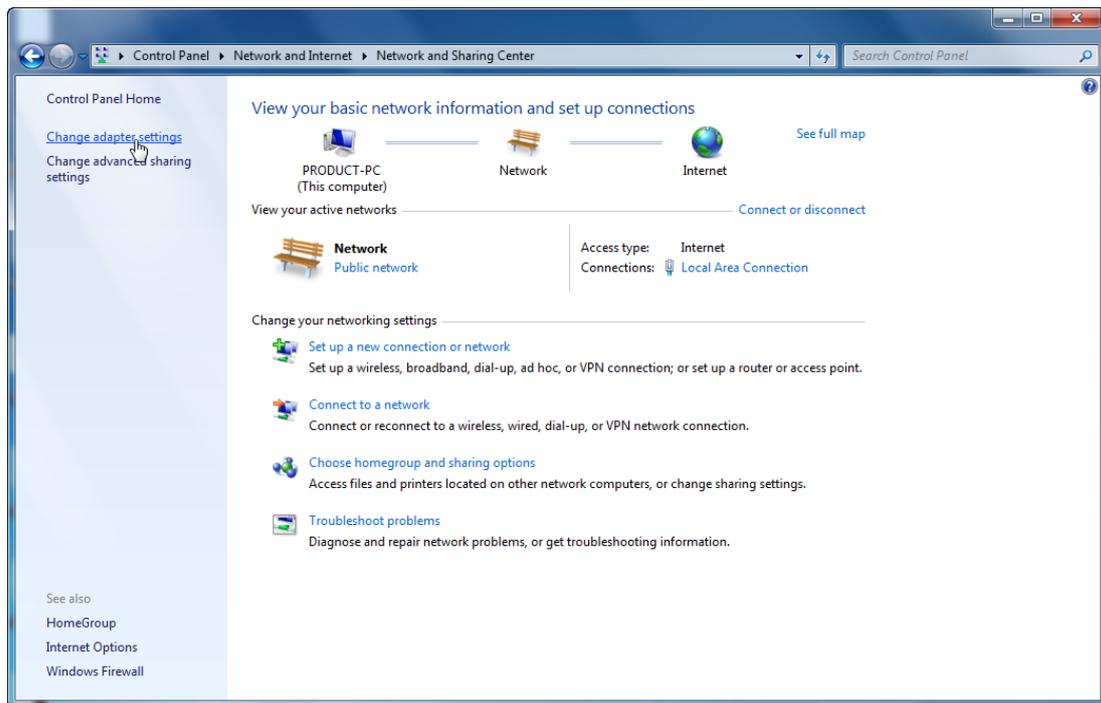


5) Right click **Local Area Connection**, choose **Properties**.

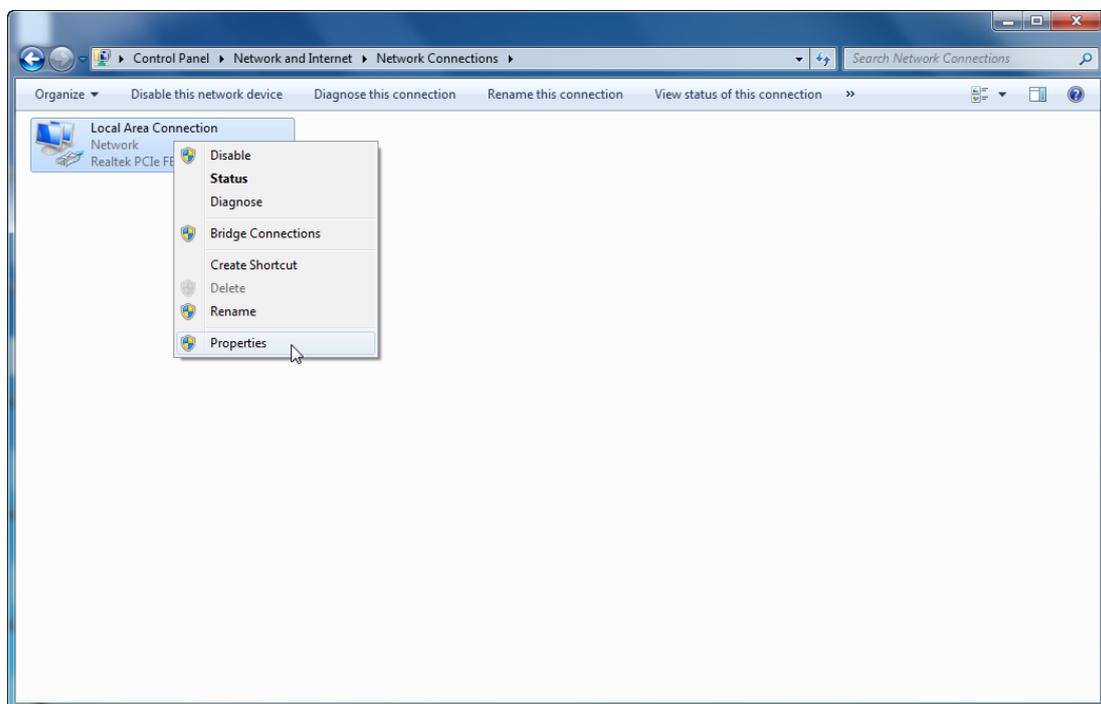

6) Select **Internet Protocol Version 4 (TCP/IPv4)** and click **Properties**.

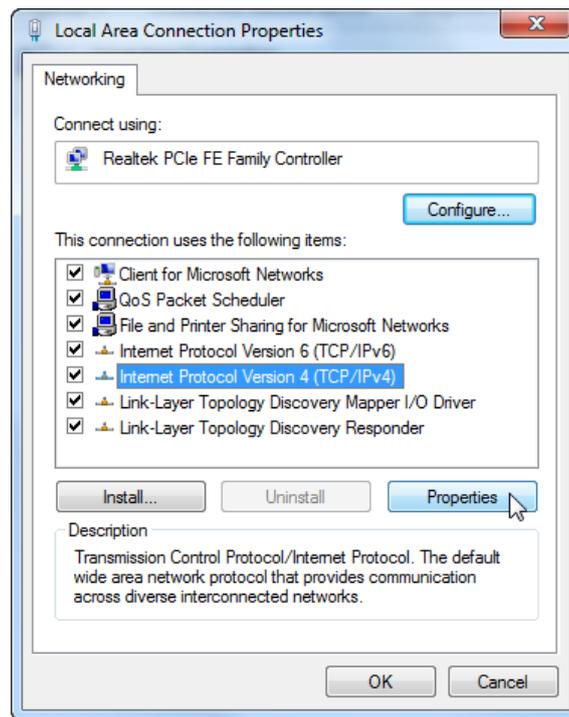

7) Select **Obtain an IP address automatically** and **Obtain DNS server address automatically**. Then click **OK**.

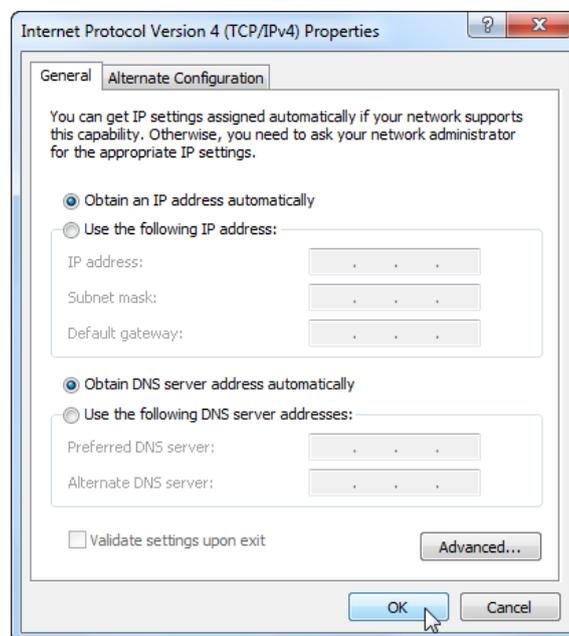

## Setup Wizard

After successful installation, you can go ahead with connecting to the internet, the operations are as follow:

1) Open your web browser, in the address bar, type in 192.168.0.1



2) You are prompt to enter the Username/Password (preset as admin/admin) which you can found on the label at the bottom of your router, and then click **Login**.



3) After successful login, you can see the web management page of the router comes up, please go to **Setup Wizard** on the left side menu, Click **Next**.



- 4) Please choose your WAN connection type, there are five options available: **Static IP**, **DHCP**, **PPPoE**, **L2TP** and **PPTP**.

The screenshot shows the 'Setup Wizard' interface. On the left is a navigation menu with 'Setup Wizard' selected. The main area has a 'WAN Connection Type:' dropdown menu currently set to 'DHCP'. A mouse cursor is hovering over the dropdown, which has opened to show options: 'Static IP', 'DHCP', 'PPPoE', 'L2TP', and 'PPTP'. Below the dropdown are 'Back', 'Next', and 'Cancel' buttons.

- a. Select **Static IP** if your ISP gives you the **Static IP Address**, **Subnet Mask**, **Default Gateway** and **DNS Server Address**, type in those information and then click **Next**.

The screenshot shows the 'Setup Wizard' interface with 'Static IP' selected in the 'WAN Connection Type:' dropdown. The 'Static IP' section is active, showing input fields for 'IP Address', 'Subnet Mask', 'Default Gateway', 'Primary DNS Server', and 'Secondary DNS Server' (marked as optional). Each field is a four-part dotted box. 'Back', 'Next', and 'Cancel' buttons are at the bottom, with the 'Next' button being the focus of a mouse cursor.

- b. Select **DHCP** if your ISP does not gives you any IP numbers to use. This option is commonly used for cable modem services. Router will obtain IP address information automatically. In this case, no need to input anything but click **Next**.

**Setup Wizard**

▶ Running Status	<b>WAN Connection Type:</b>	DHCP ▾
▶ <b>Setup Wizard</b>	DHCP Mode	
▶ Network Settings	Host Name	<input type="text"/>
▶ Wireless Settings		
▶ DHCP Server		
▶ NAT		

- c. **PPPoE** is typically used for DSL services. Select **PPPoE** and type in the **Username** and **Password** provided by your ISP, and then click **Next**.

Setup Wizard	
▶ Running Status	WAN Connection Type: <input type="text" value="PPPoE"/>
▶ Setup Wizard	<b>PPPoE Mode</b>
▶ Network Settings	Username <input type="text"/>
▶ Wireless Settings	Password <input type="text"/>
▶ DHCP Server	Verify Password <input type="text"/>
▶ NAT	
▶ Security Options	Back Next Cancel
▶ Access Control	

- d. Select **L2TP** if your ISP provides **L2TP** connection, and then click **Next**.

Setup Wizard	
▶ Running Status	WAN Connection Type: <input type="text" value="L2TP"/>
▶ Setup Wizard	<b>L2TP MODE</b>
▶ Network Settings	Username <input type="text"/>
▶ Wireless Settings	Password <input type="text"/>
▶ DHCP Server	Server IP Address/Domain Name <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>
▶ NAT	
▶ Security Options	Back Next Cancel
▶ Access Control	

- e. Select **PPTP** if your ISP provides **PPTP** connection, and then click **Next**.

Setup Wizard	
▶ Running Status	WAN Connection Type: <input type="text" value="PPTP"/>
▶ Setup Wizard	<b>PPTP MODE</b>
▶ Network Settings	Username <input type="text"/>
▶ Wireless Settings	Password <input type="text"/>
▶ DHCP Server	Server IP Address/Domain Name <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>
▶ NAT	
▶ Security Options	Back Next Cancel
▶ Access Control	

5) In this page, the **SSID** is the name of your wireless network, you can give it a different name. For the **Wireless Mode**, you can leave it as 11 b/g/n mixed mode, as for the **Wireless Security**, we recommend you to choose **WPA-Personal/WPA2-Personal**, and then set up a password, click **Next**.

The screenshot shows the 'Setup Wizard' configuration page. On the left is a navigation menu with items: Running Status, Setup Wizard (highlighted), Network Settings, Wireless Settings, DHCP Server, NAT, Security Options, Access Control, Routing Settings, IP Bandwidth Control, and Storage. The main content area is titled 'Setup Wizard' and contains the following fields and options:

- SSID: Phicomm\_3352CC
- Wireless Mode: 11b/g/n mixed mode
- Wireless Security Options:
  - Disable wireless security
  - WPA-Personal/WPA2-Personal
  - 98765432 (8-63 ASCII characters or 8-64 hexadecimal characters)
  - Do not modify wireless security settings

At the bottom, there are 'Back' and 'Next' buttons. A mouse cursor is pointing at the 'Next' button.

6) Click **Finish**, then you can check the internet is working or not.

The screenshot shows the 'Setup Wizard' completion page. The navigation menu on the left is the same as in the previous screenshot, but only 'Running Status', 'Setup Wizard' (highlighted), and 'Network Settings' are visible. The main content area is titled 'Setup Wizard' and contains the following text:

Congratulations! You have successfully completed the basic network settings, you can access the internet now. Click "Finish" to close the wizard.

At the bottom, there are 'Back' and 'Finish' buttons. A mouse cursor is pointing at the 'Finish' button.

# Chapter 3: Router Configuration


You can see there are thirteen main menus on the left side of the router's web management page. On the right side, you can see a small **HELP** button, there are the corresponding explanations and instructions. The Running Status page shows the current status of the Router.

▶ Running Status	<b>Running Status</b>	
▶ Setup Wizard		
▶ Network Settings	<b>Router Information</b>	
▶ Wireless Settings	Hardware Version	1.0
▶ DHCP Server	Firmware Version:	1.0
▶ NAT	Running Time	26 mins, 36 secs
▶ Security Options	<b>WAN</b>	
▶ Access Control	WAN Connection Type	DHCP
▶ Routing Settings	IP Address	
▶ IP Bandwidth Control	Subnet Mask	
▶ Storage	Default Gateway	
▶ System Tools	DNS Server	
▶ Logout	MAC Address	00:0C:43:33:52:CC
	<b>LAN</b>	
	IP Address	192.168.0.1
	Subnet Mask	255.255.255.0
	MAC Address	00:0C:43:33:52:CC
	<b>Wireless</b>	
	Wireless Enabling Status	Enabled
	Wireless Network Name (SSID)	Phicomm_3352CC
	Channel	6
	Wireless Connection Type	11b/g/n
	MAC Address	00:0C:43:33:52:CC
	<b>WAN Interface Traffic Statistics</b>	
	Received/Transmitted Bytes	0/96228
	Packets	0

## Network Settings

The **Network Settings** section helps you to configure the Router to access the Internet.

There are four submenus under the wireless menu: **WAN**, **LAN**, **MAC Address Clone** and **Dynamic DNS**. Click any of them, you will be able to configure the corresponding function.

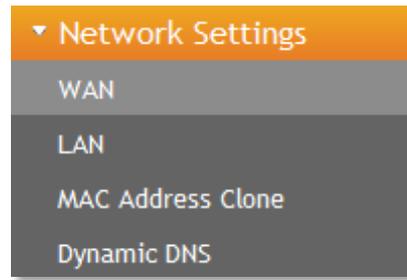

## WAN

▶ Running Status	<b>WAN</b>	
▶ Setup Wizard		
▼ Network Settings		
WAN	WAN Connection Type	Dynamic IP (DHCP) ▼
LAN	IP Address	Dynamic IP (DHCP)
MAC Address Clone	Subnet Mask	Static IP
Dynamic DNS	Default Gateway	PPPoE
▶ Wireless Settings	MTU Size (byte)	1500 (Default: 1500. Do not modify it unless it is necessary.)
▶ DHCP Server	<input type="checkbox"/> Manually configure the DNS Server	
▶ NAT	Primary DNS Server	<input type="text"/> . <input type="text"/> . <input type="text"/> . <input type="text"/>
▶ Security Options	Secondary DNS Server	<input type="text"/> . <input type="text"/> . <input type="text"/> . <input type="text"/> (Optional)
▶ Access Control	<input type="button" value="Save"/> <input type="button" value="Cancel"/>	

**WAN Connection Type:** To make sure the connection type your ISP provides, please refer to the ISP for more information.

**Dynamic IP (DHCP):** Connections use dynamic IP address assignment, it means your ISP is running a DHCP server.

**Static IP:** Connections use static IP address assignment, it means your ISP provides a static or fixed IP Address, Subnet Mask, Gateway and DNS setting.

**PPPoE:** Connections requires username and password.

**L2TP:** Layer 2 Tunneling Protocol (L2TP) is a service applies to connections in Israel only.

**PPTP:** Point-to-Point Tunneling Protocol (PPTP) is a service applies to connections in Europe only.

Select the connection type according to the information provided by your Internet Service Provider (ISP), and fill in the information accordingly.

**MTU Size (in bytes):** The default MTU (Maximum Transmission Unit) value is 1500 Bytes. Sometimes you need to modify the MTU required by your ISP.

**Manually configure the DNS server:** Check this option if your ISP gives you one or two

DNS IP addresses. Otherwise, leave it unchecked, the DNS servers will be assigned from ISP dynamically.

**Primary DNS Server:** Enter the DNS IP address in dotted-decimal notation provided by your ISP.

**Secondary DNS Server:** Enter another DNS IP address in dotted-decimal notation provided by your ISP.

**Note:** If you get Address not found error when you access a website, it is likely that your DNS servers are set up improperly. You should contact your ISP for correct DNS server addresses.

## LAN

▶ Running Status	<b>LAN</b>		
▶ Setup Wizard			
▼ Network Settings	MAC Address	00:0C:43:33:52:CC	
WAN	IP Address	192 . 168 . 0 . 1	
LAN	Subnet Mask	255.255.255.0 ▼	
MAC Address Clone			
Dynamic DNS	<input type="button" value="Save"/> <input type="button" value="Cancel"/>		

**MAC Address:** The physical address of the router.

**IP Address:** The LAN IP Address of the router.

**Subnet Mask:** The Subnet Mask associated with the LAN IP Address.

**Note:** If you changed the LAN IP Address of the router, please log in this web management page by entering the new IP address.

## MAC Address Clone

▶ Running Status	<b>MAC Address Clone</b>	
▶ Setup Wizard	Enabled	Enabled ▾
▼ Network Settings	MAC Address	<input type="text"/> - <input type="text"/> <input type="button" value="Clone My PC's Address"/>
WAN	Note: This function applies to computers in the LAN only.	
LAN		
MAC Address Clone		
Dynamic DNS	<input type="button" value="Save"/> <input type="button" value="Cancel"/>	

Some ISPs require you to register the MAC Address of your computer. Choose **Enabled**, and then click **Clone My PC's MAC Address**, then click **Save**.

## Dynamic DNS

▶ Running Status	<b>Dynamic DNS</b>	
▶ Setup Wizard		
▼ Network Settings	Dynamic DNS service website	Disabled ▾
WAN	Username	Disabled
LAN	Password	Dyndns.org freedns.afraid.org www.zoneedit.com
MAC Address Clone	Dynamic DNS service address	www.no-ip.com
Dynamic DNS		
▶ Wireless Settings	<input type="button" value="Save"/> <input type="button" value="Cancel"/>	

**Dynamic DNS** lets you assign a fixed host and domain name to a dynamic Internet IP address. If you want to use this feature, please register for this service with DDNS service providers such as www.no-ip.com first.

If you have registered with a DDNS service provider, select the website of your service provider, then enter the **Username**, **Password** and **Dynamic DNS service address** for your DDNS account.

## Wireless Settings

There are seven submenus under the wireless menu: **Wireless Basic Settings**, **Wireless Security Settings**, **Wireless MAC Address Filter**, **Advanced Wireless Settings**, **Wireless Clients List**, **WPS Settings** and **WDS Settings**. Click any of them, you will be able to configure the corresponding function.



## Wireless Basic Settings

<ul style="list-style-type: none"> <li>▶ Running Status</li> <li>▶ Setup Wizard</li> <li>▶ Network Settings</li> <li>▼ <b>Wireless Settings</b></li> <li>Wireless Basic Settings</li> <li>Wireless Security Settings</li> <li>Wireless MAC Address Filter</li> <li>Advanced Wireless Settings</li> <li>Wireless Clients List</li> <li>WPS Settings</li> <li>WDS Settings</li> <li>▶ DHCP Server</li> <li>▶ NAT</li> </ul>	<h3 style="color: #e67e22;">Wireless Basic Settings</h3> <table border="1" style="width: 100%;"> <thead> <tr> <th colspan="2" style="background-color: #f3f3f3;">Wireless Network</th> </tr> </thead> <tbody> <tr> <td>Wireless Status</td> <td><input checked="" type="radio"/> Enabled <input type="radio"/> Disabled</td> </tr> <tr> <td>SSID</td> <td>Phicomm_3352CC <input type="checkbox"/> Isolated</td> </tr> <tr> <td>Wireless Mode</td> <td>11b/g/n mixed mode ▼</td> </tr> <tr> <td>Channel</td> <td>6 ▼ <input type="button" value="Best Channel"/></td> </tr> <tr> <td>SSID Broadcast</td> <td><input checked="" type="radio"/> Enabled <input type="radio"/> Disabled</td> </tr> <tr> <td>BSSID</td> <td>00:0C:43:33:52:CC</td> </tr> <tr> <td>Channel Bandwidth</td> <td><input type="radio"/> 20MHz <input checked="" type="radio"/> 20/40MHz</td> </tr> <tr> <td>Extension Channel</td> <td>10 ▼</td> </tr> </tbody> </table> <p style="text-align: center;"> <input type="button" value="Save"/> <input type="button" value="Cancel"/> </p>	Wireless Network		Wireless Status	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled	SSID	Phicomm_3352CC <input type="checkbox"/> Isolated	Wireless Mode	11b/g/n mixed mode ▼	Channel	6 ▼ <input type="button" value="Best Channel"/>	SSID Broadcast	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled	BSSID	00:0C:43:33:52:CC	Channel Bandwidth	<input type="radio"/> 20MHz <input checked="" type="radio"/> 20/40MHz	Extension Channel	10 ▼
Wireless Network																			
Wireless Status	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled																		
SSID	Phicomm_3352CC <input type="checkbox"/> Isolated																		
Wireless Mode	11b/g/n mixed mode ▼																		
Channel	6 ▼ <input type="button" value="Best Channel"/>																		
SSID Broadcast	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled																		
BSSID	00:0C:43:33:52:CC																		
Channel Bandwidth	<input type="radio"/> 20MHz <input checked="" type="radio"/> 20/40MHz																		
Extension Channel	10 ▼																		

**Wireless Status:** Choose **Enable** to enable the wireless function of the router, choose **Disable** to disable the wireless function of the router.

**SSID:** Enter a value of up to 32 characters. This is the name of your wireless network, you can give it a different name which can be easier for you to remember.

**Wireless Mode:** If all of the wireless devices connected with this wireless router are in the same transmission mode (eg. 802.11b), you can choose "Only" mode (eg. 11b only). If you have some devices which use a different transmission mode, choose the appropriate "Mixed" mode.

**Channel:** The router can choose the best channel automatically in most cases. Please try to

change the wireless channel if you notice interference problems with another nearby access point, or the wireless performance is not as good as you expected.

**SSID Broadcast:** If you choose Enabled, the wireless router will broadcast its name (SSID) .

**BSSID:** The physical address of the router.

**Channel Bandwidth:** The bandwidth of the wireless channel, you can select **20MHz** or **20/40MHz**.

## Wireless Security Settings



You can configure the security of your wireless network in this page. There are six wireless security modes supported by this router: Open, Shared, WEPAUTO, WPA-Personal, WPA2-Personal, and WPA- Personal / WPA2-Personal.

**Security Mode:** You can choose Disable, Open, Shared, WEPAUTO, WPA-Personal, WPA2-Personal, WPA- Personal/ WPA2-Personal.

### Mode 1: Security Mode > Disable

If you do not want to use wireless security, highlight on this option. That means other people can connect to your wireless network without entering any password, so it may slow down your internet speed, it's recommended strongly to choose one of the following modes to enable security.

▶ Running Status	<b>Wireless Security Settings</b>	
▶ Setup Wizard	Phicomm_3352CC	
▶ Network Settings	Security Mode	Disable ▼
▼ Wireless Settings		
Wireless Basic Settings		
Wireless Security Settings	<input type="button" value="Save"/> <input type="button" value="Cancel"/>	

## Mode 2: Security Mode > Open/Shared/ WEPAUTO

**Open System:** Select 802.11 Open System authentications.

**Shared Key:** Select 802.11 Shared Key authentications.

**WEPAUTO:** Select Shared Key or Open System authentication type automatically based on the wireless station's capability and request.

You can select **ASCII** or **Hex** format. ASCII Format stands for any combination of keyboard characters in the specified length. Hex format stands for any combination of hexadecimal digits (0-9, a-f, A-F) in the specified length.

You can enter 10 hexadecimal digits (any combination of 0-9, a-f, A-F, and null key is not permitted) or 5 ASCII characters. Or enter 26 hexadecimal digits (any combination of 0-9, a-f, A-F, and null key is not permitted) or 13 ASCII characters. Or enter 32 hexadecimal digits (any combination of 0-9, a-f, A-F, and null key is not permitted) or 16 ASCII characters.

▶ Running Status	<b>Wireless Security Settings</b>	
▶ Setup Wizard	Phicomm_3352CC	
▶ Network Settings	Security Mode	WEPAUTO ▼
▼ Wireless Settings	<b>WEP</b>	
Wireless Basic Settings	Default Key	Key 1 ▼
Wireless Security Settings	WEP Key 1:	<input type="text"/> Hex ▼
Wireless MAC Address Filter	WEP Key 2:	<input type="text"/> ASCII ▼
Advanced Wireless Settings	WEP Key 3:	<input type="text"/> Hex ▼
Wireless Clients List	WEP Key 4:	<input type="text"/> Hex ▼
WPS Settings	<input type="button" value="Save"/> <input type="button" value="Cancel"/>	
WDS Settings		
▶ DHCP Server		

## Mode 3: Security Mode > WPA-Personal, WPA2-Personal, WPA- Personal/

### WPA2-Personal

You can select one of following versions:

**WPA-Personal:** Pre-shared key of WPA.

**WPA2-Personal:** Pre-shared key of WPA2.

**WPA- Personal/ WPA2-Personal:** Select WPA-Personal or WPA2-Personal automatically based on the wireless station's capability and request.

**Encryption:** You can select **TKIP**, **AES** or **TKIP+AES**.

**Password:** The password should be between 8 and 63 characters.

## Wireless MAC Address Filter

You can allow/deny the computers connecting to the router wirelessly by entering the MAC address with this feature.

If you only want MAC address (00:0A:EB:00:07:5F) to access the Wireless Network while others cannot:

1. Click **Add** button.
2. Choose **Allow** for the security policy.
3. Fill MAC address 00:0A:EB:00:07:5F in and click **Save**.

If you want MAC address (00:0A:EB:00:07:5F) cannot access the Wireless Network while others can:

1. Click **Add** button.
2. Choose **Reject** for the security policy.
3. Filling MAC address 00:0A:EB:00:07:5F in and click **Save**.

## Advanced Wireless Settings

<ul style="list-style-type: none"> <li>▶ Running Status</li> <li>▶ Setup Wizard</li> <li>▶ Network Settings</li> <li>▼ <b>Wireless Settings</b></li> <li>Wireless Basic Settings</li> <li>Wireless Security Settings</li> <li>Wireless MAC Address Filter</li> <li>Advanced Wireless Settings</li> <li>Wireless Clients List</li> <li>WPS Settings</li> <li>WDS Settings</li> <li>▶ DHCP Server</li> <li>▶ NAT</li> <li>▶ Security Options</li> <li>▶ Access Control</li> <li>▶ Routing Settings</li> <li>▶ IP Bandwidth Control</li> <li>▶ Storage</li> <li>▶ System Tools</li> <li>▶ Logout</li> </ul>	<h3 style="color: #E67E22;">Advanced Wireless Settings</h3> <table border="1"> <thead> <tr> <th colspan="2">Advanced Wireless parameters</th> </tr> </thead> <tbody> <tr> <td>BG Protection Mode</td> <td>Auto</td> </tr> <tr> <td>Beacon Interval</td> <td>100 ms (Range 20 - 999, Default 100)</td> </tr> <tr> <td>DTIM (Delivery Traffic Indication Message)</td> <td>1 ms (Range 1 - 255, Default 1)</td> </tr> <tr> <td>Fragment Threshold</td> <td>2346 (Range 256 - 2346, Default 2346)</td> </tr> <tr> <td>RTS Threshold</td> <td>2347 (Range 1 - 2347, Default 2347)</td> </tr> <tr> <td>TX Power</td> <td>100 (Range 1 - 100, Default 100)</td> </tr> <tr> <td>Short Preamble</td> <td><input type="radio"/> Enabled <input checked="" type="radio"/> Disabled</td> </tr> <tr> <td>Pkt_Aggregate</td> <td><input checked="" type="radio"/> Enabled <input type="radio"/> Disabled</td> </tr> <tr> <th colspan="2">WMM Bandwidth Management</th> </tr> <tr> <td>WMM Capable</td> <td><input checked="" type="radio"/> Enabled <input type="radio"/> Disabled</td> </tr> <tr> <td>APSD Capability</td> <td><input type="radio"/> Enabled <input checked="" type="radio"/> Disabled</td> </tr> <tr> <td>DLS Capable</td> <td><input type="radio"/> Enabled <input checked="" type="radio"/> Disabled</td> </tr> <tr> <td>WMM Parameters</td> <td>WMM Configuration</td> </tr> <tr> <th colspan="2">Multicast-to-Unicast Converter</th> </tr> <tr> <td>Multicast-to-Unicast</td> <td><input type="radio"/> Enabled <input checked="" type="radio"/> Disabled</td> </tr> </tbody> </table> <p style="text-align: right;"> <input type="button" value="Save"/> <input type="button" value="Cancel"/> </p>	Advanced Wireless parameters		BG Protection Mode	Auto	Beacon Interval	100 ms (Range 20 - 999, Default 100)	DTIM (Delivery Traffic Indication Message)	1 ms (Range 1 - 255, Default 1)	Fragment Threshold	2346 (Range 256 - 2346, Default 2346)	RTS Threshold	2347 (Range 1 - 2347, Default 2347)	TX Power	100 (Range 1 - 100, Default 100)	Short Preamble	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled	Pkt_Aggregate	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled	WMM Bandwidth Management		WMM Capable	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled	APSD Capability	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled	DLS Capable	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled	WMM Parameters	WMM Configuration	Multicast-to-Unicast Converter		Multicast-to-Unicast	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled
Advanced Wireless parameters																																	
BG Protection Mode	Auto																																
Beacon Interval	100 ms (Range 20 - 999, Default 100)																																
DTIM (Delivery Traffic Indication Message)	1 ms (Range 1 - 255, Default 1)																																
Fragment Threshold	2346 (Range 256 - 2346, Default 2346)																																
RTS Threshold	2347 (Range 1 - 2347, Default 2347)																																
TX Power	100 (Range 1 - 100, Default 100)																																
Short Preamble	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled																																
Pkt_Aggregate	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled																																
WMM Bandwidth Management																																	
WMM Capable	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled																																
APSD Capability	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled																																
DLS Capable	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled																																
WMM Parameters	WMM Configuration																																
Multicast-to-Unicast Converter																																	
Multicast-to-Unicast	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled																																

This section is to configure the advanced wireless setting of the Router, if you are not familiar with the setting items in this page, it's strongly recommended to keep the provided

default values, otherwise it may result in lower wireless network performance.

**BG protection Mode: Auto** by default. You can select **On** or **Off**.

**Beacon Interval:** The interval for sending packets of the Beacon frame. Its value range is 20-1000 in unit of ms. The default is 100.

**DTIM Interval:** It indicates the interval of the delivery traffic indication message (DTIM). The value range is between 1 and 255 milliseconds. The default value is 1.

**Fragment Threshold:** Set the fragmentation threshold. Packets larger than the size set in this field will be fragmented. Too many data packets will lower the Wireless Network performance. The Fragment Threshold value should not be set too low. The default value is 2346.

**RTS Threshold:** Set the RTS (Request to send threshold.) threshold. When the packet size is larger than the preset RTS size, the wireless router will send a RTS to the destination station to start a negotiation. The default value is 2347.

**TX Power:** You can set the output power of wireless radio. Unless you are using this wireless router in a really big space, you may not have to set output power to 100%. This will enhance security (malicious/unknown users in distance will not be able to reach your wireless router).

**Enable WMM:** If you select it, the router will process the packets with the priority first. You are recommended to select this option.

**APSD Capability:** It is used for auto power-saved service. It is **Disabled** by default.

## Wireless Clients List

**Wireless Clients List**

Wireless Devices							
MAC Address	Aid	PSM	MimoPS	MCS	BW	SGI	STBC
Refresh							

Click **Refresh** button to check the wireless clients.

## WPS Settings

**Wi-Fi Protected Setup (WPS)**

**WPS Settings Configuration**

WPS settings:

**WPS settings list**

WPS Current Status:	Idle
The Configured WPS:	No
WPS SSID:	Phicomm_3352CC
WPS authentication mode:	Open
WPS encryption type:	None
The Default Key Index of WPS:	1
WPS Key(ASCII)	
PIN (Personal identification number):	70507393 <input type="button" value="Generate Pin"/> <input type="button" value="Restore Pin"/>

**WPS mode settings**

WPS mode:  PIN  PBC

Personal identification number (PIN)

**WPS setting status**

WSC:Idle

The WPS function can help you add a new device to the network quickly. If the client device supports Wi-Fi Protected Setup and is equipped with a WPS button, you can add it to the network by pressing the WPS button on the device and then press the button on the router

within two minutes. The status LED on the router will light green for five minutes if the device has been successfully added to the network; If your client asks for the Router's PIN number, enter the router's PIN number into your client device; If your client device has a WIFI Protected Setup PIN number, enter that number in the PIN box.

**WPS (Wi-Fi Protected Setting):** Easy and quick to establish the connection between wireless network client and the router through encrypted contents. The users only enter the PIN code to configure without selecting encryption method and entering secret keys by manual.

**WPS Mode:** Supports two ways to configure WPS settings: PBC (Push-Button Configuration) and PIN code.

**PBC:** Select the **PBC** button or press the WPS button on the panel of the Router. (Press WPS button and WPS LED will blink, which means the WPS function is enabled. During the blinking time, press the WPS button on another network device, WPS LED light will become solid when the connection succeeds.)

**PIN:** If this option is enabled, you need to enter a wireless clients PIN code in the blank and keep the same code in the client.

## WDS Settings

<ul style="list-style-type: none"> <li>▶ Running Status</li> <li>▶ Setup Wizard</li> <li>▶ Network Settings</li> <li>▼ <b>Wireless Settings</b> <ul style="list-style-type: none"> <li>Wireless Basic Settings</li> <li>Wireless Security Settings</li> <li>Wireless MAC Address Filter</li> <li>Advanced Wireless Settings</li> <li>Wireless Clients List</li> <li>WPS Settings</li> <li><b>WDS Settings</b></li> </ul> </li> </ul>	<h3 style="color: #e67e22;">Wireless Distribution System (WDS)</h3> <div style="border: 1px solid #ccc; padding: 5px;"> <div style="background-color: #f0f0f0; padding: 2px;"><b>Basic WDS Settings</b></div> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 60%; border-bottom: 1px solid #ccc;">WDS Mode</td> <td style="border-bottom: 1px solid #ccc;"> <div style="border: 1px solid #ccc; padding: 2px;">                     Disabled ▼                 </div> <div style="border: 1px solid #ccc; padding: 2px; background-color: #fff;">                     Disabled                      Bridge Mode                      Repeater Mode                 </div> </td> </tr> </table> <div style="display: flex; justify-content: space-between; margin-top: 10px;"> <span>Save</span> <span>Cancel</span> </div> </div>	WDS Mode	<div style="border: 1px solid #ccc; padding: 2px;">                     Disabled ▼                 </div> <div style="border: 1px solid #ccc; padding: 2px; background-color: #fff;">                     Disabled                      Bridge Mode                      Repeater Mode                 </div>
WDS Mode	<div style="border: 1px solid #ccc; padding: 2px;">                     Disabled ▼                 </div> <div style="border: 1px solid #ccc; padding: 2px; background-color: #fff;">                     Disabled                      Bridge Mode                      Repeater Mode                 </div>		

The WDS function can help you extend the wireless range, it supports Bridge Mode and Repeater Mode.

<ul style="list-style-type: none"> <li>▶ Running Status</li> <li>▶ Setup Wizard</li> <li>▶ Network Settings</li> <li style="background-color: #f96;">▶ Wireless Settings</li> <li>Wireless Basic Settings</li> <li>Wireless Security Settings</li> <li>Wireless MAC Address Filter</li> <li>Advanced Wireless Settings</li> <li>Wireless Clients List</li> <li>WPS Settings</li> <li>WDS Settings</li> <li>▶ DHCP Server</li> <li>▶ NAT</li> <li>▶ Security Options</li> <li>▶ Access Control</li> <li>▶ Routing Settings</li> <li>▶ IP Bandwidth Control</li> <li>▶ Storage</li> <li>▶ System Tools</li> <li>▶ Logout</li> </ul>	<h3 style="color: #f96;">Wireless Distribution System (WDS)</h3> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr style="background-color: #eee;"> <th colspan="2">Basic WDS Settings</th> </tr> </thead> <tbody> <tr> <td>WDS Mode</td> <td>Bridge Mode <input type="button" value="v"/></td> </tr> <tr> <td>Entity Model</td> <td>CCK <input type="button" value="v"/></td> </tr> <tr style="background-color: #eee;"> <th colspan="2">WDS 1</th> </tr> <tr> <td>Security Mode</td> <td>NONE <input type="button" value="v"/></td> </tr> <tr> <td>Password</td> <td><input type="text"/></td> </tr> <tr> <td>Wireless Access Node MAC Address</td> <td><input type="text"/>-<input type="text"/>-<input type="text"/>-<input type="text"/>-<input type="text"/>-<input type="text"/></td> </tr> <tr style="background-color: #eee;"> <th colspan="2">WDS 2</th> </tr> <tr> <td>Security Mode</td> <td>NONE <input type="button" value="v"/></td> </tr> <tr> <td>Password</td> <td><input type="text"/></td> </tr> <tr> <td>Wireless Access Node MAC Address</td> <td><input type="text"/>-<input type="text"/>-<input type="text"/>-<input type="text"/>-<input type="text"/>-<input type="text"/></td> </tr> <tr style="background-color: #eee;"> <th colspan="2">WDS 3</th> </tr> <tr> <td>Security Mode</td> <td>NONE <input type="button" value="v"/></td> </tr> <tr> <td>Password</td> <td><input type="text"/></td> </tr> <tr> <td>Wireless Access Node MAC Address</td> <td><input type="text"/>-<input type="text"/>-<input type="text"/>-<input type="text"/>-<input type="text"/>-<input type="text"/></td> </tr> <tr style="background-color: #eee;"> <th colspan="2">WDS 4</th> </tr> <tr> <td>Security Mode</td> <td>NONE <input type="button" value="v"/></td> </tr> <tr> <td>Password</td> <td><input type="text"/></td> </tr> <tr> <td>Wireless Access Node MAC Address</td> <td><input type="text"/>-<input type="text"/>-<input type="text"/>-<input type="text"/>-<input type="text"/>-<input type="text"/></td> </tr> </tbody> </table> <p style="text-align: right;"> <input type="button" value="Save"/> <input type="button" value="Cancel"/> </p>	Basic WDS Settings		WDS Mode	Bridge Mode <input type="button" value="v"/>	Entity Model	CCK <input type="button" value="v"/>	WDS 1		Security Mode	NONE <input type="button" value="v"/>	Password	<input type="text"/>	Wireless Access Node MAC Address	<input type="text"/> - <input type="text"/>	WDS 2		Security Mode	NONE <input type="button" value="v"/>	Password	<input type="text"/>	Wireless Access Node MAC Address	<input type="text"/> - <input type="text"/>	WDS 3		Security Mode	NONE <input type="button" value="v"/>	Password	<input type="text"/>	Wireless Access Node MAC Address	<input type="text"/> - <input type="text"/>	WDS 4		Security Mode	NONE <input type="button" value="v"/>	Password	<input type="text"/>	Wireless Access Node MAC Address	<input type="text"/> - <input type="text"/>
Basic WDS Settings																																							
WDS Mode	Bridge Mode <input type="button" value="v"/>																																						
Entity Model	CCK <input type="button" value="v"/>																																						
WDS 1																																							
Security Mode	NONE <input type="button" value="v"/>																																						
Password	<input type="text"/>																																						
Wireless Access Node MAC Address	<input type="text"/> - <input type="text"/>																																						
WDS 2																																							
Security Mode	NONE <input type="button" value="v"/>																																						
Password	<input type="text"/>																																						
Wireless Access Node MAC Address	<input type="text"/> - <input type="text"/>																																						
WDS 3																																							
Security Mode	NONE <input type="button" value="v"/>																																						
Password	<input type="text"/>																																						
Wireless Access Node MAC Address	<input type="text"/> - <input type="text"/>																																						
WDS 4																																							
Security Mode	NONE <input type="button" value="v"/>																																						
Password	<input type="text"/>																																						
Wireless Access Node MAC Address	<input type="text"/> - <input type="text"/>																																						

**Bridge Mode:** You can wirelessly connect two or more wired networks via this mode. In this mode, you need to add the wireless MAC address of the connecting device into the Routers AP MAC address table or select one from the scanning table. At the same time, the connecting device should be in Lazy, Repeater or Bridge mode.

**Repeater Mode:** You can select the mode to extend the distance between the two WLAN devices. Functioning as a WDS repeater, connects to both a client card as an AP and to another AP. In typical repeater applications, APs connecting to other APs equipped with WDS functionality must also support WDS. In this mode, you need to add the MAC address of the connecting device into the Routers AP MAC address table and the connecting client

should be in Lazy, Repeater or client mode.

**Security Mode:** You can select WEP 64bits mode, WEP 128bits mode, WPA-PSK (TKIP) mode, WPA2-PSK (AES) mode.

**Password:** Enter the password, the format is decided by the encryption method you selected.


**Wireless Access Node MAC Address:** Input the MAC address of the other wireless router.

**Note:** Two wireless routers must use the same channel, encryption type and encryption key.

## DHCP Server

There are three submenus under the DHCP menu: **DHCP**, **DHCP Clients List** and **Address**

**Reservation.** Click any of them, and you will be able to configure the corresponding function.

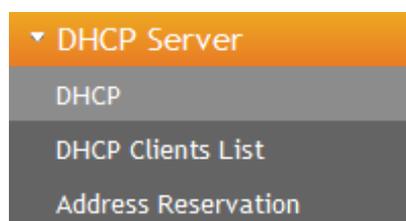

## DHCP

<ul style="list-style-type: none"> <li>▶ Running Status</li> <li>▶ Setup Wizard</li> <li>▶ Network Settings</li> <li>▶ Wireless Settings</li> <li>▼ DHCP Server</li> <li>  DHCP</li> <li>  DHCP Clients List</li> <li>  Address Reservation</li> <li>▶ NAT</li> <li>▶ Security Options</li> <li>▶ Access Control</li> </ul>	<h3>DHCP</h3>
DHCP Server	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled
Start IP Address	192 . 168 . 0 . 100
End IP Address	192 . 168 . 0 . 200
Lease Time	86400 sec (The default value is 864 00)
Default Gateway	192 . 168 . 0 . 1
Primary DNS Server	192 . 168 . 0 . 1 (Optional)
Secondary DNS Server	. . . (Optional)
<input type="button" value="Save"/> <input type="button" value="Cancel"/>	

If you enable DHCP server of the router, the DHCP server automatically configures the TCP/IP protocol for each computer in the LAN.

**DHCP Server:** If you disable the server, please make sure you have another DHCP server in your network.

**Start IP Address:** The first address in the IP Address pool.

**End IP Address:** The last address in the IP Address pool.

**Lease Time:** It is the time interval that server will change to use another DHCP address.

**Default Gateway:** (Optional) Suggest to input the IP Address of the LAN port of the Router.

**Primary DNS Server:** (Optional) Input the DNS IP address provided by your ISP. Or consult your ISP.

**Secondary DNS Server:** (Optional) You can input the IP Address of another DNS server if your ISP provides two DNS servers.

**Note:** To use the DHCP server function of the router, please configure all computers in the LAN as Obtain an IP Address automatically mode. This function will take effect after the router rebooted.

## DHCP Clients list

DHCP Clients List			
Devices			
Host Name	MAC Address	IP Address	Lease Time
Refresh			

Here you can see the information of DHCP Clients.

**Refresh:** Click **Refresh** button to refresh the DHCP clients list.

## Address Reservation

<ul style="list-style-type: none"> <li>▶ Running Status</li> <li>▶ Setup Wizard</li> <li>▶ Network Settings</li> <li>▶ Wireless Settings</li> <li style="background-color: #f96;">▶ DHCP Server</li> <li style="padding-left: 10px;">DHCP</li> <li style="padding-left: 10px;">DHCP Clients List</li> <li style="padding-left: 10px;">Address Reservation</li> <li>▶ NAT</li> <li>▶ Security Options</li> <li>▶ Access Control</li> </ul>	<h3 style="margin: 0;">Address Reservation</h3> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 10%;">NO.</th> <th style="width: 40%;">IP Address</th> <th style="width: 40%;">MAC Address</th> <th style="width: 10%;">Edit</th> <th style="width: 10%;">Delete</th> </tr> </thead> <tbody> <tr> <td colspan="5" style="text-align: center;"> <input type="button" value="Add"/> <input type="button" value="Delete"/> </td> </tr> <tr> <td colspan="5" style="background-color: #eee;"><b>Set rules</b></td> </tr> <tr> <td>IP Address</td> <td><input type="text" value="."/><input type="text" value="."/><input type="text" value="."/><input type="text" value="."/></td> <td colspan="3"></td> </tr> <tr> <td>MAC Address</td> <td><input type="text" value="-"/><input type="text" value="-"/><input type="text" value="-"/><input type="text" value="-"/><input type="text" value="-"/><input type="text" value="-"/></td> <td colspan="3" style="text-align: right;"><input type="button" value="Search MAC Address"/></td> </tr> <tr> <td colspan="5">Max rule number 10.</td> </tr> <tr> <td colspan="5" style="text-align: center;"> <input type="button" value="Save"/> <input type="button" value="Cancel"/> </td> </tr> </tbody> </table>	NO.	IP Address	MAC Address	Edit	Delete	<input type="button" value="Add"/> <input type="button" value="Delete"/>					<b>Set rules</b>					IP Address	<input type="text" value="."/> <input type="text" value="."/> <input type="text" value="."/> <input type="text" value="."/>				MAC Address	<input type="text" value="-"/>	<input type="button" value="Search MAC Address"/>			Max rule number 10.					<input type="button" value="Save"/> <input type="button" value="Cancel"/>				
NO.	IP Address	MAC Address	Edit	Delete																																
<input type="button" value="Add"/> <input type="button" value="Delete"/>																																				
<b>Set rules</b>																																				
IP Address	<input type="text" value="."/> <input type="text" value="."/> <input type="text" value="."/> <input type="text" value="."/>																																			
MAC Address	<input type="text" value="-"/>	<input type="button" value="Search MAC Address"/>																																		
Max rule number 10.																																				
<input type="button" value="Save"/> <input type="button" value="Cancel"/>																																				


When you specify a reserved IP address for a PC in the LAN, that PC will always receive the same IP address each time when it accesses the DHCP server. Reserved IP addresses could be assigned to servers that require permanent IP settings.

**IP Address:** The IP address that the Router reserved.

**MAC Address:** The MAC Address of the PC that you want to reserve for an IP address.

## NAT

There are five submenus under the NAT menu: **Port Forwarding**, **Port Triggering**, **DMZ Host**, **UPnP** and **Multicast Forwarding**. Click any of them, and you will be able to configure the corresponding function.

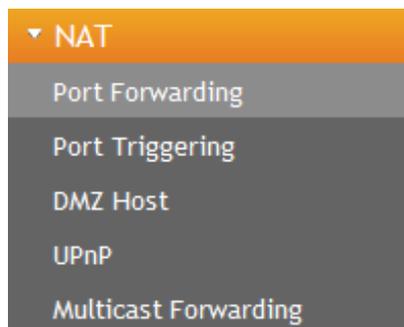

### Port Forwarding

<ul style="list-style-type: none"> <li>▶ Running Status</li> <li>▶ Setup Wizard</li> <li>▶ Network Settings</li> <li>▶ Wireless Settings</li> <li>▶ DHCP Server</li> <li>▼ NAT</li> </ul>	<h4 style="color: #e67e22;">Port Forwarding</h4> <div style="border: 1px solid #ccc; padding: 5px;"> <p><b>Port Forwarding Settings</b></p> <p>Port Forwarding Settings <span style="float: right;">Disabled ▼</span></p> <p style="text-align: right;"> <input type="button" value="Save"/> <input type="button" value="Cancel"/> </p> </div>
---	--

Choose **Enabled**, then click **Add** button.

<ul style="list-style-type: none"> <li>▶ Running Status</li> <li>▶ Setup Wizard</li> <li>▶ Network Settings</li> <li>▶ Wireless Settings</li> <li>▶ DHCP Server</li> <li>▼ NAT</li> <li>Port Forwarding</li> <li>Port Triggering</li> <li>DMZ Host</li> <li>UPnP</li> <li>Multicast Forwarding</li> <li>▶ Security Options</li> <li>▶ Access Control</li> <li>▶ Routing Settings</li> <li>▶ IP Bandwidth Control</li> <li>▶ Storage</li> <li>▶ System Tools</li> <li>▶ Logout</li> </ul>	<h4 style="color: #e67e22;">Port Forwarding</h4> <div style="border: 1px solid #ccc; padding: 5px;"> <p><b>Port Forwarding Settings</b></p> <p>Port Forwarding Settings <span style="float: right;">Enabled ▼</span></p> <p style="text-align: right;"> <input type="button" value="Save"/> <input type="button" value="Cancel"/> </p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 10%;">NO.</th> <th style="width: 20%;">Rule's Name</th> <th style="width: 15%;">Server IP Address</th> <th style="width: 15%;">Server Port Range</th> <th style="width: 15%;">Client Port Range</th> <th style="width: 10%;">Protocol</th> <th style="width: 10%;">Edit</th> <th style="width: 10%;">Delete</th> </tr> </thead> <tbody> <tr> <td colspan="8" style="text-align: left; padding: 5px;"> <input type="button" value="Add"/> <input type="button" value="Delete"/> </td> </tr> <tr> <td colspan="2">Rule's Name</td> <td colspan="6"><input type="text"/></td> </tr> <tr> <td colspan="2">Server IP Address</td> <td colspan="2"><input style="width: 20px; border: none; border-bottom: 1px solid #ccc;" type="text"/> . <input style="width: 20px; border: none; border-bottom: 1px solid #ccc;" type="text"/> . <input style="width: 20px; border: none; border-bottom: 1px solid #ccc;" type="text"/> . <input style="width: 20px; border: none; border-bottom: 1px solid #ccc;" type="text"/></td> <td colspan="4" style="text-align: right;"><input type="button" value="Search IP Address"/></td> </tr> <tr> <td colspan="2">Server Port Range</td> <td colspan="6"><input style="width: 20px; border: none; border-bottom: 1px solid #ccc;" type="text"/> - <input style="width: 20px; border: none; border-bottom: 1px solid #ccc;" type="text"/></td> </tr> <tr> <td colspan="2">Client Port Range</td> <td colspan="6"><input style="width: 20px; border: none; border-bottom: 1px solid #ccc;" type="text"/> - <input style="width: 20px; border: none; border-bottom: 1px solid #ccc;" type="text"/></td> </tr> <tr> <td colspan="2">Protocol</td> <td colspan="6"> <input type="radio"/> TCP&amp;UDP                 <input type="radio"/> TCP                 <input type="radio"/> UDP             </td> </tr> <tr> <td colspan="8" style="font-size: small;">(Max rule number 10)</td> </tr> <tr> <td colspan="8" style="text-align: right; padding-top: 10px;"> <input type="button" value="Save"/> <input type="button" value="Cancel"/> </td> </tr> </tbody> </table> </div>	NO.	Rule's Name	Server IP Address	Server Port Range	Client Port Range	Protocol	Edit	Delete	<input type="button" value="Add"/> <input type="button" value="Delete"/>								Rule's Name		<input type="text"/>						Server IP Address		<input style="width: 20px; border: none; border-bottom: 1px solid #ccc;" type="text"/> . <input style="width: 20px; border: none; border-bottom: 1px solid #ccc;" type="text"/> . <input style="width: 20px; border: none; border-bottom: 1px solid #ccc;" type="text"/> . <input style="width: 20px; border: none; border-bottom: 1px solid #ccc;" type="text"/>		<input type="button" value="Search IP Address"/>				Server Port Range		<input style="width: 20px; border: none; border-bottom: 1px solid #ccc;" type="text"/> - <input style="width: 20px; border: none; border-bottom: 1px solid #ccc;" type="text"/>						Client Port Range		<input style="width: 20px; border: none; border-bottom: 1px solid #ccc;" type="text"/> - <input style="width: 20px; border: none; border-bottom: 1px solid #ccc;" type="text"/>						Protocol		<input type="radio"/> TCP&UDP <input type="radio"/> TCP <input type="radio"/> UDP						(Max rule number 10)								<input type="button" value="Save"/> <input type="button" value="Cancel"/>							
NO.	Rule's Name	Server IP Address	Server Port Range	Client Port Range	Protocol	Edit	Delete																																																																		
<input type="button" value="Add"/> <input type="button" value="Delete"/>																																																																									
Rule's Name		<input type="text"/>																																																																							
Server IP Address		<input style="width: 20px; border: none; border-bottom: 1px solid #ccc;" type="text"/> . <input style="width: 20px; border: none; border-bottom: 1px solid #ccc;" type="text"/> . <input style="width: 20px; border: none; border-bottom: 1px solid #ccc;" type="text"/> . <input style="width: 20px; border: none; border-bottom: 1px solid #ccc;" type="text"/>		<input type="button" value="Search IP Address"/>																																																																					
Server Port Range		<input style="width: 20px; border: none; border-bottom: 1px solid #ccc;" type="text"/> - <input style="width: 20px; border: none; border-bottom: 1px solid #ccc;" type="text"/>																																																																							
Client Port Range		<input style="width: 20px; border: none; border-bottom: 1px solid #ccc;" type="text"/> - <input style="width: 20px; border: none; border-bottom: 1px solid #ccc;" type="text"/>																																																																							
Protocol		<input type="radio"/> TCP&UDP <input type="radio"/> TCP <input type="radio"/> UDP																																																																							
(Max rule number 10)																																																																									
<input type="button" value="Save"/> <input type="button" value="Cancel"/>																																																																									

**Rule's Name:** You can give this rule a name.

**Server IP Address:** The IP address of the server you want to open the port, it is like 192.168.0.X.

**Server Port Range:** The port range of the server you want to open the port.

**Client Port Range:** The port range of the client.

**Protocol:** The protocol of the server.

**Note:** Please assign a static IP address to the server.

## Port Triggering

No.	Application	Trigger		Open		Edit	Delete		
	Name	Protocol	Port range		Protocol			Port range	
			Start	End				Start	End
That have options to:		<input type="button" value="Enabled"/>	<input type="button" value="Disabled"/>	<input type="button" value="Reset"/>					
		<input type="button" value="Add"/> <input type="button" value="Delete"/>							

Click **Add** button.



**Open Port:** The port or port range used by the remote system when it responds to the outgoing request. A response using one of these ports will be forwarded to the PC that triggered this rule.

**Open Port Protocol:** The protocol used for Incoming Ports Range, it can be **TCP**, **UDP** or **TCP/UDP**. If you are not clear about which protocol was being used, **TCP/UDP** is recommended.

**Note:**

- Before using Port Triggering, you should assign a static IP address to the designated server, and then enter this static IP address into router as the **Server IP Address**.
- Please ensure the SPI Firewall was closed before setting the port triggering. You could check the SPI Firewall settings at Security Options>Security Settings.

**DMZ Host**

The screenshot shows the 'DMZ Host' configuration page. On the left is a navigation menu with 'NAT' selected. The main area has a title 'DMZ Host' and a sub-section 'DMZ'. The 'DMZ Status' field has a dropdown menu open, showing options: 'Disable DMZ' (selected), 'Enable DMZ', and 'Enable Special DMZ'. There are 'Save' and 'Cancel' buttons at the bottom.

Choose **Enable DMZ**.

The screenshot shows the 'DMZ Host' configuration page. On the left is a navigation menu with 'NAT' selected. The main area has a title 'DMZ Host' and a sub-section 'DMZ'. The 'DMZ Status' field has a dropdown menu open, showing options: 'Enable DMZ' (selected), 'Disable DMZ', and 'Enable Special DMZ'. Below this is the 'IP Address of the DMZ Host' field with four input boxes and a 'Search IP Address' button. There are 'Save' and 'Cancel' buttons at the bottom.

**IP Address of the DMZ Host:** Enter the IP address of the computer in the LAN that you want to set to a DMZ host in the DMZ Host IP Address field.

Choose **Enable Special DMZ**.

The screenshot shows the 'DMZ Host' configuration page. On the left is a navigation menu with 'NAT' selected. The main content area is titled 'DMZ Host' and contains a 'DMZ' section. Under 'DMZ Status', the 'Enable Special DMZ' dropdown menu is selected. Below this, the 'MAC Address of the Special DMZ Host' field is empty, and the checkbox for 'Setting the Current PC's MAC Address' is unchecked. The MAC address input fields show '00 - 00 - 00 - 00 - 00 - 00'. There are 'Save' and 'Cancel' buttons at the bottom.

MAC Address of the Special DMZ Host: Enter the MAC Address of the computer in the LAN that you want to set to a DMZ host.

If you check **Setting the Current PC's MAC Address**, the current PC's MAC address will come up automatically.

This screenshot is similar to the previous one, but the checkbox for 'Setting the Current PC's MAC Address' is now checked. The MAC address input fields have been populated with the value '8C - 89 - A5 - 1C - C9 - 1E'. The 'Save' and 'Cancel' buttons remain at the bottom.

**Note:**

- Before using DMZ Host, you should assign a static IP address to the designated server, and then enter this static IP address into router as the **Server IP Address**.
- DMZ priority is higher than the Port Forwarding, if the DMZ open, all the port forwarding rules are not effective.

## UPnP

▶ Running Status	<h3>UPnP</h3> <p>UPnP Status:</p> <p>UPnP Status: <input type="checkbox"/> Enabled <input checked="" type="checkbox"/> Disabled</p> <p><input type="button" value="Save"/> <input type="button" value="Cancel"/></p> <p>UPnP Settings List</p> <table border="1"> <thead> <tr> <th>ID</th> <th>Application Remarks</th> <th>External Port</th> <th>Protocol</th> <th>Internal Port</th> <th>IP Address</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td> </td> </tr> </tbody> </table>	ID	Application Remarks	External Port	Protocol	Internal Port	IP Address	Status							
ID		Application Remarks	External Port	Protocol	Internal Port	IP Address	Status								
▶ Setup Wizard															
▶ Network Settings															
▶ Wireless Settings															
▶ DHCP Server															
▼ NAT															
Port Forwarding															
Port Triggering															
DMZ Host															
UPnP															

**UPnP:** Click the checkbox to **Enable** or **Disable** the UPnP.

**Save:** Click **Save** button to save your setting.

## Multicast Forwarding Settings

▶ Running Status	<h3>Multicast Forwarding Settings</h3> <p>Multicast Forwarding Status:</p> <p>Multicast Forwarding Status: <input type="checkbox"/> Enabled <input checked="" type="checkbox"/> Disabled</p> <p><input type="button" value="Save"/> <input type="button" value="Cancel"/></p> <p>Group List</p> <table border="1"> <thead> <tr> <th>ID</th> <th>Group Mac</th> <th>Group IP</th> <th>Host IP</th> <th>Port</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td> </td> <td> </td> <td> </td> <td> </td> <td> </td> <td> </td> </tr> </tbody> </table>	ID	Group Mac	Group IP	Host IP	Port	Status						
ID		Group Mac	Group IP	Host IP	Port	Status							
▶ Setup Wizard													
▶ Network Settings													
▶ Wireless Settings													
▶ DHCP Server													
▼ NAT													
Port Forwarding													
Port Triggering													
DMZ Host													
UPnP													
Multicast Forwarding													

Multicast Forwarding enables the router to issue IGMP host message on behalf of hosts that the router discovered through standard IGMP interfaces.

**Group Mac:** The Mac Address of the Multicast Forwarding Group.

**Group IP:** The IP Address of the Multicast Forwarding Group.

**Host IP:** The IP Address of the Group members.

**Port:** The port number of the Multicast group.

**Status:** The status of the Multicast group.

## Security Options

There are four submenus under the **Security Options** menu: **Security Settings**, **Advanced Security Settings**, **Local Web Management** and **Remote Web Management**. Click any of them, and you will be able to configure the corresponding function.



## Security Settings

<ul style="list-style-type: none"> <li>▶ Running Status</li> <li>▶ Setup Wizard</li> <li>▶ Network Settings</li> <li>▶ Wireless Settings</li> <li>▶ DHCP Server</li> <li>▶ NAT</li> <li>▼ Security Options <ul style="list-style-type: none"> <li>Security Settings</li> <li>Advanced Security Settings</li> <li>Local Web Management</li> <li>Remote Web Management</li> </ul> </li> <li>▶ Access Control</li> <li>▶ Routing Settings</li> <li>▶ IP Bandwidth Control</li> </ul>	<h3>Security Settings</h3> <table border="1"> <tr> <td colspan="2"><b>SPI</b></td> </tr> <tr> <td>SPI Firewall</td> <td><input checked="" type="radio"/> Enabled <input type="radio"/> Disabled</td> </tr> <tr> <td colspan="2"><b>VPN</b></td> </tr> <tr> <td>PPTP Pass-through</td> <td><input checked="" type="radio"/> Enabled <input type="radio"/> Disabled</td> </tr> <tr> <td>L2TP Pass-through</td> <td><input checked="" type="radio"/> Enabled <input type="radio"/> Disabled</td> </tr> <tr> <td>IPSec Pass-through</td> <td><input checked="" type="radio"/> Enabled <input type="radio"/> Disabled</td> </tr> <tr> <td colspan="2"><b>ALG</b></td> </tr> <tr> <td>FTP ALG</td> <td><input checked="" type="radio"/> Enabled <input type="radio"/> Disabled</td> </tr> <tr> <td>TFTP ALG</td> <td><input checked="" type="radio"/> Enabled <input type="radio"/> Disabled</td> </tr> <tr> <td>SIP ALG</td> <td><input type="radio"/> Enabled <input checked="" type="radio"/> Disabled</td> </tr> </table> <p>Save Cancel</p>	<b>SPI</b>		SPI Firewall	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled	<b>VPN</b>		PPTP Pass-through	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled	L2TP Pass-through	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled	IPSec Pass-through	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled	<b>ALG</b>		FTP ALG	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled	TFTP ALG	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled	SIP ALG	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled
<b>SPI</b>																					
SPI Firewall	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled																				
<b>VPN</b>																					
PPTP Pass-through	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled																				
L2TP Pass-through	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled																				
IPSec Pass-through	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled																				
<b>ALG</b>																					
FTP ALG	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled																				
TFTP ALG	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled																				
SIP ALG	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled																				

**SPI (Stateful Packet Inspection):** When the SPI firewall is enabled, the system refuses all requests from the Internet. Only packets that belong to connections that respond requests from the LAN and for which status database is created can pass the firewall and access to the LAN. By default, the SPI is enabled. To expose all hosts in the LAN to the Internet, you can disable SPI.

**VPN (Virtual Private Network):** VPN provides a safe communication method among remote computers through WAN. If a host in the LAN wants to connect to the remote VPN

network through the router by using the VPN protocol, such as PPTP, L2TP, or IPSec, you need to enable the corresponding VPN pass through.

**ALG (Application Layer Gateway):** ALG supports that some protocols at the application layer that adopt the control/data mode, such as FTP, TFTP, and H323, help to translate network addresses and ports at the NAT gateway. You are recommended to enable this option. The Common Service Port drop-down list contains some common service ports. You can select one and click Add to add the service port to the virtual server list.

## Advanced Security Settings

▶ Running Status	<b>Advanced Security Settings</b>	
▶ Setup Wizard	Anti DoS Attack	<input checked="" type="radio"/> Disabled <input type="radio"/> Enabled
▶ Network Settings	Enable filtering ICMP-FLOOD attack	<input type="checkbox"/>
▶ Wireless Settings	ICMP-FLOOD Packet Threshold (5-3600)	<input type="text"/> packets/s
▶ DHCP Server	Enable filtering UDP-FLOOD attack	<input type="checkbox"/>
▶ NAT	UDP-FLOOD Packet Threshold (5-3600)	<input type="text"/> packets/s
▼ Security Options	Enable filtering TCP-SYN-FLOOD attack	<input type="checkbox"/>
Security Settings	TCP-SYN-FLOOD Packet Threshold (5-3600)	<input type="text"/> packets/s
Advanced Security Settings	Deny the PING packet from the WAN interface	<input type="checkbox"/>
Local Web Management	<input type="button" value="Save"/> <input type="button" value="Cancel"/>	
Remote Web Management		
▶ Access Control		

**Anti DoS Attack:** Check to enable it for attack prevention.

**IGMP-Flood Packet Threshold:** If the number of ICMP data packets exceeds the threshold, the defense measures act immediately.

**Enable filtering UDP-FLOOD attack:** Select it if you want to protect against UDP-FLOOD attacks.

**UDP-Flood Packet Threshold:** If the number of UDP data packets exceeds the threshold, the defense measures act immediately.

**Enable filtering TCP-SYN-FLOOD attack:** Select it if you want to protect against

TCP-SYN-FLOOD attacks.

**TCP-SYN-Attack Packet Threshold:** If the number of TCP-SYN data packets exceeds the threshold, the defense measures act immediately.

**Block the PING packets from the WAN interface:** If you select this option, the PC in the WAN cannot send the PING packets to the router.

**Block the PING packets from the LAN:** If you select this option, the PC in the LAN cannot send the PING packets to the WAN.

## Local Web Management

Local Web Management	
<input checked="" type="radio"/> Allow all hosts in the LAN to access the Web management page <input type="radio"/> Allow only MAC address in the list to access the Web management page	
MAC Address 1	<input type="text"/> - <input type="text"/> <input type="button" value="Search MAC Address"/>
MAC Address 2	<input type="text"/> - <input type="text"/> <input type="button" value="Search MAC Address"/>
MAC Address 3	<input type="text"/> - <input type="text"/> <input type="button" value="Search MAC Address"/>
MAC Address 4	<input type="text"/> - <input type="text"/> <input type="button" value="Search MAC Address"/>
<input type="button" value="Save"/> <input type="button" value="Cancel"/>	

By default, the router allows all computers in the LAN to log in to the router for Web management. If you select **Allow only MAC addresses in the list to access the Web management page**, and add MAC addresses to the list, only MAC addresses in the list can access the web management page of the router, while other computers in the LAN are blocked from accessing the router.

**MAC Address 1/2/3/4:** Enter the MAC addresses of LAN computers.

## Remote Web Management

▶ Running Status	<b>Remote Web Management</b>		
▶ Setup Wizard	Enable Remote Web Management	<input type="checkbox"/>	
▶ Network Settings	Web Management Port	<input type="text" value="80"/>	
▶ Wireless Settings	Allowed Remote IP Address	<input type="text" value="255"/>	<input type="text" value="255"/>
▶ DHCP Server		<input type="text" value="255"/>	<input type="text" value="255"/>
▶ NAT			
▼ Security Options	<input type="button" value="Save"/> <input type="button" value="Cancel"/>		

This section is to allow the network administrator to manage the Router remotely. If you want to access the Router from outside the local network, please select the **Enable Remote Web Management**.

**Web Management Port:** The management port open to outside access the default value is 80.

**Allowed Remote IP Address:** Specify the range of the WAN IP address for remote management.

## Access Control

There are two submenus under the **Access Control** menu: **MAC/IP/Port Filter** and **Web URL Filter**. Click any of them, and you will be able to configure the corresponding function.



## MAC/IP/Port Filter

**MAC/IP/Port Filter**

**Basic Setting**

MAC/IP/Port Filter: Disabled

Default Policy -- The packet which don't match with any rules would be: Accepted

Save Cancel

No	Mac Address	Dest IP Address	Src IP Address	Protocol	Dest. Port Range	Src Port Range	Action	Description	Edit	Delete

Add Delete

**IP/Port Filter Settings**

Access Control List: Custom ACL

Mac Address: [ ]-[ ]-[ ]-[ ]-[ ]-[ ] Search MAC Address

Dest IP Address: [ ]-[ ]-[ ]-[ ]

Src IP Address: [ ]-[ ]-[ ]-[ ] Search IP Address

Protocol: [ ]

Dest. Port Range: [ ]-[ ]

Src Port Range: [ ]-[ ]

Description: [ ]

Schedule:
  All
  Monday
  Tuesday
  Wednesday
  Thursday
  Friday
  Saturday
  Sunday

Schedule:
  All
  Period of time [ ]-[ ] (HH)

Action: Drop

Max rule number 10.

Save Cancel

This page is used to enable the firewall filtering function, select the filtering service or manually set the parameters that need to be filtered, such as MAC address, IP address and Port. You must set at least one filtering condition. You may also set multiple conditions or all the conditions.

**MAC/IP/Port Filter:** Select **Enabled** or **Disabled** to enable or disable filtering.

**Default Policy:** **Accepted** chose, all the packets and devices will be allowed to be passed normally, opposite action will be happened if **Dropped** was been chosen.

**Current IP/Port Filtering Rules:** All the existing rules will be listed below, any needed of rules deleting, please select the rules, and then click **Delete Selected**.

**Note:** Please synchronize the router's time first when selecting the timing function.

## Web URL Filter

**Web URL Filter**

The current system's website at URL filtering rules:

NO.	URL	Delete

Add URL filter rules

URL:

**URL:** Put in the URL you want to filter.

## Routing Settings

There are two submenus under the **Routing Settings** menu: **Static Routing Table** and **Dynamic Routing Settings**. Click any of them, and you will be able to configure the corresponding function.



## Static Routing Table

**Static Routing Table**

Current Routing table in the system:

No.	Destination	Subnet mask	Gateway	Flags	Metric	Ref	Use	Interface	Description
1	239.255.255.250	255.255.255.255	0.0.0.0	5	0	0	0	br0	
2	192.168.0.0	255.255.255.0	0.0.0.0	1	0	0	0	br0	
3	127.0.0.0	255.0.0.0	0.0.0.0	1	0	0	0	lo	

Static routes give the router information that it cannot learn automatically through other means. Use the Static Routing page to add or delete a route. The max number is 10.

**Destination:** This is the IP address of the network or host that you want to assign to a static route.

**Subnet Mask:** The Subnet Mask determines which portion of an IP address is the network portion, and which portion is the host portion.

**Gateway:** This is the IP address of the default gateway device that allows for the contact between the Router and the network or host.

## Dynamic Routing Settings

▶ Running Status	<b>Dynamic Routing Settings</b>	
▶ Setup Wizard	Dynamic routing	
▶ Network Settings	RIP	Disabled ▾
▶ Wireless Settings	Rip Version	version 2 ▾
▶ DHCP Server	Authentication Code	Disabled ▾ <input type="text"/>
▶ NAT		
▶ Security Options		
▶ Access Control	<input type="button" value="Save"/> <input type="button" value="Cancel"/>	

**RIP:** The Routing Information Protocol (RIP) is a dynamic routing protocol used in local and wide area networks. Choose **Enable** dynamic routing need to be activated.

**Rip Version:** Choose the version of RIP.

**Authentication Code:** Choose the encrypt method used between routers.

## IP Bandwidth Control

▶ Running Status	<b>IP Bandwidth Control</b>								
▶ Setup Wizard	Enable IP Bandwidth Control	<input type="checkbox"/>							
▶ Network Settings	Total Uplink Bandwidth	<input type="text"/>					Kbps		
▶ Wireless Settings	Total Downlink Bandwidth	<input type="text"/>					Kbps		
▶ DHCP Server	<input type="button" value="Save"/> <input type="button" value="Cancel"/>								
▶ NAT									
▶ Security Options									
▶ Access Control									
▶ Routing Settings									
▶ IP Bandwidth Control	ID	Remarks	Uplink Bandwidth (Kbps)		Downlink Bandwidth (Kbps)		Enabled	Edit	Delete
▶ Storage			Min	Max	Min	Max			
▶ System Tools	The list is empty.								
▶ Logout	<input type="button" value="Add"/> <input type="button" value="Delete"/>								

**Enable IP bandwidth control:** If you select it, the bandwidth control rule takes effect.

**Total Uplink Bandwidth:** The rate of uploading through the WAN interface.


**Total Downlink Bandwidth:** The rate of downloading through the WAN interface.

**Note:**

- The bandwidth conversion: 1 Mbps = 1024 Kbps.
- Select the type of the broadband line and the bandwidth according to the actual situation. If you are not sure about the information, consult your broadband provider.
- After finishing the settings, click the Save button to apply the settings.

## Storage

There are seven submenus under the **Storage: UserAdmin, Disk Management, FTP Server, SAMBA Server, PRINTER Server, MINIDLNA Server** and **DOWNLOAD**. Click any of them, and you will be able to configure the corresponding function.

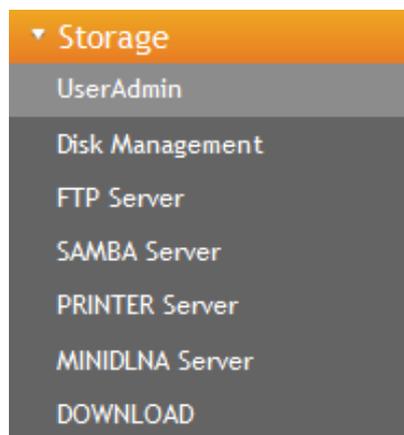

## UserAdmin

<ul style="list-style-type: none"> <li>▶ Running Status</li> <li>▶ Setup Wizard</li> <li>▶ Network Settings</li> <li>▶ Wireless Settings</li> <li>▶ DHCP Server</li> <li>▶ NAT</li> <li>▶ Security Options</li> <li>▶ Access Control</li> <li>▶ Routing Settings</li> </ul>	<h3 style="color: #e67e22;">Setting User for Mass Storage</h3> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr style="background-color: #ccc;"> <th colspan="4">Setting User</th> </tr> <tr> <th style="width: 30%;"></th> <th style="width: 30%;">Username</th> <th style="width: 20%;">Allow to use FTP</th> <th style="width: 20%;">Allow to use SAMBA</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">--</td> <td style="text-align: center;">admin</td> <td style="text-align: center;">Enabled</td> <td style="text-align: center;">Enabled</td> </tr> <tr> <td style="text-align: center;">--</td> <td style="text-align: center;">anonymous</td> <td style="text-align: center;">Disabled</td> <td style="text-align: center;">Disabled</td> </tr> </tbody> </table> <p style="font-size: small;">Max rule number 10.</p> <p style="text-align: center;"> <input type="button" value="Add"/> <input type="button" value="Edit"/> <input type="button" value="Delete"/> </p>	Setting User					Username	Allow to use FTP	Allow to use SAMBA	--	admin	Enabled	Enabled	--	anonymous	Disabled	Disabled
Setting User																	
	Username	Allow to use FTP	Allow to use SAMBA														
--	admin	Enabled	Enabled														
--	anonymous	Disabled	Disabled														

The user in LAN can share the folder on mass-storage device which is plugged at USB connector.

Click **Add** button, you can create a new user account, allow or prohibit the user to use FTP or SAMBA server.

Basic Setup	
Username	<input type="text"/>
Password	<input type="password"/>
FTP Setup	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled
SAMBA Setup	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled
<input type="button" value="Apply"/> <input type="button" value="Cancel"/>	

## Disk Management

<ul style="list-style-type: none"> <li>▶ Running Status</li> <li>▶ Setup Wizard</li> <li>▶ Network Settings</li> <li>▶ Wireless Settings</li> <li>▶ DHCP Server</li> <li>▶ NAT</li> <li>▶ Security Options</li> <li>▶ Access Control</li> <li>▶ Routing Settings</li> </ul>	<h3 style="margin: 0;">Disk Management</h3> <div style="border: 1px solid #ccc; padding: 5px; margin-bottom: 5px;"> <p style="margin: 0;">Folder List</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;"></th> <th style="width: 25%;">Directory Path</th> <th style="width: 25%;">Partition</th> </tr> </thead> <tbody> <tr> <td style="height: 20px;"></td> <td></td> <td></td> </tr> </tbody> </table> <p style="margin: 5px 0;"> <input type="button" value="Add"/> <input type="button" value="Delete"/> </p> </div> <div style="border: 1px solid #ccc; padding: 5px;"> <p style="margin: 0;">Partition State</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Partition</th> <th style="width: 50%;">Path</th> </tr> </thead> <tbody> <tr> <td style="height: 20px;"></td> <td></td> </tr> </tbody> </table> </div>		Directory Path	Partition				Partition	Path		
	Directory Path	Partition									
Partition	Path										

Click **Add** button, you can manage the Folder and the Partition of disk.

Directory Name

Partition

	Partition	Path

## FTP Server

<ul style="list-style-type: none"> <li>▶ Running Status</li> <li>▶ Setup Wizard</li> <li>▶ Network Settings</li> <li>▶ Wireless Settings</li> <li>▶ DHCP Server</li> <li>▶ NAT</li> <li>▶ Security Options</li> <li>▶ Access Control</li> <li>▶ Routing Settings</li> <li>▶ IP Bandwidth Control</li> <li style="background-color: #f00; color: white;">▼ Storage</li> <li style="background-color: #333; color: white;">UserAdmin</li> <li style="background-color: #333; color: white;">Disk Management</li> <li style="background-color: #333; color: white;">FTP Server</li> </ul>	<h3 style="margin: 0;">FTP Settings</h3> <div style="border: 1px solid #ccc; padding: 5px; margin-bottom: 5px;"> <p style="margin: 0;">FTP Server Setup</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 60%;">FTP Server</td> <td><input type="radio"/> Enabled <input checked="" type="radio"/> Disabled</td> </tr> <tr> <td>FTP Server Name</td> <td><input style="width: 80%;" type="text" value="RouterFTP"/></td> </tr> <tr> <td>Anonymous Login</td> <td><input type="radio"/> Enabled <input checked="" type="radio"/> Disabled</td> </tr> <tr> <td>FTP Port</td> <td><input style="width: 50%;" type="text" value="21"/></td> </tr> <tr> <td>Max. Sessions</td> <td><input style="width: 50%;" type="text" value="10"/></td> </tr> <tr> <td>Read File</td> <td><input checked="" type="radio"/> Enabled <input type="radio"/> Disabled</td> </tr> <tr> <td>Write File</td> <td><input checked="" type="radio"/> Enabled <input type="radio"/> Disabled</td> </tr> <tr> <td>Download Capability</td> <td><input checked="" type="radio"/> Enabled <input type="radio"/> Disabled</td> </tr> </table> <p style="margin: 5px 0;"> <input type="button" value="Apply"/> <input type="button" value="Reset"/> </p> </div>	FTP Server	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled	FTP Server Name	<input style="width: 80%;" type="text" value="RouterFTP"/>	Anonymous Login	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled	FTP Port	<input style="width: 50%;" type="text" value="21"/>	Max. Sessions	<input style="width: 50%;" type="text" value="10"/>	Read File	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled	Write File	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled	Download Capability	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled
FTP Server	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled																
FTP Server Name	<input style="width: 80%;" type="text" value="RouterFTP"/>																
Anonymous Login	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled																
FTP Port	<input style="width: 50%;" type="text" value="21"/>																
Max. Sessions	<input style="width: 50%;" type="text" value="10"/>																
Read File	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled																
Write File	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled																
Download Capability	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled																

You can create a FTP Server that can be accessed from internet or local network in this page.

This function is disabled by default.

**FTP Server:** Choose **Enabled** or **Disabled** to enable or disable this function.

**FTP Server Name:** You can give this FTP Server a name.

**Anonymous Login:** Choose **Enabled** or **Disabled** to allow or deny Anonymous Login.

**FTP Port:** The default port number is 21, please don't change unless necessary.

**Max Sessions:** The default number is 10, please don't change unless necessary.

**Read File:** Choose **Enabled**, the file can be read, choose **Disabled**, the file cannot be read.

**Write File:** Choose **Enabled**, you have write access to it.

**Download Capability:** Choose **Enabled** or **Disabled** to enable or disable this function.

## SAMBA Server

SAMBA Settings			
SAMBA Server Setup			
SAMBA Server	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled		
WorkGroup	<input type="text"/>		
NetBIOS Name	<input type="text" value="Router_SoC"/>		
Sharing Directory List			
	Directory Name	Directory Path	Allows Users
<input type="button" value="Add"/>	<input type="button" value="Edit"/>	<input type="button" value="Delete"/>	
<input type="button" value="Apply"/>		<input type="button" value="Cancel"/>	

**SAMBA Server:** Choose **Enabled** or **Disabled** to enable or disable this function.

**WorkGroup:** Give your workgroup a name.

**NetBIOS Name:** Give NetBIOS a name

Click **Add** button,

Please specify Directory Name	<input type="text"/>
Access User	<input type="text"/>
Access Path	
<input type="text"/>	Path
<input type="button" value="Apply"/> <input type="button" value="Cancel"/>	

## PRINTER Server

<ul style="list-style-type: none"> <li>▶ Running Status</li> <li>▶ Setup Wizard</li> <li>▶ Network Settings</li> <li>▶ Wireless Settings</li> <li>▶ DHCP Server</li> </ul>	<h3>PRINTER Server</h3>
PRINTER Setting	<input type="button" value="Save"/> <div style="border: 1px solid black; padding: 2px;">             Disable ▾              Disable              Enable           </div>

To Enable Printer Function, follow these steps:

1. Please ensure that USB Media has plug in.
2. Choose **Enabled**.
3. Click **Save** to save the change.

## MINIDLNA Server

<ul style="list-style-type: none"> <li>▶ Running Status</li> <li>▶ Setup Wizard</li> <li>▶ Network Settings</li> <li>▶ Wireless Settings</li> <li>▶ DHCP Server</li> <li>▶ NAT</li> <li>▶ Security Options</li> <li>▶ Access Control</li> <li>▶ Routing Settings</li> </ul>	<h3>MINIDLNA Server</h3>
Base Setting	
MINIDLNA Setting	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled
MINIDLNA Port	<input type="text" value="8200"/>
Enable TIVO	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled
Strict MINIDLNA	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled
<input type="button" value="Save"/> <input type="button" value="Cancel"/>	

To Enable MINIDLNA Function, follow these steps:

1. Please ensure that USB Media has plug in.
2. Highlight **Enabled** and set the MINIDLNA Port.
3. Click **Save** to save the change.

4. Enter the name of the path you want to share; you can select the type you want to share.
5. Click **Add** to complete the Directories settings.

## DOWNLOAD


▶ Running Status	<b>DOWNLOAD</b>	
▶ Setup Wizard		
▶ Network Settings	DOWNLOAD Settings	Enable ▾
▶ Wireless Settings		Disable
▶ DHCP Server		Enable
	<input type="button" value="Save"/>	

Choose **Enable**, then run **Download Wizard**, you can keep downloading even PC is turned off.

If you want to know more about the offline download configuration, please refer to chapter 4.

## System Tools

There are ten submenus under the **System Tools: Network Time settings, Diagnostics, WOL, Factory Defaults, Backup and Restore, Password, System Log, Traffic Statistics, Firmware Upgrade** and **Reboot**. Click any of them, and you will be able to configure the corresponding function.

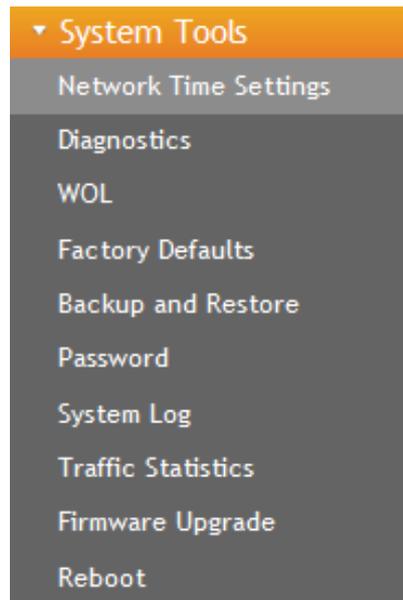

## Network Time Settings

<ul style="list-style-type: none"> <li>▶ Running Status</li> <li>▶ Setup Wizard</li> <li>▶ Network Settings</li> <li>▶ Wireless Settings</li> <li>▶ DHCP Server</li> <li>▶ NAT</li> <li>▶ Security Options</li> <li>▶ Access Control</li> <li>▶ Routing Settings</li> <li>▶ IP Bandwidth Control</li> </ul>	<p><b>Network Time Settings</b></p> <table border="1"> <tr> <td>Current Time</td> <td>Fri Jan 1 16:28:55 GMT 1971</td> <td><input type="button" value="Synchronize with the host"/></td> </tr> <tr> <td>Time Zone</td> <td colspan="2">(GMT+08:00) The coast of China, Hong Kong ▼</td> </tr> <tr> <td>Network Time Server</td> <td colspan="2"> <input type="text" value="time.nist.gov"/>                      ex: time.nist.gov                      ntp0.broad.mit.edu                      time.stdtime.gov.tw                 </td> </tr> </table> <p><input type="button" value="Save"/> <input type="button" value="Cancel"/></p>	Current Time	Fri Jan 1 16:28:55 GMT 1971	<input type="button" value="Synchronize with the host"/>	Time Zone	(GMT+08:00) The coast of China, Hong Kong ▼		Network Time Server	<input type="text" value="time.nist.gov"/> ex: time.nist.gov ntp0.broad.mit.edu time.stdtime.gov.tw	
Current Time	Fri Jan 1 16:28:55 GMT 1971	<input type="button" value="Synchronize with the host"/>								
Time Zone	(GMT+08:00) The coast of China, Hong Kong ▼									
Network Time Server	<input type="text" value="time.nist.gov"/> ex: time.nist.gov ntp0.broad.mit.edu time.stdtime.gov.tw									

**Current time:** Show the current time.

**Time Zone:** Select your time zone from the drop-down menu.

**Network Time server:** To set NTP server.

**Save:** Click **Save** to save your settings.

**Note:** The system will Synchronous with the Network Time Server every hour after saving, and it will affect the WAN dial-up on demand.

## Diagnostics

<ul style="list-style-type: none"> <li>▶ Running Status</li> <li>▶ Setup Wizard</li> <li>▶ Network Settings</li> <li>▶ Wireless Settings</li> <li>▶ DHCP Server</li> <li>▶ NAT</li> <li>▶ Security Options</li> <li>▶ Access Control</li> <li>▶ Routing Settings</li> <li>▶ IP Bandwidth Control</li> <li>▶ Storage</li> <li style="background-color: #f90;">▼ System Tools</li> <li>  Network Time Settings</li> <li>  Diagnostics</li> <li>  WOL</li> <li>  Factory Defaults</li> <li>  Backup and Restore</li> <li>  Password</li> <li>  System Log</li> <li>  Traffic Statistics</li> <li>  Firmware Upgrade</li> <li>  Reboot</li> <li>▶ Logout</li> </ul>	<div style="text-align: center; color: #f90; font-weight: bold; margin-bottom: 10px;">Diagnostics</div> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr style="background-color: #ccc;"> <th colspan="2">Parameter Settings</th> </tr> </thead> <tbody> <tr> <td>Select</td> <td><input checked="" type="radio"/> Ping <input type="radio"/> Tracert</td> </tr> <tr> <td>IP Address/Domain Name</td> <td><input style="width: 100%;" type="text"/></td> </tr> <tr> <td>Ping Packet Total</td> <td><input style="width: 50px;" type="text" value="4"/> (1-50)</td> </tr> <tr> <td>Ping Packet Size</td> <td><input style="width: 50px;" type="text" value="64"/> (8-1472)</td> </tr> <tr> <td>Ping Timeout</td> <td><input style="width: 50px;" type="text" value="10"/> (10-100, Unit: seconds)</td> </tr> <tr> <td>Tracert Hops</td> <td><input style="width: 50px;" type="text" value="20"/> (1-30)</td> </tr> </tbody> </table> <div style="border: 1px solid #ccc; padding: 5px; margin-top: 5px;"> <p style="background-color: #ccc; margin: 0; padding: 2px;">Diagnosis Results</p> <div style="height: 150px; border: 1px solid #ccc; margin: 2px 0;"></div> </div> <div style="margin-top: 10px; text-align: center;"> <input type="button" value="Start Diagnosis"/> <input type="button" value="Cancel"/> </div>	Parameter Settings		Select	<input checked="" type="radio"/> Ping <input type="radio"/> Tracert	IP Address/Domain Name	<input style="width: 100%;" type="text"/>	Ping Packet Total	<input style="width: 50px;" type="text" value="4"/> (1-50)	Ping Packet Size	<input style="width: 50px;" type="text" value="64"/> (8-1472)	Ping Timeout	<input style="width: 50px;" type="text" value="10"/> (10-100, Unit: seconds)	Tracert Hops	<input style="width: 50px;" type="text" value="20"/> (1-30)
Parameter Settings															
Select	<input checked="" type="radio"/> Ping <input type="radio"/> Tracert														
IP Address/Domain Name	<input style="width: 100%;" type="text"/>														
Ping Packet Total	<input style="width: 50px;" type="text" value="4"/> (1-50)														
Ping Packet Size	<input style="width: 50px;" type="text" value="64"/> (8-1472)														
Ping Timeout	<input style="width: 50px;" type="text" value="10"/> (10-100, Unit: seconds)														
Tracert Hops	<input style="width: 50px;" type="text" value="20"/> (1-30)														

**Select:** Select Ping or Tracert.

**IP Address/Domain Name:** The destination IP address or domain name.

**Ping Packet Total:** The number of transmitted data packet when Ping operation is carried out.

**Ping Packet Size:** The size of transmitted data packet when Ping operation is carried out.

**Ping Timeout:** The timeout time of the ping operation.

**Tracert Hops:** The hops of tracert.

Click **Start Diagnosis** button, the selected ping or tracert testing will be started.

Below is a Ping diagnosis example that router has been connected to IP 172.16.160.31:

```

Diagnosis Result

PING 172.16.160.31 (172.16.160.31): 64 data bytes
72 bytes from 172.16.160.31: seq=0 ttl=127 time=2.260 ms
72 bytes from 172.16.160.31: seq=1 ttl=127 time=1.900 ms
72 bytes from 172.16.160.31: seq=2 ttl=127 time=2.760 ms
72 bytes from 172.16.160.31: seq=3 ttl=127 time=3.620 ms

--- 172.16.160.31 ping statistics ---
4 packets transmitted, 4 packets received, 0% packet loss
round-trip min/avg/max = 1.900/2.635/3.620 ms
    
```

Below is a Ping diagnosis example that router has failed to connect to IP 100.1.1.1:

```

Diagnosis Result

PING 100.1.1.1 (100.1.1.1): 64 data bytes

--- 100.1.1.1 ping statistics ---
4 packets transmitted, 0 packets received, 100% packet loss
    
```

## Wake On LAN

<ul style="list-style-type: none"> <li>▶ Running Status</li> <li>▶ Setup Wizard</li> <li>▶ Network Settings</li> <li>▶ Wireless Settings</li> <li>▶ DHCP Server</li> </ul>	<h3 style="color: orange;">Wake On LAN</h3> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 15%;">NO</th> <th style="width: 25%;">MAC Address</th> <th style="width: 25%;">Explain PC</th> <th style="width: 15%;">Edit</th> <th style="width: 20%;">Wake Up/Delete</th> </tr> </thead> <tbody> <tr> <td colspan="5" style="text-align: center;"> <input type="button" value="Add"/> <input type="button" value="Wake Up"/> <input type="button" value="Delete"/> </td> </tr> </tbody> </table>	NO	MAC Address	Explain PC	Edit	Wake Up/Delete	<input type="button" value="Add"/> <input type="button" value="Wake Up"/> <input type="button" value="Delete"/>				
NO	MAC Address	Explain PC	Edit	Wake Up/Delete							
<input type="button" value="Add"/> <input type="button" value="Wake Up"/> <input type="button" value="Delete"/>											

WOL broadcasts so called Magic Packet Frames across a network to wake up hardware that understands such packets. These are normally NICs with Wake On LAN function.

**MAC Address:** Add a MAC address to wake the computer on.


**Explain PC:** Description about the computer.

**Add:** Click **Add** button to finish, and the computer will display in the list.

MAC Address	<input type="checkbox"/> Setting the Current PC's MAC Address <input type="text" value=""/> - <input type="text" value=""/> <input type="button" value="Search MAC Address"/>
Explain PC	<input type="text"/>
You can register max 10 item	
<input type="button" value="Apply"/> <input type="button" value="Cancel"/>	

Select one or more computers in the list, and click **Apply** button, these computers will be waked up.

## Factory Defaults

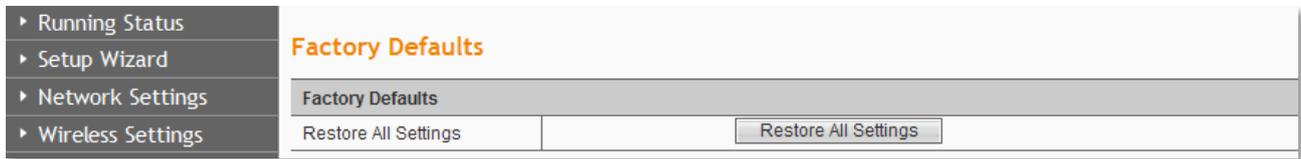

Click **Restore All Settings** button to reset all configuration settings to their default values.

**Note:** All changed settings will be lost when defaults are restored.

## Backup and Restore

<ul style="list-style-type: none"> <li>▶ Running Status</li> <li>▶ Setup Wizard</li> <li>▶ Network Settings</li> <li>▶ Wireless Settings</li> <li>▶ DHCP Server</li> <li>▶ NAT</li> <li>▶ Security Options</li> <li>▶ Access Control</li> <li>▶ Routing Settings</li> </ul>	<h3 style="color: #e67e22;">Backup and Restore</h3> <div style="background-color: #f3f3f3; padding: 2px;">Export Settings</div> <p>Export Button <span style="float: right;"><input type="button" value="Back up"/></span></p> <p style="color: red; font-size: small;">Warning! To upgrade the incorrect configuration file will lose your settings.</p> <div style="background-color: #f3f3f3; padding: 2px;">Import Settings</div> <p>Set File Locations <input type="text"/> <input style="float: right;" type="button" value="Browse..."/></p> <p style="text-align: center;"><input type="button" value="Save"/> <input type="button" value="Cancel"/></p>
---	--

In the Export Settings column, click **Backup** button to save all configuration settings to your local computer as a file.

To restore the Router's configuration, follow these instructions:

- 1) Click **Browse** to find the configuration file which you want to restore.
- 2) Click **Save** to update the configuration with the file whose path is the one you have input or selected in the blank.

**Note:** Keep the power on during the process, in case of any damage.

## Password

<ul style="list-style-type: none"> <li>▶ Running Status</li> <li>▶ Setup Wizard</li> <li>▶ Network Settings</li> <li>▶ Wireless Settings</li> <li>▶ DHCP Server</li> <li>▶ NAT</li> <li>▶ Security Options</li> <li>▶ Access Control</li> </ul>	<h3 style="color: #e67e22;">Password</h3> <div style="background-color: #f3f3f3; padding: 2px;">Account Management</div> <p>Username <input type="text" value="admin"/></p> <p>New Password <input type="text"/></p> <p>Repeat New Password <input type="text"/></p> <p style="text-align: center;"><input type="button" value="Save"/> <input type="button" value="Cancel"/></p>
---	---

You can change the log in password for this web management page, not your ISP password or the wireless password.

## System Log

**System Log**

Enable remote System Log

Save

```

Jan 1 15:20:01 Router cron.err crond[799]: USER admin pid 2302 cmd /usr/bin/transmission_que.sh 2 5
Jan 1 15:21:01 Router cron.err crond[799]: USER admin pid 2306 cmd /usr/bin/transmission_que.sh 2 5
Jan 1 15:22:01 Router cron.err crond[799]: USER admin pid 2310 cmd /usr/bin/transmission_que.sh 2 5
Jan 1 15:23:01 Router cron.err crond[799]: USER admin pid 2314 cmd /usr/bin/transmission_que.sh 2 5
Jan 1 15:24:01 Router cron.err crond[799]: USER admin pid 2318 cmd /usr/bin/transmission_que.sh 2 5
Jan 1 15:25:01 Router cron.err crond[799]: USER admin pid 2322 cmd /usr/bin/transmission_que.sh 2 5
Jan 1 15:26:01 Router cron.err crond[799]: USER admin pid 2326 cmd /usr/bin/transmission_que.sh 2 5
Jan 1 15:27:01 Router cron.err crond[799]: USER admin pid 2330 cmd /usr/bin/transmission_que.sh 2 5
Jan 1 15:28:01 Router cron.err crond[799]: USER admin pid 2334 cmd /usr/bin/transmission_que.sh 2 5
Jan 1 15:29:01 Router cron.err crond[799]: USER admin pid 2338 cmd /usr/bin/transmission_que.sh 2 5
Jan 1 15:30:01 Router cron.err crond[799]: USER admin pid 2342 cmd /usr/bin/transmission_que.sh 2 5
Jan 1 15:31:01 Router cron.err crond[799]: USER admin pid 2346 cmd /usr/bin/transmission_que.sh 2 5
Jan 1 15:32:01 Router cron.err crond[799]: USER admin pid 2351 cmd /usr/bin/transmission_que.sh 2 5
Jan 1 15:33:01 Router cron.err crond[799]: USER admin pid 2355 cmd /usr/bin/transmission_que.sh 2 5
Jan 1 15:34:01 Router cron.err crond[799]: USER admin pid 2359 cmd /usr/bin/transmission_que.sh 2 5

```

Clean

The system log is a detailed record of the websites that users on your network have accessed or attempted to access. You can enable remote System Log function to view the log in remote place.

**Enable remote System Log:** Check the radio button to enable remote System Log.

**Save:** Click **Save** to save your Log.

**Clean:** Click **Clean** to clear all shown information.

## Traffic Statistics

▶ Running Status	<b>Traffic Statistics</b>	
▶ Setup Wizard		
▶ Network Settings	<b>Memory</b>	
▶ Wireless Settings	Total Memory Capacity:	62392 kB
▶ DHCP Server	The remaining amount of memory:	27624 kB
▶ NAT	<b>WAN / LAN</b>	
▶ Security Options	The packet numbers that the wide area network receives:	0
▶ Access Control	The data amount that the wide area network receives:	0
▶ Routing Settings	The packet numbers that the wide area network transmits:	6186
▶ IP Bandwidth Control	The data amount that the wide area network transmits:	3674484
▶ Storage	The packet numbers that the local area network receives:	18436
▼ System Tools	The data amount that the Local area network receives:	1291226
Network Time Settings	The packet numbers that the local area network transmits:	37823
Diagnostics	The data amount that the local area network transmits:	14873739
WOL	<b>All of the interface</b>	
Factory Defaults	Name	eth2
Backup and Restore	Rx Packet	18443
Password	Rx Byte	1623904
System Log	Tx Packet	103957
Traffic Statistics	Tx Byte	22539988
Firmware Upgrade	Name	lo
Reboot	Rx Packet	14
▶ Logout	Rx Byte	2253
	Tx Packet	14

This page used to display the current system memory usage, WLAN, LAN and WAN networks to send and receive data packets to the number.

## Firmware Upgrade

▶ Running Status	<b>Firmware Upgrade</b>	
▶ Setup Wizard	<b>Warning:</b> Upgrading firmware may take a few minutes, please don't turn off the router or press the reset button.	
▶ Network Settings	<b>Firmware Upgrade</b>	
▶ Wireless Settings	Please select the upgrade file	<input type="text"/> <input type="button" value="Browse..."/> <input type="button" value="Upgrade"/>
▶ DHCP Server		

You can upgrade the router to the lasted version in this page, please download a most recent firmware upgrade file from our website. After downloading the file, you need to extract the zip file before upgrading the router. Browse for the upgrade file, then click **Upgrade** button.

**Caution!** Once you click **Upgrade** button, do not interrupt the process, loss of power

during the upgrade could damage the Router.

**Note:**

- Router might be changed to factory default settings after upgrade, please backup in advance.
- During the updating, please do not turn off the power.
- Please make sure the software version is matching with the existing hardware.

### Reboot



Click **Reboot** button to reboot the Router.

### Logout



Click to logout from the router configuration web.

# Chapter 4: Download Wizard

## Before you start

Before you use the Offline Download Wizard, please make sure:

1. The wireless router is powered on, LAN port goes into the computer, and WAN port goes into modem.
2. The Download function is enabled in the wireless router.




3. The USB storage device is plugged into the USB port of the wireless router.
4. The Offline Download Wizard is installed successfully on your computer.





## Configuration

1. Run **Download Wizard for HTTP/FTP** program, you can see the picture below:

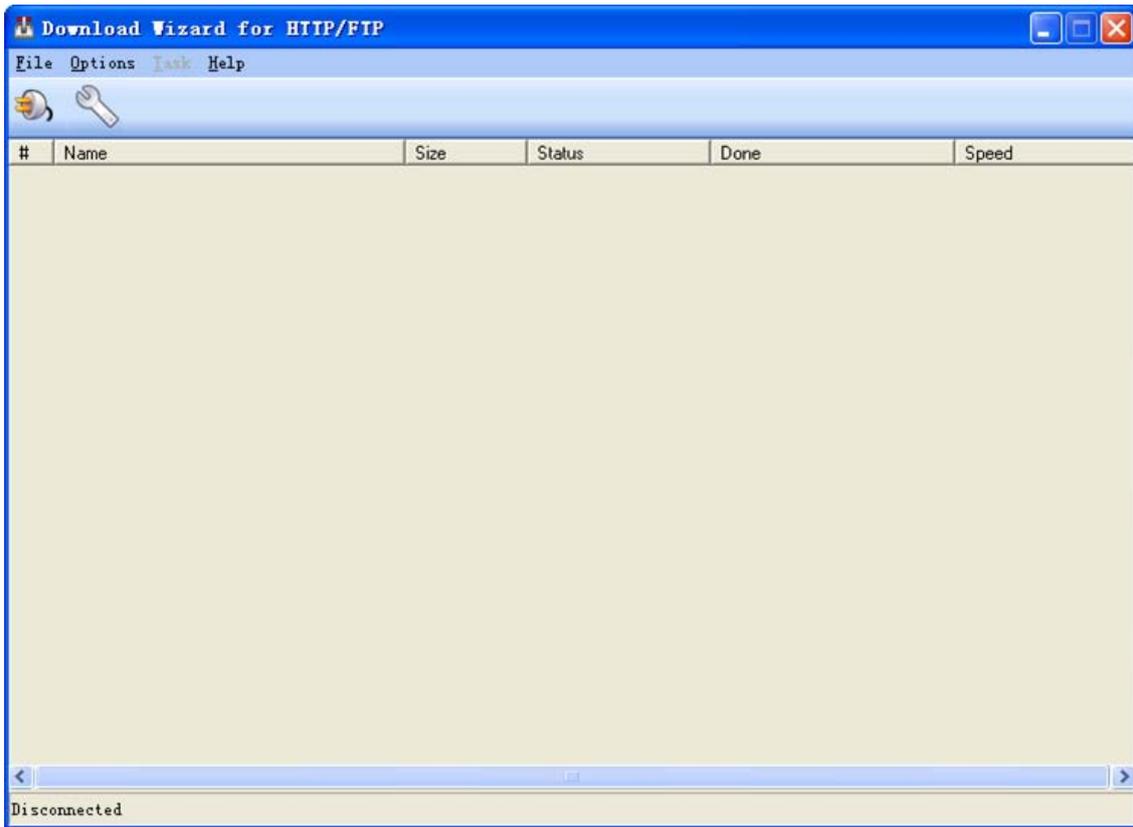

2. Click **Local Settings** button, you can see a new page pop up.

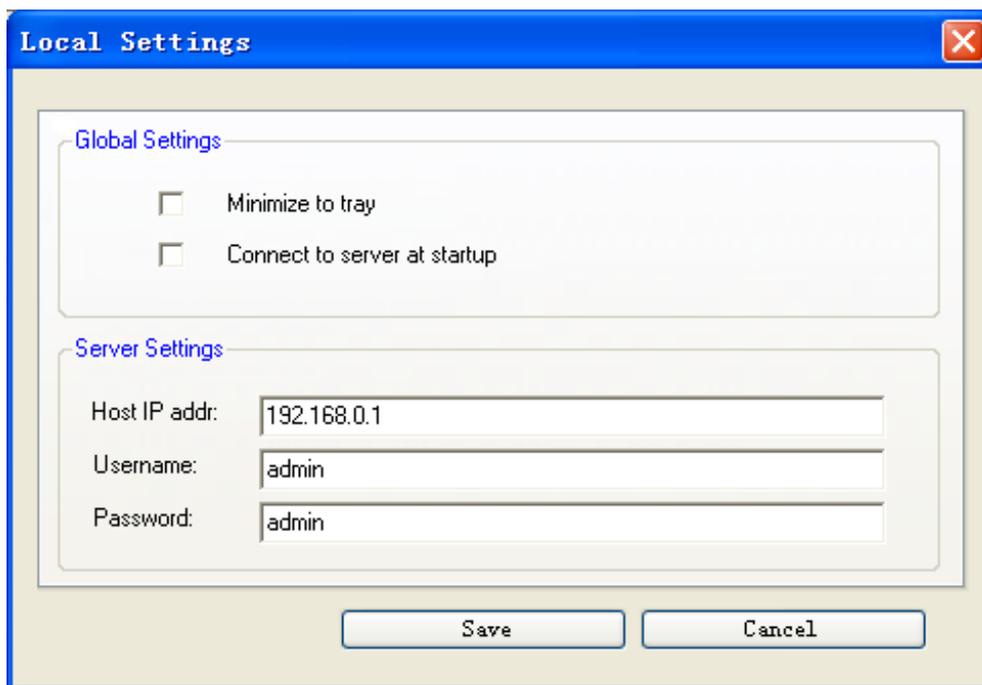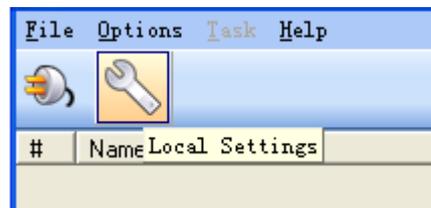

**Minimize to tray:** check this option, this program will be minimized to tray, you can see a tray icon in the Windows Taskbar.

**Connect to server at startup:** check this option, it will automatically connect to the offline download server when startup.

**Host IP addr:** IP address of the wireless router, the default address is 192.168.0.1

**Username:** login username for the wireless router's web management page, the default username is admin.


**Password:** login password for the wireless router's web management page, the default username is admin.

Click **Save** button to save the changes.

3. Click **Connect** button.



If it is successfully connected, you can see some shortcut buttons come up in the main page,

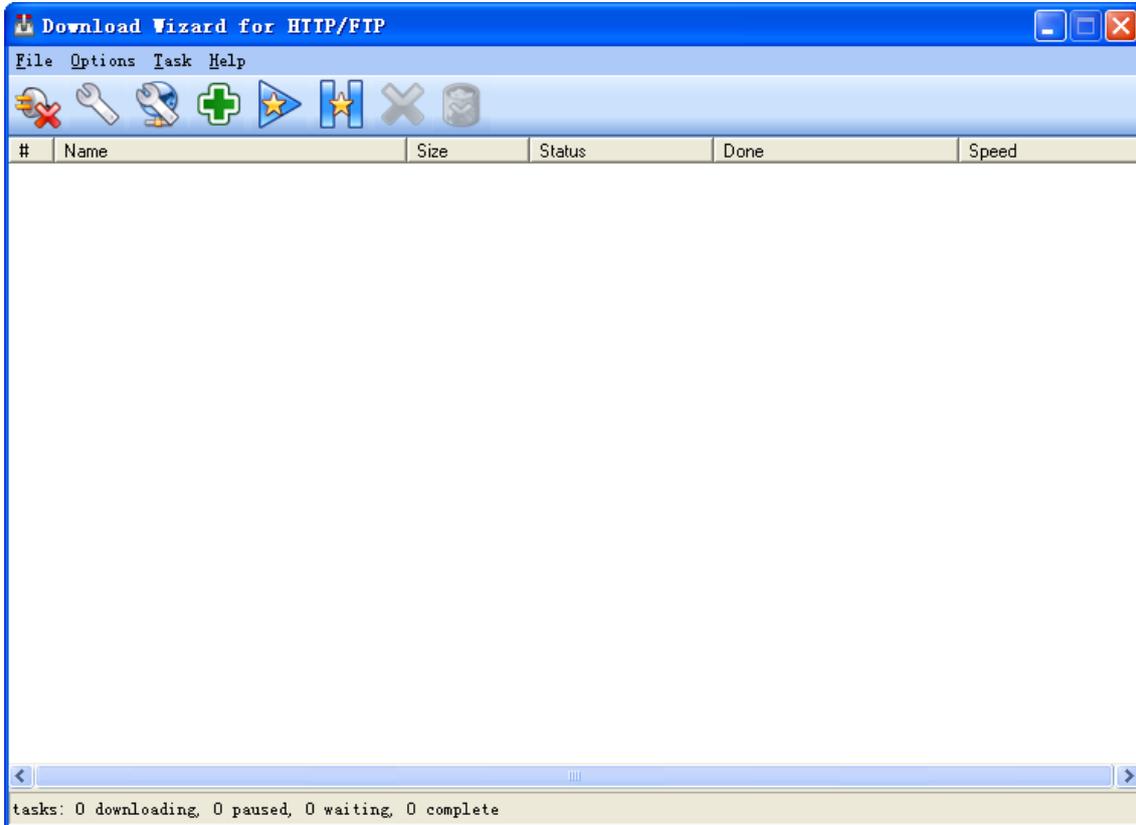

**#:** Task ID.

**Name:** The name of download file.

**Size:** The size of the download file, the value is in megabyte (M).

**Status:** It will show downloading, paused, waiting or complete.


**Done:** The percentage of the file that has been downloaded.

**Speed:** The download speed.

The **Connect** button changed into **Disconnect** button, and **Task** is available.




If the connection is unsuccessful, you can see some error messages.

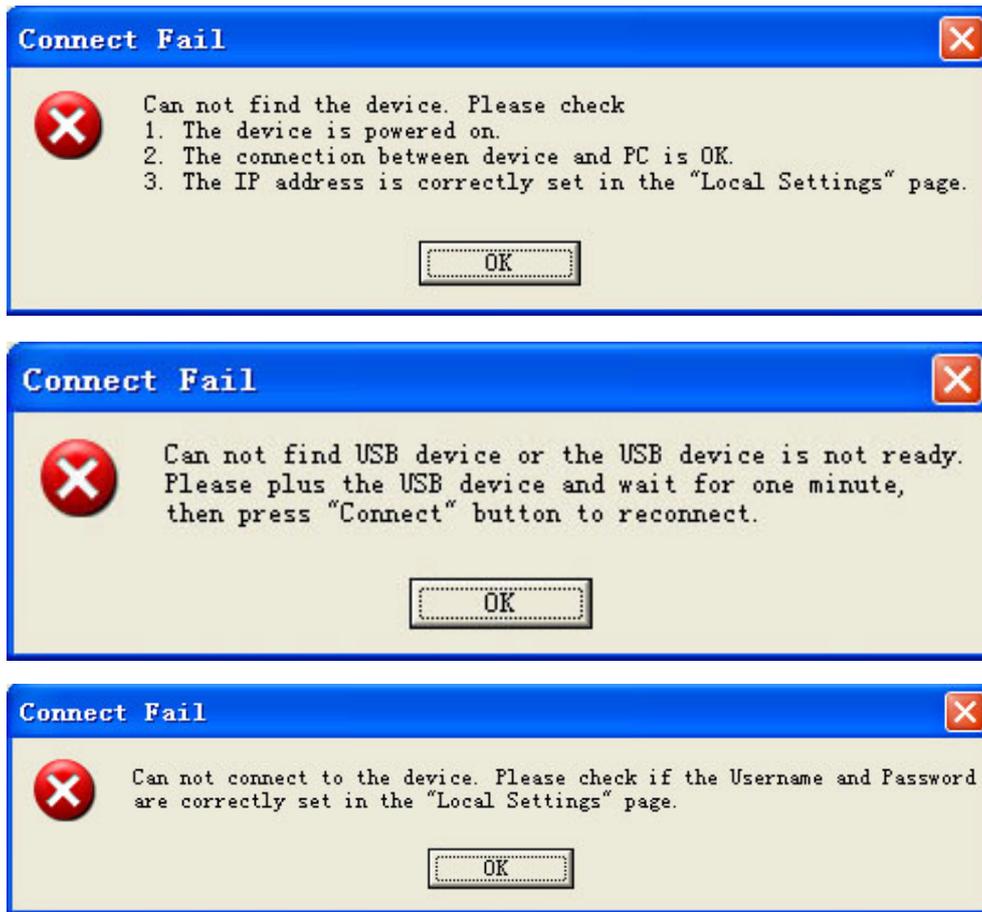

**Note:** Please follow the instructions according the error messages, click **OK** button then try to reconnect.

4. If there is more than one partition for the USB storage device, and you want to specify a partition for the download files, please click **Remote Setting** button,




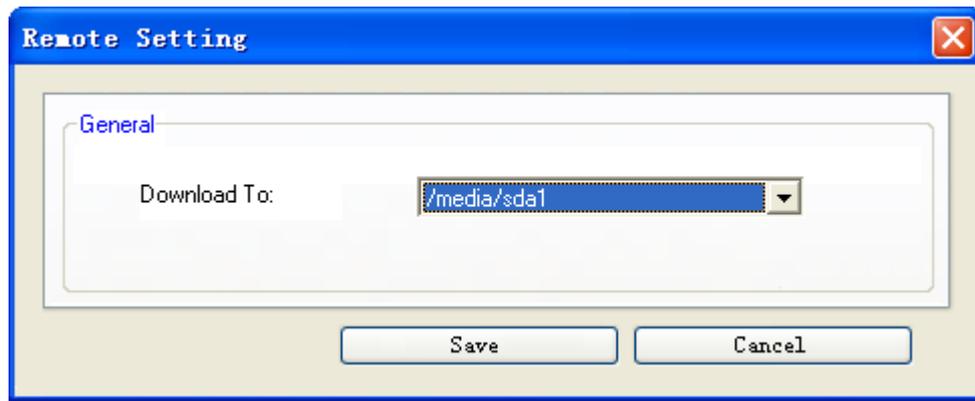

**Note:** The pull-down menus for Remote Setting include all the partition of the USB storage device that can be detected, the first partition is /media/sda1, the second partition is /media/sda2, and so on.

Click **Save** button after you choose the partition, then the new task will be downloaded to the assigned partition.

5. Click **Add** button to add task.

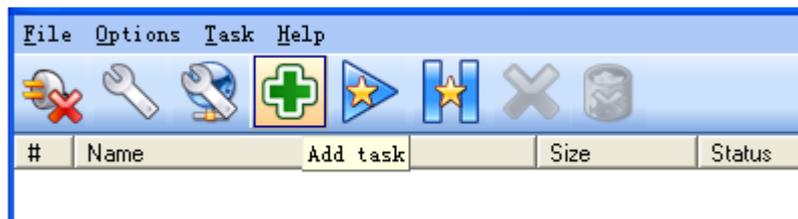

**Protocol Type:** the protocol type of the download file, it can be HTTP or FTP.

**URL:** input a legitimate and complete URL address, it can't be blank.


**Port:** This is optional. If the URL does not include port number, and a special port number is needed, then input that number (must be numbers).

**Login Info:** This is optional. It is available when the Protocol Type is FTP. Type in the information

When the FTP server requires for a username and a password but the URL doesn't include the related information.

Click **Save** button after you add task, the new task will appears in the task list, with status showing **Downloading**.

**Note:** Limited by the wireless router’s CPU and memory, to ensure the stability of the offline downloading, the maximum number of Downloading task is 2. When the number of Downloading task reaches 2, the status of the new task will be turned into **Waiting** automatically. If the number of Downloading task is less than 2, the task in **Waiting** will be turned into **Downloading** automatically.

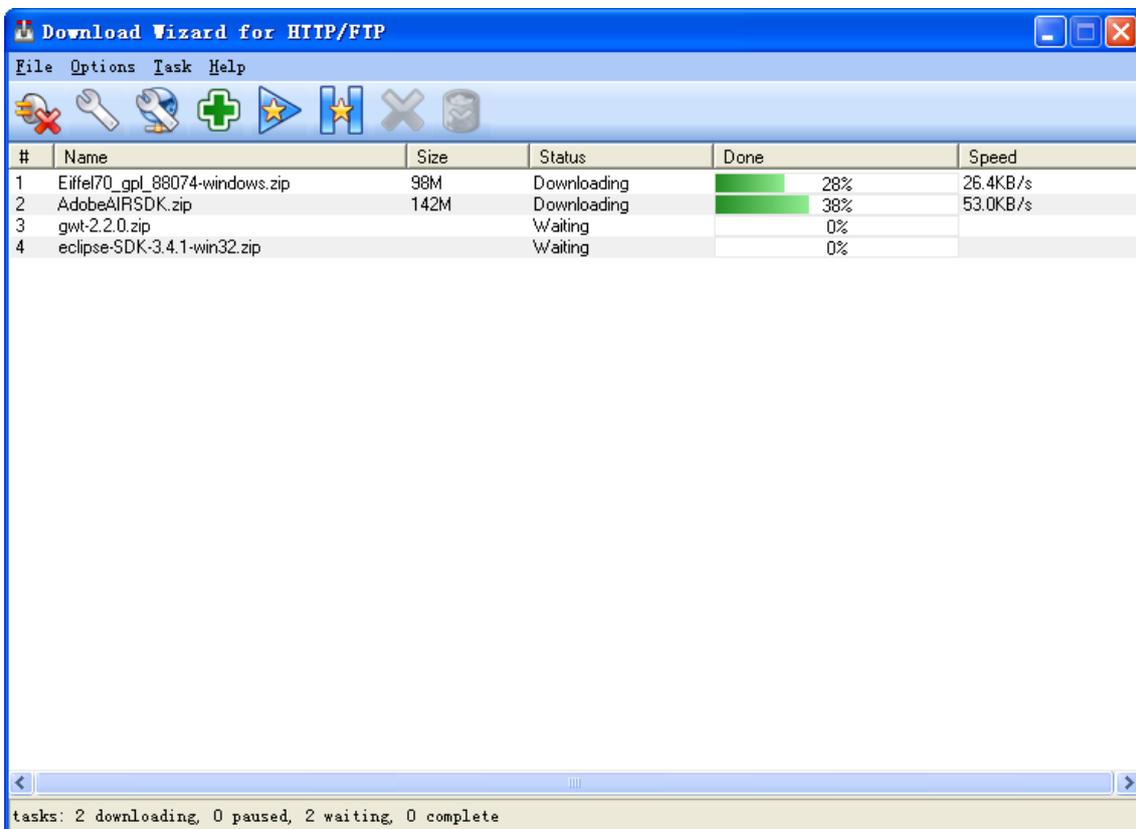

6. The last shortcut buttons from left to right are: Start task, Pause task, Remove task and Remove and Delete task.

(1) If there is no task selected, Remove task and Remove and Delete task icons are grayed out.




(2) If one task is selected, all the buttons are available.



**Note:** The third button (like a red cross) remove task means remove the selected task, but data already downloaded would be saved.

If you click the last button (like a trash can) remove and delete task, all the data will be removed.

You can see this message comes up.

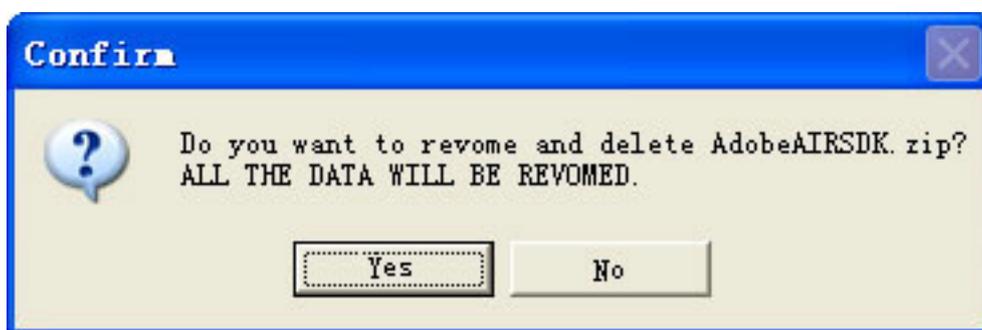


(3) If you select more than one task, you can see the icons below:



## 7. Main menu

(1)File

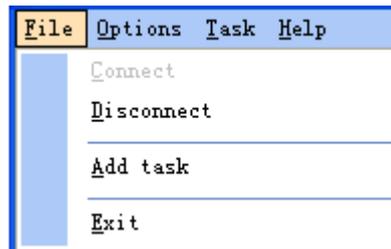


**Connect:** same as Connect shortcut button.

**Disconnect:** same as Disconnect shortcut button.

**Add task:** same as Add task shortcut button.

**Exit:** exit from the program.


(2) Option

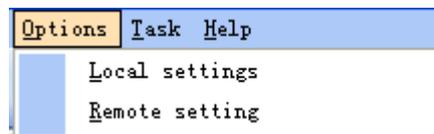

**Local settings:** same as Local settings shortcut button.

**Remote setting:** same as Remote settings shortcut button.


(3)Task

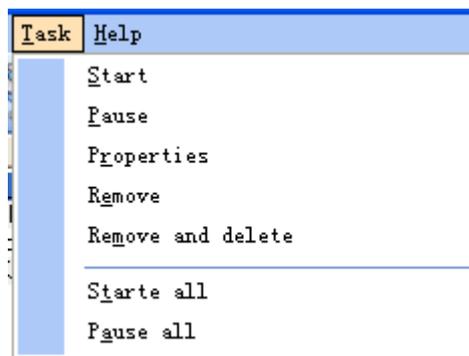

**Start:** same as Start shortcut button.

**Pause:** same as Pause shortcut button.

**Properties:** shows the properties of the selected task.

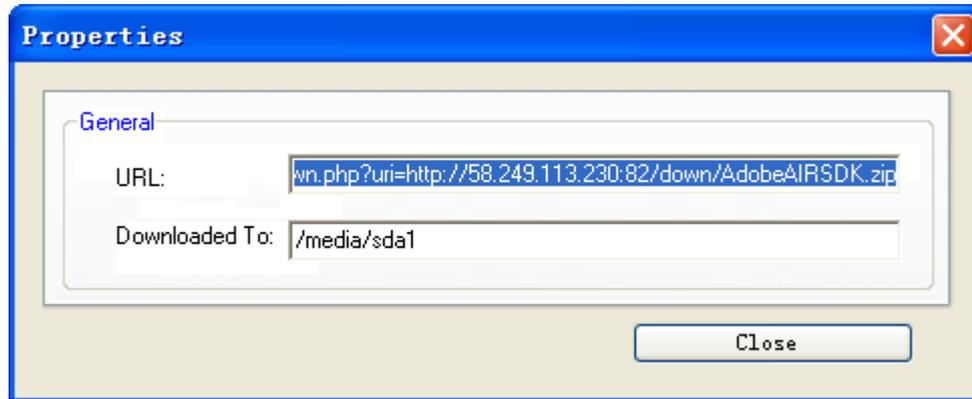


**Remove:** same as Remove shortcut button.

**Remove and Delete:** same as Remove and Delete shortcut button.


**Start all:** start all the tasks.

**Pause all:** pause all the tasks.

(4) Help

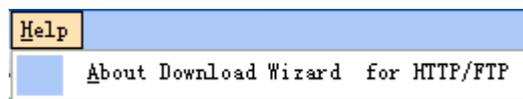

Click **About Download Wizard for HTTP/FTP**, you can see a page pop up.

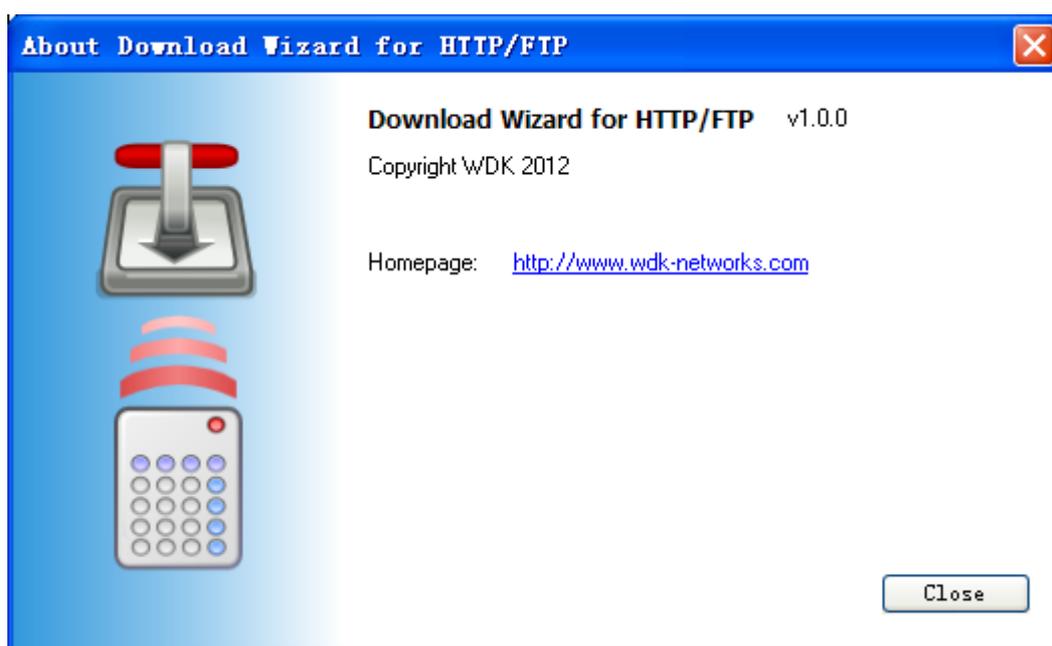



# Chapter 5: Specification

<b>General</b>	
Standards	IEEE 802.11n, IEEE 802.11g, IEEE 802.11b, CSMA/CA with ACK
Data Rate	11n: 300Mbps 11g: 54Mbps 11b: 11Mbps
Frequency Range	2.4-2.4835GHz
Wireless Transmit Power	< 23 ± 1dBm
Modulation Type	OFDM/CCK/16-QAM/64-QAM
Receive Sensitivity	300M: -68dBm@10% PER 108M: -68dBm@10% PER 54M: -68dBm@10% PER 11M: -85dBm@8% PER 6M: -88dBm@10% PER
Wireless Security	64/128-bit WEP, WPA/WPA2-Enterprise, WPA /WPA2-Personal (TKIP/AES)
System Requirements	Microsoft® Windows® 98SE, NT, 2000, XP, Vista and Windows 7
<b>Hardware</b>	
Interfaces	4 x 10/100Mbps LAN Port 1 x 10/100Mbps Internet Port 1 x USB 2.0 Port 1 x Power Connector
LED Indicators	Power, WLAN, WPS, USB, Internet, LAN1-LAN4
Buttons	Power Button, WPS Button, Reset Button
Power Supply	DC12V ,0.5A
Antenna	2 x Fixed Omni-directional Antenna
Dimensions ( W x D x H )	185mm x 124mm x 27mm
<b>Others</b>	
Operating Temperature	0°C~40°C (32°F~104°F)
Storage Temperature	-40°C~70°C (-40°F~158°F)
Relative Humidity	10%~90%, non-condensing
Storage Humidity	5%~95%, non-condensing
Certifications	FCC,CE, RoHS
Package Contents	1 x Wireless N Router 1 x Resource CD 1 x Quick Installation Guide 1 x Power Adapter

	1 x Ethernet Cable
--	--------------------

\* All references to speed and range are for comparison purposes only. Product specifications, size, and shape are subject to change without notice, and actual product appearance may differ from that depicted herein.

# Appendix A: Troubleshooting

## 1. PHICOMM Setup cannot find my Router.

If PHICOMM Setup is not able to communicate with your Router during installation, please check the following items:

- 1) Ensure that the router and modem are both on.
- 2) Make sure the computer goes into the LAN port of the router.
- 3) Make sure the DSL modem goes into the WAN port of the router.
- 4) There may be firewall software on your computer preventing an outgoing connection. You may choose to temporarily disable this software before attempting setup.
- 5) Unplug the Routers power supply for 10 seconds, then plug it back in.

## 2. The DSL telephone line does not fit into the Router's Internet port.

The Router does not replace your modem. You still need your DSL modem to work with the Router. Connect the telephone line to the DSL modem, and then insert the setup CD into your computer. Follow the QIG to install your router.

## 3. I cannot login the router's web management page.

- 1) Make sure the computer goes into the LAN port of the router.
- 2) Check the computer's IP address, make sure the IP address is obtained automatically, for details please refer to the section of Configure the Computers IP Address in this manual.
- 3) Make sure you put 192.168.0.1 into the address bar, not the search bar.
- 4) Check your web browser, make sure the Proxy server is unchecked. Take Internet

Explorer as an example, go to **Tools>Internet Options>Connections>LAN**

**Settings**, uncheck **Use a proxy server for your LAN**

- 5) If it tells you the username or password is error, and you cannot remember the new one, please reset router by pressing reset button for at least 6 seconds, and then try to login with default username and password (admin/admin).

#### **4. The computer cannot connect to the Internet.**

- 1) Make sure the DSL/cable modem goes into the WAN port of the router.
- 2) Make sure the computer goes into the LAN port of the router.
- 3) Ensure that the router and modem are both on.
- 4) Unplug the router, connect your computer to the modem directly, check the internet is working or not through your modem.

## **5. The computer cannot connect to the internet wirelessly.**

Please make sure you can access the Internet when plug in the Ethernet cable from the router to the computer, otherwise, please refer to Question 4. Then check the wireless connection status on your computer:

- 1) Search available networks and connect to your wireless network. If your wireless network name (SSID) is not listed in, please connect to router's LAN port by an Ethernet cable, login router's web management page 192.168.0.1 to make sure the Broadcast SSID is enabled. Please refer to Page 20 in this manual.
- 2) If you cannot connect to your wireless network, please make sure the password is correct. You can connect to router's LAN port by an Ethernet cable, login router's web management page 192.168.0.1 to double check your password. Please refer to Page 21 in this manual.
- 3) If there is no wireless network found in range on your computer, please make sure the wireless switch is turned on, and the wireless network adapter is working properly.

## **6. I've installed this new Router and some of my network clients (computers, game consoles etc.) are unable to connect.**

Your new Router came pre-configured with a network name and no password. All clients must use this network name to connect wirelessly to your Router. You will need to find the network settings on your client, and select the network name from the list of available networks to join the wireless network. Details please refer to your client (computer, game consoles etc.).



# Appendix B: Certification

## FCC Statement



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

### **FCC Caution**

- Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- For product available in the USA market, only channel 1~11 can be operated. Selection of other channels is not possible.
- This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.
- This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.
- This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

## Appendix C: Glossary

**802.11b:** The 802.11b standard specifies a wireless networking at 11 Mbps using direct-sequence spread-spectrum (DSSS) technology and operating in the unlicensed radio spectrum at 2.4GHz, and WEP encryption for security. 802.11b networks are also referred to as Wi-Fi networks.

**802.11g:** Specification for wireless networking at 54 Mbps using direct-sequence spread-spectrum (DSSS) technology, using OFDM modulation and operating in the unlicensed radio spectrum at 2.4GHz, and backward compatibility with IEEE 802.11b devices, and WEP encryption for security.

**802.11n:** 802.11n builds upon previous 802.11 standards by adding MIMO (multiple-input multiple-output). MIMO uses multiple transmitter and receiver antennas to allow for increased data throughput via spatial multiplexing and increased range by exploiting the spatial diversity, perhaps through coding schemes like Alamouti coding. The Enhanced Wireless Consortium (EWC) was formed to help accelerate the IEEE 802.11n development process and promote a technology specification for interoperability of next-generation wireless local area networking (WLAN) products.

**DDNS (Dynamic Domain Name System):** The capability of assigning a fixed host and domain name to a dynamic Internet IP Address.

**DHCP (Dynamic Host Configuration Protocol):** A protocol that automatically configure the TCP/IP parameters for the all the PC(s) that are connected to a DHCP server.

**DMZ (Demilitarized Zone):** A Demilitarized Zone allows one local host to be exposed to the Internet for a special-purpose service such as Internet gaming or videoconferencing.

**DNS (Domain Name System):** An Internet Service that translates the names of websites into IP addresses.

**Domain Name:** A descriptive name for an address or group of addresses on the Internet.

**DSL (Digital Subscriber Line):** A technology allowing data to be sent or received over existing traditional phone lines.

**ISP (Internet Service Provider):** A company that can provide access to the Internet.

**MTU (Maximum Transmission Unit):** The size in bytes of the largest packet that can be transmitted.

**NAT (Network Address Translation):** NAT technology translates IP addresses of a local area network to a different IP address for the Internet.

**NAS (Network-attached storage):** The term network attached storage (commonly abbreviated as NAS) describes storage devices that can be accessed over a computer network rather than being directly connected to the computer. NAS devices enable multiple computers to share the same storage space at once. NAS has emerged as a powerful, proven technology for storing data that needs to be shared in the office or the home. NAS devices enable home and business users to easily share large amounts of data in a cost-effective and efficient manner.

**PPPoE (Point to Point Protocol over Ethernet):** PPPoE is a protocol for connecting remote hosts to the Internet over an always-on connection by simulating a dial-up connection.

**SSID (Service Set Identification):** It is a thirty-two character (maximum) alphanumeric key identifying a wireless local area network. For the wireless devices in a network to

communicate with each other, all devices must be configured with the same SSID. This is typically the configuration parameter for a wireless PC card. It corresponds to the ESSID in the wireless Access Point and to the wireless network name.

**WEP (Wired Equivalent Privacy):** A data privacy mechanism based on a 64-bit or 128-bit or 152-bit shared key algorithm, as described in the IEEE 802.11 standard.

**Wi-Fi:** A trade name for the 802.11b wireless networking standard, given by the Wireless Ethernet Compatibility Alliance (WECA, see <http://www.wi-fi.net>), an industry standards group promoting interoperability among 802.11b devices.

**WLAN (Wireless Local Area Network):** A group of computers and associated devices communicate with each other wirelessly, which network serving users are limited in a local area.

# PHICOMM

**Shanghai Feixun Communication Co.,**

E-mail: [support@phicomm.com](mailto:support@phicomm.com)

Website: [www.phicomm.com](http://www.phicomm.com)

Copyright © 2011 Shanghai Feixun Communication Co., Ltd. All rights reserved.