

# **D-LINK AirPro DI-764**

## **2.4 GHz / 5 GHz Multimode Wireless Broadband Router**

## **Manual**

**D-Link**  
Building Networks for People

# Contents

Package Contents .....	3
Introduction .....	4
Wireless Basics .....	6
Getting Started .....	10
Using the Configuration Menu .....	12
Networking Basics .....	41
Troubleshooting .....	70
Technical Specifications .....	76
Contacting Technical Support.....	79
Warranty and Registration .....	80

# Package Contents



## Contents of Package:

- **D-Link AirPro DI-764 2.4GHz/5GHz Multimode Wireless Broadband Router**
- Power Adapter – 5V DC, 3.0A
- Manual on CD
- Quick Installation Guide
- Ethernet Cable

*Note: Using a power supply with a different voltage rating than the one included with the DI-764 will cause damage and void the warranty for this product.*

If any of the above items are missing, please contact your reseller.

## System Requirements For Configuration:

- Computer with Windows, Macintosh, or Linux-based operating system with an installed Ethernet adapter

# Introduction

D-Link, a leader in wireless technology, introduces the first integrated multimode 2.4GHz/5GHz wireless broadband router, as part of the high performance D-Link AirPro series of wireless networking products.

The new D-Link AirPro DI-764 Multimode Wireless Broadband Router is a next generation multimode broadband router that simultaneously serves both 802.11a wireless networks at 54 Mbps\* (72 Mbps in *Turbo mode*\*) and 802.11b wireless networks at 11Mbps (22 Mbps with D-Link AirPlus products.) Featuring a breakthrough all-in-one dual band design that delivers future investment protection with the promise of a superior product life cycle and lower total cost of ownership, it is the ideal solution for present and future Wireless Local Area Networks (WLANS).

The DI-764 will automatically obtain an IP address and forward additional IP addresses to multiple clients for a seamless Ethernet network connection and shared Internet access.

At 54Mbps (up to 72Mbps in *Turbo mode*\*) in the 5GHz frequency range and a simultaneous 11 Mbps (up to 22 Mbps with D-Link AirPlus products) in the 2.4GHz frequency range, the D-Link AirPro DI-764 multimode broadband router delivers the fastest standards-based wireless technology in the industry. Based on WiFi technology, as well as IEEE 802.11a and 802.11b standards compliant, this next-generation multimode wireless access point provides excellent network interoperability.

Armed with powerful management and security capabilities, the D-Link Air Pro DI-764 has an intuitive and secure web-based interface that is powered by an embedded web server.


After completing the steps outlined in the *Quick Installation Guide* (included in your package) not only will you have the ability to share information and resources, but you will also be able to enjoy the freedom that wireless networking delivers, at speeds capable of handling a video stream.

\*Maximum wireless signal rate based on IEEE Standard 802.11a specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead lower actual data throughput rate.

\*When used with other D-Link AirPro products.

Because of its web-based interface (accessible from most Internet browser applications), the DI-764 will work with most popular operating systems, including Macintosh, Linux and Windows, and can be easily integrated into a large network. This Manual is designed to help you connect the DI-764 with the D-Link 2.4GHz AirPlus or 5GHz AirPro Wireless Adapters into an existing network. *Please take a look at the **Getting Started** section in this manual to see an example of an Infrastructure network using the DI-764.*

## Connections

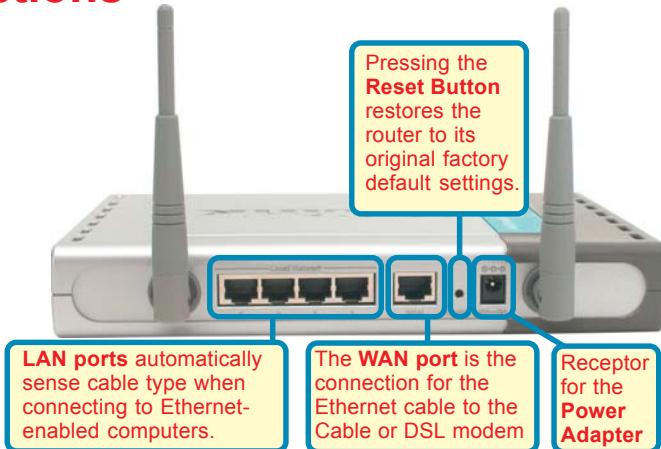

## Features & Benefits

- Supports data transfer rates of up to 72 Mbps at 5GHz
- Supports data transfer rates of up to 22 Mbps at 2.4GHz
- Wireless range of up to 900 feet\*
- Fully 802.11a and 802.11b compatible
- Supports up to 256-bit WEP Encryption at 2.4GHz, and up to 152-bit, with Enhanced Dynamic Keying at 5 GHz
- Less interference with a total of eleven non-overlapping channels
- Utilizes Direct Sequence Spread Spectrum (DSSS) and Packet Binary Convolutional Code (PBCC) at 2.4GHz
- Utilizes Orthogonal Frequency Division Multiplexing (OFDM) at 5GHz
- Easy-to-use Web-based configuration
- User level security
- 3 Year Warranty (USA only)

\*Environmental Factors may Adversely Affect Range.

## LEDS

LED stands for Light-Emitting Diode. The DI-764 has the following LEDs:

LED	LED Activity
Power	A steady light indicates a connection to a power source
M1	A solid light indicates that the DI-764 is ready
M2	A solid light indicates that the unit is defective
WAN	A solid light indicates connection on the WAN port. This LED blinks during data transmission.
WLAN 802.11a	A solid light indicates that the 802.11a wireless segment is ready. The LED blinks during 802.11a wireless data transmission.
WLAN 802.11b	A solid light indicates that the 802.11b wireless segment is ready (when the DWL-650+ is installed.) The LED blinks during 802.11b wireless data transmission.
Local Network (Ports 1-4)	A solid light indicates a connection, a blinking light indicates data transmission to an Ethernet-enabled computer on ports 1-4.

## Wireless Basics

D-Link AirPro wireless products are based on industry standards to provide easy-to-use and compatible high-speed wireless connectivity within your home, business or public access wireless networks. Strictly adhering to the IEEE standard, the D-Link AirPro wireless family of products will allow you to securely access the data you want, when and where you want it. You will be able to enjoy the freedom that wireless networking delivers.

A wireless local area network (WLAN) is a cellular computer network that transmits and receives data with radio signals instead of wires. Wireless LANs are used increasingly in both home and office environments, and public areas such as airports, coffee shops and universities. Innovative ways to utilize WLAN technology are helping people to work and communicate

## Wireless Basics

more efficiently. Increased mobility and the absence of cabling and other fixed infrastructure have proven to be beneficial for many users.

Wireless users can use the same applications they use on a wired network. Wireless adapter cards used on laptop and desktop systems support the same protocols as Ethernet adapter cards.

Under many circumstances, it may be desirable for mobile network devices to link to a conventional Ethernet LAN in order to use servers, printers or an Internet connection supplied through the wired LAN. A Wireless Router is a device used to provide this link.

*People use wireless LAN technology for many different purposes:*

**Mobility** - Productivity increases when people have access to data in any location within the operating range of the WLAN. Management decisions based on real-time information can significantly improve worker efficiency.

**Low Implementation Costs** – WLANs (Wireless Local Area Networks) are easy to set up, manage, change and relocate. Networks that frequently change, both physically and logically, can benefit from WLANs ease of implementation. WLANs can operate in locations where installation of wiring may be impractical.

**Installation Speed and Simplicity** - Installing a wireless LAN system can be fast and easy and can eliminate the need to pull cable through walls and ceilings.

**Network Expansion** - Wireless technology allows the network to go where wires cannot go.

**Scalability** – Wireless Local Area Networks (WLANs) can be configured in a variety of topologies to meet the needs of specific applications and installations. Configurations are easily changed and range from peer-to-peer networks suitable for a small number of users to larger infrastructure networks to accommodate hundreds or thousands of users, depending on the number of wireless devices deployed.

## Wireless Basics

The DI-764 is compatible with other **D-Link AirPro** 802.11a products, which include:

- ◆ 5GHz Wireless Cardbus Adapters used with laptop computers (DWL-A650)
- ◆ 5GHz Wireless PCI Adapters used with desktop computers (DWL-A520)

The DI-764 is also compatible with the **D-Link AirPlus** 802.11b wireless family, which includes:

- ◆ Enhanced 2.4GHz Wireless Cardbus Adapters used with laptop computers (DWL-650+)
- ◆ Enhanced 2.4GHz Wireless PCI cards used with desktop computers (DWL-520+)

## Standards-Based Technology

The versatile DI-764 Multimode Wireless Broadband Router integrates both 802.11a and 802.11b standards into a single unit.

The IEEE **802.11a** standard designates that devices may operate at an optimal data rate of 54 Mbps (72 Mbps in proprietary *Turbo* mode.) This means that in most environments, within the specified range of this device, you will be able to transfer large files quickly or even watch a movie in MPEG format over your network without noticeable delays. This technology works by transmitting high-speed digital data over a radio wave utilizing **OFDM** (Orthogonal Frequency Division Multiplexing) technology. **OFDM** works by splitting the radio signal into multiple smaller sub-signals that are then transmitted simultaneously at different frequencies to the receiver.

**OFDM** reduces the amount of **crosstalk** (interference) in signal transmissions. D-Link *AirPro* 802.11a products will automatically sense the best possible connection speed to ensure the greatest speed and range possible.

Based on the IEEE **802.11b** standard, the DI-764 is also interoperable with existing compatible 2.4GHz wireless technology with data transfer speeds of up to 22Mbps (with the D-Link *AirPlus* family of wireless devices,) as well as standard 802.11b technology (the D-Link *Air* family of wireless devices), with speeds of up to 11Mbps.

## Wireless Basics

### Installation Considerations

The D-Link AirPro DI-764 lets you access your network, using a wireless connection, from virtually anywhere. Keep in mind, however, that the number, thickness and location of walls, ceilings or other objects that the wireless signals must pass through may limit the range. Typical ranges vary depending on the types of materials and background RF (radio frequency) noise in your home or business. The key to maximizing wireless range is to follow these basic guidelines:

1. Keep the number of walls and ceilings between the DI-764 and your receiving device (e.g., the DWL-A650 or the DWL-650+) to a minimum - each wall or ceiling can reduce your D-Link AirPro Wireless product's range from 3-90 feet (1-30 meters.) Position your receiving devices so that the number of walls or ceilings is minimized.
2. Be aware of the direct line between routers and computers. A wall that is 1.5 feet thick (.5 meters), at a 45-degree angle appears to be almost 3 feet (1 meter) thick. At a 2-degree angle it looks over 42 feet (14 meters) thick! Try to make sure that devices are positioned so that the signal will travel straight through a wall or ceiling for better reception.
3. Building Materials make a difference - a solid metal door or aluminum studs may have a negative effect on range. Try to position wireless devices and computers with wireless adapters so that the signal passes through drywall or open doorways and not other materials.
4. Keep your product away (at least 3-6 feet or 1-2 meters) from electrical devices or appliances that generate RF noise.

# Getting Started

Right out of the box, with its default settings, the DI-764 will connect with other D-Link Air, AirPlus or AirPro products.

With a single IP Address from your Broadband Internet Service provider you can share the Internet with all the computers on your local network, without sacrificing speed or security, using D-Link Air networking products.

## IP ADDRESS

*Note: If you are using a DHCP-capable router in your network setup, such as the DI-764, you will not need to assign a static IP Address.*

If you need to assign IP Addresses to the computers on the network, please remember that the **IP Address for each computer must be in the same IP Address range as all the computers in the network**, and the Subnet mask must be exactly the same for all the computers in the network.

For example: If the first computer is assigned an IP Address of 192.168.0.2 with a Subnet Mask of 255.255.255.0, then the second computer can be assigned an IP Address of 192.168.0.3 with a Subnet Mask of 255.255.255.0, etc.

**IMPORTANT: If computers or other devices are assigned the same IP Address, one or more of the devices may not be visible on the network.**

An **Infrastructure** wireless network contains an Access Point. The **Infrastructure Network** example, shown here, contains the following D-Link network devices:


A wireless Broadband Router - **D-Link AirPro DI-764**

A laptop computer with a wireless adapter - **D-Link AirPro DWL-A650 or AirPlus DWL-650+**

A desktop computer with a wireless adapter - **D-Link AirPro DWL-A520 or AirPlus DWL-520+**

A Cable modem - **D-Link DCM-200**

## Getting Started

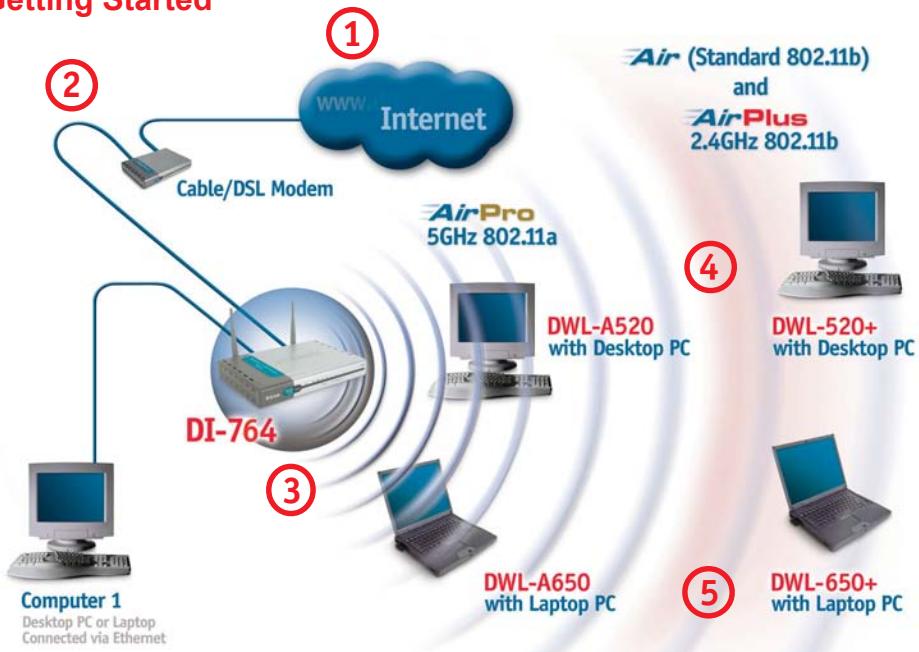

Please remember that **D-Link AirPro** wireless devices are pre-configured to connect together, right out of the box, with the default settings.

For a typical wireless setup at home (as shown above), please do the following:

- 1 You will need broadband Internet access (Cable/DSL) subscription
- 2 Consult with your Cable/DSL provider for proper installation of the modem
- 3 Connect the modem to the DI-764 multimode wireless broadband router (*see the Quick Installation Guide included with the DI-764.*)
- 4 If you are connecting a desktop computer to your network, you can install the D-Link AirPro DWL-A520 (or the DWL-520+) wireless PCI adapter into an available PCI slot. (*See the Quick Installation Guide included with the DWL-A520 or the DWL-520+.*)
- 5 If you are connecting a laptop computer to your network, install the drivers for the wireless cardbus adapter (**D-Link AirPro DWL-A650**) into a laptop computer . (*See the Quick Installation Guide included with DWL-A650 or DWL-650+.*)

# Using the Configuration Menu

Whenever you want to configure your network or the DI-764, you can access the Configuration Menu by opening the web-browser and typing in the IP Address of the DI-764. The DI-764 default IP Address is shown below:

- Open the web browser
- Type in the **IP Address** of the Access Point



*Note: if you have changed the default IP Address assigned to the DI-764, make sure to enter the correct IP Address.*

- Type **admin** in the **User Name** field
- Leave the **Password** blank
- Click **Next**



The Home>Wizard screen will appear. Please refer to the *Quick Installation Guide* for more information regarding the Setup Wizard.

## Home > Wizard

A screenshot of the DI-764 configuration interface. The top header bar has tabs for "Home", "Advanced", "Tools", "Status", and "Help". The "Home" tab is highlighted. Below the header is a "Setup Wizard" section. It features a small image of a router, a yellow "Wizard" button, and descriptive text about the DI-764 being a multimode wireless router designed for home or office networks. A "Run Wizard" button is located at the bottom of this section. To the right is a red circular "Help" button with a white plus sign. On the left side of the main content area is a vertical sidebar with buttons for "Wizard", "Wireless", "WAN", "LAN", and "DHCP". The "Wizard" button is highlighted with a yellow background.

# Using the Configuration Menu

Home > Wireless > 802.11a

Wireless Settings    802.11a  802.11b+  
These are the wireless settings for the AP(Access Point)Portion.

SSID: default  
Channel: 52  
Turbo Mode:  On  Off  
WEP:  Enabled  Disabled  
WEP Encryption: 64 bit  
Key Type: HEX  
Key1:  0000000000  
Key2:  0000000000  
Key3:  0000000000  
Key4:  0000000000

Apply   Cancel   Help

**Wireless Settings-** choose 802.11a or 802.11b+. Here, 802.11a is selected.

**SSID-** “default” is the default setting. All devices on the network must share the same SSID. If you change the default setting, the SSID may be up to 32 characters long.

**Channel-** 52 is the default channel for 802.11a. All devices on the network must share the same channel.

**Turbo Mode-** select **ON** or **OFF**. The default setting is **OFF**.



If you enable Turbo mode on the DI-764, make sure to also enable Turbo mode on all 802.11a wireless clients or a wireless connection will not be established.

**WEP-** select **Enabled** or **Disabled**. **Disabled** is the default setting.

**WEP Encryption-** select the level of encryption desired: 64, 128 or 152-bit



**WEP (Wired Equivalent Privacy)** If you enable encryption on the DI-764 make sure to also enable encryption on all 802.11a wireless clients or wireless connection will not be established.

**Key Type-** select **HEX** or **ASCII**

**Hexadecimal** digits consist of the numbers 0-9 and the letters A-F  
**ASCII** (American Standard Code for Information Interchange) is a code for representing English letters as numbers from 0-127

**Keys 1-4-** input up to 4 WEP keys; select the one you wish to use.

**Apply-** click **Apply** to save the changes.

# Using the Configuration Menu

Home > Wireless > 802.11b+

Wireless Settings  802.11a  802.11b+  
These are the wireless settings for the AP(Access Point)Portion.

SSID : default  
Channel : 6  
WEP :  Enabled  Disabled  
WEP Encryption : 64Bit  
Key Type : HEX  
Passphrase :  Generate  
Key1 :  0000000000  
Key2 :  0000000000  
Key3 :  0000000000  
Key4 :  0000000000

Apply Cancel Help

**Wireless Settings-** choose 802.11a or 802.11b+. Here, 802.11b+ is selected.

**SSID-** “default” is the default setting. All devices on the network must share the same SSID. The SSID may be up to 32 characters long.

**Channel-** 6 is the default channel for 802.11b+. All devices on the network must share the same channel.

**WEP-** select **Enabled** or **Disabled**. **Disabled** is the default setting.

**WEP Encryption-** select the level of encryption desired: 64, 128 or 256-bit



**WEP (Wired Equivalent Privacy)** If you enable encryption on the DI-764 make sure to also enable encryption on all 802.11b wireless clients or wireless connection will not be established.

**Key Type-** select **HEX** or **ASCII**

**Passphrase-** when you select Key Type: **ASCII**, you can enter a **Passphrase** for any or all of Keys 1-4

**Keys 1-4-** input up to 4 WEP keys; select the one you wish to use.

**Apply-** click **Apply** to save the changes.

# Using the Configuration Menu

Home > WAN > Dynamic IP Address

The screenshot shows the D-Link DI-764 configuration menu. On the left, there's a sidebar with icons for Wizard, Wireless, WAN (highlighted in yellow), LAN, and DHCP. The main area has tabs for Home, Advanced, Tools, Status, and Help. The 'WAN Settings' tab is selected. It displays instructions to choose an ISP connection type: Dynamic IP Address (selected), Static IP Address, or PPPoE. Below this, there are fields for Host Name (set to 'DI-764') and MAC Address (set to '00-11-22-33-44-56'). A 'Clone MAC Address' button is also present. At the bottom right are 'Apply', 'Cancel', and 'Help' buttons.

Please be sure to remove any existing PPPoE client software installed on your computers.

## Dynamic IP Address-

most Cable modem users will select this option to obtain an IP Address automatically from their ISP (Internet Service Provider).

## Host Name-

this is optional, but may be required by some ISPs. The host name is the device name of the Router.

## MAC Address-

the default MAC Address is set to the WAN's physical interface MAC address on the Router.

## Clone MAC Address-

copy the MAC address of the Ethernet card installed by your ISP, and replace the WAN MAC address with this Ethernet card MAC address. It is not recommended that you change the default MAC address unless required by your ISP.

## Apply-

click **Apply** to save the changes.

# Using the Configuration Menu

Home > WAN > Static IP Address



**Static IP Address-** select this option to set static IP information provided to you by your ISP.

**IP Address-** input the IP Address provided by your ISP

**Subnet Mask-** input your Subnet mask. (All devices in the network must have the same subnet mask.)

**ISP**

**Gateway Address-** input the Gateway address

**Primary  
DNS Address-** input the address provided by your ISP

**Secondary  
DNS Address-** this is optional

**Apply-** click **Apply** to save the changes.

# Using the Configuration Menu

Home > WAN > PPPoE

DI-764  
Multimode 2.4/5GHz Wireless Router

**WAN Settings**

Please select the appropriate option to connect to your ISP.

Dynamic IP Address Choose this option to obtain an IP address automatically from your ISP. (For most Cable modem users)

Static IP Address Choose this option to set static IP information provided to you by your ISP.

PPPoE Choose this option if your ISP uses PPPoE. (For most DSL users)

**PPPoE**

User Name

Password

Retype Password

Service Name  (optional)

IP Address  0.0.0.0

Primary DNS Address  0.0.0.0

Secondary DNS Address  0.0.0.0 (optional)

Maximum Idle Time  0 Minutes

MTU  1472

Auto-reconnect  Enabled  Disabled

**Apply** **Cancel** **Help**

## PPPoE-

Choose this option if your ISP uses PPPoE. (Most DSL users will select this option.)

**Dynamic PPPoE-** receive an IP Address automatically from your ISP.

or

**Static PPPoE-**you have an assigned (static) IP Address.

## User Name-

your PPPoE username provided by your ISP.

## Password-

your PPPoE password provided by your ISP.

## Retype Password-

re-enter the PPPoE password

## Service Name-

enter the Service Name provided by your ISP (optional).

## IP Address-

this option is only available for Static PPPoE. Enter the static IP Address for the PPPoE connection.

# Using the Configuration Menu

Home > WAN > PPPoE *continued*

## Primary

**DNS Address-** get this info from your ISP

## Secondary

**DNS Address-** optional

## Maximum

**Idle Time-** enter a maximum idle time during which internet connection is maintained during inactivity. To disable this feature, enter zero or enable *Auto-reconnect*.

## MTU-

Maximum Transmission Unit-1472 is default-you may need to change the MTU to conform with your ISP.


## Auto-reconnect-

if enabled, the DI-764 will automatically connect to your ISP after your system is restarted or if the connection is dropped.

## Apply-

click **Apply** to save the changes.

**Home > LAN**

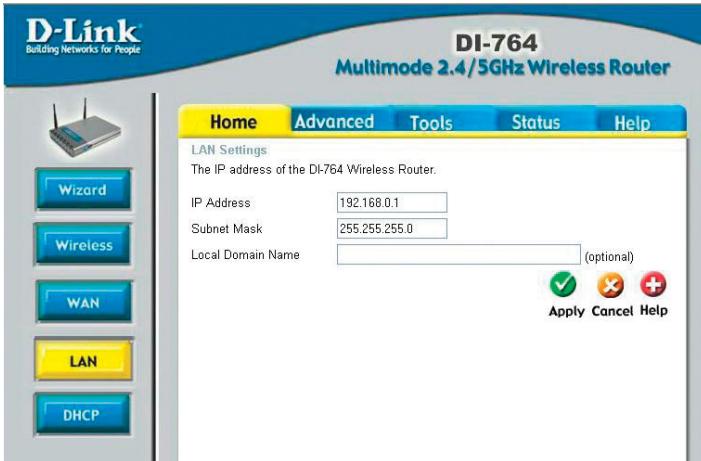

LAN is short for Local Area Network. This is considered your internal network. These are the IP settings of the LAN interface for the DI-764. These settings may be referred to as Private settings. You may change the LAN IP address if needed. The LAN IP address is private to your internal network and cannot be seen on the Internet.

**IP Address-** the IP address of the LAN interface. The default IP address is: **192.168.0.1**

## Subnet Mask-

the subnet mask of the LAN interface.  
The default subnet mask is **255.255.255.0**

## Local

optional

## Apply-

click **Apply** to save the changes.

# Using the Configuration Menu

Home > DHCP

The DI-764 Wireless Router can be setup as a DHCP Server to distribute IP addresses to the LAN network.

DHCP Server       Enabled  Disabled

Starting IP Address: 192.168.0.100

Ending IP Address: 192.168.0.199

Lease Time: 1 Hour

Apply    Cancel    Help

**DHCP** stands for *Dynamic Host Control Protocol*. The DI-764 has a built-in DHCP server. The DHCP Server will automatically assign an IP address to the computers on the LAN/private network. Be sure to set your computers to be DHCP clients by setting their TCP/IP settings to “Obtain an IP Address Automatically.” When you turn your computers on, they will automatically load the proper TCP/IP settings provided by the DI-764. The DHCP Server will automatically allocate an unused IP address from the IP address pool to the requesting computer. You must specify the starting and ending address of the IP address pool.

**DHCP Server-** select **Enabled** or **Disabled**

**Starting IP Address-** the starting IP address for the DHCP server’s IP assignment

**Ending IP Address-** the ending IP address for the DHCP server’s IP assignment

**Lease Time-** enter the Lease time

**Apply-** click **Apply** to save the changes

# Using the Configuration Menu

## Advanced > Virtual Server

The screenshot shows the DI-764 router's configuration interface. At the top, there is a logo for D-Link and the model name "DI-764 Multimode 2.4/5GHz Wireless Router". Below the header, there is a navigation bar with tabs: Home, Advanced (which is selected), Tools, Status, and Help. On the left side, there is a vertical sidebar with buttons for Virtual Server, Applications, Filters, Firewall, DMZ, and Performance. The main content area is titled "Virtual Server" and contains the following fields:

- A radio button group for "Enabled" or "Disabled".
- A "Name" input field with a "Clear" button.
- A "Private IP" input field.
- A "Protocol Type" dropdown menu set to "TCP".
- A "Private Port" input field.
- A "Public Port" input field.
- A "Schedule" radio button group with options "Always" and "From time" followed by a time and day selector.

Below this is a table titled "Virtual Servers List" with the following data:

Name	Private IP	Protocol	Schedule
Virtual Server FTP	0.0.0.0	TCP 21/21	always
Virtual Server HTTP	0.0.0.0	TCP 80/80	always
Virtual Server HTTPS	0.0.0.0	TCP 443/443	always
Virtual Server DNS	0.0.0.0	UDP 53/53	always
Virtual Server SMTP	0.0.0.0	TCP 25/25	always
Virtual Server POP3	0.0.0.0	TCP 110/110	always
Virtual Server Telnet	0.0.0.0	TCP 23/23	always

At the bottom right of the table are four icons: a green checkmark, a red X, a blue plus sign, and a blue question mark.

The DI-764 can be configured as a virtual server so that remote users accessing Web or FTP services via the public IP address can be automatically redirected to local servers in the LAN (Local Area Network).

The DI-764 firewall feature filters out unrecognized packets to protect your LAN network so all computers networked with the DI-764 are invisible to the outside world. If you wish, you can make some of the LAN computers accessible from the Internet by enabling *Virtual Server*. Depending on the requested service, the DI-764 redirects the external service request to the appropriate server within the LAN network.

# Using the Configuration Menu

## Advanced > Virtual Server *continued*

The DI-764 is also capable of port-redirection meaning incoming traffic to a particular port may be redirected to a different port on the server computer.

Each virtual service that is created will be listed at the bottom of the screen in the Virtual Servers List. There are pre-defined virtual services already in the table. You may use them by enabling them and assigning the server IP to use that particular virtual service.

**Virtual Server-** select **Enabled** or **Disabled**

**Name-** enter the name referencing the virtual service

**Private IP-** the server computer in the LAN (Local Area Network) that will be providing the virtual services.

**Protocol Type-** the protocol used for the virtual service

**Private Port-** the port number of the service used by the Private IP computer

**Public Port-** the port number on the WAN (Wide Area Network) side that will be used to access the virtual service.

**Schedule-** The schedule of time when the virtual service will be enabled. The schedule may be set to **Always**, which will allow the particular service to always be enabled. If it is set to **Time**, select the time frame for the service to be enabled. If the system time is outside of the scheduled time, the service will be disabled.

**Apply-** click **Apply** to save the changes.

### Example #1:

If you have a Web server that you wanted Internet users to access at all times, you would need to enable it. Web (HTTP) server is on LAN (Local Area Network) computer 192.168.0.25. HTTP uses port 80, TCP.

Name: Web Server

Private IP: 192.168.0.25

Protocol Type: TCP

Private Port: 80

Public Port: 80

Schedule: always

## Using the Configuration Menu

### Advanced > Virtual Server *continued*

Virtual Servers List

Name	Private IP	Protocol	Schedule
<input checked="" type="checkbox"/> Virtual Server HTTP	192.168.0.25	TCP 80/80	always



Click on this icon to edit the virtual service



Click on this icon to delete the virtual service

#### Example #2:

If you have an FTP server that you wanted Internet users to access by WAN port 2100 and only during the weekends, you would need to enable it as such. FTP server is on LAN computer 192.168.0.30. FTP uses port 21, TCP.

Name: FTP Server

Private IP: 192.168.0.30

Protocol Type: TCP

Private Port: 21

Public Port: 2100

Schedule: From: 01:00AM to 01:00AM, Sat to Sun

All Internet users who want to access this FTP Server must connect to it from port 2100. This is an example of port redirection and can be useful in cases where there are many of the same servers on the LAN network.

# Using the Configuration Menu

## Advanced > Applications

The screenshot shows the D-Link DI-764 configuration menu. The left sidebar has buttons for Virtual Server, Applications (which is selected and highlighted in yellow), Filters, Firewall, DMZ, and Performance. The main content area has tabs for Home, Advanced (selected), Tools, Status, and Help. Under the Advanced tab, there's a 'Special Application' section. It says 'Special Application is used to run applications that require multiple connections.' There are radio buttons for 'Enabled' and 'Disabled', and checkboxes for 'Name', 'Trigger Port', and 'Trigger Type'. Below this is a 'Special Applications List' table:

NAME	Trigger Public	Actions
Battle.net	6112 6112	
Dialpad	7175 51200-51201,51210	
ICU II	2019 2000-2038,2050-2051,2069,2085,3010-3030	
MSN Gaming Zone	47624 2300-2400,28800-29000	
PC-to-Phone	12053 12120,12122,24150-24220	
Quick Time 4	554 6970-6999	

Buttons for 'Apply', 'Cancel', and 'Help' are at the bottom right of the application list.

Some applications require multiple connections, such as Internet gaming, video conferencing, Internet telephony and others. These applications have difficulties working through NAT (Network Address Translation). Special Applications makes some of these applications work with the DI-764. If you need to run applications that require multiple connections, specify the port normally associated with an application in the "Trigger Port" field, select the protocol type as TCP or UDP, then enter the public ports associated with the trigger port to open them for inbound traffic.

The DI-764 provides some predefined applications in the table on the bottom of the web page. Select the application you want to use and enable it.

**Note!** Only one PC can use each Special Application tunnel.

**Name:** this is the name referencing the special application.

**Trigger Port:** this is the port used to trigger the application. It can be either a single port or a range of ports.

**Trigger Type:** this is the protocol used to trigger the special application.

**Public Port:** this is the port number on the WAN side that will be used to access the application. You may define a single port or a range of ports. You can use a comma to add multiple ports or port ranges.

**Public Type:** this is the protocol used for the special application.

**Apply:** click **Apply** to save the changes

# Using the Configuration Menu

## Advanced > Filters > IP Filters

The screenshot shows the D-Link DI-764 configuration menu. The top bar includes the D-Link logo, the model name "DI-764", and the text "Multimode 2.4/5GHz Wireless Router". The main navigation tabs are Home, Advanced (which is selected), Tools, Status, and Help. On the left, there's a vertical sidebar with icons for Virtual Server, Applications, Filters (which is selected and highlighted in yellow), Firewall, DMZ, and Performance.

**Filters**  
Filters are used to allow or deny LAN users from accessing the Internet.

IP Filters     URL Blocking  
 MAC Filters     Domain Blocking

**IP Filters**  
Use IP Filters to deny LAN IP addresses access to the Internet.

Enabled  Disabled

IP  -   
Port  -   
Protocol Type    
Schedule  Always  
 From time  :  AM  to  :  AM  day  to

Filters are used to deny or allow LAN (Local Area Network) computers from accessing the Internet. The DI-764 can be setup to deny internal computers by their IP or MAC addresses. The DI-764 can also block users from accessing restricted web sites.

### IP Filters

Use IP Filters to deny LAN IP addresses from accessing the Internet. You can deny specific port numbers or all ports for the specific IP address.

**IP:** the IP address of the LAN computer that will be denied access to the Internet.

**Port:** the single port or port range that will be denied access to the Internet.

**Protocol Type:** select the protocol type

**Schedule:** this is the schedule of time when the IP Filter will be enabled.

**Apply:** click **Apply** to save changes.

# Using the Configuration Menu

## Advanced > Filters > URL Blocking

The screenshot shows the D-Link DI-764 Multimode 2.4/5GHz Wireless Router's configuration interface. The left sidebar has buttons for Home, Advanced (which is selected), Tools, Status, and Help. The main content area has tabs for Home, Advanced (selected), Tools, Status, and Help. Under the Advanced tab, there is a 'Filters' section with a sub-section for 'URL Blocking'. It says 'Filters are used to allow or deny LAN users from accessing the Internet.' and lists four options: IP Filters, URL Blocking (selected), MAC Filters, and Domain Blocking. Below this is a 'URL Blocking' section with a note 'Block those URLs which contain keywords listed below.' It shows an 'Enabled' radio button (disabled) and a 'Disabled' radio button (selected). There is a text input field with a 'Delete' button next to it. At the bottom right are 'Apply', 'Cancel', and 'Help' buttons.

URL Blocking is used to deny LAN computers from accessing specific web sites by its URL. A URL is a specially formatted text string that defines a location on the Internet. If any part of the URL contains the blocked word, the site will not be accessible and the web page will not display.

**Filters-** select the filter you wish to use; in this case, **URL Blocking** was chosen.

**URL Blocking-** select Enabled or Disabled.

**Keywords-** block URLs which contain keywords listed below. Enter the keywords in this space.

**Apply-** click **Apply** to save the changes.

# Using the Configuration Menu

## Advanced > Filters > MAC Filters


The screenshot shows the D-Link DI-764 Multimode 2.4/5GHz Wireless Router's configuration menu. The left sidebar has buttons for Home, Advanced (which is selected), Tools, Status, and Help. Below these are buttons for Virtual Server, Applications, Filters (which is selected), Firewall, DMZ, and Performance. The main content area has tabs for Home, Advanced (selected), Tools, Status, and Help. Under the Advanced tab, there is a 'Filters' section with a sub-section for 'MAC Filters'. It says 'Filters are used to allow or deny LAN users from accessing the Internet.' and lists four options: IP Filters, URL Blocking, MAC Filters (which is selected), and Domain Blocking. The 'MAC Filters' section contains three radio button options: 'Disabled MAC Filters' (selected), 'Only allow MAC address listed below to access Internet from LAN', and 'Only deny MAC address listed below to access Internet from LAN'. Below these are fields for 'Name' (with a 'Clear' button) and 'MAC Address' (with a separator '-'). There is also a 'DHCP Client' dropdown menu with a 'Clone' button. At the bottom right are 'Apply', 'Cancel', and 'Help' buttons.

Use MAC (Media Access Control) Filters to allow or deny LAN (Local Area Network) computers by their MAC addresses from accessing the Internet. You can either manually add a MAC address or select the MAC address from the list of clients that are currently connected to the Broadband Router.

- Filters-** select the filter you wish to use; in this case, **MAC filters** was chosen.
- MAC Filters-** choose **Disable** MAC filters; **allow** MAC addresses listed below; or **deny** MAC addresses listed below.
- Name-** enter the name here.
- MAC Address-** enter the MAC Address.
- DHCP Client-** select a DHCP client from the pull-down list; click **Clone** to copy that MAC Address
- Apply-** click **Apply** to save the changes.

# Using the Configuration Menu

## Advanced > Filters > Domain Blocking

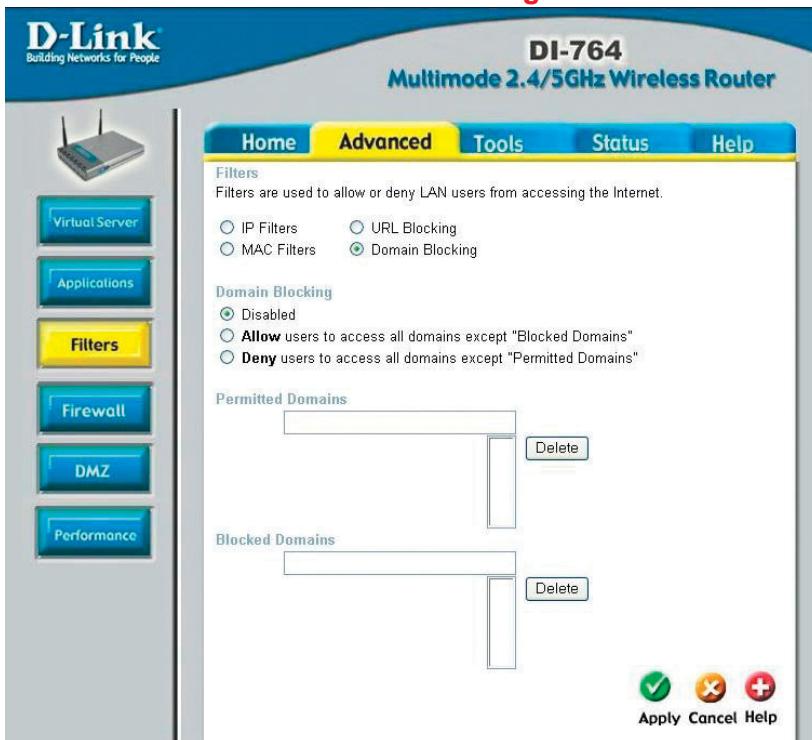

Domain Blocking is used to allow or deny LAN (Local Area Network) computers from accessing specific domains on the Internet. Domain blocking will deny all requests to a specific domain such as http and ftp. It can also allow computers to access specific sites and deny all other sites.

**Filters-** select the filter you wish to use; in this case, **Domain Blocking** was chosen.

### Domain Blocking:

**Disabled-** select **Disabled** to disable **Domain Blocking**

**Allow-** allows users to access all domains except **Blocked Domains**

**Deny-** denies users access to all domains except **Permitted Domains**

**Permitted Domains-** enter the **Permitted Domains** in this field

**Blocked Domains-** enter the **Blocked Domains** in this field

**Apply-** click **Apply** to save the changes.

# Using the Configuration Menu

## Advanced > Firewall

The screenshot shows the D-Link DI-764 configuration menu. The left sidebar has icons for Virtual Server, Applications, Filters, Firewall (which is selected and highlighted in yellow), DMZ, and Performance. The main content area has tabs for Home, Advanced (selected and highlighted in yellow), Tools, Status, and Help. Under the Advanced tab, there's a section for Firewall Rules. It includes fields for Name (with a clear button), Action (Allow or Deny), Source and Destination IP ranges, Protocol (TCP, UDP, etc.), and Port Range. There are also fields for Interface, IP Range Start, IP Range End, and a Schedule section with options for Always or From time to time. At the bottom is a Firewall Rules List table with three entries:

Action	Name	Source	Destination	Protocol
<input checked="" type="checkbox"/>	Allow	Allow to Ping WAN port	WAN,*	LAN,192.168.0.1
<input checked="" type="checkbox"/>	Deny	Default	**	LAN,*
<input checked="" type="checkbox"/>	Allow	Default	LAN,*	*,*

Buttons for Apply, Cancel, and Help are at the bottom right of the rules list.

**Firewall Rules** is an advanced feature used to deny or allow traffic from passing through the DI-764. It works in the same way as IP Filters with additional settings. You can create more detailed access rules for the DI-764. When virtual services are created and enabled, it will also display in Firewall Rules. Firewall Rules contains all network firewall rules pertaining to IP (Internet Protocol).

In the Firewall Rules List at the bottom of the screen, the priorities of the rules are from top (highest priority) to bottom (lowest priority).

Note: The DI-764 MAC Address filtering rules have precedence over the Firewall Rules.

**Firewall Rules-** enable or disable the Firewall

**Name-** enter the name

**Action-** allow or deny

**Source-** enter the IP Address range

**Destination-** enter the IP Address range; the Protocol; and the Port Range

**Schedule-** select Always or enter the Time.

**Apply-** click Apply to save the changes.

# Using the Configuration Menu

## Advanced > DMZ

If you have a client PC that cannot run Internet applications properly from behind the DI-764, then you can set the client up to unrestricted Internet access. It allows a computer to be exposed to the Internet. This feature is useful for gaming purposes. Enter the IP address of the internal computer that will be the DMZ host. Adding a client to the DMZ (Demilitarized Zone) may expose your local network to a variety of security risks, so only use this option as a last resort.

**DMZ-** **enable** or **disable** the DMZ. The DMZ (Demilitarized Zone) allows a single computer to be exposed to the internet.

**IP Address-** enter the **IP Address** of the computer to be in the **DMZ**

**Apply-** click **Apply** to save the changes.

# Using the Configuration Menu

## Advanced > Performance > 802.11a

The screenshot shows the 'Performance' tab selected in the navigation bar. Under 'Wireless Performance', the '802.11a' radio button is selected. The configuration section includes fields for Data Rate (set to 'best'), Transmit Power (set to 'full'), Beacon interval (set to 100), RTS Threshold (set to 2346), Fragmentation (set to 2346), DTIM interval (set to 1), Authentication (set to Open System), and QoS (set to Enabled). At the bottom right are 'Apply', 'Cancel', and 'Help' buttons.

### Wireless Performance-

select **802.11a** or **802.11b+**. Here, **802.11a** has been chosen. This screen displays the wireless performance features of the Access Point portion of the DI-764.

#### Data Rate-

**best** is the default selection

#### Transmit Power-

**full** is the default selection.

#### Beacon interval-

beacons are packets sent by the DI-764 to synchronize a wireless network. Specify a value. **100** is the default setting and is recommended.

#### RTS Threshold-

this value should remain at its default setting of **2342**. If inconsistent data flow is a problem, only a minor modification should be made.

#### Fragmentation-

this value should also remain at its default setting of **2346**. If you experience a high packet error rate, you may slightly increase your Fragmentation value within the range of 256-2346. Setting the Fragmentation value too low may result in poor performance.

#### DTIM interval-

(Delivery Traffic Indication Message) **1** is the default setting. A DTIM is a countdown informing clients of the next window for listening to broadcast and multicast messages.

#### Authentication-

select **Open system** or **Shared Key**

**Open System** - the DI-764 will be visible to all devices on the network. This is the default setting

**Shared Key** - in this mode, in order to access the DI-764 on the network, the device must be listed in the MAC Address Control List

#### Apply-

click **Apply** to save the changes

# Using the Configuration Menu

## Advanced > Performance > 802.11b+

The screenshot shows the D-Link DI-764 configuration interface. The top navigation bar includes Home, Advanced (selected), Tools, Status, and Help. The left sidebar lists Virtual Server, Applications, Filters, Firewall, DMZ, and Performance (which is highlighted). The main content area is titled 'Wireless Performance' and shows the '802.11b+' option selected. Other settings include Beacon interval (100), RTS Threshold (2432), Fragmentation (2346), DTIM interval (3), Basic Rates (1-2Mbps), TX Rates (1-2Mbps), Preamble Type (Short Preamble), and Authentication (Open System). A status bar at the bottom right includes 'Apply' (green checkmark), 'Cancel' (red X), and 'Help' (red plus).

## Wireless Performance-

Select **802.11a** or **802.11b+**. **802.11b+** is selected here. Displayed in this window are the Wireless Performance features for the Access Point portion of the DI-764.

### Beacon interval-

beacons are packets sent by the DI-764 to synchronize a wireless network. Specify a value. **100** is the default setting and is recommended.

### RTS Threshold-

this value should remain at its default setting of **2342**. If inconsistent data flow is a problem, only a minor modification should be made.

### Fragmentation-

this value should also remain at its default setting of **2346**. If you experience a high packet error rate, you may slightly increase your Fragmentation value within the range of 256-2346. Setting the Fragmentation value too low may result in poor performance.

### DTIM interval-

(Delivery Traffic Indication Message) **3** is the default setting. A DTIM is a countdown informing clients of the next window for listening to broadcast and multicast messages.

### Basic Rates-

choose from **1-2Mbps; 1,2,5.5,11 Mbps; or 1,2,5.5,11,22 Mbps**

### TX Rates-

select the basic transfer rates based on the speed of the wireless adapters on the WLAN (wireless local area network); choose from among the same ranges as those listed in the *Basic Rates*, above.

# Using the Configuration Menu

**Preamble Type-** select **Short or Long Preamble**. The Preamble Type defines the length of the CRC (Cyclic Redundancy Check) block for communication between the DI-764 and roaming wireless adapters. Make sure to select the appropriate preamble type and click **Apply**. **Note: High network traffic areas should use the shorter preamble type.** CRC is a common technique for detecting data transmission errors.


**Authentication-** select **Open system or Shared Key**

**Open System** - the DI-764 will be visible to all devices on the network. This is the default setting

**Shared Key** - in this mode, in order to access the DI-764 on the network, the device must be listed in the MAC Address Control List

**Apply-** click **Apply** to save changes

## Tools> Admin

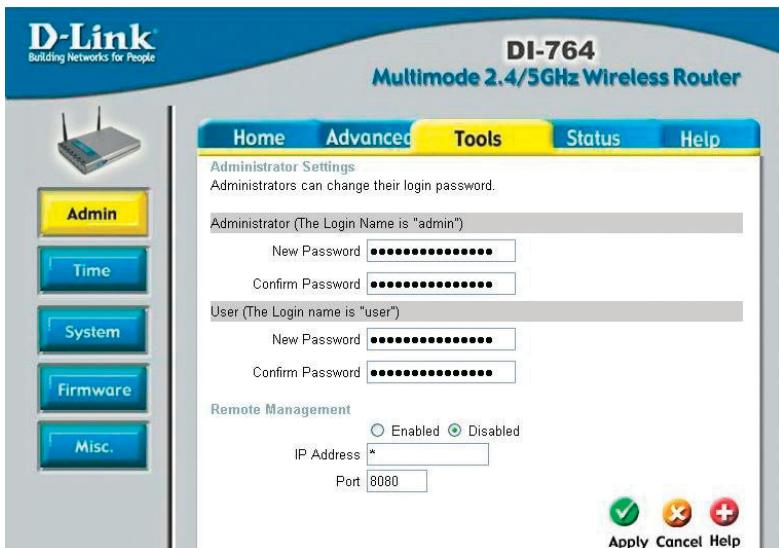

### Administrator Login Name

**admin** is the **default** login name for the Admin account

### User Login Name

**user** is the **default** login name for the User account

### Admin Password-

the **default** setting is blank - no password. To change the password, enter and confirm the new password.

### User Password-

the **default** setting is blank - no password. To change the password, enter and confirm the new password.

# Using the Configuration Menu

## Remote Management

Remote Management allows the DI-764 to be configured from the Internet by a web browser. A username and password is still required to access the Web-Management interface. In general, only a member of your network can browse the built-in web pages to perform “Administrator” tasks. This feature enables you to perform “Administrator” tasks from the remote (Internet) host.

**IP Address:** Internet IP address of the computer that has access to the Router. It is not recommended that you set the IP address to \* (star), because this allows any Internet IP address to access the Router, which could result in a loss of security for your network. If you elect to enable **Remote Management**, make sure to enter the IP Address of the remote computer allowed to configure the DI-764.

**Port:** For security purposes, select a separate port number used to access the Router. (*The following is an example only; you may use a different port number.*)

**Example:** <http://x.x.x.x:8080> where x.x.x.x is the WAN IP address of the Router and 8080 is the port used for the Web-Management interface.

## Tools > Time

The screenshot shows the D-Link DI-764 configuration interface. On the left is a sidebar with icons for Admin, Time (which is selected), System, Firmware, and Misc. The main area has tabs for Home, Advanced, Tools (selected), Status, and Help. Under the Tools tab, there's a sub-section for Time. It shows the Local Time as Feb/05/2016 22:42:08, the Time Zone as (GMT-08:00) Pacific Time (US & Canada), and a Default NTP Server field with '(optional)' next to it. Below that, there are fields for Set the Time (Year 2002, Month Feb, Day 05, Hour 22, Minute 42, Second 08) and Daylight Saving (Enabled, Start Jan 01, End Jan 01). At the bottom are Apply, Cancel, and Help buttons.

## Time settings-

in this window you can choose the time zone; set the time; and enable or disable Daylight Savings Time.

## Default NTP Server-

NTP is short for *Network Time Protocol*. NTP synchronizes computer clock times in a network of computers. This field is optional.

# Using the Configuration Menu

## Tools > System

The screenshot shows the D-Link DI-764 Multimode 2.4/5GHz Wireless Router's configuration interface. At the top, there is a logo for "D-Link" with the tagline "Building Networks for People". To the right of the logo, the model name "DI-764" and "Multimode 2.4/5GHz Wireless Router" are displayed. Below the logo is a small image of a wireless router. On the left side, there is a vertical sidebar with five buttons: "Admin" (blue), "Time" (blue), "System" (yellow, currently selected), "Firmware" (blue), and "Misc." (blue). At the top of the main content area, there is a navigation bar with tabs: "Home", "Advanced", "Tools" (which is highlighted in yellow), "Status", and "Help". The main content area is titled "System Settings". It contains three sections: "Save Settings To Local Hard Drive" with a "Save" button, "Load Settings From Local Hard Drive" with a "Browse..." button and a text input field, and "Restore To Factory Default Settings" with a "Restore" button. In the bottom right corner of the main content area, there is a red circular icon with a white plus sign and the word "Help" next to it.

## System Settings

### Save Settings to

### Local Hard Drive-

click **Save** to save the current settings to the local Hard Drive

### Load Settings from

### Local Hard Drive-

click **Browse** to find the settings, then click **Load**

### Restore to Factory

### Default Settings-

click **Restore** to restore the factory default settings

# Using the Configuration Menu

## Tools > Firmware

The screenshot shows the D-Link DI-764 configuration menu. At the top, there's a logo for "D-Link" with the tagline "Building Networks for People". To the right, it says "DI-764 Multimode 2.4/5GHz Wireless Router". Below the header, there's a navigation bar with tabs: Home, Advanced, Tools (which is highlighted in yellow), Status, and Help. On the left, there's a vertical sidebar with icons for Admin, Time, System, Firmware (which is highlighted in yellow), and Misc. The main content area has a title "Firmware Upgrade". It contains text about new firmware availability and a link to check for upgrades. It also provides instructions for upgrading the firmware using a local file and a "Browse" button. Below this, it shows the "Current Firmware Version: 0.c" and "Firmware Date: Thu, 26 Jul 2002". There's a "Browse..." button next to a file input field. At the bottom right, there are three buttons: a green checkmark for "Apply", a red X for "Cancel", and a red plus sign for "Help".

**Firmware Upgrade-** click on the link in this screen to find out if there is an updated firmware; if so, download the new firmware to your hard drive.

**Browse-** after you have downloaded the new firmware, click **Browse** in this window to locate the firmware update on your hard drive. Click **Apply** to complete the firmware upgrade.

# Using the Configuration Menu

## Tools > Misc

D-Link  
Building Networks for People

DI-764  
Multimode 2.4/5GHz Wireless Router

Home Advanced Tools Status Help

Ping Test  
Ping Test is used to send "Ping" packets to test if a computer is on the Internet.

Host Name or IP address

Restart Device  
Reboots the Dual Band Wireless Router.

Block WAN Ping  
When you "Block WAN Ping", you are causing the public WAN IP address on the Dual Band Wireless Router to not respond to ping commands. Pinging public WAN IP addresses is a common method used by hackers to test whether your WAN IP address is valid.

Discard PING from WAN side  Enabled  Disabled

VPN Pass-Through  
Allows VPN connections to work through the Dual Band Wireless Router.

PPTP  Enabled  Disabled  
IPSec  Enabled  Disabled

Apply  Cancel  Help

### Ping Test-

the Ping Test is used to send Ping packets to test if a computer is on the Internet. Enter the IP Address that you wish to Ping, and click **Ping**

### Restart Device-

click **Reboot** to restart the DI-764

### Block WAN Ping-

if you choose to block WAN Ping, the WAN IP Address of the DI-764 will not respond to pings. Blocking the Ping may provide some extra security from hackers.

### Discard Ping from WAN side-

click **Enabled** to block the WAN ping

### VPN Pass Through-

the DI-764 supports VPN (Virtual Private Network) pass-through for both PPTP (Point-to-Point Tunneling Protocol) and IPSec (IP Security). Once VPN pass-through is enabled, there is no need to open up virtual services. Multiple VPN connections can be made through the DI-764. This is useful when you have many VPN clients on the LAN network.

**PPTP-** select **Enabled** or **Disabled**

**IPSec-** select **Enabled** or **Disabled**

### Apply-

click **Apply** to save changes

# Using the Configuration Menu

## Status > Device Info

The screenshot shows the D-Link DI-764 Multimode 2.4/5GHz Wireless Router's configuration interface. The top bar includes the D-Link logo, model name "DI-764", and "Multimode 2.4/5GHz Wireless Router". The menu bar at the top has tabs: Home, Advanced, Tools, Status (which is highlighted in yellow), and Help. On the left, there is a vertical sidebar with icons for Device Info (yellow background), Log (blue), Stats (blue), and Wireless (blue). The main content area is titled "Device Information". It displays the following information:

- Firmware Version:** 0.b , Thu, 25 Jul 2002
- LAN**
  - MAC Address:** 00-20-02-07-19-0C
  - IP Address:** 192.168.0.1
  - Subnet Mask:** 255.255.255.0
  - DHCP Server:** Enabled
- WAN**
  - MAC Address:** 00-20-02-07-19-0D
  - Connection:** DHCP Client Disconnected
    - DHCP Release**
    - DHCP Renew**
  - IP Address:** 0.0.0.0
  - Subnet Mask:** 0.0.0.0
  - Default Gateway:** 0.0.0.0
- DNS**
- Wireless 802.11a**
  - SSID:** default\_ab
  - Channel 52 Turbo Mode:** Disabled
  - WEP:** Disabled
- Wireless 802.11b+**
  - SSID:** default\_ab
  - Channel 6**
  - WEP:** Disabled

In the bottom right corner of the interface, there is a red circular icon with a white plus sign and the word "Help" below it.

**Device Information-** This screen displays information about the DI-764

# Using the Configuration Menu

## Status > Log

The screenshot shows the D-Link DI-764 Multimode 2.4/5GHz Wireless Router's web-based configuration interface. At the top left is the D-Link logo with the tagline "Building Networks for People". To the right is the model name "DI-764" and "Multimode 2.4/5GHz Wireless Router". Below the logo is a sidebar with icons for Device Info, Log (which is highlighted in yellow), Stats, and Wireless. The main menu bar includes Home, Advanced, Tools, Status (which is highlighted in yellow), and Help. Under the Status tab, there is a section titled "View Log" with a brief description: "View Log displays the activities occurring on the DI-764 Wireless Router. Click on Log Settings for advance features." Below this are buttons for First Page, Last Page, Previous, Next, Clear, and Log Settings. A help icon with a plus sign is also present. At the bottom of the log view area are headers for Time, Message, Source, Destination, and Note.

**View Log-** this screen displays the activity on the DI-764

**Log Settings-** for advanced features, click on **Log Settings**

# Using the Configuration Menu

## Status > Stats

The screenshot shows the D-Link DI-764 Multimode 2.4/5GHz Wireless Router's configuration interface. The main title is "DI-764 Multimode 2.4/5GHz Wireless Router". On the left sidebar, there are four buttons: "Device Info" (blue), "Log" (blue), "Stats" (yellow, currently selected), and "Wireless" (blue). The main content area has tabs: Home, Advanced, Tools, Status (yellow, currently selected), and Help. Under "Status", the "Traffic Statistics" section displays receive and transmit packet counts for WAN, LAN, WIRELESS 11a, and WIRELESS 11b+. There are "Refresh" and "Reset" buttons, and a "Help" button with a red circle icon.

	Receive	Transmit
WAN	0 Packets	89 Packets
LAN	1054 Packets	1897 Packets
WIRELESS 11a	0 Packets	0 Packets
WIRELESS 11b+	0 Packets	692 Packets

**Traffic Statistics-** displays the receive and transmit packets that are passing through the DI-764. Click on **Refresh** or **Reset**, for the most recent information.

## Status > Wireless

The screenshot shows the D-Link DI-764 Multimode 2.4/5GHz Wireless Router's configuration interface. The main title is "DI-764 Multimode 2.4/5GHz Wireless Router". On the left sidebar, there are four buttons: "Device Info" (blue), "Log" (blue), "Stats" (blue), and "Wireless" (yellow, currently selected). The main content area has tabs: Home, Advanced, Tools, Status (yellow, currently selected), and Help. Under "Status", the "Connected Wireless Client List" section displays a table of connected clients. The columns are "Connected Time", "MAC Address", and "Mode". There is a "Help" button with a red circle icon.

Connected Time	MAC Address	Mode
----------------	-------------	------

**Connected Wireless Client List-**

displays the wireless clients that are connected to the Access Point function of the DI-764.

# Using the Configuration Menu

## Help

The screenshot shows the D-Link DI-764 Multimode 2.4/5GHz Wireless Router's web-based configuration interface. At the top, the D-Link logo and the model name "DI-764 Multimode 2.4/5GHz Wireless Router" are displayed. Below the header, there's a sidebar featuring a small image of the router and a yellow "Menu" button.

The main content area has a navigation bar with tabs: Home, Advanced, Tools, Status, and Help. The "Help" tab is currently selected and highlighted in yellow. The "Home" tab contains links to Setup Wizard, Wireless Settings, WAN Settings, LAN Settings, and DHCP Server. The "Advanced" tab contains links to Virtual Server, Special Applications, Filters, Firewall Rules, DMZ, and Wireless Performance. The "Tools" tab contains links to Administrator Settings, System Time, System Settings, Firmware Upgrade, and Miscellaneous Items. The "Status" tab contains links to Device Information, Log, Traffic Statistics, and Connected Wireless Client List. The "FAQs" section is also present.

## Help-

displays the complete **Help** menu. For help at anytime, click the **Help** tab in the Configuration menu.


# Networking Basics

## Using the Network Setup Wizard in Windows XP

In this section you will learn how to establish a network at home or work, using **Microsoft Windows XP**.

*Note: Please refer to websites such as <http://www.homenethelp.com> and <http://www.microsoft.com/windows2000> for information about networking computers using Windows 2000, ME or 98.*

Go to **Start>Control Panel>Network Connections**  
Select **Set up a home or small office network**

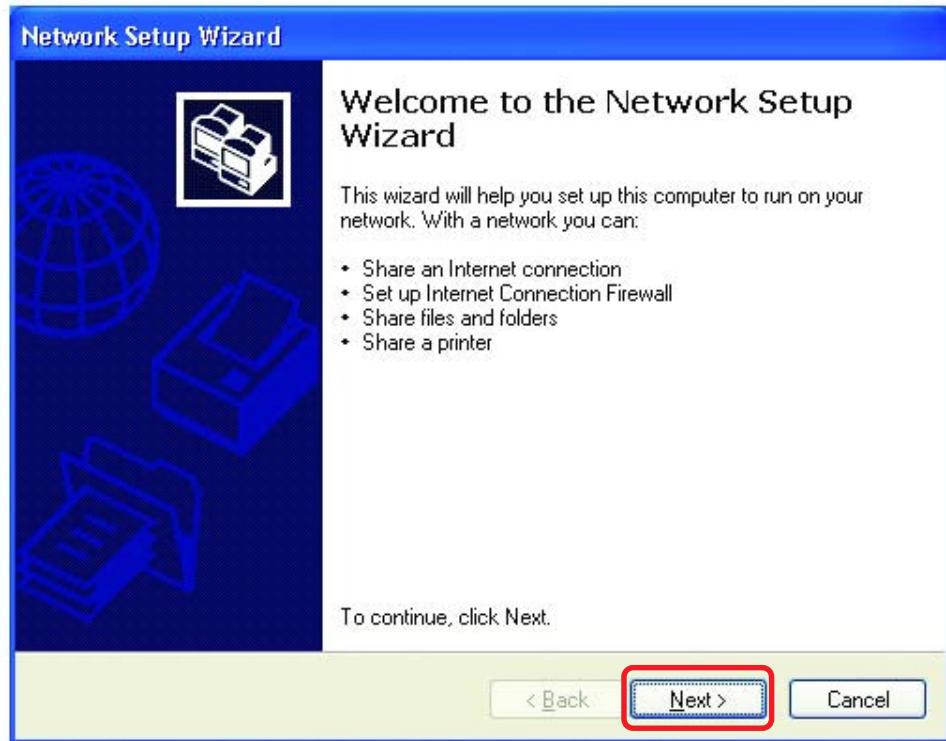

When this screen appears, **Click Next**.


## Networking Basics

Please follow all the instructions in this window:



Click **Next**


In the following window, select the best description of your computer. If your computer connects to the internet through a gateway/router, select the second option as shown.

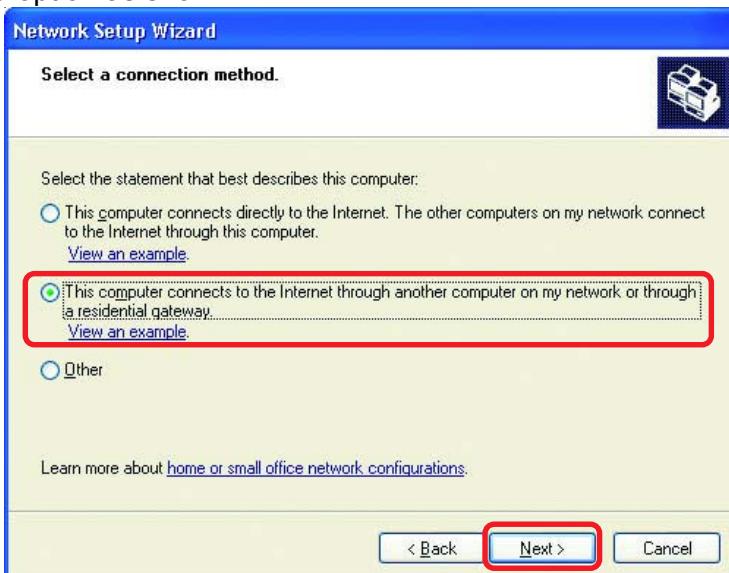

Click **Next**


## Networking Basics

Enter a **Computer description** and a **Computer name** (optional.)

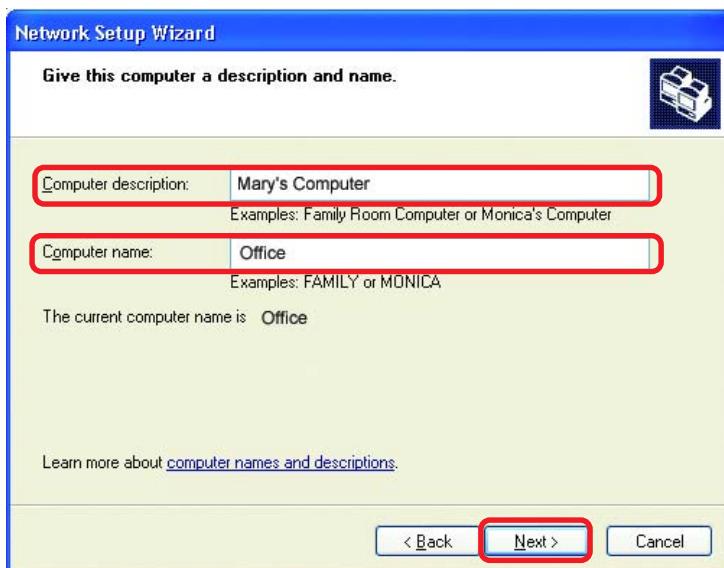

Click **Next**


Enter a **Workgroup** name. All computers on your network should have the same **Workgroup name**.

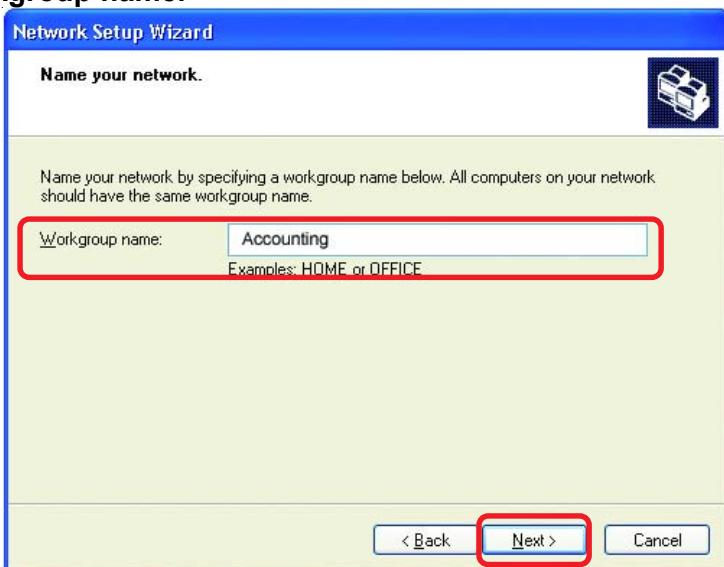

Click **Next**

## Networking Basics

Please wait while the **Network Setup Wizard** applies the changes.

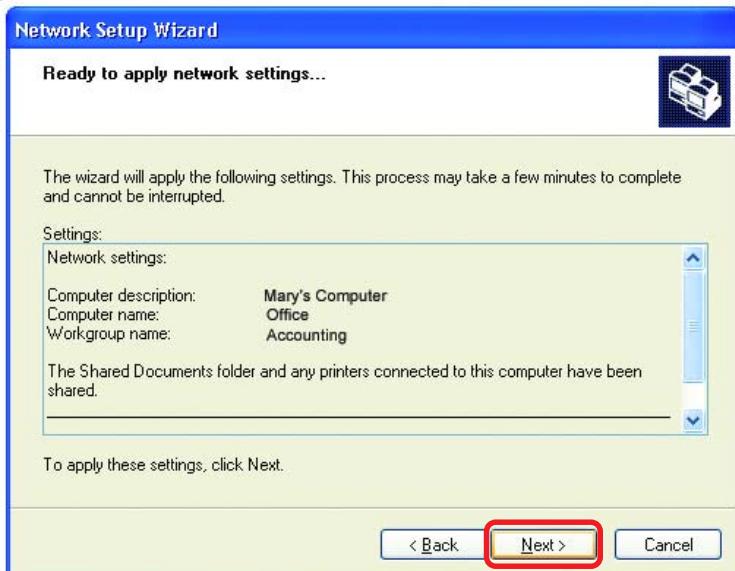


When the changes are complete, click **Next**.

Please wait while the **Network Setup Wizard** configures the computer. This may take a few minutes.



## Networking Basics


In the window below, select the option that fits your needs. In this example, **Create a Network Setup Disk** has been selected. You will run this disk on each of the computers on your network. Click **Next**.

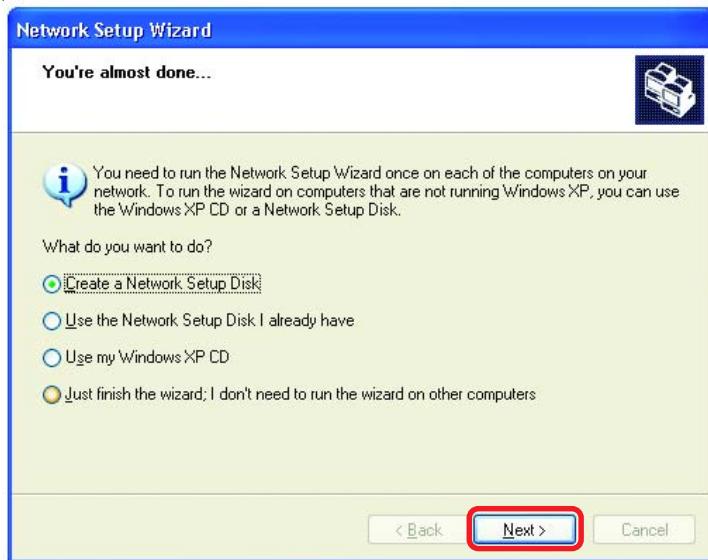


Insert a disk into the Floppy Disk Drive, in this case drive A.



## Networking Basics

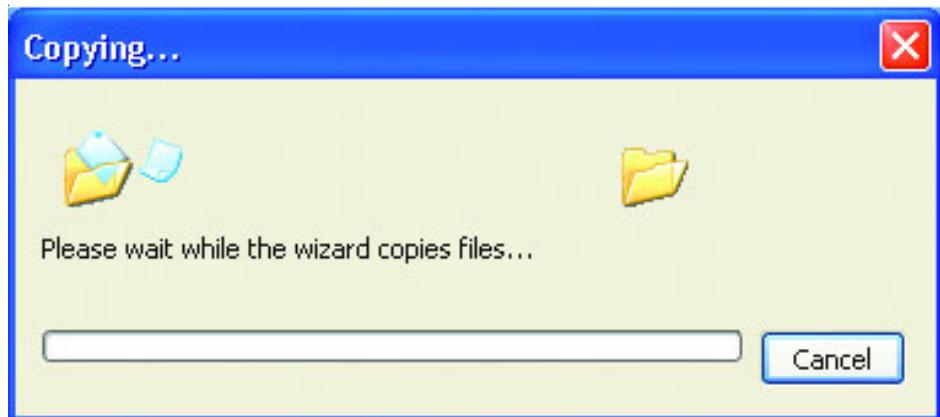

Please read the information under **Here's how** in the screen below. After you complete the **Network Setup Wizard** you will use the **Network Setup Disk** to run the **Network Setup Wizard** once on each of the computers on your network. To continue click **Next**.

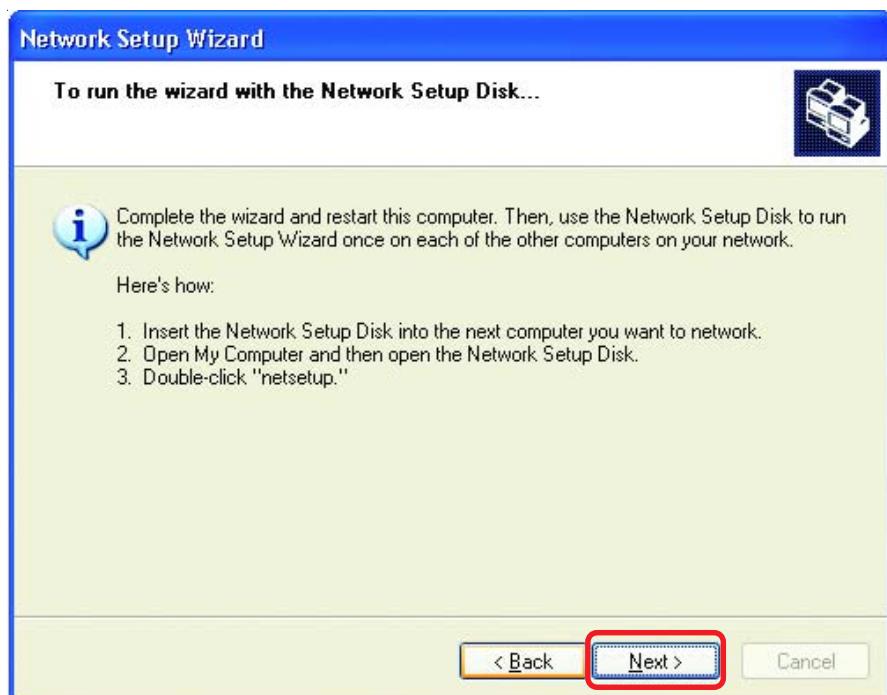

## Networking Basics

Please read the information on this screen, then click **Finish** to complete the **Network Setup Wizard**.



The new settings will take effect when you restart the computer. Click **Yes** to restart the computer.



You have completed configuring this computer. Next, you will need to run the **Network Setup Disk** on all the other computers on your network. After running the **Network Setup Disk** on all your computers, your new wireless network will be ready to use.

# Networking Basics


## Naming your Computer

To name your computer, please follow these directions: In **Windows XP**:

- Click **Start** (in the lower left corner of the screen)
- **Right-click on My Computer**
- Select **Properties** and click




- Select the **Computer Name Tab** in the System Properties window.
- You may enter a **Computer Description** if you wish; this field is optional.
- To rename the computer and join a domain, Click **Change**.

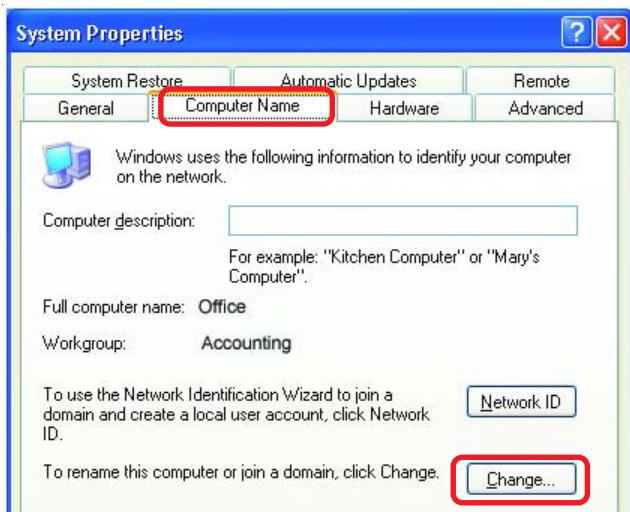

## Networking Basics

### Naming your Computer

- In this window, enter the **Computer name**
- Select **Workgroup** and enter the name of the **Workgroup**
- All computers on your network must have the same **Workgroup** name.
- Click **OK**

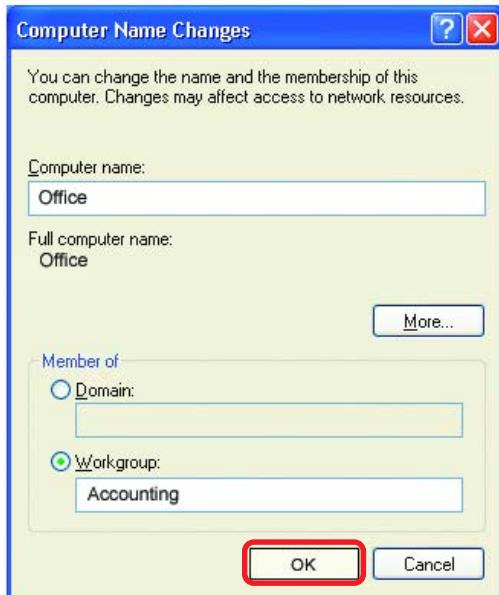

### Checking the IP Address in Windows XP

The wireless adapter-equipped computers in your network must be in the same IP Address range (see Getting Started in this manual for a definition of IP Address Range.) To check on the IP Address of the adapter, please do the following:

- Right-click on the **Local Area Connection icon** in the task bar
- Click on **Status**




## Networking Basics

### Checking the IP Address in Windows XP

This window will appear.

- Click the **Support tab**

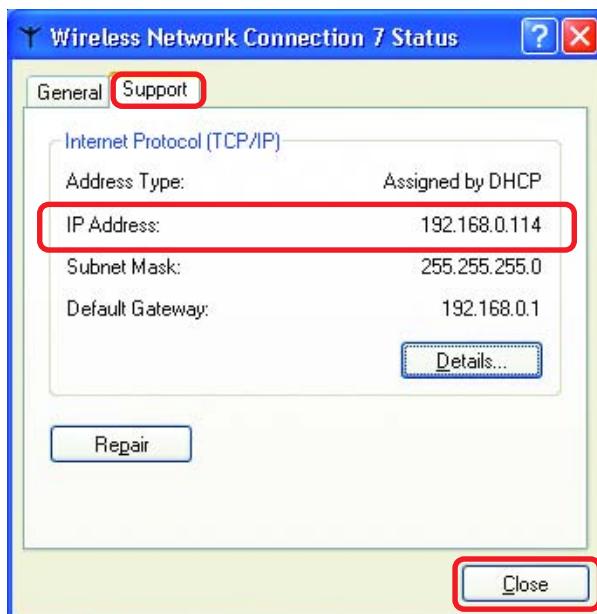

- Click **Close**

### Assigning a Static IP Address in Windows XP/2000

**Note:** Residential Gateways/Broadband Routers will automatically assign IP Addresses to the computers on the network, using DHCP (Dynamic Host Configuration Protocol) technology. If you are using a DHCP-capable Gateway/Router you will not need to assign Static IP Addresses.

If you are not using a DHCP capable Gateway/Router, or you need to assign a Static IP Address, please follow these instructions:


- Go to **Start**
- Double-click on **Control Panel**



# Networking Basics


## Assigning a Static IP Address in Windows XP/2000

- Double-click on Network Connections

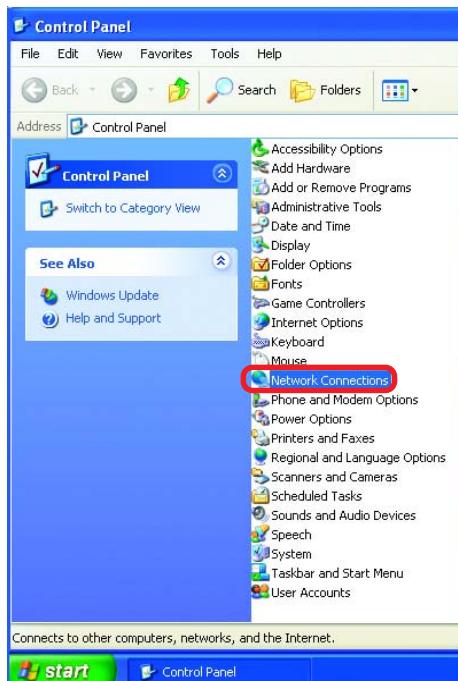

- Right-click on Local Area Connections

- Double-click on Properties

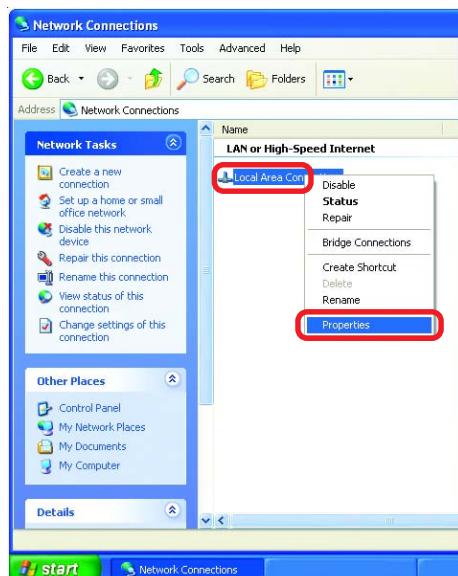



## Networking Basics

### Assigning a Static IP Address in Windows XP/2000

- Click on **Internet Protocol (TCP/IP)**

- Click **Properties**

- Input your **IP address and subnet mask**. (The IP Addresses on your network must be within the same range. For example, if one computer has an IP Address of 192.168.0.2, the other computers should have IP Addresses that are sequential, like 192.168.0.3 and 192.168.0.4. The subnet mask must be the same for all the computers on the network.)
- Enter the **IP Address of the Default Gateway** (in this case it is **192.168.0.1** for the **DI-764**)
- Input your **DNS server address**.

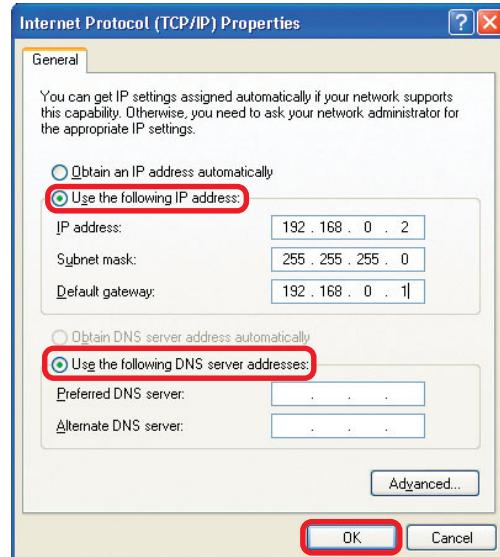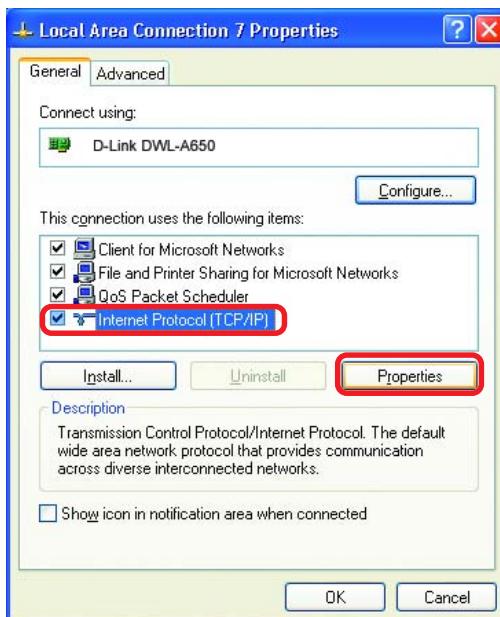

*The DNS server address will be supplied by your ISP (Internet Service Provider). If the DNS Server address is not available from your ISP, you may input 192.168.0.1 in this field.*

- Click **OK**


# Networking Basics

## Assigning a Static IP Address with Macintosh OSX


- Go to the **Apple Menu** and select **System Preferences**
- Click on **Network**



- Select **Built-in Ethernet** in the **Show** pull-down menu
- Select **Manually** in the **Configure** pull-down menu

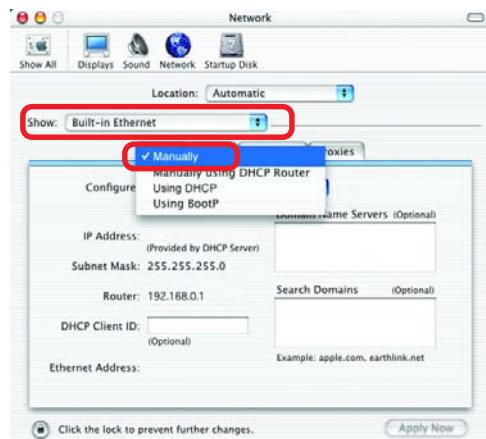

- Input the **Static IP Address**, the **Subnet Mask** and the **Router IP Address** in the appropriate fields
- Input the **Domain Name Server** address. Your ISP (Internet Service Provider) will provide the IP address of the DNS Server. If the DNS Server address is not available from your ISP, you may input 192.168.0.1 in this field.
- Click **Apply Now**

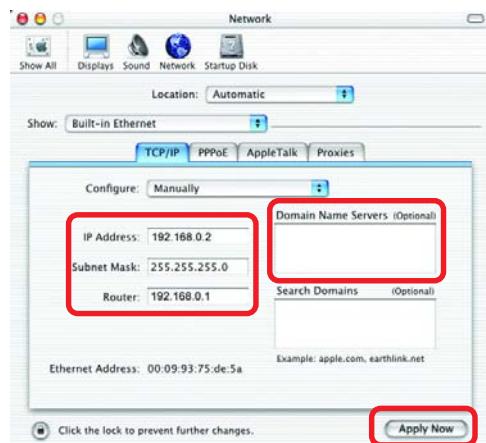


# Networking Basics

## Selecting a Dynamic IP Address with Macintosh OSX


- Go to the **Apple Menu** and select **System Preferences**
- Click on **Network**



- Select **Built-in Ethernet** in the **Show** pull-down menu
- Select **Using DHCP** in the **Configure** pull-down menu

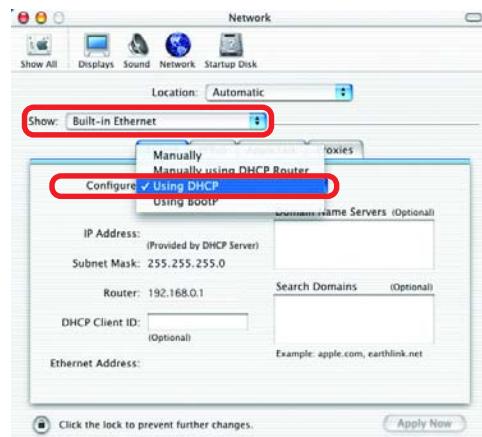


- Click **Apply Now**
- The **IP Address**, **Subnet mask**, and the **Router's IP Address** will appear in a few seconds

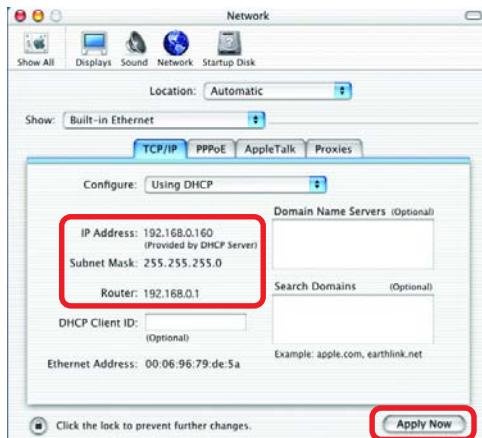

## Networking Basics

### Checking the Wireless Connection by Pinging in Windows XP and 2000

- Go to **Start > Run** > type **cmd**. A window similar to this one will appear. Type **ping** **XXX.XXX.XXX.XXX**, where **xxx** is the **IP Address** of the Wireless Router or Access Point. A good wireless connection will show four replies from the Wireless Router or Access Point, as shown.

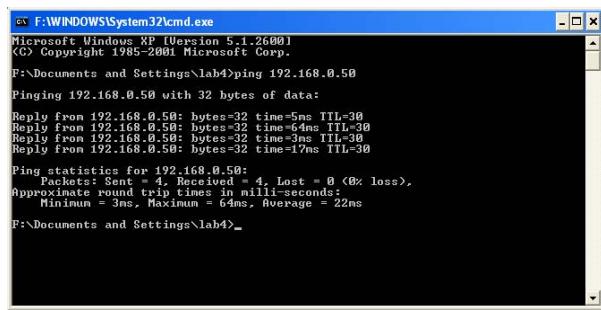

```
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

F:\Documents and Settings\lab4>ping 192.168.0.50


Pinging 192.168.0.50 with 32 bytes of data:
Reply from 192.168.0.50: bytes=32 time=5ms TTL=30
Reply from 192.168.0.50: bytes=32 time=6ms TTL=30
Reply from 192.168.0.50: bytes=32 time=3ms TTL=30
Reply from 192.168.0.50: bytes=32 time=17ms TTL=30

Ping statistics for 192.168.0.50:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
Approximate round trip times in milli-seconds:
    Minimum = 3ms, Maximum = 64ms, Average = 22ms

F:\Documents and Settings\lab4>
```

### Checking the Wireless Connection by Pinging in Windows Me and 98

- Go to **Start > Run** > type **command**. A window similar to this will appear. Type **ping** **XXX.XXX.XXX.XXX** where **xxx** is the **IP Address** of the Wireless Router or Access Point. A good wireless connection will show four replies from the wireless router or access point, as shown.

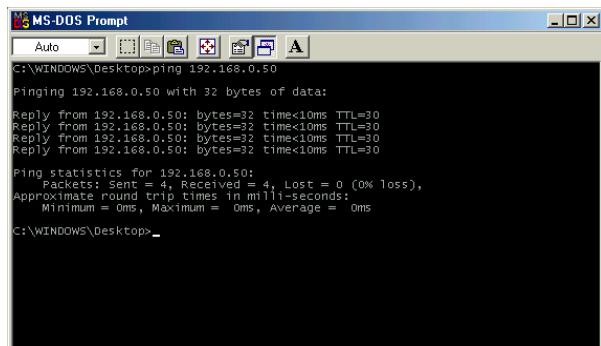

```
MS-DOS Prompt
Auto C:\WINDOWS\Desktop>ping 192.168.0.50

Pinging 192.168.0.50 with 32 bytes of data:
Reply from 192.168.0.50: bytes=32 time<10ms TTL=30

Ping statistics for 192.168.0.50:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
Approximate round trip times in milli-seconds:
    Minimum = 0ms, Maximum = 0ms, Average = 0ms

C:\WINDOWS\Desktop>
```

## **Networking Basics**

### **Adding and Sharing Printers in Windows XP**

After you have run the **Network Setup Wizard** on all the computers in your network (please see the **Network Setup Wizard** section at the beginning of **Networking Basics**,) you can use the **Add Printer Wizard** to add or share a printer on your network.

Whether you want to add a **local printer** (a printer connected directly to one computer,) share an **LPR printer** (a printer connected to a print server) or share a **network printer** (a printer connected to your network through a Gateway/Router,) use the **Add Printer Wizard**. Please follow the directions below:

***First, make sure that you have run the Network Setup Wizard on all of the computers on your network.***

On the following pages, we will show you these 3 ways to use the **Add Printer Wizard**:

- 1. Adding a local printer**
- 2. Sharing an network printer**
- 3. Sharing an LPR printer**

### **(Other Networking Tasks)**


For help with other tasks, that we have not covered here, in home or small office networking, see **Using the Shared Documents** folder and **Sharing files and folders** in the **Help and Support Center** in Microsoft **Windows XP**.

## Networking Basics


### ***Adding a local printer (a printer connected directly to a computer)***

A printer that is not shared on the network and is connected directly to one computer is called a **local printer**. If you do not need to share your printer on a network, follow these directions to add the printer to one computer.

- Go to Start>Printers and Faxes

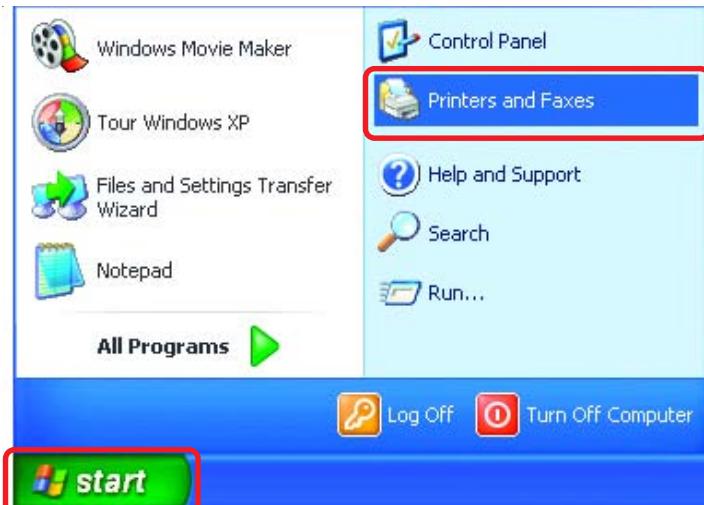

- Click on Add a printer

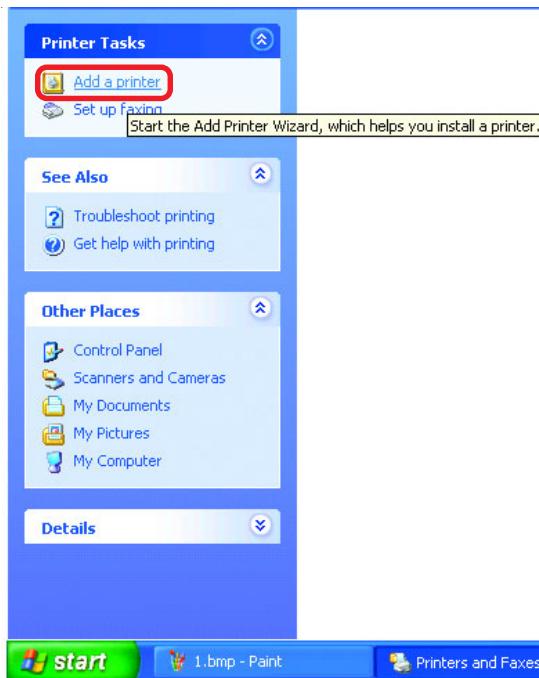


# Networking Basics

## Adding a local printer

- Click **Next**




- Select **Local printer attached to this computer**
- **(Deselect Automatically detect and install my Plug and Play printer if it has been selected.)**

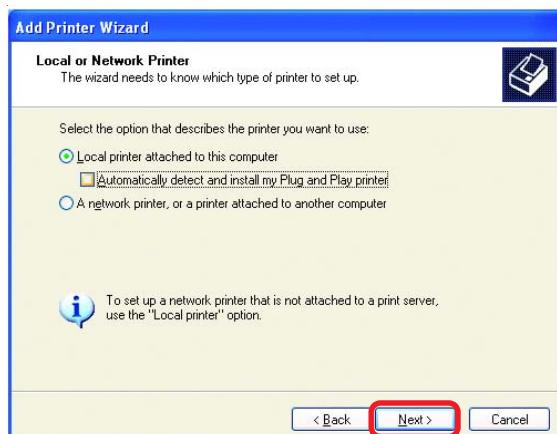

- Click **Next**
- Select **Use the following port:**
- From the pull-down menu **select the correct port** for your printer

*(Most computers use the LPT1: port, as shown in the illustration.)*

- Click **Next**

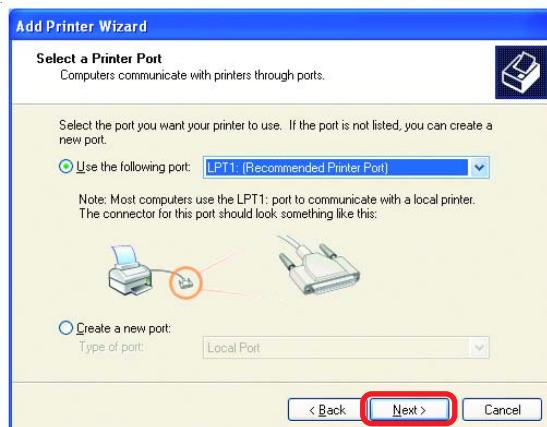

# Networking Basics

## Adding a local printer

- Select and highlight the **correct driver** for your printer.


- Click **Next**

*(If the correct driver is not displayed, insert the CD or floppy disk that came with your printer and click **Have Disk**.)*



- At this screen, you can change the name of the printer (optional.)

- Click **Next**

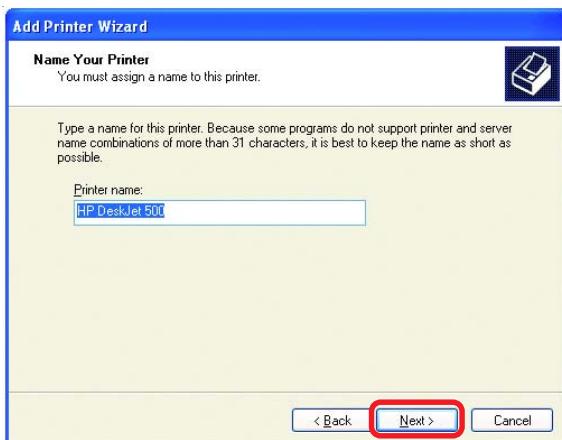

- Select **Yes**, to print a test page. A successful printing will confirm that you have chosen the correct driver.

- Click **Next**



# Networking Basics


## Adding a local printer

This screen gives you information about your printer.



Click **Finish**

When the test page has printed,

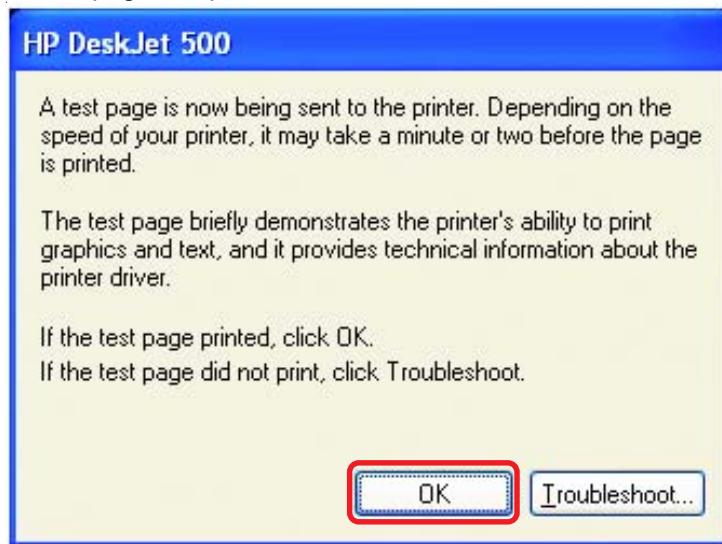


Click **OK**

# Networking Basics

## Adding a local printer

- Go to **Start> Printers and Faxes**

A successful installation will display the printer icon as shown at right.

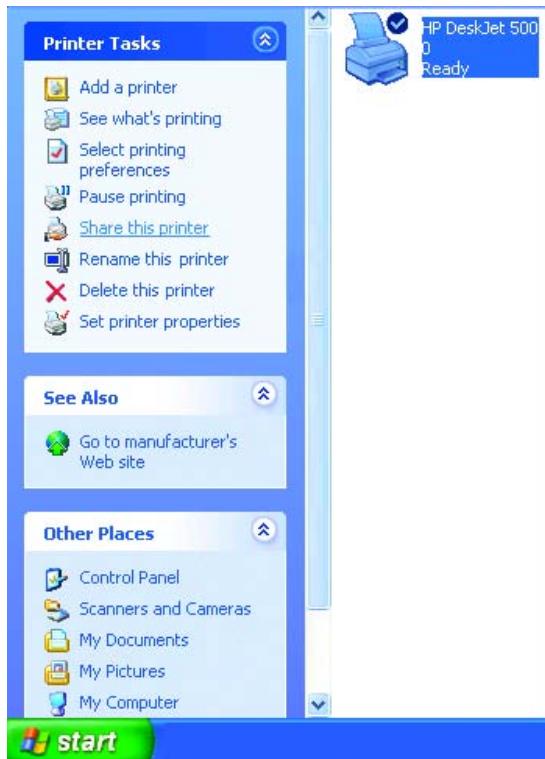

You have successfully added a local printer.

## Sharing a network printer

After you have run the **Network Setup Wizard** on all the computers on your network, you can run the **Add Printer Wizard** on all the computers on your network. Please follow these directions to use the **Add Printer Wizard** to share a printer on your network:

- Go to **Start> Printers and Faxes**



# Networking Basics

## Sharing a network printer

- Click on Add a printer



- Click Next



- Select Network Printer




- Click Next

# Networking Basics

## Sharing a network printer

- Select Browse for a printer

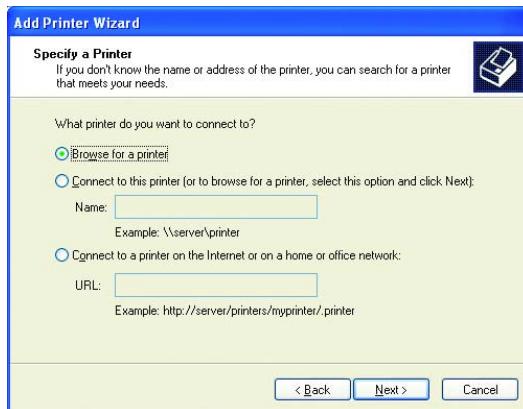

- Click Next

Select the printer you would like to share

- Click Next




- Click Finish



# Networking Basics

## Sharing a network printer

- To check for proper installation:
- Go to **Start > Printers and Faxes**

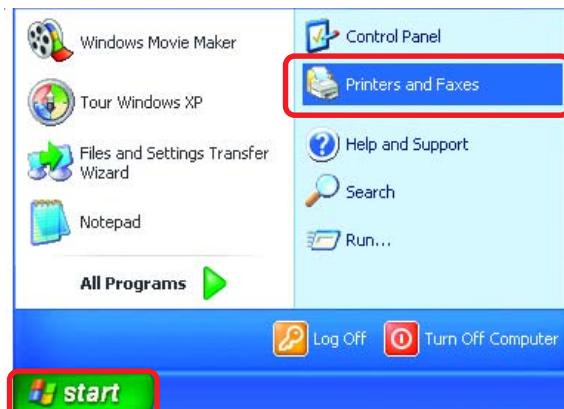


The printer icon will appear at right, indicating proper installation.

You have completed adding the printer.

To share this printer on your network:

- Remember the **printer name**
- Run the **Add Printer Wizard** on all the computers on your network
- Make sure you have already run the **Network Setup Wizard** on all the network computers

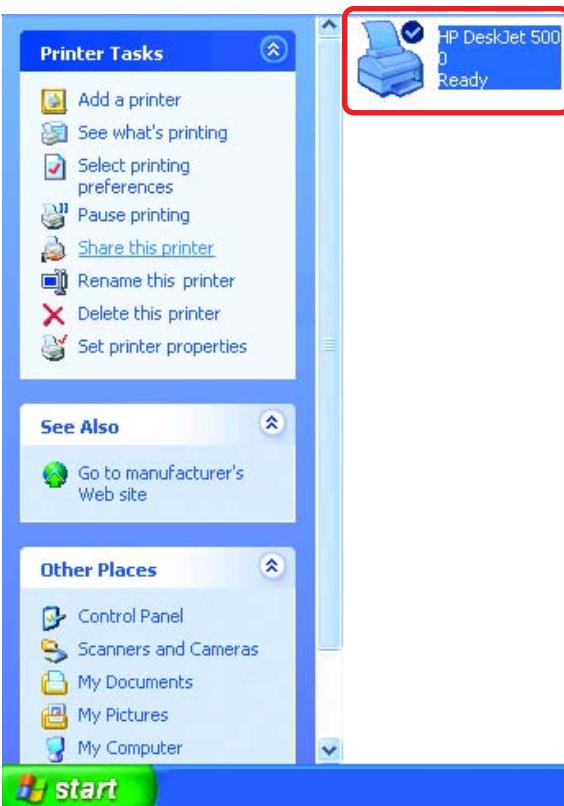

After you run the **Add Printer Wizard** on all the computers in the network, you can share the printer.

## Networking Basics

### Sharing an LPR printer

To share an **LPR printer** (using a print server,) you will need a Print Server such as the **DP-101P+**. Please make sure that you have run the **Network Setup Wizard** on all the computers on your network. To share an **LPR printer**, please follow these directions:


- Go to Start > Printers and Faxes
- Click on Add a Printer

The screen to the right will appear



- Click Next

- Select Local Printer...

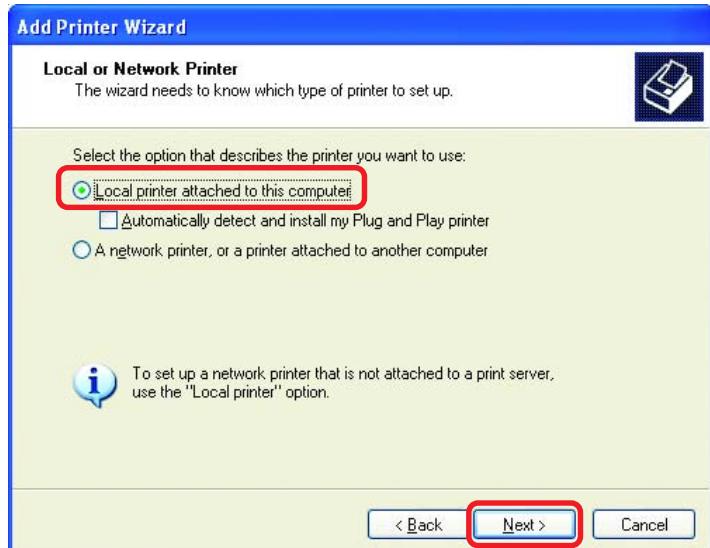


- Click Next

# Networking Basics

## Sharing an LPR printer

- Select **Create a new port**
- From the pull-down menu, select **Standard TCP/IP Port**, as shown.

- Click **Next**

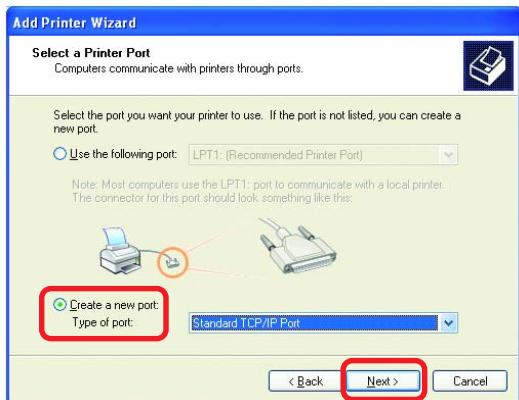


- Please read the instructions on this screen

- Click **Next**



- Enter the **Printer IP Address** and the **Port Name**, as shown.


- Click **Next**

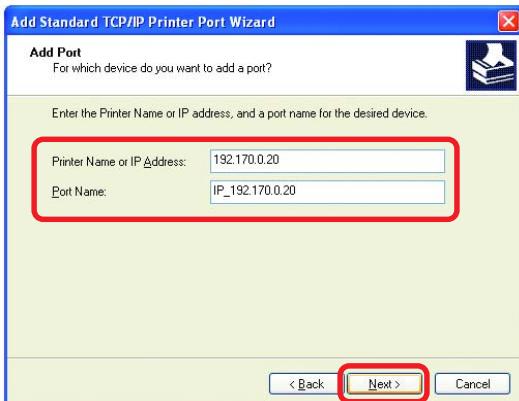

# Networking Basics

## Sharing an LPR printer


- In this screen, select **Custom**

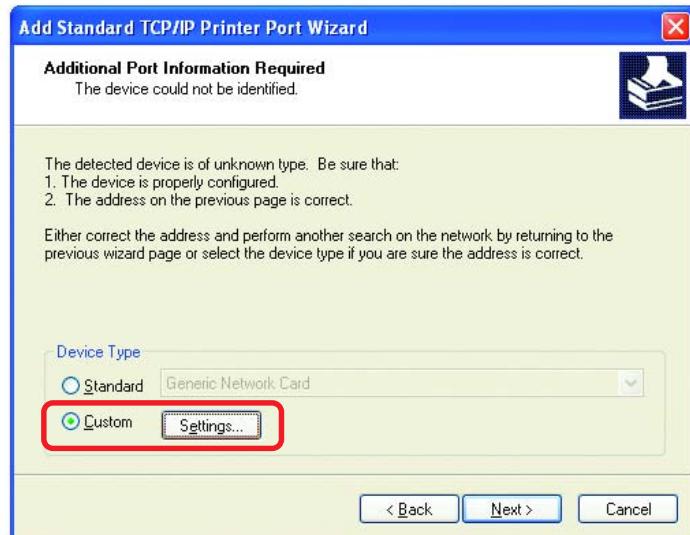

- Click **Settings**

- Enter the **Port Name** and the **Printer Name** or **IP Address**.

- Select **LPR**
- Enter a **Queue Name** (if your Print-Server/Gateway has more than one port, you will need a **Queue name**.)
- Click **OK**

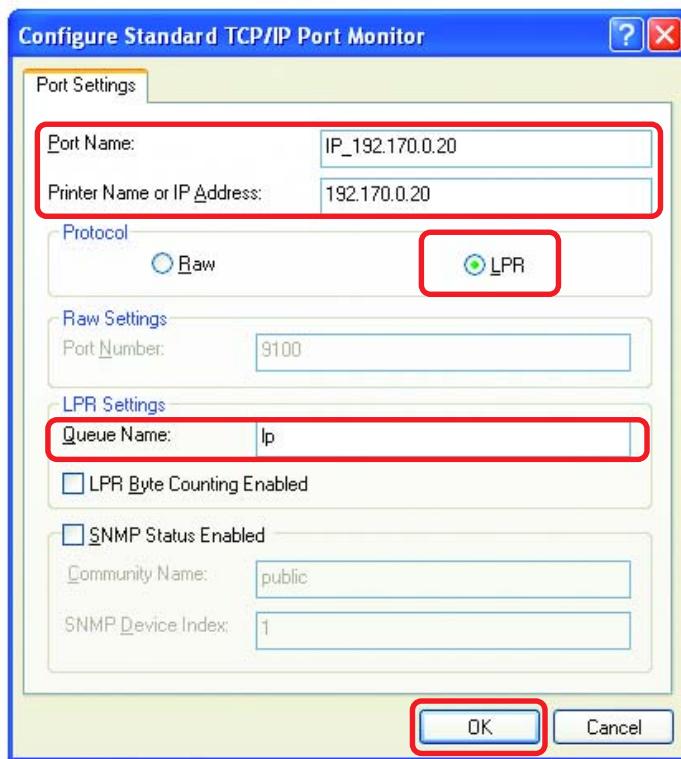

# Networking Basics

## Sharing an LPR printer


- This screen will show you information about your printer.



- Click **Finish**


- Select the **printer** you are adding from the list of **Printers**.
- Insert the printer driver disk that came with your printer.

- Click **Have Disk**

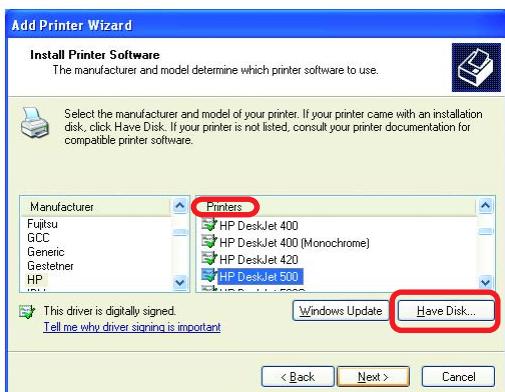

If the printer driver is already installed, do the following:


- Select **Keep existing driver**
- Click **Next**

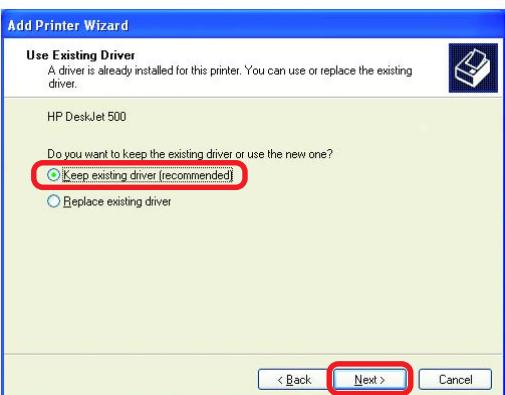

# Networking Basics

## Sharing an LPR printer

- You can rename your printer if you choose. It is optional.
- Please remember the name of your printer. You will need this information when you use the **Add Printer Wizard** on the other computers on your network.
- Click **Next**

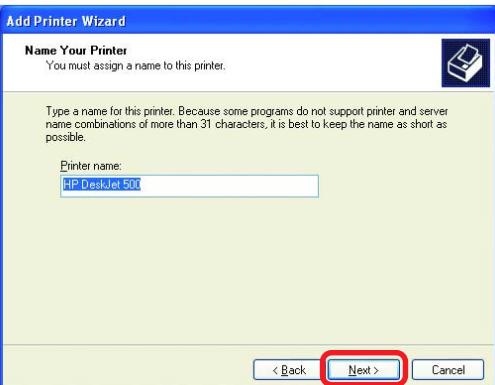


- Select **Yes**, to print a test page.
- Click **Next**



This screen will display information about your printer.

- Click **Finish** to complete the addition of the printer.
- Please run the **Add Printer Wizard** on all the computers on your network in order to share the printer.

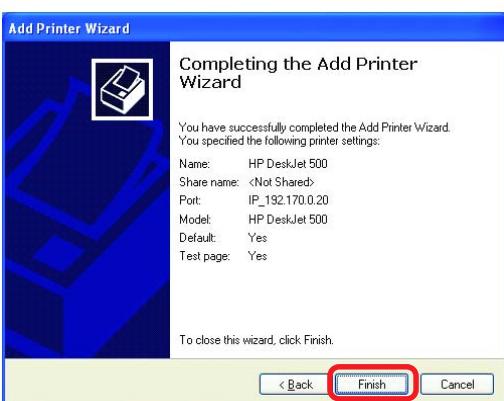

Note: You must run the **Network Setup Wizard** on all the computers on your network before you run the **Add Printer Wizard**.

# Troubleshooting

This Chapter provides solutions to problems that can occur during the installation and operation of the DI-764 Wireless Broadband Router. We cover various aspects of the network setup, including the network adapters. Please read the following if you are having problems.

**Note:** *It is recommended that you use an Ethernet connection to configure the DI-764 Wireless Broadband Router.*

## 1. The computer used to configure the DI-764 cannot access the Configuration menu.

- Check that the **Ethernet LED** on the DI-764 is **ON**. If the **LED** is not **ON**, check that the cable for the Ethernet connection is securely inserted.
- Check that the Ethernet Adapter is working properly. Please see item 3 (**Check that the drivers for the network adapters are installed properly**) in this Troubleshooting section to check that the drivers are loaded properly.
- Check that the **IP Address** is in the same range and subnet as the DI-764. Please see **Checking the IP Address in Windows XP** in the **Networking Basics** section of this manual.

**Note:** *The IP Address of the DI-764 is 192.168.0.1. All the computers on the network must have a unique IP Address in the same range, e.g., 192.168.0.x. Any computers that have identical IP Addresses will not be visible on the network. They must all have the same subnet mask, e.g., 255.255.255.0*

- Do a **Ping test** to make sure that the DI-764 is responding. Go to **Start>Run>Type Command>Type ping 192.168.0.1**. A successful ping will show four replies.

A screenshot of a Windows Command Prompt window titled 'cmd.exe'. The command 'ping 192.168.0.1' is entered, and the output shows four successful replies from the router's IP address. The window has standard Windows window controls (minimize, maximize, close).

```
E:\>ping 192.168.0.1

Pinging 192.168.0.1 with 32 bytes of data:
Reply from 192.168.0.1: bytes=32 time<1ms TTL=128

Ping statistics for 192.168.0.1:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms


E:>
```

**Note:** *If you have changed the default IP Address, make sure to ping the correct IP Address assigned to the DI-764.*

## Troubleshooting

### 2. The wireless client cannot access the Internet in the Infrastructure mode.

Make sure the wireless client is associated and joined with the correct Access Point. To check this connection: Right-click on the Local Area Connection icon in the taskbar > select View Available Wireless Networks. The Connect to Wireless Network screen will appear. Please make sure you have selected the correct available network, as shown in the illustrations below.

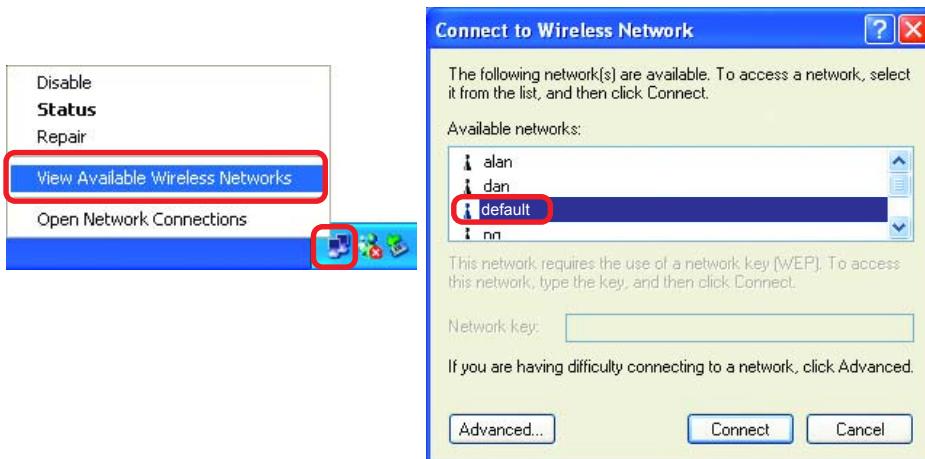


- Check that the **IP Address** assigned to the wireless adapter is within the same **IP Address range** as the access point and gateway. (*Since the DI-764 has an IP Address of 192.168.0.1, wireless adapters must have an IP Address in the same range, e.g., 192.168.0.x. Each device must have a unique IP Address; no two devices may have the same IP Address. The subnet mask must be the same for all the computers on the network.*) To check the **IP Address** assigned to the wireless adapter, double-click on the **Local Area Connection** icon in the taskbar > select the **Support tab** and the **IP Address** will be displayed. (*Please refer to **Checking the IP Address in the Networking Basics** section of this manual.*)
- If it is necessary to assign a **Static IP Address** to the wireless adapter, please refer to the appropriate section in **Networking Basics**. If you are entering a **DNS Server address** you must also enter the **Default Gateway Address**. (*Remember that if you have a DHCP-capable router, you will not need to assign a Static IP Address. See **Networking Basics: Assigning a Static IP Address**.*)

## Troubleshooting


### 3. Check that the drivers for the network adapters are installed properly.

You may be using different network adapters than those illustrated here, but this procedure will remain the same, regardless of the type of network adapters you are using.

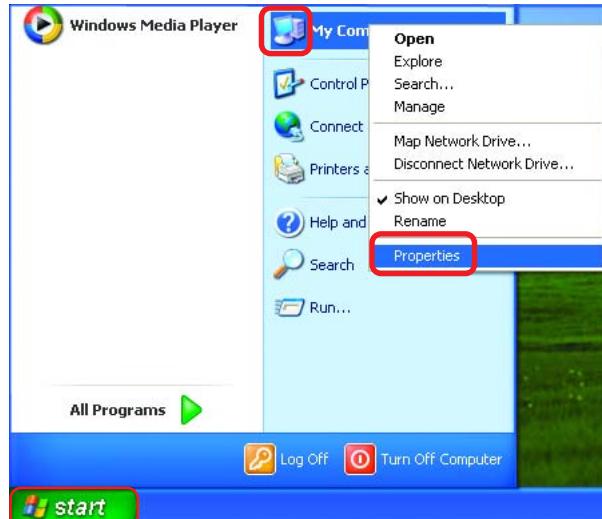



- Select the Hardware Tab

- Click Device Manager

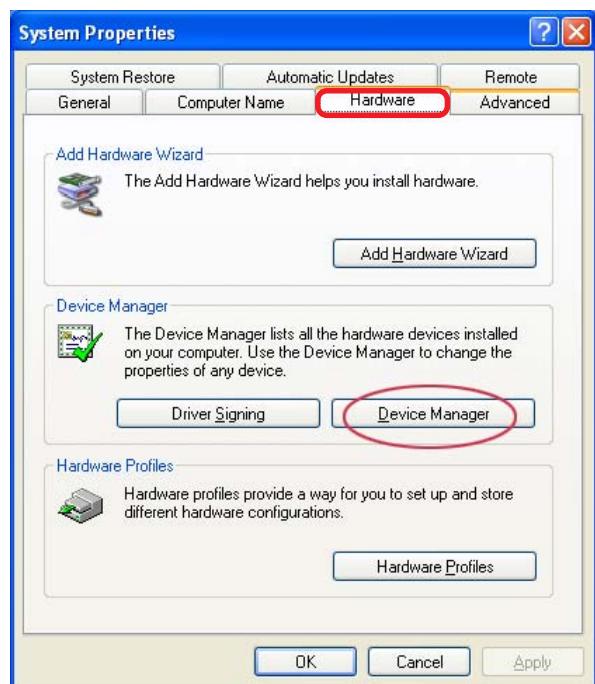

## Troubleshooting

- Double-click on Network Adapters
- Right-click on D-Link AirPro DWL-A650 Wireless Cardbus Adapter
- Select Properties to check that the drivers are installed properly
- Look under Device Status to check that the device is working properly
- Click OK

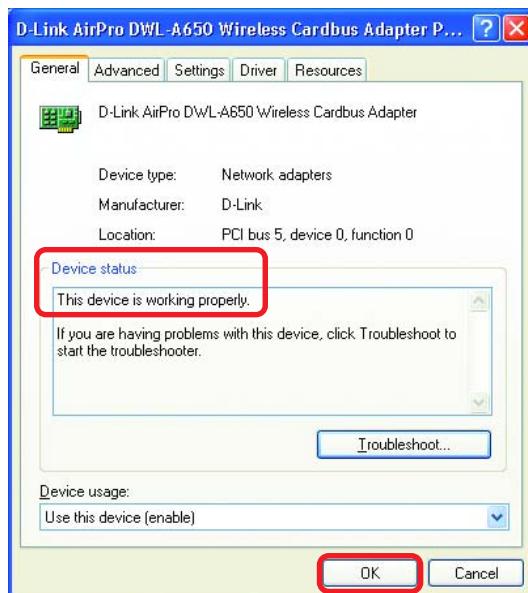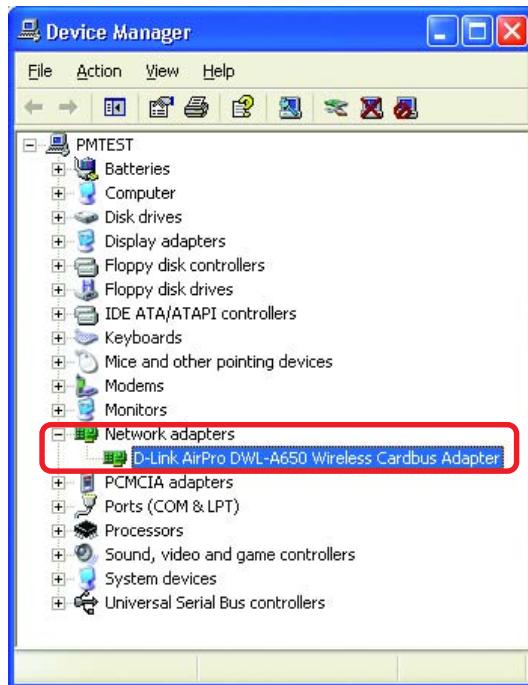

## Troubleshooting

### 4. What variables may cause my wireless products to lose reception?

D-Link products let you access your network from virtually anywhere you want. However, the positioning of the products within your environment will affect the wireless range. Please refer to **Installation Considerations** in the **Wireless Basics** section of this manual for further information about the most advantageous placement of your D-Link wireless products.

### 5. Why does my wireless connection keep dropping?

- Antenna Orientation- Try different antenna orientations for the DI-764. Try to keep the antenna at least 6 inches away from the wall or other objects.
- If you are using 2.4GHz cordless phones, X-10 equipment or other home security systems, ceiling fans, and lights, your wireless connection will degrade dramatically or drop altogether. Try changing the Channel on your Router, Access Point and Wireless adapter to a different Channel to avoid interference.
- Keep your product away (at least 3-6 feet) from electrical devices that generate RF noise, like microwaves, Monitors, electric motors, etc.

### 6. Why can't I get a wireless connection?

To establish a wireless connection, while enabling Encryption on the DI-764, you must also enable encryption on the wireless client.

- For 802.11a, the Encryption settings are: 64, 128 or 152 bit. Make sure that the encryption bit level is the same on the Router and the Wireless Client.
- For 802.11b, the Encryption settings are: 64, 128, or 256 bit. Make sure that the encryption bit level is the same on the Router and the Wireless Client.

Make sure that the SSID on the Router and the Wireless Client are exactly the same. If they are not, wireless connection will not be established. Please note that there are two separate SSIDs for 802.11a and 802.11b. The default SSID for both 802.11a and 802.11b is **default**.

## Troubleshooting

### 7. Resetting the DI-764 to Factory Default Settings

After you have tried other methods for troubleshooting your network, you may choose to **Reset** the DI-764 to the factory default settings.

Remember that D-Link AirPro products network together, out of the box, at the factory default settings.



To hard-reset the D-Link AirPro DI-764 to Factory Default Settings, please do the following:

- Locate the **Reset** button on the back of the DI-764
- Use a paper clip to press the **Reset** button
- Hold for about 10 seconds and then release
- After the DI-764 reboots (this may take a few minutes) it will be reset to the factory **Default** settings

# Technical Specifications

## Standards

- IEEE 802.11b
- IEEE 802.11a
- IEEE 802.3 and IEEE 802.3u
- IEEE 802.3x

## Ports

- (4) 10/100Base-T LAN Ports (auto-MDIX)
- (1) WAN Port
- (1) Power – 5V DC, 3A

## Network Management

- Web-Based Interface

## Network Architecture

- Supports Infrastructure Mode

## Diagnostic LED

- Power
- 100M Link/Act
- 10M Link/Act
- 11a WLAN
- 11b WLAN

## Range

- Indoors – up to 328 feet (100 meters)

## Temperature

- Operating: 0°C to 40°C (32°F to 104°F)
- Storing: -25°C to 60°C (-77°F to 140°F)

**Humidity:**

- 5%-95%, non-condensing

**Emissions:**

- FCC part 15b
- UL1950-3

**Physical Dimensions:**

- L = 9.25 inches
- W = 6.25 inches
- H = 1.50 inches

## 802.11a Specifications

**Data Rates:\***

- 6, 9, 12, 18, 24, 36, 48, 54, 72 Mbps

**Data Security:**

- 64, 128, 152-bit w/dynamic keying
- Access Control List

**Antenna Type:**

- 5dBi dipole antenna with diversity
- Power parameter software configurable

**Available Channels:**

- Eight non-overlapping channels for North America

**Frequency Range:**

- 5.150 – 5.350 GHz

**Modulation Technology:**

- Orthogonal Frequency Division Multiplexing (OFDM)

**Antenna Type:**

- 5dBi dipole antenna with diversity

\*Maximum wireless signal rate based on IEEE Standard 802.11a specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead lower actual data throughput rate.

## 802.11a Specifications (continued)

### **Modulation Techniques:**

- BPSK
- QPSK
- 16 QAM
- 64 QAM

## 802.11b Specifications

### **Data Rates:**

- 1, 2, 5.5, 11, 22 Mbps (with Automatic Fallback)

### **Data Security:**

- 64, 128, 256-bit WEP (Wired Equivalent Privacy) Encryption

### **Available Channels:**

- Eleven channels for North America. Three non-overlapping.

### **Frequency Range:**

- 2.4 – 2.4835 GHz

### **Modulation Technology:**

- Direct Sequence Spread Spectrum (DSSS)
- Packet Binary Convolutional Coding (PBCC)
- 11-chip Barker sequence

### **Modulation Techniques:**

- Barker (1Mbps/0db)
- Barker (2Mbps/0db)
- PBCC (5.5Mbps/1.5db)
- CCK (11Mbps/8.5db)
- PBCC (11Mbps/4.5db)
- PBCC (22Mbps/8.5db)

# Contacting Technical Support

You can find the most recent software and user documentation on the D-Link website.

D-Link provides free technical support for customers within the United States for the duration of the warranty period on this product.

U.S. customers can contact D-Link technical support through our web site, or by phone.

## **D-Link Technical Support over the Telephone:**

(877) 453-5465

24 hours a day, seven days a week.

## **D-Link Technical Support over the Internet:**

<http://support.dlink.com>

*When contacting technical support, please provide the following information:*

- *Serial number of the unit*
- *Model number or product name*
- *Software type and version number*

# Warranty and Registration

Subject to the terms and conditions set forth herein, D-Link Systems, Inc. ("D-Link") provides this Limited warranty for its product only to the person or entity that originally purchased the product from:

- D-Link or its authorized reseller or distributor and
- Products purchased and delivered within the fifty states of the United States, the District of Columbia, U.S. Possessions or Protectorates, U.S. Military Installations, addresses with an APO or FPO.

**Limited Warranty:** D-Link warrants that the hardware portion of the D-Link products described below will be free from material defects in workmanship and materials from the date of original retail purchase of the product, for the period set forth below applicable to the product type ("Warranty Period"), except as otherwise stated herein.

3-Year Limited Warranty for the Product(s) is defined as follows:

- Hardware (excluding power supplies and fans) Three (3) Years
- Power Supplies and Fans One (1) Year
- Spare parts and spare kits Ninety (90) days

D-Link's sole obligation shall be to repair or replace the defective Hardware during the Warranty Period at no charge to the original owner or to refund at D-Link's sole discretion. Such repair or replacement will be rendered by D-Link at an Authorized D-Link Service Office. The replacement Hardware need not be new or have an identical make, model or part. D-Link may in its sole discretion replace the defective Hardware (or any part thereof) with any reconditioned product that D-Link reasonably determines is substantially equivalent (or superior) in all material respects to the defective Hardware. Repaired or replacement Hardware will be warranted for the remainder of the original Warranty Period from the date of original retail purchase. If a material defect is incapable of correction, or if D-Link determines in its sole discretion that it is not practical to repair or replace the defective Hardware, the price paid by the original purchaser for the defective Hardware will be refunded by D-Link upon return to D-Link of the defective Hardware. All Hardware (or part thereof) that is replaced by D-Link, or for which the purchase price is refunded, shall become the property of D-Link upon replacement or refund.

**Limited Software Warranty:** D-Link warrants that the software portion of the product ("Software") will substantially conform to D-Link's then current functional specifications for the Software, as set forth in the applicable documentation, from the date of original retail purchase of the Software for a period of ninety (90) days ("Warranty Period"), provided that the Software is properly installed on approved hardware and operated as contemplated in its documentation. D-Link further warrants that, during the Warranty Period, the magnetic media on which D-Link delivers the Software will be free of physical defects. D-Link's sole obligation shall be to replace the non-conforming Software (or defective media) with software that substantially conforms to D-Link's functional specifications for the Software or to refund at D-Link's sole discretion. Except as otherwise agreed by D-Link in writing, the replacement Software is provided only to the original licensee, and is subject to the terms and conditions of the license granted by D-Link for the Software. Software will be warranted for the remainder of the original Warranty Period from the date of original retail purchase. If a material non-conformance is incapable of correction, or if D-Link determines in its sole discretion that it is not practical to replace the non-conforming Software, the price paid by the original licensee for the non-conforming Software will be refunded by D-Link; provided that the non-conforming Software (and all copies thereof) is first returned to D-Link. The license granted respecting any Software for which a refund is given automatically terminates.

**Non-Applicability of Warranty:** The Limited Warranty provided hereunder for hardware and software of D-Link's products will not be applied to and does not cover any refurbished product and any product purchased through the inventory clearance or liquidation sale or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product and in that case, the product is being sold "As-Is" without any warranty whatsoever including, without limitation, the Limited Warranty as described herein, notwithstanding anything stated herein to the contrary.

**Submitting A Claim:** The customer shall return the product to the original purchase point based on its return policy. In case the return policy period has expired and the product is within warranty, the customer shall submit a claim to D-Link as outlined below:

- The customer must submit with the product as part of the claim a written description of the Hardware defect or Software nonconformance in sufficient detail to allow D-Link to confirm the same.

- The original product owner must obtain a Return Material Authorization ("RMA") number from the Authorized D-Link Service Office and, if requested, provide written proof of purchase of the product (such as a copy of the dated purchase invoice for the product) before the warranty service is provided.
- After an RMA number is issued, the defective product must be packaged securely in the original or other suitable shipping package to ensure that it will not be damaged in transit, and the RMA number must be prominently marked on the outside of the package. Do not include any manuals or accessories in the shipping package. D-Link will only replace the defective portion of the Product and will not ship back any accessories.
- The customer is responsible for all in-bound shipping charges to D-Link. No Cash on Delivery ("COD") is allowed. Products sent COD will either be rejected by D-Link or become the property of D-Link. Products shall be fully insured by the customer and shipped to **D-Link Systems, Inc., 53 Discovery Drive, Irvine, CA 92618**. D-Link will not be held responsible for any packages that are lost in transit to D-Link. The repaired or replaced packages will be shipped to the customer via UPS Ground or any common carrier selected by D-Link, with shipping charges prepaid. Expedited shipping is available if shipping charges are prepaid by the customer and upon request.

D-Link may reject or return any product that is not packaged and shipped in strict compliance with the foregoing requirements, or for which an RMA number is not visible from the outside of the package. The product owner agrees to pay D-Link's reasonable handling and return shipping charges for any product that is not packaged and shipped in accordance with the foregoing requirements, or that is determined by D-Link not to be defective or non-conforming.

**What Is Not Covered:** This limited warranty provided by D-Link does not cover: Products, if in D-Link's judgment, have been subjected to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, repair or service in any way that is not contemplated in the documentation for the product, or if the model or serial number has been altered, tampered with, defaced or removed; Initial installation, installation and removal of the product for repair, and shipping costs; Operational adjustments covered in the operating manual for the product, and normal maintenance; Damage that occurs in shipment, due to act of God, failures due to power surge, and cosmetic damage; Any hardware, software, firmware or other products or services provided by anyone other than D-Link; Products that have been purchased from inventory clearance or liquidation sales or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product. Repair by anyone other than D-Link or an Authorized D-Link Service Office will void this Warranty.

**Disclaimer of Other Warranties:** EXCEPT FOR THE LIMITED WARRANTY SPECIFIED HEREIN, THE PRODUCT IS PROVIDED "AS-IS" WITHOUT ANY WARRANTY OF ANY KIND WHATSOEVER INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT. IF ANY IMPLIED WARRANTY CANNOT BE DISCLAIMED IN ANY TERRITORY WHERE A PRODUCT IS SOLD, THE DURATION OF SUCH IMPLIED WARRANTY SHALL BE LIMITED TO NINETY (90) DAYS. EXCEPT AS EXPRESSLY COVERED UNDER THE LIMITED WARRANTY PROVIDED HEREIN, THE ENTIRE RISKS AS TO THE QUALITY, SELECTION AND PERFORMANCE OF THE PRODUCT IS WITH THE PURCHASER OF THE PRODUCT.

**Limitation of Liability:** TO THE MAXIMUM EXTENT PERMITTED BY LAW, D-LINK IS NOT LIABLE UNDER ANY CONTRACT, NEGLIGENCE, STRICT LIABILITY OR OTHER LEGAL OR EQUITABLE THEORY FOR ANY LOSS OF USE OF THE PRODUCT, INCONVENIENCE OR DAMAGES OF ANY CHARACTER, WHETHER DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF GOODWILL, LOSS OF REVENUE OR PROFIT, WORK STOPPAGE, COMPUTER FAILURE OR MALFUNCTION, FAILURE OF OTHER EQUIPMENT OR COMPUTER PROGRAMS TO WHICH D-LINK'S PRODUCT IS CONNECTED WITH, LOSS OF INFORMATION OR DATA CONTAINED IN, STORED ON, OR INTEGRATED WITH ANY PRODUCT RETURNED TO D-LINK FOR WARRANTY SERVICE) RESULTING FROM THE USE OF THE PRODUCT, RELATING TO WARRANTY SERVICE, OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY, EVEN IF D-LINK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE SOLE REMEDY FOR A BREACH OF THE FOREGOING LIMITED WARRANTY IS REPAIR, REPLACEMENT OR REFUND OF THE DEFECTIVE OR NON-COMFORMING PRODUCT. THE MAXIMUM LIABILITY OF D-LINK UNDER THIS WARRANTY IS LIMITED TO THE PURCHASE PRICE OF THE PRODUCT COVERED BY THE WARRANTY. THE FOREGOING EXPRESS WRITTEN WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ANY OTHER WARRANTIES OR REMEDIES, EXPRESS, IMPLIED OR STATUTORY.

**Governing Law:** This Limited Warranty shall be governed by the laws of the State of California. Some states do not allow exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the foregoing limitations and exclusions may not apply. This limited warranty provides specific legal rights and the product owner may also have other rights which vary from state to state.

**Trademarks:** D-Link is a registered trademark of D-Link Systems, Inc. Other trademarks or registered trademarks are the property of their respective manufacturers or owners.

**Copyright Statement:** No part of this publication or documentation accompanying this Product may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from D-Link Corporation/D-Link Systems, Inc., as stipulated by the United States Copyright Act of 1976. Contents are subject to change without prior notice. Copyright® 2002 by D-Link Corporation/D-Link Systems, Inc. All rights reserved.

**CE Mark Warning:** This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

**FCC Statement:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

The Manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment; such modifications could void the user's authority to operate the equipment.

(1) The devices are restricted to indoor operations within the 5.15 to 5.25GHz range. (2) For this device to operate in the 5.15 to 5.25GHz range, the devices must use integral antennas.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**IMPORTANT NOTE:**

**FCC Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The antenna(s) used for this equipment must be installed to provide a separation distance of at least eight inches (20 cm) from all persons.

This transmitter must not be operated in conjunction with any other antenna.

Register online your D-Link product at <http://support.dlink.com/register/>