

PEPWAVE

User Manual

Pepwave Surf Indoor Series:

Surf mini

Surf On-The-Go

Surf 400

Pepwave Surf DX Series:

400-DX

Document Rev. 9.0.33

May 11

COPYRIGHT & TRADEMARKS

Specifications are subject to change without notice. Copyright © 2011 Pepwave Ltd. All Rights Reserved. Pepwave and the Pepwave logo are trademarks of Pepwave Ltd. Other brands or products mentioned may be trademarks or registered trademarks of their respective owners.

Table of Contents

1	COPYRIGHT	3
2	DISCLAIMER.....	3
3	PRODUCT DESCRIPTION.....	4
3.1	PRODUCT FEATURES.....	4
3.2	HARDWARE SETUP	5
3.3	LED DESCRIPTION	6
4	USING THE PEPWAVE DEVICES.....	9
4.1	PRE-CONFIGURING PC SETUP	9
4.2	FIRST TIME SETUP	10
5	CPE SETTINGS DETAILS	14
5.1	IP SETTINGS	14
5.2	RADIO SETTINGS.....	15
5.3	WIRELESS SETTINGS.....	16
5.4	ROAMING SETTINGS:	18
5.5	WIRELESS IP SETTINGS.....	19
5.6	RESTORE AND REBOOT	20
5.7	INTEGRATED WI-FI ACCESS POINT CONFIGURATION	21
6	PORT FORWARDING.....	24
7	QOS	26
8	FIRMWARE UPGRADE	27
9	DEBUG AND SYSTEM INFORMATION	28
10	RESTORE TO DEFAULT SETTINGS.....	30
10.1	SURF INDOOR SERIES	30
10.2	SURF DX SERIES	30
APPENDIX	31

1 Copyright

Copyright © 2011 by Pepwave Ltd.

The content of this documentation may not be reproduced in any part or as a whole without the prior written permission of Pepwave Ltd.

2 Disclaimer

Pepwave does not assume any liability arising out of the application or use of any products, or software described herein. Neither does it convey any license under its patent right nor the patent rights of others. Pepwave further reserves the right to make changes in any products described herein without notice. This documentation is subject to change without notice.

3 Product Description

3.1 Product Features

- Signal strength LED for showing the current signal strength
- Always-on, integrated Wi-Fi access point
- WPA/WPA2-Personal and WPA/WPA2-Enterprise security support
- Wi-Fi Multimedia (WMM) support
- Built-in DHCP server and NAT routing to manage client devices
- Customizable, built-in web portal for simple web-based configuration



Surf mini /
Surf On-The-Go



Surf 400



Surf 400-DX

User Manual

Pepwave PolePoint Series

3.2 Hardware Setup

3.2.1 Surf mini / Surf On-The-Go Series



1. Attach the provided antenna to the right most antenna connector
2. Connect the LAN port to the computer's Ethernet port with an Ethernet cable.
3. Connect the end of the included power adapter to the power socket on Pepwave Surf mini.
4. Power on the power adaptor.

3.2.2 Surf 400 Series




1. Attach the provided antenna to the left most antenna connector
2. Connect the LAN port to the computer's Ethernet port with an Ethernet cable.
3. Connect the end of the included power adapter to the power socket (labeled "DC 12V") on Pepwave Surf.
4. Power on the power adaptor.

3.2.3 Surf DX Series

Please follow the installation guide to set up the Pepwave Surf 400-DX.

3.3 LED Description

3.3.1 Surf mini / Surf On-The-Go Series

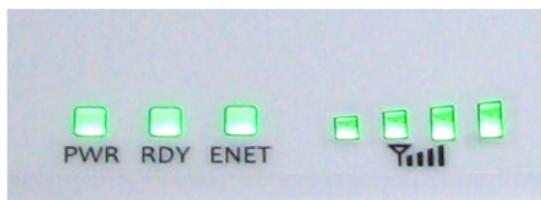

LED	Color	Status	Description
PWR	Green	On	Power is on
		Off	Power is off
RDY	Green	On	Device is booted
		Off	Device is not booted
ENET	Green	On	Ethernet is connected
		Blinking	Sending/Receiving data
		Off	Ethernet is not connected
	Green	On	Associated with an access point
		Back-and-forth	Searching access point
		Blinking	Acquiring IP address
		Off	Not associated with any access point
		Number of LED	The number of lit signal bars depends on the strength of the received signal. A larger number of lit signal bars indicate stronger signals.

User Manual

Pepwave PolePoint Series

3.3.2 Surf 400 Series



LED	Color	Status	Description
Power	Green	On	Power is on
		Off	Power is off
Status	Green	Solid	Received signal is Excellent, Very Good and Good
	Green	Blinking	Received signal is Low
	Amber	Blinking	Received signal is Very Low
	Amber	Solid	No wireless signal is detected
		Off	Booting up / Upgrading firmware
LAN	Green	On	Ethernet is connected
	Green	Blinking	Sending/Receiving data
		Off	Ethernet is not connected
Wi-Fi	Green	On	Associated with an access point
	Green	Blinking	Sending/Receiving data
		Off	Not associated with any access point
Signal Bars	Green	N/A	The number of lit signal bars depends on the strength of the received signal. A larger number of lit signal bars indicate stronger signals.

User Manual

Pepwave PolePoint Series

3.3.3 Surf DX Series




LED	Color	Status	Description
PWR	Green	On	Power is on
		Off	Power is off
LAN	Green	On	Ethernet is connected
		Off	Ethernet is not connected
Wi-Fi	Green	On	Associated with an access point. The number of LED lights from “MIN” to “MAX” indicates the received signal strength level.
		Off	Not associated with any access point

4 Using the Pepwave Devices

4.1 Pre-configuring PC Setup

You should set up your computer's LAN interface to **obtain an IP address automatically**.

In order to do so, select the **Start menu > Control Panel > Network Connections**. Right click on the **Local Area Connection** icon, choose **Properties**, and double-click on the item **Internet Protocol (TCP/IP)** from the list. On the screen, just set it as follows:

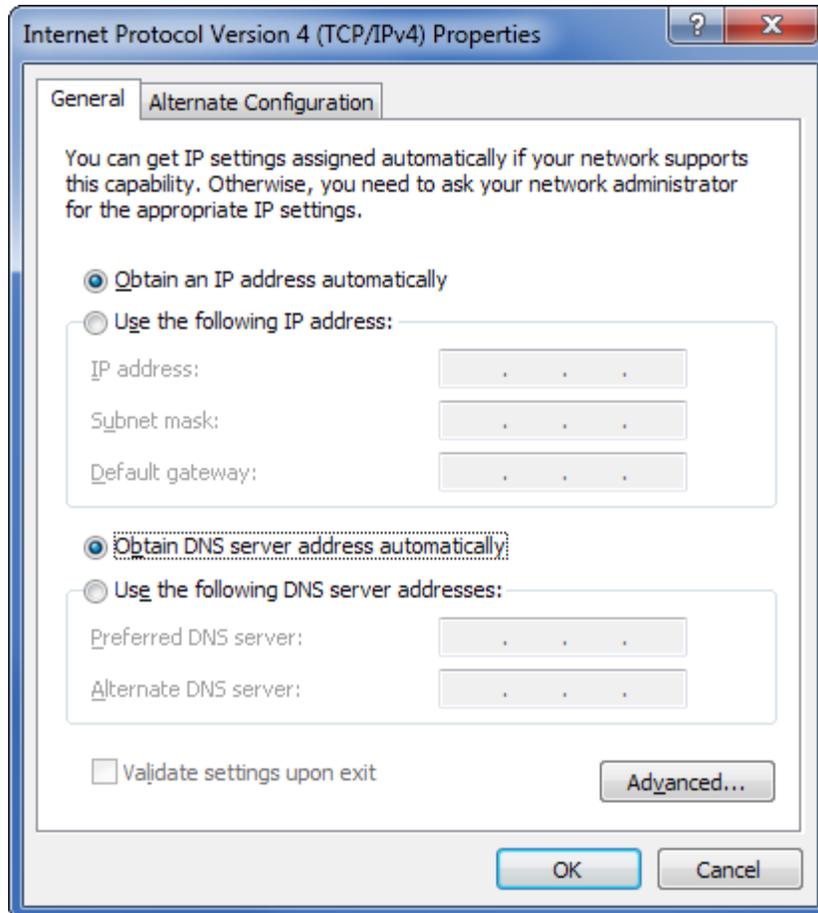

Click the **OK** button to confirm the change.

4.2 First Time Setup

On your PC, start a web browser, e.g. Internet Explorer, Mozilla Firefox, etc. Visit an Internet web site. If you are not associated to an access point, you should be redirected to a logon page. Or you can go to the following URL:

http://192.168.20.1/

The page will look like this.



Illustration 1: Welcome Page

User Manual

Pepwave PolePoint Series

Click the **Advanced Config** button to enter the parameters of the access point to associate to. You should see this screen:

[Connect](#) | [CPE Setup](#) | [Port Forward](#) | [QoS](#) | [Firmware Upgrade](#) | [Debug](#)

	IP Address	<input type="text" value="192.168.20.1"/>	
	Subnet Mask	<input type="text" value="255.255.255.0"/>	
DHCP Server	<input checked="" type="radio"/> Enable		
	Start IP Address	<input type="text" value="192.168.20.10"/>	
	Stop IP Address	<input type="text" value="192.168.20.250"/>	
	Subnet mask	<input type="text" value="255.255.255.0"/>	
	DHCP Reservations	Config	
<input type="radio"/> Disable			
Radio Settings	Radio Mode	<input type="text" value="802.11ng"/> ▾	
	Channel Width	<input type="text" value="20/40 MHz"/> ▾	
	Country	<input type="text" value="United States"/> ▾	
	Channel Scanning Mode	<input type="text" value="Full"/> ▾	
	Bit Rate	<input type="text" value="auto"/> ▾ (auto)	
WAN Mode	<input checked="" type="radio"/> Wireless		
	<input type="radio"/> Wired		
Wireless Settings	SSID	<input type="text" value="MySSID"/> (MySSID) Refresh	
	Connect to Any Open Mode AP	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	
	Passive Scan	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	
	Authentication	<input type="text" value="Open"/> ▾ (open)	
	Encryption Key	None	
	Custom MAC	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	
	Custom MAC Address	<input type="text" value=" : : : : : 0"/>	
	Allow Repeater AP Connection	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	
	Preferred AP	MAC	<input type="text"/> (e.g. 00116E1014A0)
		Min Signal Strength	<input type="text"/> dBm (e.g. -75)

The screenshot shows the configuration page for a Pepwave Surf device. It is organized into several sections:

- Roaming Settings:** Includes radio buttons for 'Disable' (selected) and 'Enable'. Below are input fields for 'Background Scanning Interval' (24) and 'Roaming Threshold (Signal Level Gain)' (10).
- IP Settings:** Includes radio buttons for 'Configure Manually' (selected), 'Obtain an IP Address using DHCP', and 'Obtain an IP Address using PPPOE'.
- AP Settings:** Includes radio buttons for 'Keep AP' (Enable/Disable), 'AP Transmit Power Adjustment' (Max), 'Broadcast SSID' (Enable/Disable), 'Client Isolation' (Enable/Disable), 'Configure Manually', 'Configure Automatically', and 'Disable' (selected). A field for 'Repeater AP SSID' is set to 'MySSID'.
- WAI Redirection:** Includes radio buttons for 'Enable' (selected) and 'Disable'. A note states: '(Note: you need to reboot CPE for this change to take effect)'. There is also a 'Disable' radio button.
- Web Password Protection:** Includes radio buttons for 'Enable' and 'Disable' (selected). A 'Password' field contains '*****' with '(admin)' next to it. A note states: '(Note: login name is "root")' and there are links for 'Hide / Show Password'.
- Restore Factory Settings:** Contains a 'Restore & Reboot' button.
- Reboot CPE:** Contains a 'Reboot' button.

A 'Save' button is located at the bottom right of the form.

Illustration 2: Pepwave Surf Setup Page

In the field **SSID** under **Wireless** Settings, input the access point's SSID (sometimes it is called the "network name"). According to the setting of the Access Point you are associating to, you may choose a different **Authentication** setting.

If **Static WEP key** or **WPA/WPA2-Personal** is selected for **Authentication**, input the Encryption Key field as well. (There are also options of **802.1x with dynamic WEP key** and **WPA/WPA2-Personal/Enterprise**. You do not need to use these settings unless instructed to do so by your ISP.)

Click the **Save** button at the bottom to complete.

You can now click the **Connect** link on the top bar and then click the **Connect** button to associate with the access point.

User Manual

Pepwave PolePoint Series

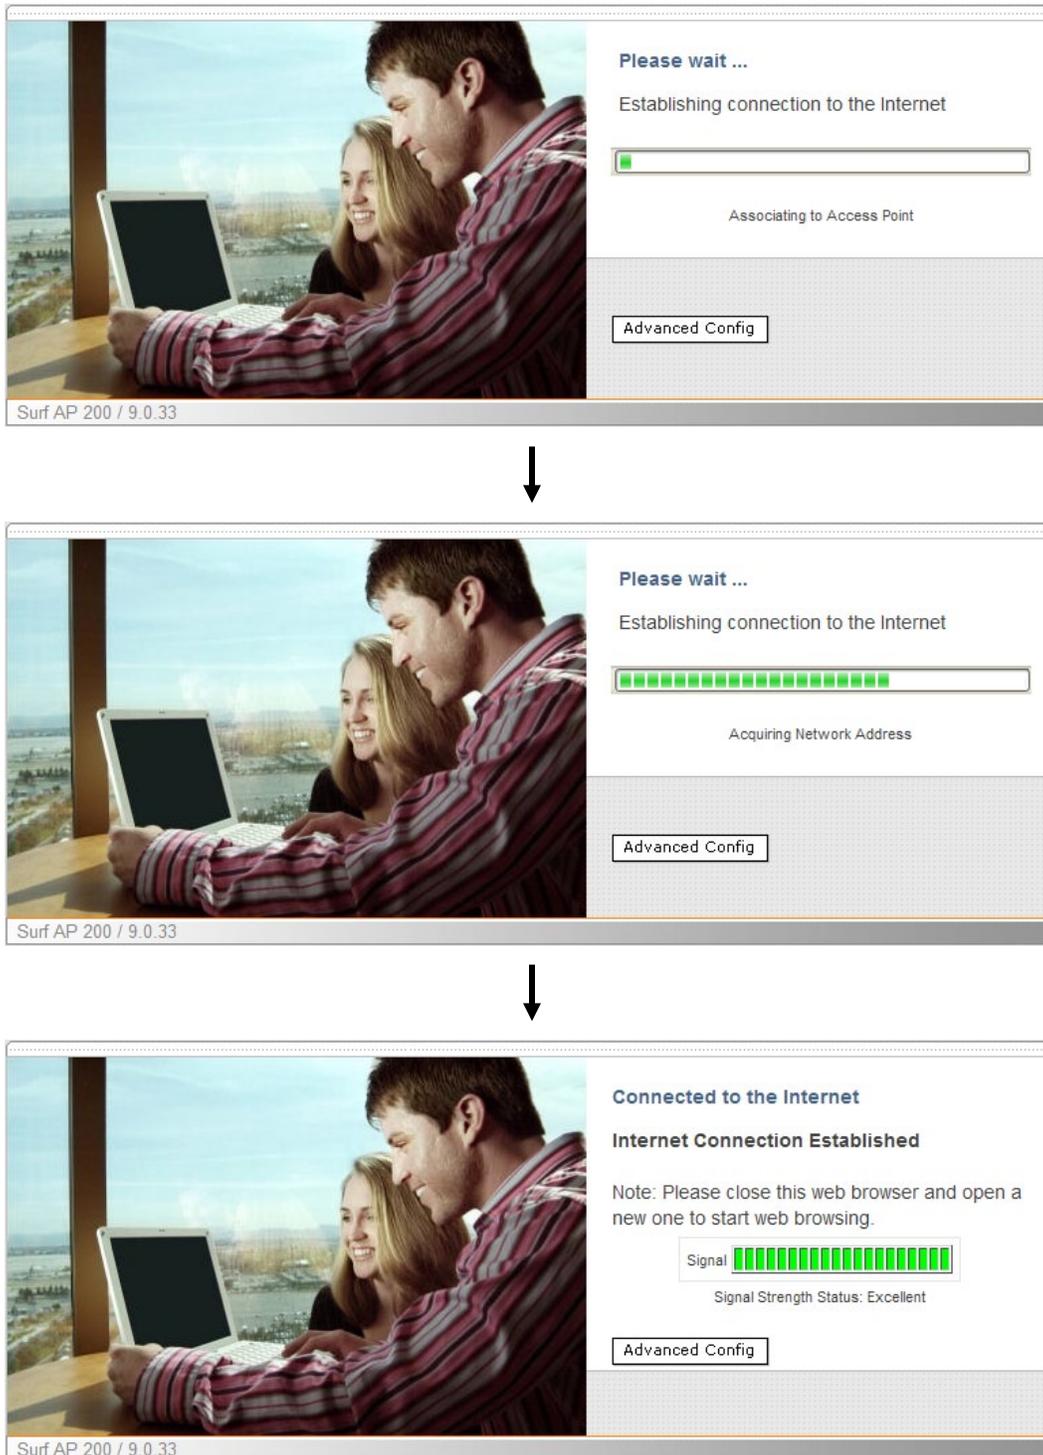


Illustration 3: Establishing Connection to the Internet

At this point, you are associated with the access point. You may now close the web browser and open a new one to start web browsing.

5 CPE Settings Details

5.1 IP Settings

LAN Interface	IP Address	<input type="text" value="192.168.20.1"/>
	Subnet Mask	<input type="text" value="255.255.255.0"/>
DHCP Server	<input checked="" type="radio"/> Enable	
	Start IP Address	<input type="text" value="192.168.20.10"/>
	Stop IP Address	<input type="text" value="192.168.20.250"/>
	Subnet mask	<input type="text" value="255.255.255.0"/>
	DHCP Reservations	Config
	<input type="radio"/> Disable	

Illustration 4: IP Settings

MAC Address	Host Name	IP Address	
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="button" value="Del"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="button" value="Del"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="button" value="Del"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="button" value="Del"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="button" value="Del"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="button" value="Del"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="button" value="Del"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="button" value="Del"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="button" value="Del"/>
<input type="button" value="Save"/>			

Illustration 5: DHCP Reservations

IP Settings	
LAN Interface	To configure the LAN interface's IP address and subnet mask.
DHCP Server	To configure and enable the built-in DHCP server or not. If enabled, the IP address range can be configured. Configure DHCP Reservation if there is a need to assign a specific IP address to a specific MAC address using DHCP.

5.2 Radio Settings

Radio Settings	Radio Mode	802.11ng
	Channel Width	20/40 MHz
	Country	United States
	Channel Scanning Mode	Single
	Scanned Channel	1
	Bit Rate	auto (auto)

Illustration 6: Radio Settings

Radio Settings	
Radio Mode	It allows the user to choose between radio modulations support: 802.11na, 802.11ng, 802.11b/g , 802.11b only, etc. The available settings depend on the Wi-Fi module installed on the device.
Channel Width	This option will only be available if you have selected 802.11na or 802.11ng in the previous field. There are two options can be chosen: 20MHz , 20/40MHz
Country	Select a country location where you are using the device. Available channels and output power would be adjusted accordingly. Note: The country code selection is for non-US model only and is not available to all US model. Per FCC regulation, all WiFi product marketed in US must fixed to US operation channels only.
Channel Scanning Mode	To select different channels that preferred to scan. If Single is selected, the option Scanned Channel would be shown.
Bit Rate	Available options depend on the Radio Mode chosen. If auto is chosen, the device will choose the best bit rate dynamically and automatically.

5.3 Wireless Settings

WAN Mode	<input checked="" type="radio"/> Wireless	
	<input type="radio"/> Wired	
Wireless Settings	SSID	SSID <input type="text"/> (MySSID) Refresh
	Connect to Any Open Mode AP	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
	Passive Scan	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
	Authentication	WPA/WPA2-Personal <input type="text"/> (open)
	Encryption Key	***** (emptykey) (at least 8 characters) Hide / Show Encryption Key
	Custom MAC	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
	Custom MAC Address	<input type="text"/> : <input type="text"/> 0
	Allow Repeater AP Connection	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Preferred AP	MAC <input type="text"/> (e.g. 00116E1014A0) Min Signal Strength <input type="text"/> dBm (e.g. -75)	

Illustration 7: Wireless Settings

Wireless Settings	
WAN Mode	This option specifies your Internet connection source. Select Wireless if you are using the device as a Wi-Fi receiver. Select Wired if you are using the device as a standard Access Point.
SSID	To configure the Network Name of the wireless network to associate with.
Connect to Any Open Mode AP	Select Enable and the device will connect to any AP which is in Open mode.
Passive Scan	Select Enable and the wireless WAN will only do passive scan.
Authentication	Available options are Open , Static WEP Key , 802.1x with dynamic WEP key , WPA/WPA2-Enterprise and WPA/WPA2-Personal . The selection should be according to the setting of the access point you are associating to. Data transferred are encrypted under all modes except in Open mode. When Static WEP Key or WPA/WPA2-Personal is chosen, you should enter an encryption key in the Encryption Key field. You do not need to use 802.1x and WPA/WPA2-Enterprise unless instructed to do so by your ISP.
Custom MAC	Select Enable to customize the MAC address.
Custom MAC Address	With the above option enabled, users are allowed to customize the MAC address of the SSID.

User Manual

Pepwave PolePoint Series

Allow Repeater AP Connection	Select Enable to allow the connection from a repeater AP.
Preferred AP	The MAC address of a preferred access point can be entered here. When the preferred access point is found and its signal strength is higher than the Min Signal Strength, it will connect to this preferred access point, no matter the other access points are found even they have higher signal strength or the same SSID.

5.4 Roaming Settings:

Roaming Settings	<input checked="" type="radio"/>	Disable	
	<input type="radio"/>	Enable	
		Background Scanning Interval	24 Hours (24)
		Roaming Threshold (Signal Level Gain)	10 dBm (10)

Illustration 8: Roaming Settings

Roaming Settings	
Roaming Settings	To configure and enable roaming among APs with the same SSID and authentication method.
Background Scanning Interval	The time interval between background scans.
Roaming Threshold (Signal Level Gain)	If there is another AP with a signal level greater than the signal level of connected AP by the specified value, it will reconnect to the AP with better signal.

5.5 Wireless IP Settings

IP Settings	<input type="radio"/> Configure Manually	
	<input checked="" type="radio"/> Obtain an IP Address using DHCP	
	<input type="radio"/> Obtain an IP Address using PPPOE	
AP Settings	Keep AP	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
	AP Transmit Power Adjustment	Max (Max)
	Broadcast SSID	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
	Client Isolation	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
	<input type="radio"/> Configure Manually	
	<input type="radio"/> Configure Automatically	Repeater AP SSID: SSID
	<input checked="" type="radio"/> Disable	

Illustration 9: Wireless IP Settings

Wireless IP Settings

The IP address can be obtained automatically or **configured manually**. If you choose to manually configure the IP address for your unit, enter the fields IP Address, Subnet Mask, Default Gateway, Preferred DNS Server and Alternate DNS Server.

<input checked="" type="radio"/> Configure Manually	
IP Address	<input type="text" value="0.0.0.0"/>
Subnet Mask	<input type="text" value="0.0.0.0"/>
Default Gateway	<input type="text" value="0.0.0.0"/>
Preferred DNS Server	<input type="text" value="0.0.0.0"/>
Alternate DNS Server	<input type="text" value="0.0.0.0"/>

IP Settings Select **Obtain an IP Address using DHCP** and the device will obtain an IP from the DHCP server automatically.

Obtain an IP Address using DHCP

Or select **Obtain an IP Address using PPPOE** and enter the fields for PPPOE connection.

<input checked="" type="radio"/> Obtain an IP Address using PPPOE	
Username	<input type="text"/>
Password	<input type="text"/> Hide / Show Password
Preferred DNS Server	<input type="text"/>
Alternate DNS Server	<input type="text"/>

AP Settings

The AP Settings will be covered in detail in the subsequent section Integrated Wi-Fi Access Point Configuration.

5.6 Restore and Reboot

WAI Redirection	<input checked="" type="radio"/> Enable <input type="radio"/> Disable <small>(Note: you need to reboot CPE for this change to take effect)</small>
Web Password Protection	<input type="radio"/> Enable <input checked="" type="radio"/> Disable Password: <input type="password" value="*****"/> (admin) <small>(Note: login name is "root")</small> Hide / Show Password
Restore Factory Settings	<input type="button" value="Restore & Reboot"/>
Reboot CPE	<input type="button" value="Reboot"/>

Illustration 10: Restore and Reboot

Restore and Reboot	
WAI Redirection	If the device is not connected to an access point, and the user is accessing an Internet web site, the settings control whether to redirect the web access to the web admin interface page or not. If this is disabled and the device is not connected, the browser will show a web access error message. The user can still access the web admin interface by accessing to the device's LAN IP address. By default, the LAN IP address is set as http://192.168.20.1 .
Web Password Protection	Select Enable and sets the Password to protect the web user interface. By default, the login account is set as root and password is set as admin .
Restore Factory Settings	When this option is clicked, default settings will be restored and the unit will be restarted.
Reboot CPE	Click this button to restart the device.

5.7 Integrated Wi-Fi Access Point Configuration

Integrated Wi-Fi Access Point is configured via the **CPE Setup** tab. The following sections will provide information as a guide through the configuration.

The available Access Point (AP) settings for the Integrated Wi-Fi Access Point functionality are as follows:

- Disable**
 Integrated Wi-Fi Access Point functionality is disabled.
- Configure Manually**
 Manual configuration of the SSID, Authentication, and Encryption Key values corresponding to the Access Point.
- Configure Automatically**
 The SSID, Authentication, and Encryption Key values corresponding to the Access Point are automatically configured to be the same as the respective values that correspond to the ISP's network.

AP Settings	Keep AP	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
	AP Transmit Power Adjustment	Max (Max)
	Broadcast SSID	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
	Client Isolation	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
	<input type="radio"/> Configure Manually	
	<input type="radio"/> Configure Automatically	Repeater AP SSID: SSID
	<input checked="" type="radio"/> Disable	

5.7.1 Access Point Settings

AP Settings	
Keep AP	With this option enabled, the Wi-Fi Access Point will always on even if there is no connection to the Internet connection source.
AP Transmit Power Adjustment	An option to retain a lower power setting for indoor home devices. Available options depend on the radio power of the device.
Broadcast SSID	With this option enabled, the configured SSID will be broadcast such that it can be detected by an SSID scan. Otherwise, the configured SSID will not be broadcast such that it cannot be detected by an SSID scan. In order to connect with the access point, the SSID needs to be known by the client.
Client Isolation	Prevent wireless clients connected to the AP from communicating with each other.

5.7.2 Access Point Disabled

Access Point feature will be disabled when **Disable** is selected.

AP Settings	Keep AP	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
	AP Transmit Power Adjustment	Max (Max)
	Broadcast SSID	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
	Client Isolation	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
	<input type="radio"/> Configure Manually	
	<input type="radio"/> Configure Automatically	Repeater AP SSID: SSID
	<input checked="" type="radio"/> Disable	

Illustration 11: Access Point Disabled

5.7.3 Access Point configure Manually

AP Settings	Keep AP	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
	AP Transmit Power Adjustment	Max (Max)
	Broadcast SSID	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
	Client Isolation	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
	<input checked="" type="radio"/> Configure Manually	
	AP SSID	MySSID@home (MySSID@home)
	Authentication	Static WEP Key (open)
Encryption Key (empty) Hide / Show Encryption Key ASCII: 5 characters for 64-bit, 13 characters for 128-bit HEX: 10 characters for 64-bit, 26 characters for 128-bit [0-F]	
<input type="radio"/> Configure Automatically	Repeater AP SSID: SSID	
<input type="radio"/> Disable		

Illustration 12: Access Point Configure Manually

Configure Manually

AP SSID

In Manual Configuration mode, the SSID is manually entered.

It can be one of three configurable values:

Authentication

- **Open**
No Encryption Key is necessary.
- **Static WEP Key**
A 64- or 128-bit Encryption Key is required, and can be entered in either an ASCII or HEX representation.
- **WPA/WPA2-Personal**
An Encryption Key, of at least 8 characters, is required.

5.7.4 Access Point Configure Automatically

AP Settings	Keep AP	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
	AP Transmit Power Adjustment	Max (Max)
	Broadcast SSID	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
	Client Isolation	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
	<input type="radio"/> Configure Manually	
	<input checked="" type="radio"/> Configure Automatically	Repeater AP SSID: SSID
<input type="radio"/> Disable		

Illustration 13: Access Point Configure Automatically

With the Access Point Configuration set to **Configure Automatically**, the **SSID**, **Authentication**, and **Encryption Key** values of the Integrated Wi-Fi Access Point will be configured to be the same as in the **Wireless IP Settings** section.

Important Note

In the **Wireless Settings** section, if **Authentication** is set to either 802.1x with dynamic WEP key or WPA/WPA2-Enterprise, then the Configure Automatically option of the **Access Point Configuration** becomes unavailable, because the Integrated Wi-Fi Access Point functionality currently does not support authentication via the 802.1x with dynamic WEP key and WPA/WPA2-Enterprise methods.

Below the port forwarding table is an option called **DMZ Host**. If you **Enable** this function, your Pepwave Surf will become a DMZ device. You can enter an IP address, which will be the IP address of the device that expose to the Internet. The purpose of a DMZ is to make all external users can has access to any ports of the device, so that user do not need to set up port forwarding and internet traffics can directly reach internal devices.

Tip

Below is a table showing some well-known ports, which is officially registered with IANA.

Port Number	Description	Protocol
7	Echo	TCP, UDP
21	FTP	TCP
23	TELNET	TCP
25	SMTP	TCP, UDP
53	DNS	TCP, UDP
79	Finger	TCP
80	HTTP	TCP, UDP
110	POP3	TCP
119	NNTP	TCP
161	SNMP	TCP, UDP
162	SNMP Trap	TCP, UDP

7 QoS

QoS Settings	
Target	To choose whether it is an incoming (Source) or outgoing (Destination) traffic that should be controlled by the service.
Service Port Range	Enter a port or a range of ports that would like to be controlled by the service.
Protocol	The Protocol for the above port(s). You should select at least one protocol between TCP and UDP .
IP Address	The IP address that you would like the traffics to be controlled by the service.
Priority	There are three choices for service priority: Background , Video and Voice . By choosing Default , priority will be automatically adjusted.
Del	By clicking the button, you can delete the corresponding rows of port forwarding rules.

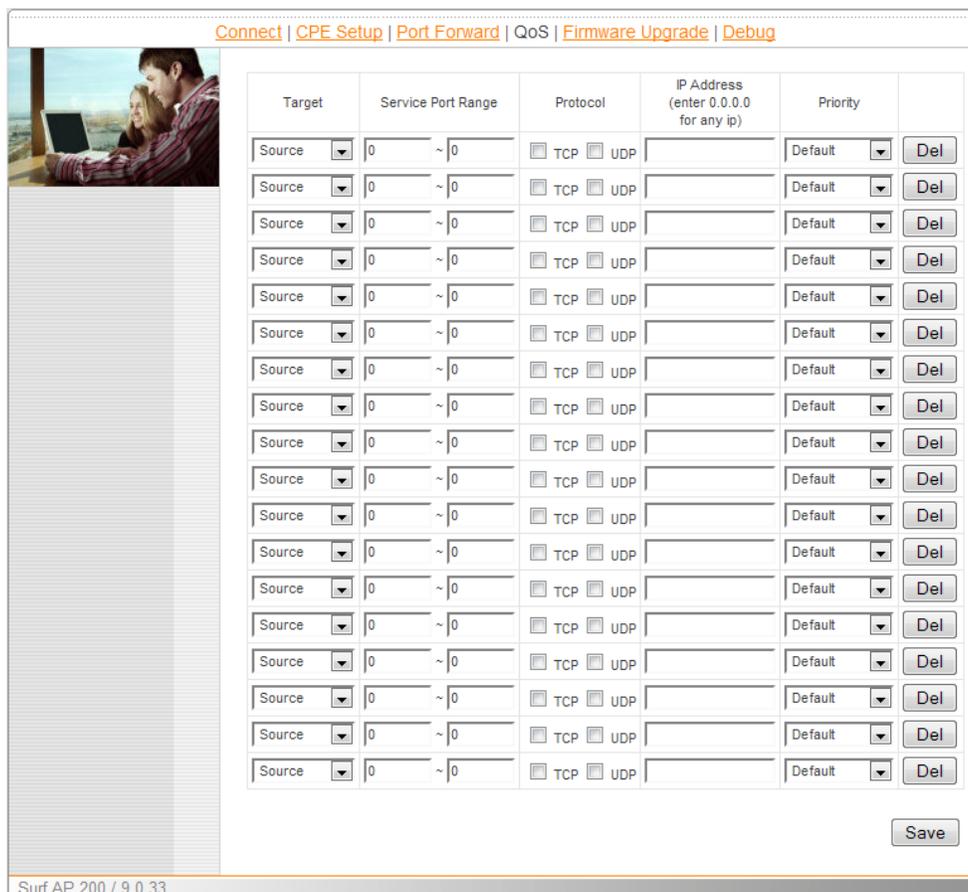


Illustration 15: QoS

8 Firmware Upgrade

The Pepwave devices are able to check whether a newer firmware (the software running on the unit) is available.

However, it is recommended that you do not update the firmware unless specifically instructed by your ISP to do so. When a firmware upgrade is needed, your ISP will either give you instructions or they will upgrade the firmware remotely.

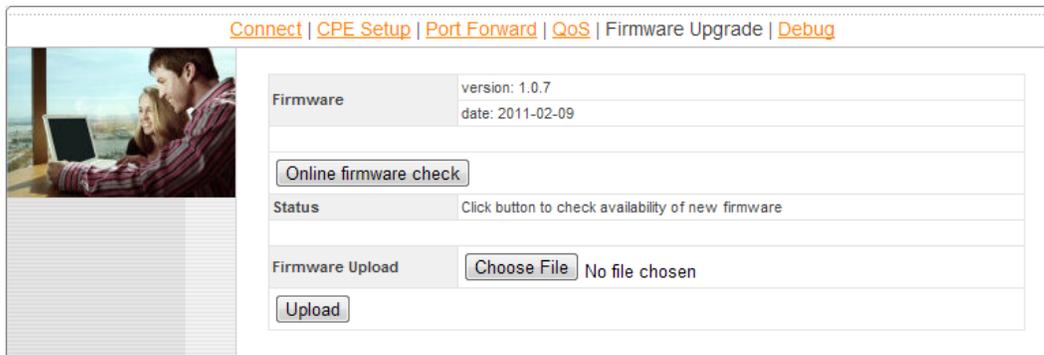


Illustration 16: Firmware tab showing the system information

Tip

It is highly recommended users to download the configuration file (download directory can be found in the next section) for backup propose before doing firmware upgrade.

9 Debug and System information

The screenshot displays the 'Debug' tab of the web interface. At the top, navigation links include 'Connect', 'CPE Setup', 'Port Forward', 'QoS', 'Firmware Upgrade', and 'Debug'. A small image of a person at a computer is visible on the left side of the main content area.

System Information:

Firmware Version:	1.0.7
Hardware Version:	2.0
Model:	Surf (Router)
Serial Number:	2630-8317-33CD
LAN MAC Address:	00:1A:DD:B9:25:E0
Wi-Fi MAC Address:	00:1A:DD:B9:25:E4
Supported Modes:	802.11a/b/g/n
Connection Uptime:	8 mins 46 secs
System time:	Wed, 06 Apr 2011 08:49:10 GMT

Auto Refresh Off 10 s

Scanned APs: Show [PEPWAVE_7C40] only Show all access points

ESSID	BSSID	Channel	Signal Level	Encryption	Bit Rates
PEPWAVE_7C40	00:1a:dd:b8:7c:41	1	-67	Open	All 802.11g only rates

Total APs: 1

CH 1

CH 2

CH 3

CH 4

CH 5

CH 6

CH 7

CH 8

CH 9

CH 10

CH 11

Note: Data is not real time

WAN Connection Info:

Signal level:	-66 dBm	IP address:	10.8.8.79
Bit rate:	auto	Subnet mask:	255.255.0.0
Missed beacon:	0	Gateway:	10.8.8.1
ESSID:	PEPWAVE_7C40	DNS servers:	10.8.8.1
Mode:	802.11ng (HT20)	DHCP server IP addr:	10.8.8.201
Frequency:	2.412GHz	DHCP server HW addr:	
Channel:	1	DHCP lease time:	7200
AP BSSID:	00:1A:DD:B8:7C:41	DHCP renewal time:	3600
Encryption Key:	off	Rx packets:	1193
Rx invalid crypt:	0	Tx packets:	1115
Rx invalid frag:	0		
Tx excessive retries:	0		
Invalid misc:	0		

Client List:

IP Address	MAC Address	Interface	Address Type
192.168.20.10	00:25:64:d1:18:3a	Ethernet	DHCP

[Click here to download the configuration file](#)
[Click here to download a debug dump](#)

Surf / 1.0.7

Illustration 17: Debug tab showing the system information

Tip

Debug dump and **configuration file** can be downloaded through clicking the links illustrated above. If you encounter issues and would like to contact Pepwave Support Team (email: support@pepwave.com), please download the above files and attach it along with a description of your encountered issue.




10 Restore to Default Settings

10.1 Surf Indoor Series

There are two ways to restore the Pepwave Surf Indoor unit to default settings.

If you are able to access the web admin interface, go to the **CPE Setup** page, and click the **Restore and Reboot** button.

Otherwise, you can also power up the unit and wait for about 1 min. Then press the **Reset** Button at the rear side of the unit using a pin and then hold it for 5 seconds. The unit will restore the settings to factory default and reboot.

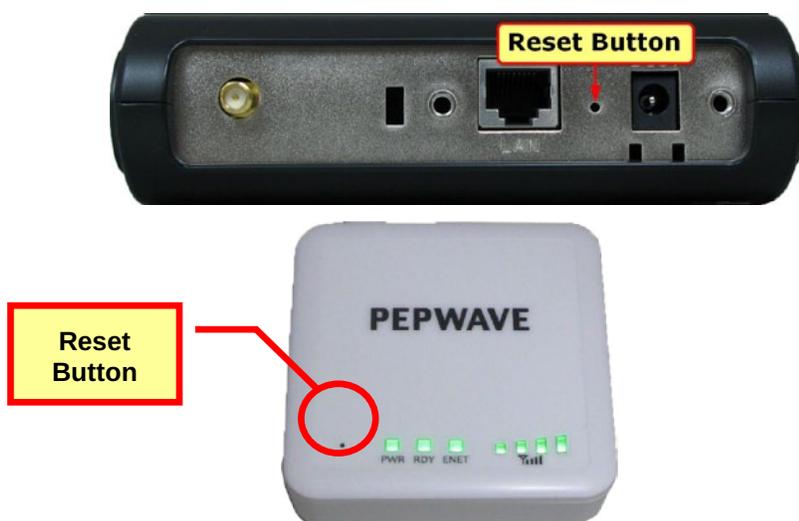

10.2 Surf DX Series

There are two ways to restore the Pepwave Surf DX to default settings.

If you are able to access the web admin interface, go to the **CPE Setup** page, and click the **Restore and Reboot** button.

Otherwise, you can also power up the Surf DX unit and wait for about 1 min. Then push the **Reset** Button at the panel side of the unit and then hold it for 5 seconds. The unit will restore the settings to factory default and reboot.



Appendix

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- 1) Reorient or relocate the receiving antenna.
- 2) Increase the separation between the equipment and receiver.
- 3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4) Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

For operation within 5.15 ~ 5.25GHz frequency range, it is restricted to indoor environment.

IMPORTANT NOTE

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

PEP WAVE

Broadband Possibilities

www.pepwave.com

Contact Us:

Sales

<http://www.pepwave.com/contact/sales/>

Support

<http://www.pepwave.com/contact/>

Business Development and Partnerships

<http://www.pepwave.com/partners/channel-partner-program/>

Address:

United States Office

800 West El Camino Real,
Mountain View
CA 94040
United States
Tel: +1 (650) 331 0641
Fax: +1 (650) 625 4664

Hong Kong Office

17/F, Park Building,
476 Castle Peak Road
Cheung Sha Wan
Hong Kong
Tel: +852 2990 7600
Fax: +852 3007 0588