



150N Draft 802.11n Wireless Router

Model # AR670W

User's Manual

Ver. 1A

Table of Contents

1. Introduction.....	4
1.1 Package Contents.....	4
1.2 Features.....	4
2. Connecting the Router.....	5
3. Verifying Connection to the Router.....	6
4. Configuring the Router.....	9
Cable Modem.....	10
DSL.....	11
5. Connecting to the Router Wirelessly.....	12
6. Web Configuration Utility.....	13
6.1 Setup.....	13
6.1.1 Internet Setup.....	13
6.1.2 Network Setup.....	14
6.1.3 DDNS.....	15
6.1.4 Time Settings.....	16
6.2. Wireless.....	17
6.2.1 Basic Wireless Settings.....	17
6.2.2 Wireless Security.....	18
WEP.....	18
WPA.....	19
WPA with RADIUS.....	20
Wi-Fi Protected Setup (WPS).....	21
6.2.3 Wireless MAC Filter.....	26
6.2.4 Advanced Wireless Settings.....	27
6.3 Security.....	28
6.3.1 Firewall.....	28
6.3.2 VPN Passthrough.....	29
6.4 Access Restrictions.....	29
6.4.1 IP Filters.....	29
6.4.2 MAC Filters.....	30
6.4.3 URL Blocking.....	31
6.4.4 Domain Blocking.....	32
6.4.5 Schedule.....	32
6.5 Applications & Gaming.....	33
6.5.1 Port Range Forwarding.....	33
6.5.2 Port Range Triggering.....	34
6.5.3 DMZ.....	35
6.5.4 QoS.....	36
6.6 Administration.....	37
6.6.1 Management.....	37
6.6.2 Log.....	38
6.6.3 Diagnostics.....	39
6.6.4 Factory Defaults.....	39

6.6.5 Firmware Upgrade	40
6.6.6 Restart	40
6.7 Status	41
6.7.1 Router	41
6.7.2 Local Network	42
6.7.3 Wireless Network	42
7. Troubleshooting	43
Appendix A – Specifications	44
Appendix B – Information	45
Technical Support	47

1. Introduction

Congratulations on your purchase of the AR670W 150N Wireless Router. The 150N Wireless Router is recommended to be used with AirLink101® 150N or 300N wireless products to provide the best performance. The high bandwidth combined with extended wireless coverage delivers fast and reliable connections for all of your networking applications.

A full range of security features such as WEP, WPA-PSK, and WPA2-PSK provide the highest level of wireless network security. The built-in Web Configuration Utility allows you to set up the router with an easy-to-use user interface. Best of all, the 150N Wireless Router works with 802.11g and 802.11b network devices ensuring compatibility with your existing wireless products.

1.1 Package Contents

Before you begin the installation, please check the items of your package:

- 150N Wireless Router
- RJ-45 Cable
- Power Adapter
- Quick Installation Guide
- Manual CD

If any item contained is damaged or missing, please contact your local dealer immediately. Also, keep the box and packaging materials in case you need to ship the unit in the future.

1.2 Features

- Industry's highest wireless data rate with IEEE 802.11n draft specification 2.0
- 2 antennas for wider coverage and stronger signal strength to eliminate dead spots
- 64-bit/128-bit WEP encryption, Pre-shared Key (PSK), and Wi-Fi Protected Access (WPA2) and WPA support provide full protection for your wireless connection
- Stronger signal strength increases the reliability and speed of wireless connections
- Great for environments with higher wireless data traffic requirements
- Fully backward-compatible with 802.11b/g devices
- Works best with AirLink101® 300N and 150N Wireless Adapters, AWLH6070, AWLH6080, AWLC6070, AWLC6080, AWLL6070, and AWLL6080

2. Connecting the Router

Note: Prior to connecting the router, be sure to power off your computer, DSL/Cable modem, and the router. You should setup the router with a wired connection first before attempting to setup any wireless connections.

Step 1 Connect one end of a network cable to the **WAN** port of the router and connect the other end of the cable to the DSL/Cable modem.

Step 2 With another network cable, connect one end of the cable to your computer's network card and connect the other end to one of the **LAN (Ethernet)** ports of the router.

Step 3 Power on the DSL/Cable modem and wait for the lights on the modem to settle down.

Step 4 Power on the router by connecting one end of the supplied power adapter to the power jack of the router and connecting the other end to an electrical outlet.

Step 5 Power on your computer.

Step 6 Make sure the **WAN**, **WLAN**, and the **LAN** ports that the computer is connected to are lit. If not, try the above steps again.

AR670W Icon Illustrations:

Power	Status	WAN	Wireless	LAN	WPS
				1 ~ 4	

Power

On: Power on

Status

Blinking: Function properly.

WAN

On: Link established

Blinking: Data transmission

Wireless

On: Wireless is ready

Blinking: Data transmission

LAN

On: Link established

Blinking: Data transmission

WPS (WiFi Protected Setup)

Blinking Green: WPS setting in progression


Static Green: WPS successfully set up

Blinking Red: Error found

3. Verifying Connection to the Router

Step 1 Go to **Start, Run**, type **command** (for Windows 95/98/ME) or **cmd** (for Windows 2000/XP) and click **OK**. You will see the command prompt as below.

Step 2 Type **ping 192.168.1.1** and press **Enter**. You should get four reply responses back.

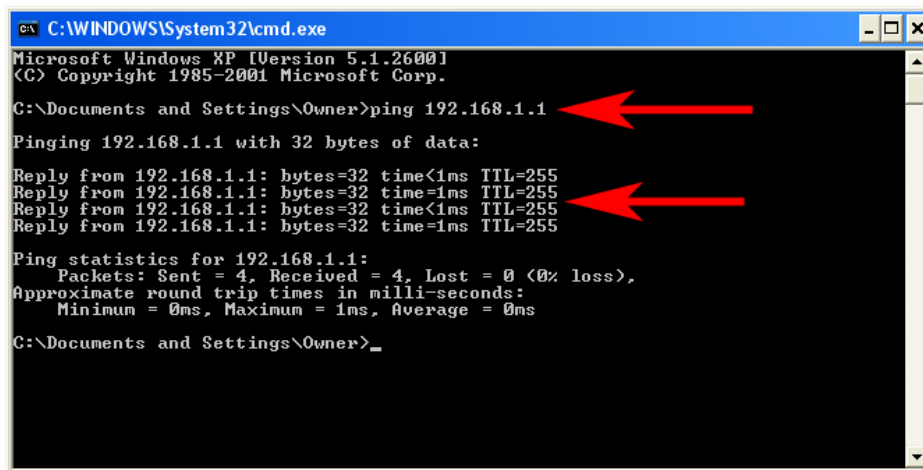

```
C:\WINDOWS\System32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings\Owner>ping 192.168.1.1
Pinging 192.168.1.1 with 32 bytes of data:
Reply from 192.168.1.1: bytes=32 time<1ms TTL=255
Reply from 192.168.1.1: bytes=32 time=1ms TTL=255
Reply from 192.168.1.1: bytes=32 time<1ms TTL=255
Reply from 192.168.1.1: bytes=32 time=1ms TTL=255

Ping statistics for 192.168.1.1:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 1ms, Average = 0ms

C:\Documents and Settings\Owner>_
```

Step 3 If you get **Request timed out**, or **Destination host unreachable**, double-check the network cable connection between the computer and the router and try **Step 2** again. If you still encounter problem, go to the next step; otherwise proceed to **Section 3, Configuring the Router**.

Step 4 For Windows 2000/XP, type **ipconfig/release** and press **Enter**. (Windows 98se/ME users skip ahead to **Step 6**)

```
C:\WINDOWS\System32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings\Owner>ipconfig/release
Windows IP Configuration

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  . :
    IP Address. . . . .               : 0.0.0.0
    Subnet Mask . . . . .             : 0.0.0.0
    Default Gateway . . . . .         :

C:\Documents and Settings\Owner>
```

Step 5 Type **ipconfig/renew** and press **Enter**. You should get an IP address of **192.168.1.x** (where **x** is a number between 2 - 254). Proceed to **Section 3, Configuring the Router**. If you don't get an IP address, reset the router by holding in the reset button at the back of the router for 10 seconds while it is ON and try **ipconfig/renew** again.

```
C:\WINDOWS\System32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings\Owner>ipconfig/renew
Windows IP Configuration


Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  . :
    IP Address. . . . .               : 192.168.1.5
    Subnet Mask . . . . .             : 255.255.255.0
    Default Gateway . . . . .         : 192.168.1.1


C:\Documents and Settings\Owner>_
```

Step 6 For Windows 95/98/ME go to **Start, Run**, type **winipcfg** and click **OK**. (Step is not necessary for Windows 2000/XP)

Step 7 Select your network card from the drop-down menu and click **Release**.

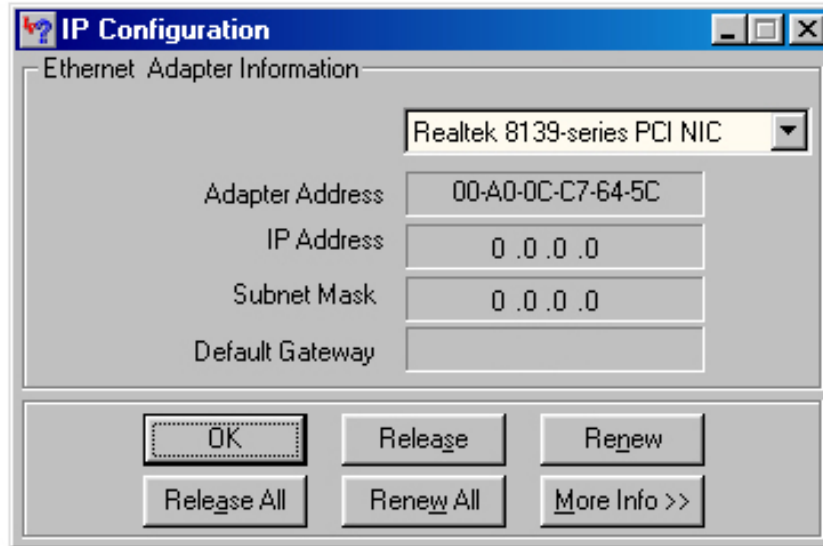


Step 8 After your IP address is released, click **Renew**. You should get an IP address of **192.168.1.x** (where **x** is a number between 2 - 254). If you don't get an IP address, reset the router by holding in the reset button at the back of the router for 10 seconds while it is ON and try **Renew** again.

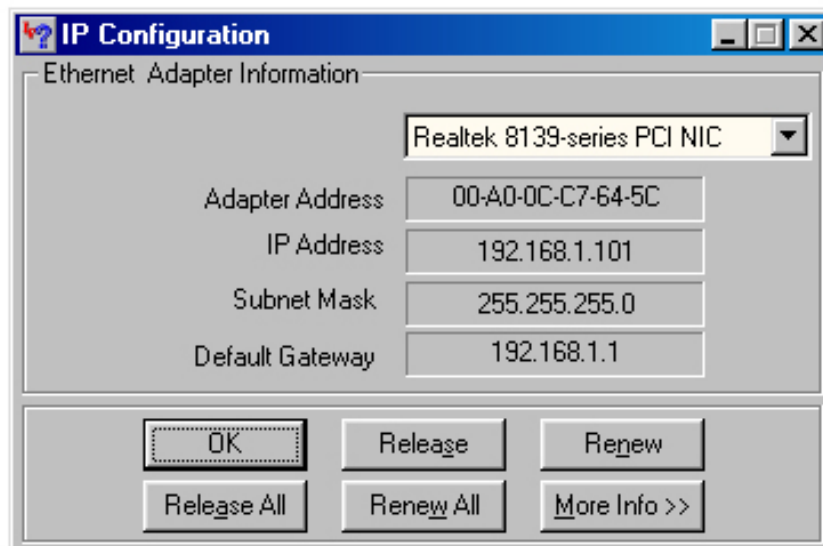


4. Configuring the Router


Step 1 Open the web browser and type **192.168.1.1** in the URL Address field and press **Enter**.

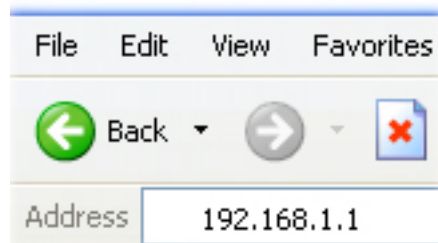

Step 2 Enter **admin** for both the username and password fields and click **Login**.

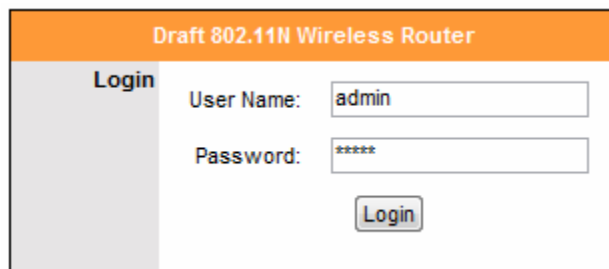A screenshot of the router's login page. The page has an orange header with the text "Draft 802.11N Wireless Router". Below the header is a grey sidebar with the word "Login". The main content area contains two input fields: "User Name:" with the text "admin" and "Password:" with "*****". Below the password field is a "Login" button.

Step 3 Select the proper region, **North America** or **South America**, and click **Apply**.

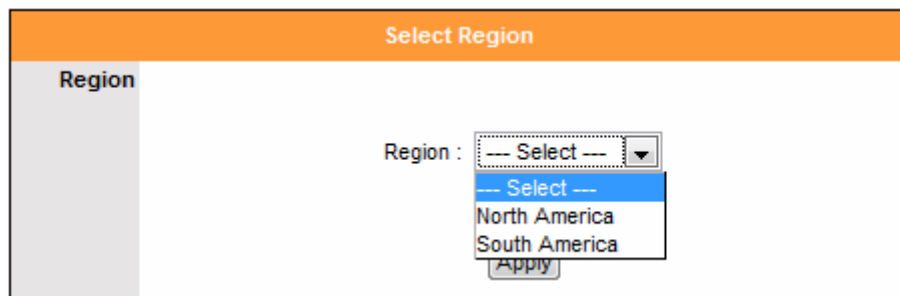
A screenshot of the router's region selection page. The page has an orange header with the text "Select Region". Below the header is a grey sidebar with the word "Region". The main content area contains a "Region:" label followed by a dropdown menu. The dropdown menu is open, showing three options: "-- Select --", "North America", and "South America". Below the dropdown menu is an "Apply" button.

Warning: This device requires that the user or installer properly selects the current region of operation before using this device. This device will automatically limit the allowable channels determined by the current region of operation. **Incorrectly selecting the current region of operation may result in illegal operation and may cause harmful interference to other systems.** The user is obligated to ensure the

device is operating according to the channel limitations, indoor/outdoor restrictions and license requirements for the current country of operation.


Cable Modem

For most cable modem users, you should be able to connect to the Internet without any configuration. If your ISP has provided you with a host name, enter it in the optional **Host Name** field.

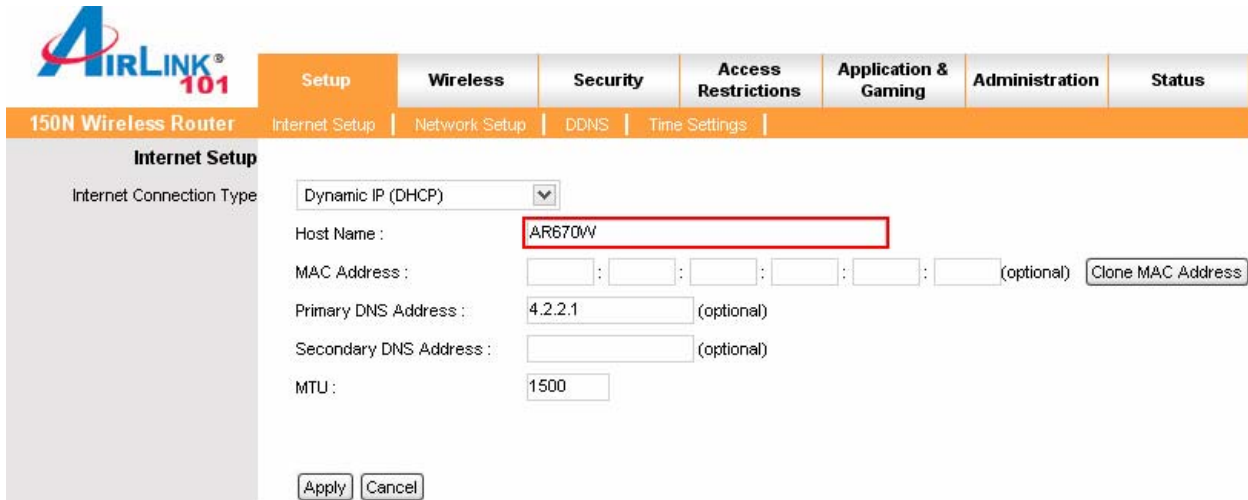

The screenshot shows the 'Internet Setup' page of the AIRLINK 101 150N Wireless Router. The 'Internet Connection Type' is set to 'Dynamic IP (DHCP)'. The 'Host Name' field is highlighted with a red box and contains the text 'AR670W'. Other fields include 'MAC Address', 'Primary DNS Address' (4.2.2.1), 'Secondary DNS Address', and 'MTU' (1500). There are 'Apply' and 'Cancel' buttons at the bottom.

Click on the **Clone MAC Address** button. Click **Apply** and **OK** to save the settings.

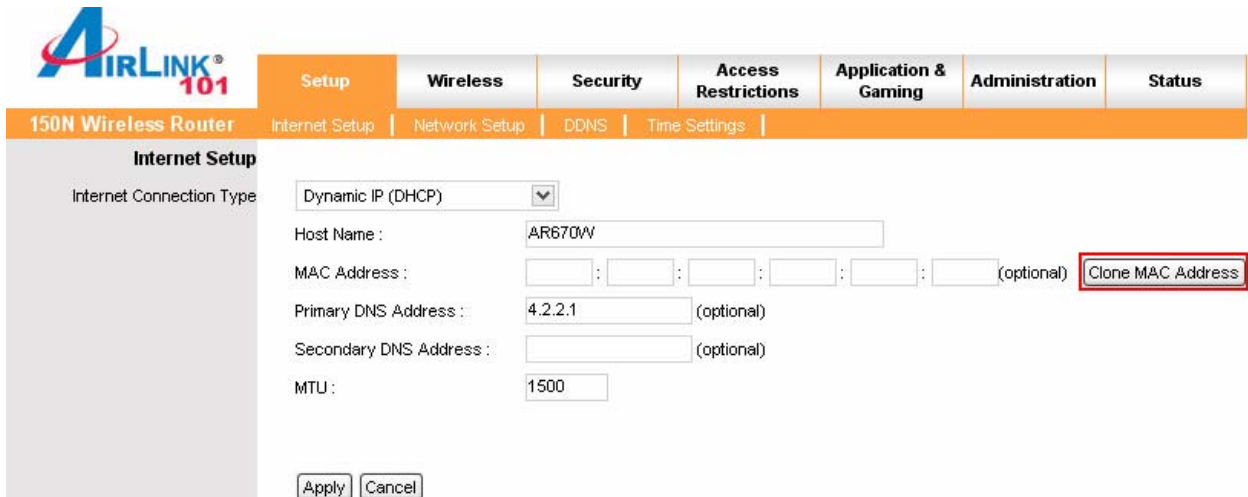

The screenshot shows the 'Internet Setup' page of the AIRLINK 101 150N Wireless Router. The 'Host Name' field contains 'AR670W'. The 'Clone MAC Address' button is highlighted with a red box. Other fields include 'MAC Address', 'Primary DNS Address' (4.2.2.1), 'Secondary DNS Address', and 'MTU' (1500). There are 'Apply' and 'Cancel' buttons at the bottom.

If you have trouble connecting to the Internet, please refer to the **Troubleshooting** section at the end of this guide.

DSL

For DSL users, follow the steps below to configure the router.

Step 1 Select **PPPoE** from the drop-down menu.

The screenshot shows the 'Internet Setup' page for the AIRLINK 101 150N Wireless Router. The 'Internet Connection Type' dropdown menu is open, and 'PPPoE (Username / Password)' is selected. The page includes fields for Username, Password, and Secondary DNS Address, along with an MTU field set to 1500 and an Apply button.

Step 2 Enter your username and password provided by your ISP.

The screenshot shows the 'Internet Setup' page for the AIRLINK 101 150N Wireless Router. The 'Internet Connection Type' dropdown menu is set to 'PPPoE (Username / Password)'. The 'Dynamic PPPoE' radio button is selected. Below, there are fields for User Name, Password, and Retype Password, which are highlighted with a red box.

Note: Depending on the ISP, you may need to include the domain name with your username.

Example: **username@sbcglobal.net**

Step 3 Click **Apply** and **OK** to save the settings.

If you have trouble connecting to the Internet, please refer to the **Troubleshooting** section at the end of this manual.

5. Connecting to the Router Wirelessly

Below are the default wireless settings of the router. You must configure your wireless network card to the same settings in order to establish a wireless connection to the router. Please refer to your wireless network card's manual on how to configure these settings.

SSID: **default**


Operating Mode: **Infrastructure**

Authentication: **Open System**

Channel #: **6**

WEP: **disabled**

If you want to change the router's wireless settings, log in to the router and select the **Wireless** tab. Make sure that you click **Apply** and **OK** to save the settings.

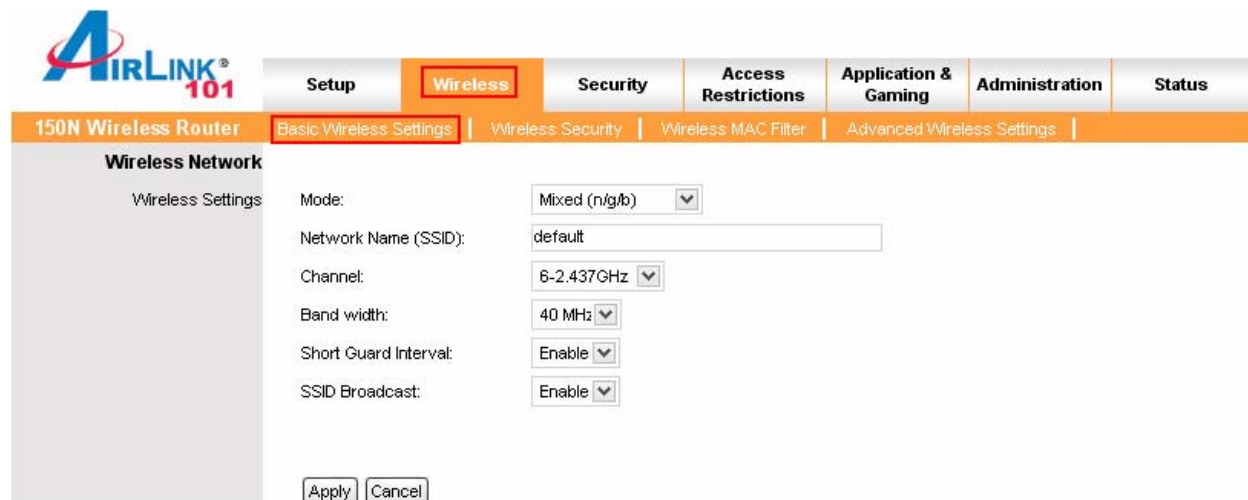

The screenshot displays the web interface for the AIRLINK 101 150N Wireless Router. The top navigation bar includes tabs for Setup, Wireless (selected), Security, Access Restrictions, Application & Gaming, Administration, and Status. Below this, a sub-menu for the 150N Wireless Router shows options for Basic Wireless Settings (selected), Wireless Security, Wireless MAC Filter, and Advanced Wireless Settings. The main content area is titled 'Wireless Network' and contains 'Wireless Settings' with the following configuration:

Mode:	Mixed (n/g/b)
Network Name (SSID):	default
Channel:	6-2.437GHz
Band width:	40 MHz
Short Guard Interval:	Enable
SSID Broadcast:	Enable

At the bottom of the settings area are 'Apply' and 'Cancel' buttons.


For more information about wireless settings, refer to section 6.2.

6. Web Configuration Utility

This router has a built-in web configuration utility that you can use to configure the router's settings. Simply log in to the router using your computer's web browser.

6.1 Setup

6.1.1 Internet Setup

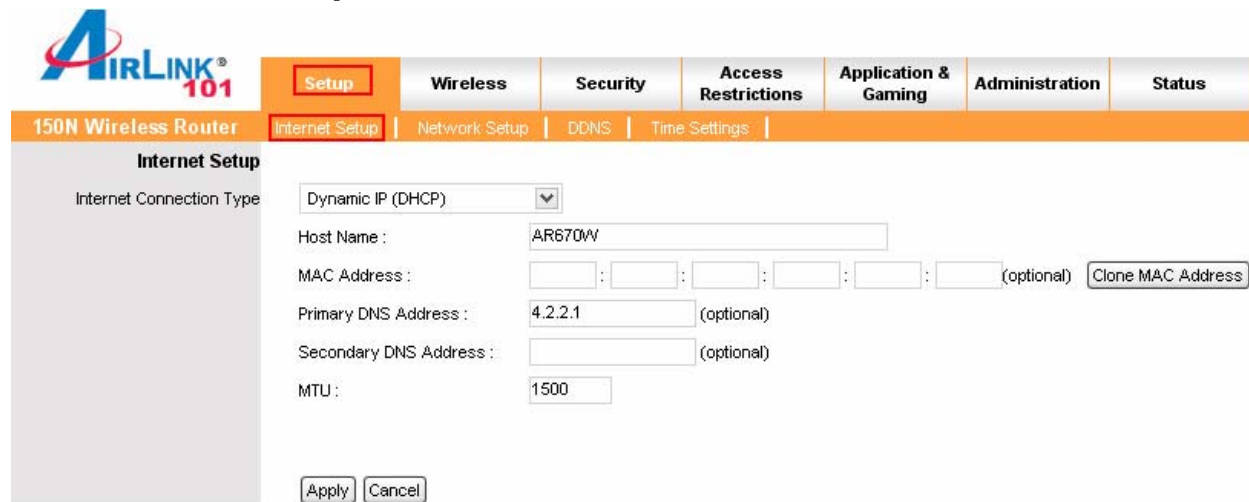

The screenshot displays the web configuration utility for an AIRLINK 101 150N Wireless Router. The interface features a top navigation bar with tabs for Setup, Wireless, Security, Access Restrictions, Application & Gaming, Administration, and Status. Below this is a sub-navigation bar with tabs for Internet Setup, Network Setup, DDNS, and Time Settings. The main content area is titled "Internet Setup" and includes a sidebar with "Internet Connection Type". The primary configuration area contains the following fields:

- Internet Connection Type: Dynamic IP (DHCP) (dropdown menu)
- Host Name: AR670W (text input)
- MAC Address: [] : [] : [] : [] : [] (optional) (text input) with a "Clone MAC Address" button
- Primary DNS Address: 4.2.2.1 (optional) (text input)
- Secondary DNS Address: [] (optional) (text input)
- MTU: 1500 (text input)

At the bottom of the form are "Apply" and "Cancel" buttons.

This is the default screen when you log in to the router's web configuration utility. You can setup your Internet connection here.

6.1.2 Network Setup

Network Setup allows manually configuring TCP/IP and DHCP settings.

The screenshot displays the configuration interface for the AIRLINK 101 150N Wireless Router. The 'Network Setup' tab is active, showing various configuration options. The 'Router IP' section includes fields for IP Address (192.168.2.1), Subnet Mask (255.255.255.0), Local Domain Name, and Enable DNS Relay (set to Enabled). The 'DHCP Server Settings' section shows the DHCP Server is Enabled, with a Starting IP Address of 192.168.2.100 and an Ending IP Address of 192.168.2.199. The Lease Time is set to 10080 minutes. The 'Static DHCP Settings' section, highlighted with a red box, shows one DHCP entry. The entry is currently Disabled, has a Name of 'Computer Name', an IP Address of 192.168.2., and a MAC Address field. A 'Copy Your PC's MAC Address' button is present below the MAC Address field. At the bottom of the page, there are 'Apply' and 'Cancel' buttons.

Assigning Static DHCP Settings

Step 1 Select **Enabled** in the under the Static DHCP Settings section

Step 2 Select a computer name from the drop-down menu or enter a name associated with this Static IP Address

Step 3 Enter the Static IP Address in the **IP Address** field

Step 4 Enter the MAC address of the corresponding computer in the **MAC Address** field

Remember to click **Apply** and **OK** to save your changes.

6.1.3 DDNS

Dynamic DNS (DDNS) allows any user who wishes to access your server to reach it by a registered DNS name instead of an IP address. Before you enable **DDNS**, you need to register an account with one of the DDNS providers listed in the drop-down menu.



The screenshot shows the configuration interface for the AIRLINK 101 150N Wireless Router. The top navigation bar includes 'Setup', 'Wireless', 'Security', 'Access Restrictions', 'Application & Gaming', 'Administration', and 'Status'. The 'Setup' tab is active, and the 'DDNS' sub-tab is selected. The 'DDNS Service' section contains the following fields:

- Enable DDNS: Disabled (dropdown menu)
- Server Address: DynDns.org (dropdown menu)
- Host Name: (text input field)
- Username: (text input field)
- Password: (text input field)

At the bottom of the form are 'Apply' and 'Cancel' buttons.

To Enable DDNS, select the DDNS provider you have registered with and enter the required fields. Click **Apply** and **OK** to save the settings.

6.1.4 Time Settings

Time Settings allow you to configure the router clock.

The screenshot displays the 'Time Settings' page for an AIRLINK 101 router. The page is part of a web interface with a top navigation bar containing 'Setup', 'Wireless', 'Security', 'Access Restrictions', 'Application & Gaming', 'Administration', and 'Status'. Below this is a sub-navigation bar with 'Internet Setup', 'Network Setup', 'DDNS', and 'Time Settings'. The 'Time Settings' section includes a 'Device Time' field showing 'Dec 19, 2007 13:29:54'. Under 'Synchronize the device's clock', three radio buttons are present: 'Automatic (Simple Network Time Protocol)' (selected), 'Your computer's clock', and 'Manual (Enter your own settings)'. The 'Time Zone' is set to '(GMT-08:00) Pacific Time (US & Canada); Tijuana' with a dropdown arrow, and a 'Daylight Saving' checkbox is checked. The 'Get the time automatically via Network Time Protocol(NTP)' section shows an 'NTP Server' field with 'clock.isc.org', an 'Interval' dropdown set to '24 hrs', and a 'Time' section with dropdowns for Year (2007), Month (12), Day (19), Hour (13), Minute (29), and Second (54). At the bottom are 'Apply' and 'Cancel' buttons.

Automatic connects to the internet and synchronizes the router's clock with time provided by accurate timeservers on the internet. Using this feature requires that your router have a working internet connection.

Your computer's clock allows you to synchronize the router's clock with your computer's system clock


Manual provides you with the option of setting your own date and time.

Click **Apply** and **OK** to save the settings.

6.2. Wireless

6.2.1 Basic Wireless Settings

You can configure the router's basic wireless settings on this screen.

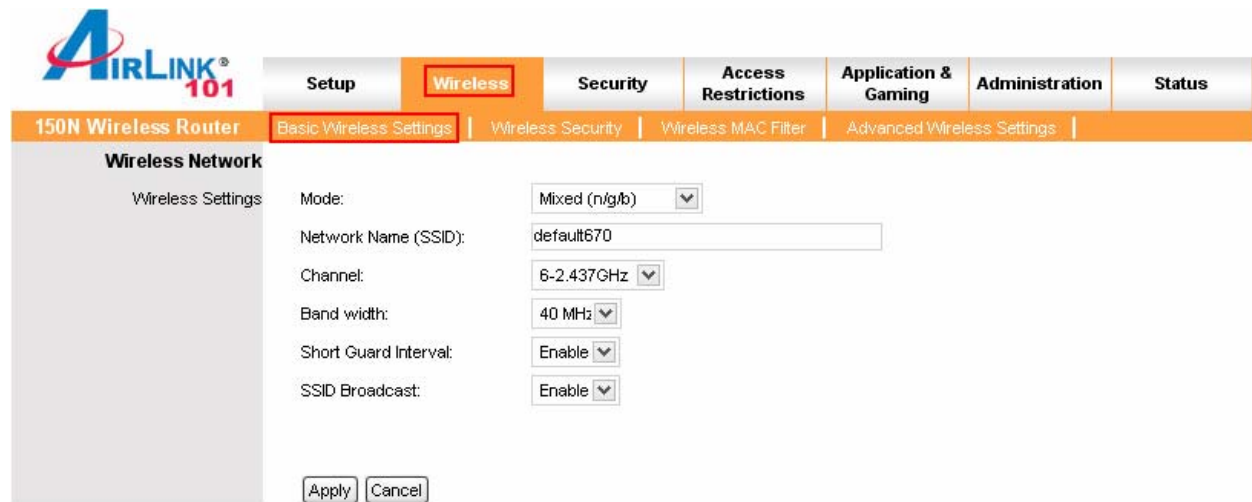

The screenshot shows the configuration interface for the Airlink 101 150N Wireless Router. The 'Wireless' tab is selected, and the 'Basic Wireless Settings' sub-tab is active. The settings are as follows:

Setting	Value
Mode	Mixed (n/g/b)
Network Name (SSID)	default670
Channel	6-2.437GHz
Band width	40 MHz
Short Guard Interval	Enable
SSID Broadcast	Enable

Buttons: Apply, Cancel

Mode: Choose from Mixed (n/g/b), Mixed (g/b), Wireless-11n Only, Wireless-11g Only, Wireless-11b Only, or Disabled to stop wireless function.

Network Name (SSID): You can change the router's SSID in this field. The SSID is the name that your router sends out wirelessly. Once you have changed the SSID, your network clients need to re-connect themselves using the new SSID.

Channel: Select the desired channel.

Changing channels is useful when you are experiencing slow, unstable wireless connections, or if you are unable to establish a wireless connection at all.

Your router has 11 channels available (1-11). Start with channel 1 and work your way up. Each time you change channels on the router, restart the wireless computers and then try to connect. If the computers are able to connect, test the channel out for a while and make sure that they hold the connection. Keep changing channels until you find one that gives you a stable connection.

All the network clients need to be using the same channel.

SSID Broadcast: Choose to enable or disable the broadcasting of your SSID.

6.2.2 Wireless Security

You can configure wireless security such as WEP or WPA encryption on this screen.

The screenshot shows the 'Wireless Security' configuration page for a 150N Wireless Router. The 'Security Mode' is currently set to 'Disabled'. Under 'Wi-Fi Protected Setup', the 'Enable' checkbox is checked, and the 'Current PIN' is 50510283. There are buttons for 'Generate New PIN', 'Reset PIN to Default', 'Reset to Unconfigured', and 'Add Wireless Device Wizard'. The 'Apply' and 'Cancel' buttons are at the bottom.

Note: It is recommended that you use WPA-PSK or WPA2-PSK encryption over WEP if your wireless clients support it. All of the wireless clients must use the same security settings in order to connect to the router.

WEP

To enable WEP, select **WEP** from the **Security Mode**.

The screenshot shows the 'Wireless Security' configuration page with WEP settings highlighted by a red box. The 'Security Mode' is set to 'wWEP', 'Authentication Type' is 'Shared Key', 'Encrypt Length' is '64Bits', and 'Key Type' is 'HEX'. The 'WEP Key 1' field is empty, and the 'Default Key' is set to '1'. The 'WEP Key 2', 'WEP Key 3', and 'WEP Key 4' fields are also empty.

Authentication Type: Select “Shared Key”

Encryption: Choose **64 bits**

Key Type: Choose **HEX**

WEP Key 1: Enter a 10 digit number. This will be your wireless password. An easy one to remember is a phone number with area code (ex: 8887463238). You do not need to enter anything in WEP Key 2, 3 and 4.

Default Key: Select key 1

Click **Apply** and **OK** to save the settings.

WPA

To enable WPA, select **WPA-PSK** or **WPA2-PSK** from the **Security Mode**.

The screenshot shows the configuration interface for the AIRLINK 101 150N Wireless Router. The 'Wireless' tab is selected, and the 'Security' sub-tab is active. The 'Wireless Network' section is expanded to show 'Wireless Settings'. A red box highlights the 'Security Mode' dropdown (set to WPA-PSK), 'Encryption Methods' dropdown (set to TKIP), 'Passphrase Format' dropdown (set to ASCII), and the 'Passphrase' text input field. Below this, the 'Key Renewal' is set to 1500 seconds. The 'Wi-Fi Protected Setup' section is also visible, with the 'Enable' checkbox checked and the 'Current PIN' set to 50510283. Buttons for 'Generate New PIN', 'Reset PIN to Default', 'Reset to Unconfigured', and 'Add Wireless Device Wizard' are present. At the bottom, 'Apply' and 'Cancel' buttons are shown.

Encryption Methods: Select either **TKIP** or **AES** as the encryption method. AES is only supported by some newer cards, so make sure that your card supports AES before selecting that option. TKIP will work with most cards. If you are unsure, choose TKIP.

Passphrase: Enter a passphrase between 8 to 63 characters long. For best security, use a passphrase that is at least 30 characters long.

Key Renewal: Enter the desired key renewal time in seconds. It is best to leave this at the default setting of 1500.

Click **Apply** and **OK** to save the settings.

WPA with RADIUS

If you are using a RADIUS server in your network for authentication, you may choose **WPA** or **WPA2** from the **Security Mode**.

The screenshot shows the configuration interface for the AirLink 101 150N Wireless Router. The 'Wireless' tab is selected, and the 'Wireless Security' sub-tab is active. The 'Security Mode' is set to 'WPA' and 'Encryption Methods' is set to 'TKIP'. The 'RADIUS Server' field is empty, and the 'RADIUS Port' is set to '1812'. The 'Shared Key' field is empty. The 'Key Renewal' is set to '1500' seconds. Below this, the 'Wi-Fi Protected Setup' section is visible, with 'Enable' checked, 'Current PIN' set to '50510283', and 'Wi-Fi Protected Status' set to 'Enabled / Configured'. There are 'Apply' and 'Cancel' buttons at the bottom.

Encryption Methods: Select either **TKIP** or **AES** as the encryption method.

RADIUS Server: Enter the IP Address of your RADIUS server.

RADIUS Port: Enter the port number of your RADIUS server.

Shared Key: Enter the shared key.

Key Renewal: Enter the desired key renewal time in seconds.


Click **Apply** and **OK** to save the settings.

WiFi Protected Setup

Wi-Fi Protected Setup™ (**WPS**) is a new and easy way to configure the encryption for your wireless network clients. In order to use it with your router, firstly, you must configure the wireless encryption on the router. You can find instructions for configuring it in the User Manual located on the CD that came with your router. Secondly, you will need to have wireless adapters that support this feature. If your wireless adapters do not support WPS, you will need to set up the wireless security manually and you can skip this section.


In the instructions below, we are going to use the utility, Wireless Monitor that comes with the Airlink101® 300N or 150N Wireless Adapters, AWLC6070, AWLC6080, AWLH6070, AWLH6080, AWLL6070, and AWLL6080 as the example.

First, go to the computer with the Airlink101 150N or 300N wireless adapter and open the Wireless Monitor. Under AP List, click on the wireless you try to connect to and click on the **WPS Connect** button.

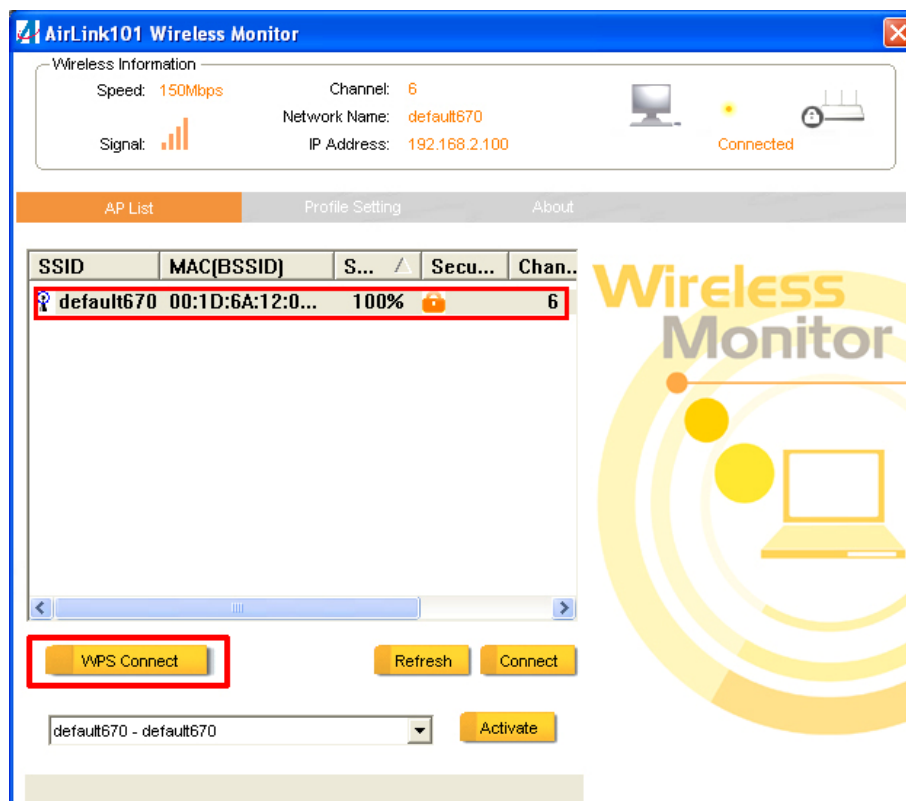


Note: If you do not see the WPS Connect button, you can go to www.airlink101.com to download the latest utility and driver.


Choose your configuration method, either **Push Button** or **Pin Code** and click **Next**.

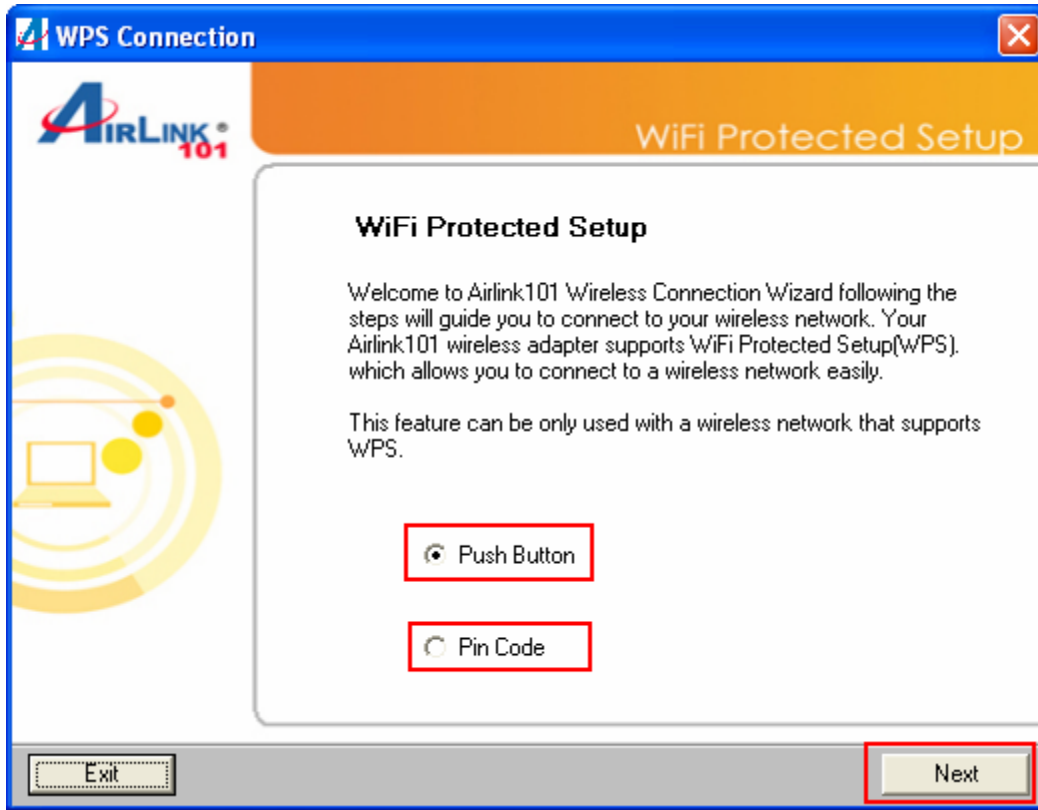


Write down the **PIN** if you are using Pin Code method and click **next**.

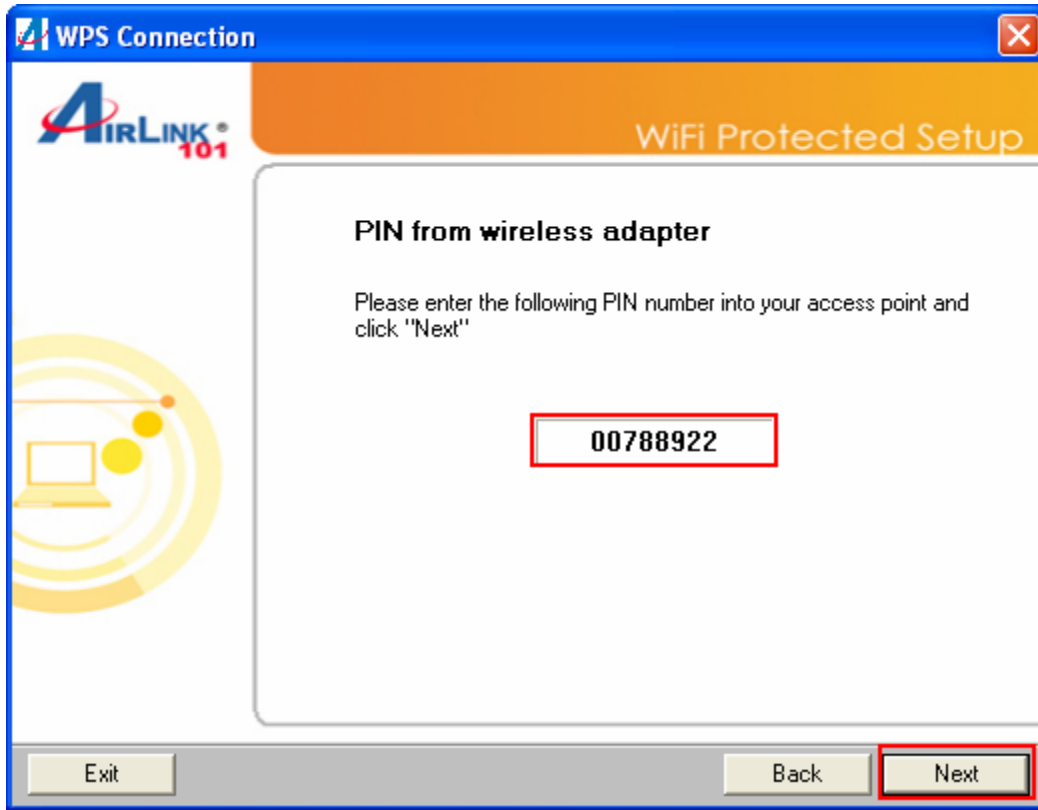

If you choose Push Button method, make sure that you click on the **Wi-Fi Protected Setup** button.

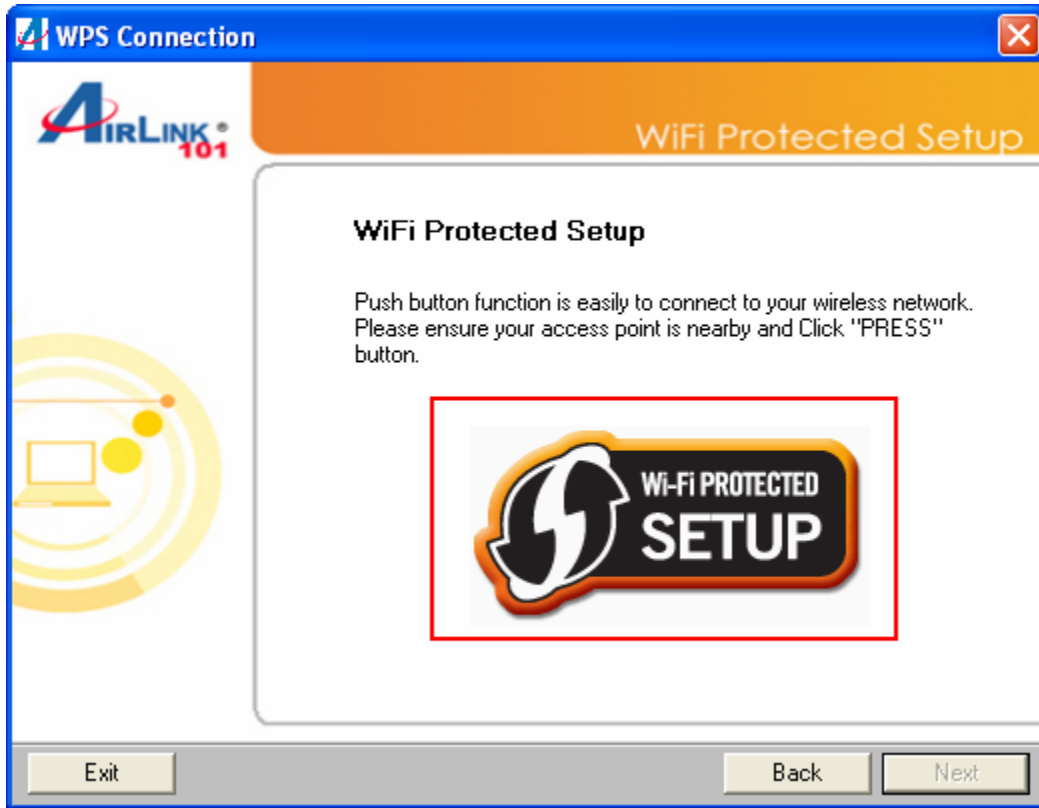

Go to your routers configuration screen and click on **Wireless**. Then click **Wireless security**. Make sure that the Wi-Fi Protected Setup **Enable** box is checked. Then click the **Add Wireless Device Wizard** button.

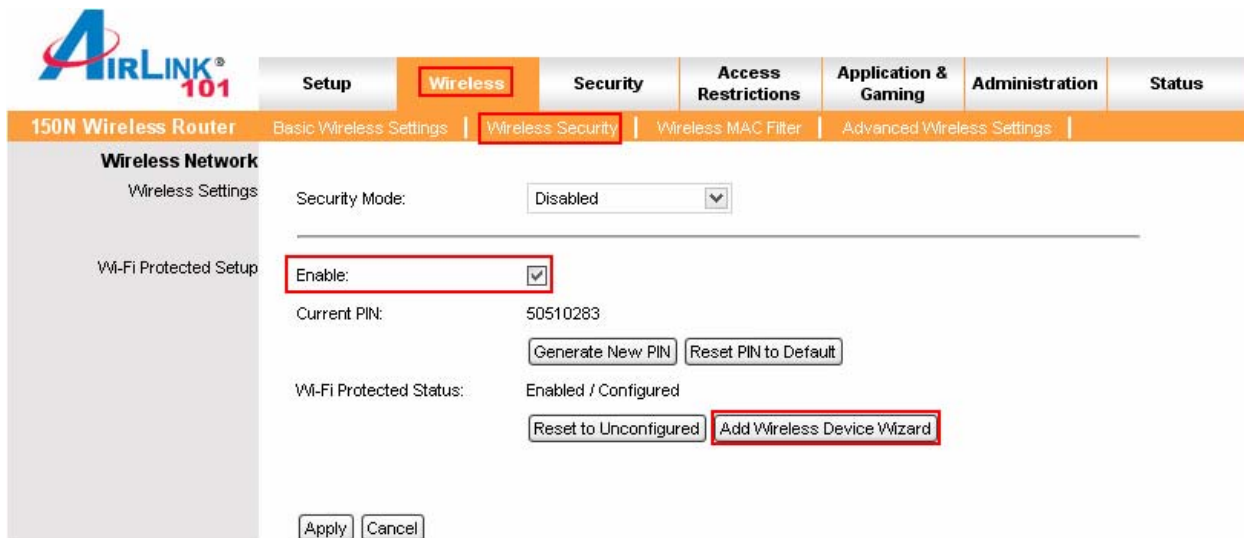

If you are using Pin Code method, enter the Pin Code in the **Pin Number** box and click **connect**. If you are using Push Button method, click on **Virtual Push Button** OR the physical push button on the router.

Draft 802.11N Wireless Router

Wi-Fi Protected Setup

There are two way to add a wireless device to your wireless network: PIN or Push Button.

If the wireless device you want to add only comes with a PIN number, enter its PIN number below and press the "Connect" button. It will help you to add this device to your wireless network.

PIN number :

If the wireless device your want to add has both options available, you may use the Virtual Push Button if you prefer.

Push Button :




After a few moments both the router configuration screen and the adapter configuration screen should show a message telling you that you are connected.

Click **Finish** on the adapter screen.



Click **Continue** on the router configuration screen.

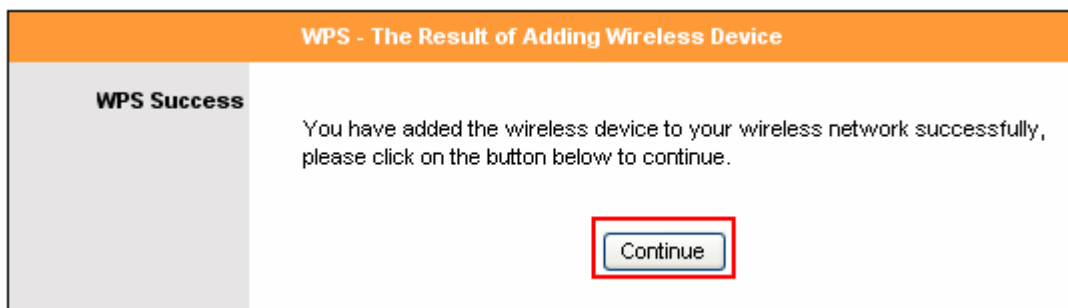

6.2.3 Wireless MAC Filter

You can restrict certain wireless clients from accessing the router by specifying their MAC address and enabling access restriction. This should not be used as a security feature in place of encryption.

AIRLINK® 101

150N Wireless Router

Setup | **Wireless** | Security | Access Restrictions | Application & Gaming | Administration | Status

Basic Wireless Settings | Wireless Security | **Wireless MAC Filter** | Advanced Wireless Settings

Wireless MAC Filter

Access Restrictions

Wireless Client List

Prevent PCs listed below from accessing the wireless network

Disabled

Permit PCs listed below to access the wireless network.

Prevent PCs listed below from accessing the wireless network.

MAC 01: MAC 02:

MAC 03: MAC 04:

MAC 05: MAC 06:

MAC 07: MAC 08:

MAC 09: MAC 10:

MAC 11: MAC 12:

MAC 13: MAC 14:

MAC 15: MAC 16:

MAC 17: MAC 18:

MAC 19: MAC 20:

Apply Cancel

From the pull down menu, select whether the specified wireless clients will be prevented or permitted to access the wireless network. Enter their MAC address in the fields below and click **Apply** and **OK** to save the settings.

6.2.4 Advanced Wireless Settings

You can configure various advanced wireless settings on this screen. These settings are for advanced users ONLY. Most users will want to leave these settings alone.

The screenshot shows the configuration interface for an Airlink 101 150N Wireless Router. The top navigation bar includes tabs for Setup, Wireless (highlighted), Security, Access Restrictions, Application & Gaming, Administration, and Status. Below this, a sub-menu highlights 'Advanced Wireless Settings'. The settings are as follows:

Transmission Rate:	Auto	(Default: 100 Milliseconds, Range: 0 ~ 2346)
Transmission Power:	Full	(Default: 1, Range: 1 ~ 255)
CTS Protection Mode:	Disable	(Default: 2346, Range: 256 ~ 2346, even)
Beacon Interval:	100	(Default: 2346, Range: 0 ~ 2346)
DTIM Interval:	1	(Default: 2346, Range: 0 ~ 2346)
Fragmentation Threshold:	2346	(Default: 2346, Range: 0 ~ 2346)
RTS Threshold:	2346	(Default: 2346, Range: 0 ~ 2346)
WMM function:	Disable	

Buttons for 'Apply' and 'Cancel' are located at the bottom of the settings area.

Transmission Rate: Select from Auto, 1, 2, 5.5, 6, 9, 11, 12, 18, 24, 36, 48 and 54 Mbps.

Transmission Power: Select from full, half, quarter, eighth, min.

CTS Protection Mode: Select from disable, enable, auto.

Beacon Interval: Enter a value from the valid range of 0 to 2346. The default value is 100 Milliseconds

DTIM Interval: Enter a value from the valid range of 0 to 255. The default value is 1.

Fragmentation Threshold: Enter an even number from 256 to 2346. The default value is 2346.

RTS Threshold: Enter a value from the valid range of 0 to 2346. The default value is 2346.

Click **Apply** and **OK** to save the settings.

6.3 Security

6.3.1 Firewall



Block WAN Ping: This setting blocks remote users from being able to ping your internet IP address.

SPI Mode: Select to enable or disable Stateful Packet Inspection. This setting provides an additional level of security.

However, it may slow down some applications such as VOIP Phones and other services that require constant streams of data. You can disable this feature to eliminate lag problems with VOIP Phones.

It can also prevent VPN clients from working properly. If you are having trouble connecting to your VPN, you may want to disable this feature.

Click **Apply** and **OK** to save the settings.

6.3.2 VPN Passthrough

You can select to enable or disable the passthrough of **IPSec**, **L2TP**, and/or **PPTP** for connecting to a VPN.

The screenshot shows the configuration page for the AIRLINK 101 150N Wireless Router. The 'Security' tab is selected, and the 'VPN Passthrough' sub-tab is active. The page displays three settings, all set to 'Enabled':
IPSec Passthrough: Enabled
L2TP Passthrough: Enabled
PPTP Passthrough: Enabled
At the bottom, there are 'Apply' and 'Cancel' buttons.

Click **Apply** and **OK** to save the settings.

6.4 Access Restrictions

You can setup policies that deny or allow specific clients to access the Internet based on IP address, MAC address, URL, Domain or a specified time.

6.4.1 IP Filters

Set up policies based on IP addresses.

The screenshot shows the configuration page for the AIRLINK 101 150N Wireless Router. The 'Access Restrictions' tab is selected, and the 'IP Filters' sub-tab is active. The page displays the 'Rule Setting' for a single rule:
IP Filters Rule: 1 (---) [Delete This Rule] [Summary]
Description: [Text Field]
Status: Disabled
IP Address: [Text Field] - [Text Field]
Protocol: ALL
Port: [Text Field] - [Text Field]
Schedule: Always [Add New]
At the bottom, there are 'Apply' and 'Cancel' buttons.

Description: Enter a name for the policy.

Status: Choose to enable or disable the selected policy.

IP Addresses: Specify the range of IP addresses you wish to block from your router.

Protocol: Select protocol from All, TCP, UDP or ICMP

Port: Enter the range of ports you wish to block from the specified IP addresses

Schedule: Enter a schedule time

To view all of the policies, click the **Summary** button.

6.4.2 MAC Filters

Block or allow access to the network for devices with specific MAC addresses.

The screenshot shows the configuration interface for the AIRLINK 101 150N Wireless Router. The 'Access Restrictions' tab is active, and the 'MAC Filters' sub-tab is selected. The status is set to 'Disabled'. There is one MAC Filter Rule listed as '1'. The form includes fields for 'Enter Description Name', 'MAC Address' (with six input boxes), 'DHCP Client' (with a dropdown menu and a 'Clone' button), and 'Schedule' (with a dropdown menu and an 'Add New' button). 'Apply' and 'Cancel' buttons are at the bottom.

Enter Description Name: Enter a name for the policy.

MAC Address: Enter a MAC address

DHCP Client: Select DHCP client on your network.

To view all the policies, click the **Summary** button.

6.4.3 URL Blocking

You can block the specified clients from accessing certain websites by URL

Enter the URL or the Keyword you wish to block.

Click **Apply** and **OK** to save the settings.

The screenshot shows the configuration interface for the AIRLINK 101 150N Wireless Router. The navigation menu includes Setup, Wireless, Security, Access Restrictions (highlighted), Application & Gaming, Administration, and Status. The sub-menu includes IP Filters, MAC Filters, URL Blocking (highlighted), Domain Blocking, and Schedule.

The main content area is titled "URL Blocking" and "Website Blocking by URL Address". It contains the instruction "Configure URL Blocking below:" and a dropdown menu currently set to "Disabled". The dropdown menu is open, showing options: "Disabled", "ALLOW user access to ONLY below listed sites", and "DENY user access to ONLY below listed sites".

Below the dropdown, there are ten rows for configuring URL blocking, each with a text input field and an "Add New" button. The first row is labeled "URL 02:", the second "URL 03:", and so on, up to "URL 10:". Each row also has a small "Always" dropdown menu to its left.

At the bottom of the page, there are "Apply" and "Cancel" buttons.

6.4.4 Domain Blocking

Block users from accessing specific domains on the internet.

AIRLINK® 101

150N Wireless Router

Setup | Wireless | Security | **Access Restrictions** | Application & Gaming | Administration | Status

IP Filters | MAC Filters | URL Blocking | **Domain Blocking** | Schedule

Domain Blocking

Configure Domain Blocking below:

Disabled (selected)
Allow users to access below listed Domains
Deny users to access below listed Domains

Domain 03: [] Always [] Add New
Domain 04: [] Always [] Add New
Domain 05: [] Always [] Add New
Domain 06: [] Always [] Add New
Domain 07: [] Always [] Add New
Domain 08: [] Always [] Add New
Domain 09: [] Always [] Add New
Domain 10: [] Always [] Add New

Apply Cancel

6.4.5 Schedule

Select a time range in which the specified clients to access the Internet by **Day** and **Time**.

AIRLINK® 101

150N Wireless Router

Setup | Wireless | Security | **Access Restrictions** | Application & Gaming | Administration | Status

IP Filters | MAC Filters | URL Blocking | Domain Blocking | **Schedule**

Schedule

Schedule 1 (---) Delete This Schedule Summary

Name: []

Day(s):
 All Week Select Day(s)
 Sun Mon Tue Wed Thu Fri Sat

All Day - 24 hrs:

Start Time: [] : [] Alw (hour:minute, 12 hour time)
End Time: [] : [] Alw (hour:minute, 12 hour time)

Apply Cancel

6.5 Applications & Gaming

6.5.1 Port Range Forwarding

If you want to host an FTP or online gaming server, you must open up ports on the router. This page allows you to setup port forwarding for the specified applications.

Before using forwarding, you should assign static IP addresses to the designated PCs.

The screenshot shows the configuration interface for a 150N Wireless Router. The top navigation bar includes tabs for Setup, Wireless, Security, Access Restrictions, Application & Gaming (highlighted), Administration, and Status. Below this, a sub-menu shows Port Range Forwarding selected. The main content area is titled "Port Range Forwarding" and features a table with columns for Start ~ End Port, Protocol, To IP Address, Enabled, and Schedule. To the left of the table, there are five "Application Name" dropdown menus, each currently set to "None", and several empty text input fields. At the bottom of the page, there are "Apply" and "Cancel" buttons.

Start ~ End Port	Protocol	To IP Address	Enabled	Schedule
<input type="text"/> ~ <input type="text"/>	Both	192.168.2. <input type="text"/>	<input type="checkbox"/>	Always
<input type="text"/> ~ <input type="text"/>	Both	192.168.2. <input type="text"/>	<input type="checkbox"/>	Always
<input type="text"/> ~ <input type="text"/>	Both	192.168.2. <input type="text"/>	<input type="checkbox"/>	Always
<input type="text"/> ~ <input type="text"/>	Both	192.168.2. <input type="text"/>	<input type="checkbox"/>	Always
<input type="text"/> ~ <input type="text"/>	Both	192.168.2. <input type="text"/>	<input type="checkbox"/>	Always
<input type="text"/> ~ <input type="text"/>	Both	192.168.2. <input type="text"/>	<input type="checkbox"/>	Always
<input type="text"/> ~ <input type="text"/>	Both	192.168.2. <input type="text"/>	<input type="checkbox"/>	Always
<input type="text"/> ~ <input type="text"/>	Both	192.168.2. <input type="text"/>	<input type="checkbox"/>	Always
<input type="text"/> ~ <input type="text"/>	Both	192.168.2. <input type="text"/>	<input type="checkbox"/>	Always
<input type="text"/> ~ <input type="text"/>	Both	192.168.2. <input type="text"/>	<input type="checkbox"/>	Always
<input type="text"/> ~ <input type="text"/>	Both	192.168.2. <input type="text"/>	<input type="checkbox"/>	Always
<input type="text"/> ~ <input type="text"/>	Both	192.168.2. <input type="text"/>	<input type="checkbox"/>	Always
<input type="text"/> ~ <input type="text"/>	Both	192.168.2. <input type="text"/>	<input type="checkbox"/>	Always
<input type="text"/> ~ <input type="text"/>	Both	192.168.2. <input type="text"/>	<input type="checkbox"/>	Always
<input type="text"/> ~ <input type="text"/>	Both	192.168.2. <input type="text"/>	<input type="checkbox"/>	Always
<input type="text"/> ~ <input type="text"/>	Both	192.168.2. <input type="text"/>	<input type="checkbox"/>	Always
<input type="text"/> ~ <input type="text"/>	Both	192.168.2. <input type="text"/>	<input type="checkbox"/>	Always

If you are only forwarding one port, you can put it in both the **Start** and **End** Port boxes.


Protocol: If you don't know which one to choose, select both.

To IP Address: This should be the IP address of the computer you want to forward the ports to.

Make sure that you check the **Enabled** box to activate the setting, then click **Apply** and **OK** to save the settings.

6.5.2 Port Range Triggering

Port triggering allows the router to keep track of outgoing data for specific port numbers. The router remembers which computer sends out what data, so that when the requested data returns through the router, the data is sent back to the proper computer by way of IP address and port mapping rules.

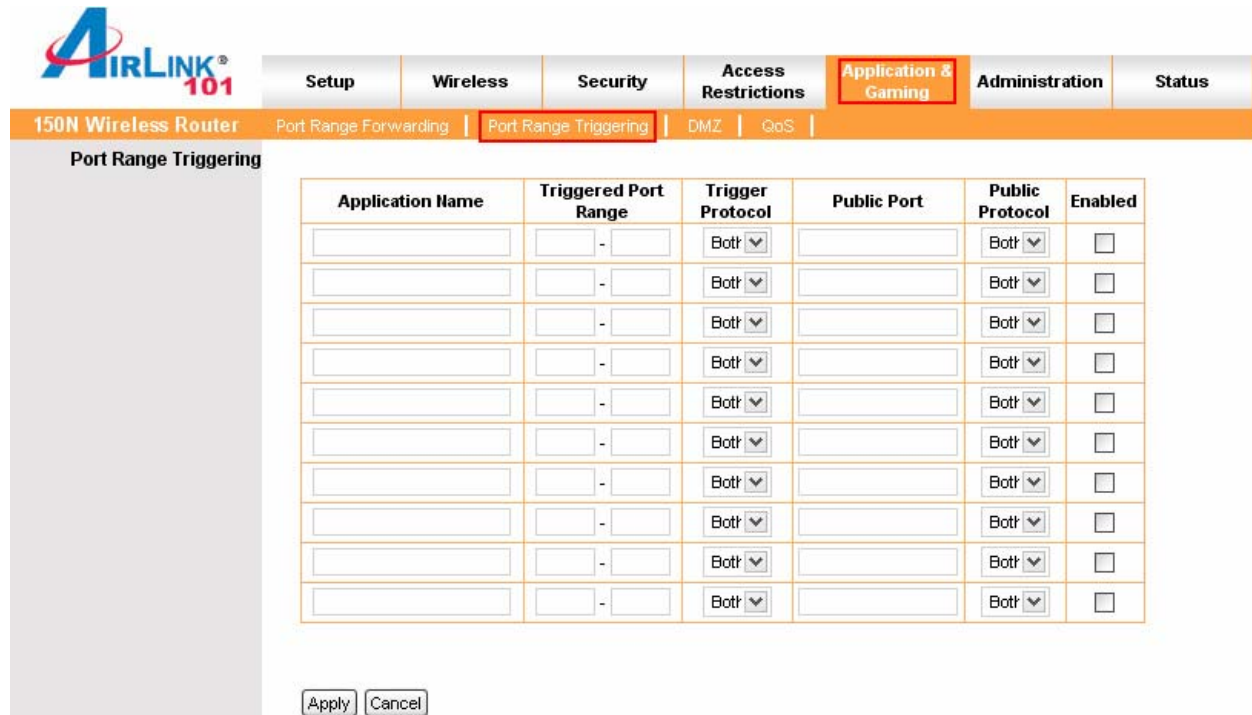

The screenshot shows the configuration interface for the AIRLINK 101 150N Wireless Router. The navigation tabs at the top include Setup, Wireless, Security, Access Restrictions, Application & Gaming (highlighted), Administration, and Status. The sub-navigation tabs under Application & Gaming include Port Range Forwarding, Port Range Triggering (highlighted), DMZ, and QoS. The main content area is titled "Port Range Triggering" and contains a table with the following columns: Application Name, Triggered Port Range, Trigger Protocol, Public Port, Public Protocol, and Enabled. There are 10 rows in the table, each with empty input fields for the first four columns and a checkbox for the Enabled column. The Trigger Protocol dropdown menu is set to "Both". Below the table are "Apply" and "Cancel" buttons.

Application Name	Triggered Port Range	Trigger Protocol	Public Port	Public Protocol	Enabled
<input type="text"/>	<input type="text"/> - <input type="text"/>	Both	<input type="text"/>	Both	<input type="checkbox"/>
<input type="text"/>	<input type="text"/> - <input type="text"/>	Both	<input type="text"/>	Both	<input type="checkbox"/>
<input type="text"/>	<input type="text"/> - <input type="text"/>	Both	<input type="text"/>	Both	<input type="checkbox"/>
<input type="text"/>	<input type="text"/> - <input type="text"/>	Both	<input type="text"/>	Both	<input type="checkbox"/>
<input type="text"/>	<input type="text"/> - <input type="text"/>	Both	<input type="text"/>	Both	<input type="checkbox"/>
<input type="text"/>	<input type="text"/> - <input type="text"/>	Both	<input type="text"/>	Both	<input type="checkbox"/>
<input type="text"/>	<input type="text"/> - <input type="text"/>	Both	<input type="text"/>	Both	<input type="checkbox"/>
<input type="text"/>	<input type="text"/> - <input type="text"/>	Both	<input type="text"/>	Both	<input type="checkbox"/>
<input type="text"/>	<input type="text"/> - <input type="text"/>	Both	<input type="text"/>	Both	<input type="checkbox"/>
<input type="text"/>	<input type="text"/> - <input type="text"/>	Both	<input type="text"/>	Both	<input type="checkbox"/>

Click **Apply** and **OK** to save the settings.

6.5.3 DMZ

DMZ (De-Militarized Zone) Host is a host without the protection of the router's firewall. It allows a computer to be exposed to unrestricted two-way communication with the Internet. You should only use this feature when the Port Forwarding function fails to make an application work.



DMZ: Select to enable or disable DMZ.

Host IP Address: Specify the IP address of the computer you wish to use with DMZ.

Note: Any DMZ host should have a new static IP address assigned to it because its IP address may change when using the DHCP function.

Click **Apply** and **OK** to save the settings.

6.5.4 QoS

The QoS (Quality of Service) feature allows you to specify which applications or computers have bandwidth priority over others, as opposed to letting all computers and applications share the bandwidth equally.

The screenshot shows the configuration interface for the AIRLINK 101 150N Wireless Router. The 'Application & Gaming' tab is selected, and the 'QoS' sub-tab is active. The 'QoS Management' section has 'Manual' selected. Under 'Internet (WAN) Bandwidth', 'Downstream' is set to 2 Mbps and 'Upstream' is set to 512 Kbps. The 'Category' section has 'Applications' selected. A table for adding QoS rules is visible, with columns for Name, IP, Port Range, and Priority. The 'Priority' is set to 'High'. An 'Add' button is located below the table. At the bottom, there are 'Apply' and 'Cancel' buttons.

There are pre-configured options for some popular applications that you are able to choose from. You can also set manual QoS rules:

First choose **Manual**, then click **Apply**.

In **Name**, enter a label for your new rule.

Enter the IP address of the computer you are configuring the rule for in the **IP** box.

For **Port Range**, enter a start and end port for your rule.

Select the **Priority** you want to set for the rule. The higher the priority you set for the rule, the more bandwidth that application will be able to use. When you are finished, click **Add**

6.6 Administration

6.6.1 Management

The Management screen allows you to change the router's login password as well as other administrative settings.

The screenshot displays the 'Administration' tab of the AIRLINK 101 150N Wireless Router's web interface. The 'Management' sub-tab is active. The settings are as follows:

- Router Password:** Two password fields, both containing six asterisks (*****).
- Remote Router Access:** Remote Management is set to 'Disablec'. IP Address is set to '*' (with a note: '*** means any IP Address.'). Port is set to '8080'.
- UPnP:** Set to 'Enabled'.
- Multicast Streams:** 'Enable Multicast Streams' is set to 'Disablec' and 'Wireless enhance mode' is set to 'Disablec'.
- Backup the Configuration File:** A 'Backup' button is present.
- Restore the Configuration File:** A 'File Path:' field is empty, with 'Browse...' and 'Restore' buttons.

At the bottom of the form are 'Apply' and 'Cancel' buttons.

Router Password: Set the router's login password.

Remote Router Access: Select to enable or disable remote management/upgrade of the router. You can allow remote management from any IP Address or a specified IP Address as well as the port number.

UPnP: Universal Plug and Play (UPnP) allows Windows Me and XP to automatically configure the router for various Internet applications, such as gaming and videoconferencing.

Backup and Restore: You can choose to backup the router's settings so that you don't have to manually configure the settings again if you reset the router to factory default.

6.6.2 Log

You can choose to enable or disable logging of your network activity on this screen.

The screenshot shows the configuration interface for the AIRLINK 101 150N Wireless Router. The top navigation bar includes tabs for Setup, Wireless, Security, Access Restrictions, Application & Gaming, Administration (highlighted), and Status. Below this is a secondary navigation bar with links for Management, Log (highlighted), Diagnostics, Factory Defaults, Firmware Upgrade, and Restart. The main content area is titled 'Log' and contains the following fields and options:

- SMTP Server / IP Address: [Text Input Field]
- Email Address: [Text Input Field] [Send Mail Now Button]
- Save Log File To Local Hard Drive: [Save Button]
- Log Type:
 - System Activity
 - Debug Information
 - Attacks
 - Dropped Packets
 - Notice
- [View Log Button]
- [Apply Button] [Cancel Button]

SMTP Server / IP Address: Enter your internet service provider's outgoing email server address.

Email Address: Enter an email address where you would like the log to be sent.

Send Mail Now: Send the log file to the specified the email address.

Save Log File to Local Hard Drive: Save the current log information to a file on your computer.

Log Type: Specify the information you want the system to log. Options include System Activity, Debug Information, Attacks, Dropped Packets, and Notice.

View Log: Allows you to see logged information related to System Activity, Debug Information, Attacks, Dropped Packets, and Notice.

Click **Apply** and **OK** to save the settings.

6.6.3 Diagnostics

The Diagnostics screen allows you to perform **Ping** tests.



Ping Test: Enter the IP or URL Address you wish to ping and click **Ping**.

6.6.4 Factory Defaults

The Factory Defaults screen allows you to set all the router's settings to the factory default. You can use this anytime you think that you've changed settings that have stopped the router from working. Resetting to defaults will undo all of your changes.



Click on the **Factory Defaults** button to restore all the settings to default.

6.6.5 Firmware Upgrade

The Firmware Upgrade screen allows you to upgrade the router's firmware.



You may download the new firmware from the Airlink101 website www.airlink101.com

Click on **Browse**, then browse to the new firmware and click **Apply**.

Note: Do not power off the router during the firmware upgrading, otherwise your router may be damaged permanently.

6.6.6 Restart

The Restart page allows you to restart the router without restoring the settings to factory default.



Click on the **Restart** button to restart the router.

6.7 Status

6.7.1 Router

The Router screen displays a summary of all router status information, including the firmware version.

The screenshot shows the web interface of an AIRLINK 101 150N Wireless Router. The top navigation bar includes tabs for Setup, Wireless, Security, Access Restrictions, Application & Gaming, Administration, and Status. The Router tab is selected, showing a sub-menu with Router, Local Network, and Wireless Network. The main content area is divided into two sections: Router Information and Internet Connection.

Router Information	Value
Firmware Version:	1.00
Current Time:	14:04:18 12/19/2007
Internet MAC Address:	00:1d:6a:12:0f:21
Host Name:	AR670W

Internet Connection	Value
Connection Type:	Dynamic IP
Connection Status:	connected
IP Address:	192.168.1.60
Subnet Mask:	255.255.255.0
Default Gateway:	192.168.1.1
DNS1:	4.2.2.1
DNS2:	N/A

Buttons: Connect, Disconnect, Refresh

Click on the **Refresh** button to reload the screen.

6.7.2 Local Network

The Local Network screen displays status information regarding your Local Area Network.

The screenshot shows the AIRLINK 101 router's web interface. The top navigation bar includes tabs for Setup, Wireless, Security, Access Restrictions, Application & Gaming, Administration, and Status. The main content area is titled '150N Wireless Router' and has sub-tabs for Router, Local Network, and Wireless Network. The 'Local Network' sub-tab is active, displaying the following information:

Local MAC Address:	00:de:fa:15:00:01
IP Address:	192.168.1.1
Subnet Mask:	255.255.255.0

Below this, the 'DHCP Server' section is shown with the following details:

DHCP Server:	Enabled
Start IP Address:	192.168.1.100
End IP Address:	192.168.1.199

A button labeled 'DHCP Client Table' is located at the bottom of the DHCP Server section.

Click on the **DHCP Client Table** to display a list of DHCP clients in your network.

6.7.3 Wireless Network

The Wireless Network screen displays status information regarding your wireless network.

The screenshot shows the AIRLINK 101 router's web interface. The top navigation bar includes tabs for Setup, Wireless, Security, Access Restrictions, Application & Gaming, Administration, and Status. The main content area is titled '150N Wireless Router' and has sub-tabs for Router, Local Network, and Wireless Network. The 'Wireless Network' sub-tab is active, displaying the following information:

MAC Address:	00:1d:6a:12:0f:20
Mode:	Mixed (n/g/b)
Network Name (SSID):	default670
Channel:	6
Security:	WPA2-PSK
SSID Broadcast:	Enabled

A button labeled 'Wireless Client List' is located at the bottom of the page.

7. Troubleshooting

If you have trouble connecting to the Internet, try the following steps.

Step 1 Power off the Cable/DSL modem, router, and computer and wait for **5 minutes**.

Step 2 Turn on the Cable/DSL modem and wait for the lights on the modem to settle down.


Step 3 Turn on the router and wait for the lights on the router to settle down.

Step 4 Turn on the computer.

Step 5 Reconfigure the router as described in **Section 3**.

Step 6 Log in to the router and select the **Status** tab.

Step 7 Verify that the **IP Address**, **Default Gateway**, and at least one of the **DNS** fields have valid numbers assigned to them (instead of all 0's).

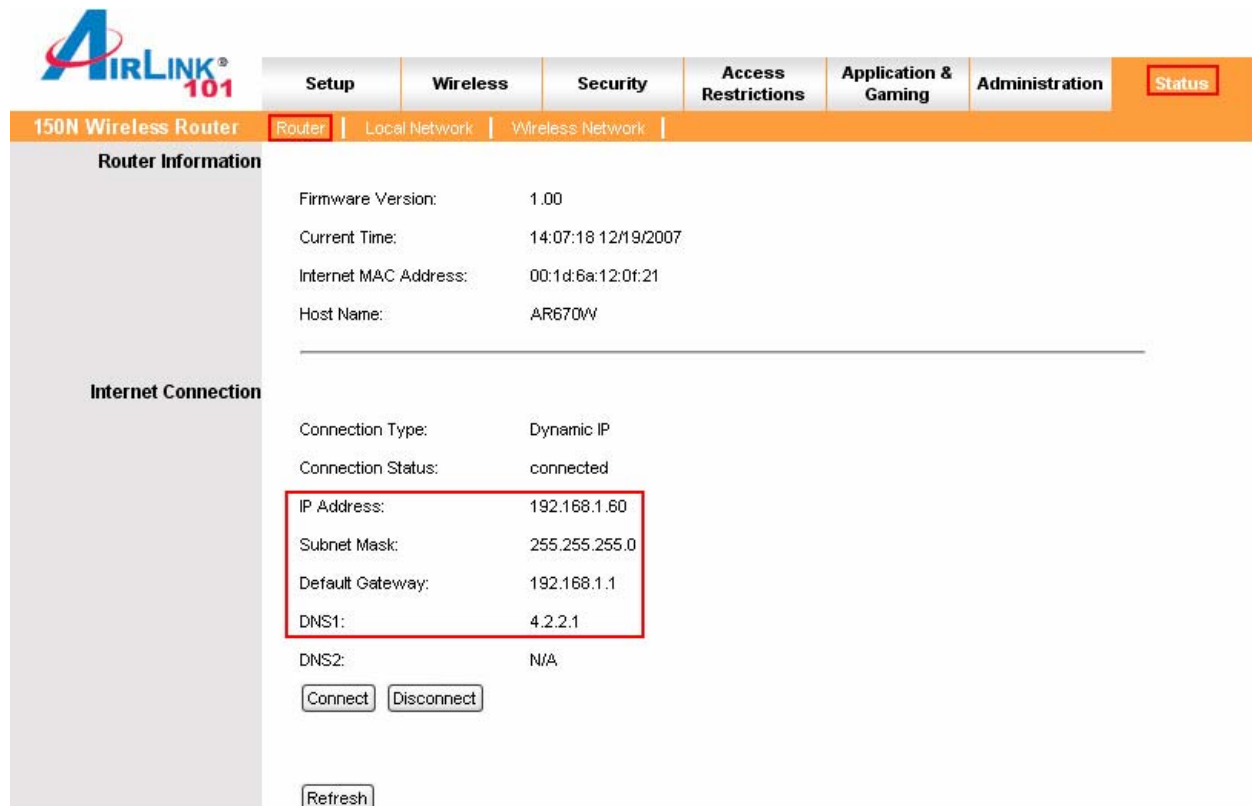

The screenshot displays the web interface of an AIRLINK 101 150N Wireless Router. The top navigation bar includes tabs for Setup, Wireless, Security, Access Restrictions, Application & Gaming, Administration, and Status. The Status tab is selected, showing Router Information and Internet Connection details. The IP Address, Subnet Mask, Default Gateway, and DNS1 fields are highlighted with a red box.

Field	Value
Firmware Version:	1.00
Current Time:	14:07:18 12/19/2007
Internet MAC Address:	00:1d:6a:12:0f:21
Host Name:	AR670W
<hr/>	
Connection Type:	Dynamic IP
Connection Status:	connected
IP Address:	192.168.1.60
Subnet Mask:	255.255.255.0
Default Gateway:	192.168.1.1
DNS1:	4.2.2.1
DNS2:	N/A

Buttons: Connect, Disconnect, Refresh

If each field has a valid number assigned, the router is connected to the Internet.

Appendix A – Specifications

Standards

- IEEE 802.11b / 802.11g
- IEEE 802.11n draft 2.0

Ports

- 1 x WAN port
- 4 x 10/100Mbps LAN port

Antenna type

- 2 External 2dBi antennas

Security

- WEP 64/128-bit
- WPA2, WPA

LEDs

- Power, Status, WAN, WLAN, LAN, WPS

Advanced Features

- Quality of Service (QoS)
- WMM
- Stateful Packet Inspection (SPI) / DoS
- VPN Pass-through

WiFi Protected Setup

- PIN (Personal Identification Number)
- PBC (Push button configuration)

System Requirement

- Windows®, Mac®, or Linux® operating system
- Internet Explore 5.5 or above
- Installed Ethernet adapter
- Recommended use with 300N and 150N Wireless Adapters: AWLH6070, AWLH6080, AWLC6070, AWLC6080, AWLC6070, and AWLL6080 for best compatibility

Power

- 5V / 2A

Dimensions

- 225 x 120 x 30 mm (L x W x H)

Temperature

- Operating Temperature: 0°C to 45°C

Humidity

- 10% to 95% Non-Condensing

Warranty

- Limited 1-year warranty

Certification

- FCC, CE, IC, UL, TUV

Appendix B – Information

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The availability of some specific channels and/or operational frequency bands are country dependent and are firmware programmed at the factory to match the intended destination. The firmware setting is not accessible by the end user.

European Union Notice:

Radio products with the CE marking comply with the R&TTE Directive (1999/5/EC), the EMC Directive (2004/104/EC) and the Low Voltage Directive (73/23/EEC) issued by the Commission of the European Community.

Compliance with these directives implies conformity to the following European Norms:

- EN 60950-1 Product Safety
- EN 150 328 Technical requirement for radio equipment
- EN 301 489-1/-17 General EMC requirements for radio equipment

Technical Support

E-mail: support@airlink101.com

Toll Free: 1-888-746-3238

Web Site: www.airlink101.com

*Theoretical maximum wireless signal rate derived from IEEE 802.11g standard and IEEE 802.11n draft specification version 2.0. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, mix of wireless products used, radio frequency interference (e.g., cordless telephones and microwaves) as well as network overhead lower actual data throughput rate. Specifications are subject to change without notice. All products and trademarks are the property of their respective owners. Copyright ©2008 AirLink101®